

# HAND-FREE DUPLEX COMMUNICATOR

## OPERATION



1. OPEN THE BATTERY DOOR AND INSERT ONE "9V" BATTERY AS INDICATED IN FIG. 1
2. TURN VOLUME CONTROL POWER "ON/OFF" CLOCKWISE TO ACTIVATE THE UNIT AS WELL AS ADJUSTING THE SOUND LEVEL.
3. ADJUST THE HEADBAND AND BOOM MIC. AS INDICATED IN FIG. 2.
4. WHEN TRANSMITTING, SPEAK CLEARLY IN A NORMAL VOICE.
5. IN THE EVENT OF INTERFERENCE CAUSE BY OTHER RADIO SIGNALS IN THE VICINITY MOVE TO A DIFFERENT LOCATION.

## CAUTION

1. YOUR HAND-FREE DUPLEX COMMUNICATOR HAS BEEN FULLY ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY. BE SURE NOT TO TOUCH INTERNAL COMPONENTS OTHER THAN REPLACING BATTERIES.
2. WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERIES.
3. AFTER USE, ALWAYS TURN OFF POWER.
4. KEEP YOUR HAND-FREE DUPLEX COMMUNICATOR IN A DRY AND CLEAN PLACE.
5. PLEASE DO NOT EXERT EXCESSIVE FORCE ON THE BOOM MICROPHONE OR THE HEADBAND OF THIS HEADSET UNIT.

### WARNING:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT, SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

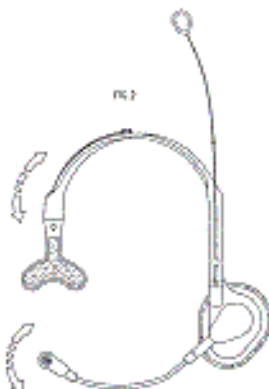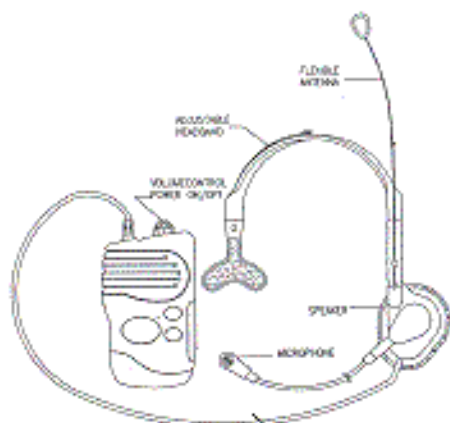

DSI (HK) LTD  
FCC ID: KNZ48452A  
EXHIBIT #: 5