

Operating Instruction:

1. Open battery compartment door, insert 1 PC. 9V battery (Battery not included) according to polarities shown.
2. Close the battery compartment door.
3. Slide ON/OFF switch to turn power on or off as per indication.
4. To transmit message - press PUSH-TO-TALK button while talking into the speaker grill. Release the button to receive message from other unit.

Instructions d'Opération:

1. Ouvrez la porte du compartiment de la batterie, insérez une batterie de 9V (batterie pas inclus) en utilisant les polarités indiquées.
2. Fermez la porte du compartiment.
3. Faites glisser le bouton du control pour indiquer les positions : marche - fermé.
4. Pour faire transmettre le message appuyez sur le bouton To Talk (parler) en parlant dans le haut-parleur. Faites libérer le bouton pour recevoir des messages de l'autre unité.

CAUTION

1. YOUR TRANSCEIVER SET HAS BEEN FULLY ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY AND BE SURE NOT TO TOUCH THE INTERNAL COMPONENTS OTHER THAN BATTERY.
2. WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERY.
3. AFTER USE, ALWAYS RETURN THE ON-OFF SWITCH TO THE OFF POSITION.
4. KEEP YOUR SET IN DRY AND CLEAN PLACE.

MISE EN GARDE


1. L'ENSEMBLE D'ÉMETTEURS A ÉTÉ RÉGLÉ À L'USINE AVANT SON EXPÉDITION. NE TOUCHEZ PAS AUX ÉLÉMENTS INTERNES SAUF POUR INSTALLER LES PILES.
2. REMPLACEZ LA PILE QUAND LE SON S'AFFAIBLIT.
3. RAMENEZ TOUJOURS L'INTERRUPTEUR DE MISE EN MARCHÉ EN POSITION "OFF" APRÈS EMPLOI.
4. GARDEZ L'APPAREIL DANS UN ENDOIT SEC ET FRAIS.

Attention:

Remove all plastic ties & packaging before giving this toy to a child.

Mise en garde:

Enlevez toutes attaches de l'emballage en plastique, avant de laisser l'enfant de jouer avec ce jouet.

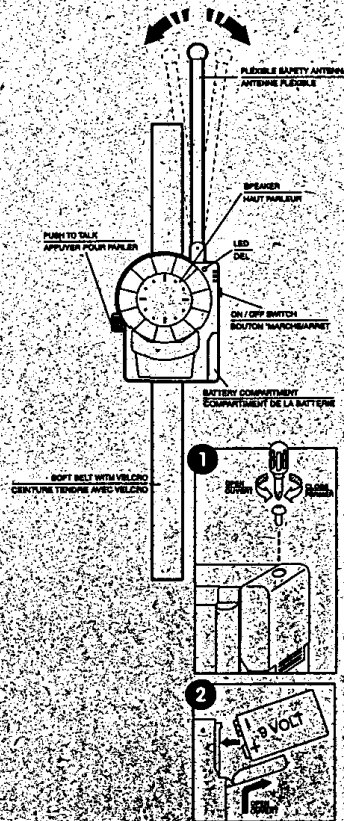

Non-rechargeables batteries are not to be recharged.
 • Rechargeables batteries are to be removed from the toy.
 • The supply terminals are not to be short-circuited.
 • Do not mix old and new batteries.
 • Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
 • Do not use rechargeable batteries.
 • Only batteries of the same or equivalent type as recommended are to be used.
 • Batteries are to be replaced after the correct position.
 • Replacement of batteries must be done by an adult.

Piles non rechargeables: ne pas recharger.
 • Une fois insérées, éliminer les piles du jouet.
 • Ne pas court-circuiter les bornes d'alimentation.
 • Ne pas combiner anciennes et nouvelles piles.
 • Ne pas combiner piles alcalines, standard (carbone-zinc) et rechargeables (nickel-cadmium).
 • Ne pas utiliser de piles rechargeables.
 • Utiliser pour le type de piles recommandées ou un type équivalent.
 • Ne pas faire d'erreur de position en installant les piles.
 • Les piles doivent être changées par un adulte.

9V 0.5W

USES 1 PC 9V BATTERY (NOT INCLUDED)
 UTILISE 1 PILE 9V BATTERIE (NON COMPRIS)

COLOR & DESIGN MAY VARY
 COULEUR ET MOTIF PEUVENT VARIER

PLEASE ATTEND THE INFORMATION ON THIS PACKAGE FOR FUTURE REFERENCE.
 NOT SUITABLE FOR CHILDREN UNDER 3 YEARS/ANNAI MOINS DE 3 ANS.
 NE PAS SE CONFIER À LA RÉPÉTITION DE LA MENTION "NOT SUITABLE FOR CHILDREN UNDER 3 YEARS/ANNAI MOINS DE 3 ANS" POUR DES RÉSULTATS DE SÉCURITÉ DE 3 ANS. LIREZ-VOUS.



© 1995 TOYO INC.
 40 FORD MASSACHUSETTS 01757, U.S.A. MADE IN CHINA - FABRIQUÉ EN CHINE

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B Digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not instructions, may cause harmful interference. No guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.