



14+

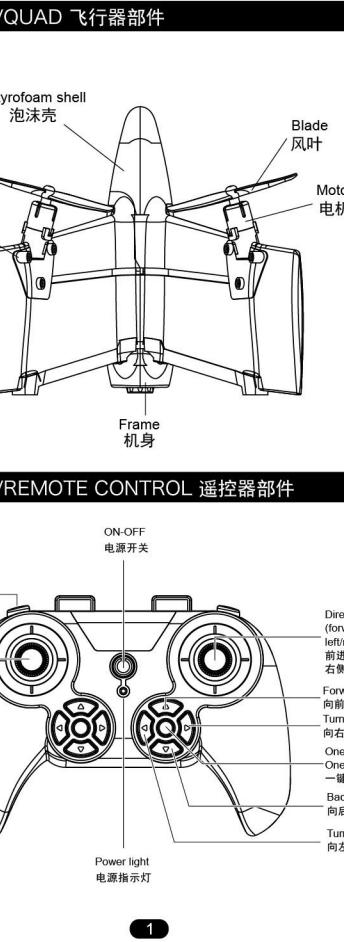

### PART NAMES/QUAD 飞行器部件


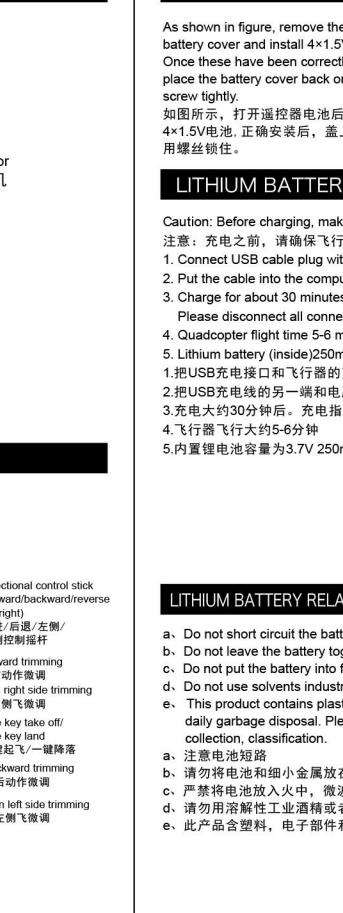


### BATTERY INSTALLATION/REMOTE CONTROL 遥控器电池安装

As shown in figure, remove the remote control battery cover and install 4x1.5V AA batteries. Once these have been correctly installed, place the battery cover back on and screw tightly. 如图所示, 打开遥控器电池后盖, 装入4x1.5V电池, 正确安装后, 盖上后盖并用螺丝锁住。

什么是气压定高?

内置气压定高, 飞行器的遥控器的油门遥杆没有在零位, 而是在百分之五十的位置, 向上推油门杆时飞行器上升, 松手飞行器自动定高, 下拉油门遥杆时飞行器下降, 松手自动定高, 前进后退、左右侧飞, 飞行器在当前高度飞行。

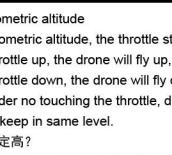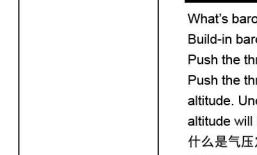

4x1.5V AA Batteries (include)

### LITHIUM BATTERY CHARGE DESCRIPTION 锂电池充电说明

Caution: Before charging, make sure the quadcopter power switch is set to "OFF" state.

注意: 充电之前, 请确保飞行器处于关机状态

1. Connect USB cable plug with the quadcopter charging interface.
2. Put the cable into the computer USB interface. When it starts charging, the USB light extinguishes.
3. Charge for about 30 minutes. When the USB indicator lights up, charging is completed.

Please disconnect all connections and store in a safe place.

4. Quadcopter flight time 5-6 minutes.

5. Lithium battery (inside) 250mAh 3.7V


1. 把USB充电接口和飞行器的充电接口连接

2. 把USB充电线的另一端和电脑的USB连接, 开始充电。充电器, USB充电线的指示灯熄灭。

3. 充电大约30分钟后。充电指示灯常亮, 充电完成。请把USB充电线收起并妥善保存。

4. 飞行器飞行大约5-6分钟

5. 内置锂电池容量为3.7V 250mAh。

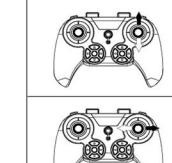

4x1.5V AA Batteries (include)

4x1.5