 


INSTALLATION INSTRUCTIONS

Wireless Wall Control

Model : WB-630

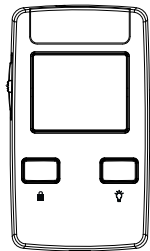

Congratulations on your purchase of the Skylink Wireless Wall Control model WB-660. This Wall Control is designed to operate the Skylink Atoms Garage Door Opener series. You will find the installation to be simple and be able to get the system up and running with little effort.

ONE YEAR WARRANTY

This product is guaranteed to be free of defects in materials and workmanship for 1 year from the date of purchase. If this product is defective, call 1-800-304-1187 for repair or replacement parts. Guarantee does not include normal wear and tear or batteries.



If you have any questions, problems or missing parts, please call Skylink Customer Support: 9:00am – 5:00pm EST, Monday-Friday.

1-800-304-1187

Or e-mail us at support@skylinkhome.com

CUSTOMER SERVICE

17 Sheard Avenue, Brampton, Ontario, Canada L6Y 1J3

www.skylinkhome.com
P/N:101Yxxx Rev0

WB-660 Series

SAFETY INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux CNR exempts de licence d'Industrie Canada. Le fonctionnement est soumis aux deux conditions suivantes:

(1) Cet dispositif ne peut causer des interférences; et

(2) Cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.


Package Contents

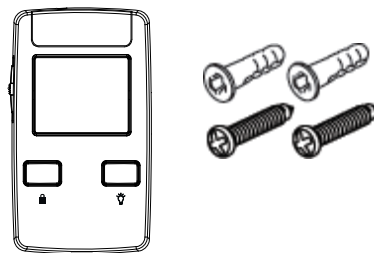

| Parts | Description | Quantity |
|-------|----------------------|----------|
| A | Wall Control | 1 |
| B | Mounting Accessories | 1 |

Section 1- Overview

 - 1 – Open/Close Garage Door Button
- 2- Light On/Off Button
- 3 – Remote Lock Button

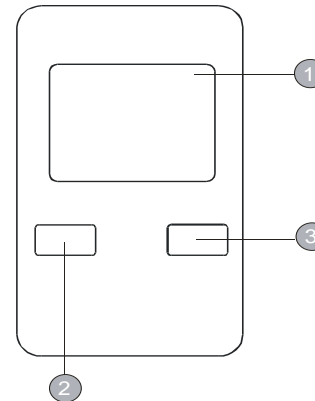


WARNING:

- Wall Control must be installed within sight of the garage door, out of reach of children, at a minimum height of 5 feet (1.5m), and away from all moving parts of door.
- Be sure power is not connected before installing the Wall Control.
- Wall Control should only be activated when door can be seen clearly, is properly adjusted and there are no obstructions to door travel.
- Always keep garage door in sight until completely closed. Never permit anyone to cross path of closing garage door.

Section 2- Installation of the Wall Control

 Note: Battery for the Wall Control is included.

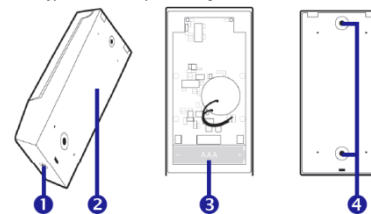

[Pix for reference only]

1. Pry off the back plate from the Wall Control.
2. Insert two AAA batteries (1.5V Alkaline Type).
3. Mount the back plate with the mounting accessories.
4. Attach the Wall Control on the back plate.

Section 3 – Programming the Wall Control

1. Put the opener/receiver that you plan to program into programming mode. Refer to the User's Instructions of that opener/receiver unit.
2. Once the opener/receiver is in programming mode, press the Garage Button (1) on the Wall Console to transmit the signal.
3. Once the Wall Console is programmed, the opener/receiver will quit from programming mode.
4. The Wall Console is ready to be used now to operate that opener/receiver.

Section 4 - Operation of the Wall Console

1. To open/close the Garage Door, press the Garage Door button (1) once. The LED flashes quickly.
2. To toggle the light on/off, press the Light On/Off button (2). The LED flashes quickly.
3. Remote Lock Button (3) – Press and hold the button for 6 seconds to enable/disable the lock function. The opener will ignore all the remote radio signals when Lock function is enabled.


Section 4 – LED light Indication

| | |
|--|--------------------------------|
| Garage Door LED flashes once every 5 seconds | Wall Console in Operating mode |
| Garage Door LED flashes quickly | Wall Console transmit signal |
| Lock LED flash every 5 seconds. | Remote Lock Enabled |

INSTALLATION INSTRUCTIONS

Wireless Wall Control

 Model : WB-660

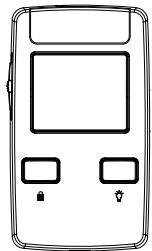

Congratulations on your purchase of the Skylink Wireless Wall Control model WB-660. This Wall Control is designed to operate the Skylink Atoms Garage Door Opener series. You will find the installation to be simple and be able to get the system up and running with little effort.

ONE YEAR WARRANTY

This product is guaranteed to be free of defects in materials and workmanship for 1 year from the date of purchase. If this product is defective, call 1-800-304-1187 for repair or replacement parts. Guarantee does not include normal wear and tear or batteries.



If you have any questions, problems or missing parts, please call Skylink Customer Support: 9:00am – 5:00pm EST, Monday-Friday.

1-800-304-1187

Or e-mail us at support@skylinkhome.com

CUSTOMER SERVICE

17 Sheard Avenue, Brampton, Ontario, Canada L6Y 1J3

www.skylinkhome.com
P/N:101Yxxx Rev0

WB-660 Series

SAFETY INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux CNR exempts de licence d'Industrie Canada. Le fonctionnement est soumis aux deux conditions suivantes:

(1) Cet dispositif ne peut causer des interférences; et

(2) Cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.


Package Contents

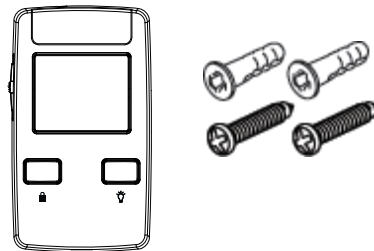

| Parts | Description | Quantity |
|-------|----------------------|----------|
| A | Wall Control | 1 |
| B | Mounting Accessories | 1 |

Section 1- Overview

 - 1 – Open/Close Garage Door Button
- 2 – Light On/Off Button
- 3 – Remote Lock Button
- 4 – Auto Closer Timer Setting Switch

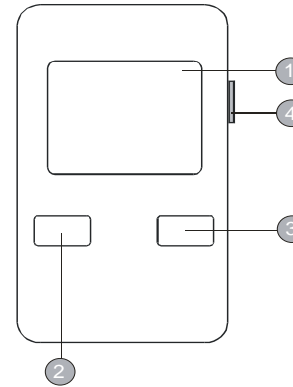


WARNING:

- Wall Control must be installed within sight of the garage door, out of reach of children, at a minimum height of 5 feet (1.5m), and away from all moving parts of door.
- Be sure power is not connected before installing the Wall Control.
- Wall Control should only be activated when door can be seen clearly, is properly adjusted and there are no obstructions to door travel.
- Always keep garage door in sight until completely closed. Never permit anyone to cross path of closing garage door.

Section 2- Installation of the Wall Control

 Note: Battery for the Wall Control is included.

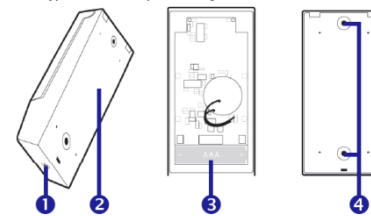

[Pix for reference only]

1. Pry off the back plate from the Wall Control.
2. Insert two AAA batteries (1.5V Alkaline Type).
3. Mount the back plate with the mounting accessories.
4. Attach the Wall Control on the back plate.

Section 3 – Programming the Wall Control

1. Put the opener/receiver that you plan to program into programming mode. Refer to the User's Instructions of that opener/receiver unit.
2. Once the opener/receiver is in programming mode, press the Garage Button (1) on the Wall Console to transmit the signal.
3. Once the Wall Console is programmed, the opener/receiver will quit from programming mode.
4. The Wall Console is ready to be used now to operate that opener/receiver.

Section 4 - Operation of the Wall Console

1. To open/close the Garage Door, press the Garage Door button (1) once. The LED flashes quickly.
2. To toggle the light on/off, press the Light On/Off button (2). The LED flashes quickly.
3. Remote Lock Button (3) – Press and hold the button for 6 seconds to enable/disable the lock function. The opener will ignore all the remote radio signals when Lock function is enabled.
4. Door Closer Timer switch (4) – The opener has the option to program how long until the door closes automatically after it has been opened. To change the setting of this timer, simply slide the switch to the desired position.

| Slide switch position | Function |
|-----------------------|--|
| 0 | Door Closer Timer Disabled. |
| 3 | The door will close automatically after 3 minutes. |
| 10 | The door will close automatically after 10 minutes |
| 30 | The door will close automatically after 10 minutes |

Section 5 – LED light Indication

| Garage Door LED | Wall Console in Operating mode |
|---------------------------------|--------------------------------|
| flashes once every 5 seconds | Wall Console transmit signal |
| flashes quickly | Closer Timer disabled |
| flashes once every 5 seconds | Closer Timer enabled |
| flashes twice every 5 seconds | Remote Lock Enabled |
| Lock LED flash every 5 seconds. | |