

BASICS



PLAYBACK

1. Press the **Power/Mode** Button to select **Video** or **Photo**.
2. Select the **Shutter/OK** Button to enter the **Playback** menu.
3. Use the **Power/Mode** Button to cycle through various options.
4. Press the **Shutter/OK** Button.
5. To return to the **Playback** menu, press the **Wi-Fi** Button.

SETTINGS

Press the **Shutter/OK** Button to enter the settings menu, and then again to select a setting. Repeatedly press the **Power/Mode** or the **Up/Down** Button(s) to select the desired option. To go back to the previous screen or exit the settings menu, press the **Power/Mode** Button, press the "X" to exit.

STORAGE/MICRO SD CARDS

This is compatible with 8GB, 16GB and 32GB capacity microSD, microSDHC, and microSDHX memory cards. You must use a microSD card with a Class 10 speed rating. We recommend using a brand name memory card for max reliability in high-vibration activities. To access your photos without the app remove the SD card from the camera and use an extracting cord, or insert it directly into a computer or compatible device.

CHARGE THE BATTERY

1. Connect the camera to a computer or USB power supply.
2. The Charging Status Light remains ON while the battery is charging. (charging time: 3-5 hours)
3. The Charging Status Light will turn OFF when the the battery is fully charged.

CAMERA APP

Connecting to the **Ez iCam App**

This app lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Ez iCam App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Turn the Action Camera **ON**. Make sure the camera is in **Camera Mode**.
3. Press the **Down Button** to turn on the **Wi-Fi*** In your smartphone or tablet's Wi-Fi settings, select "**ActionCam_W9_006390**" from the list.
4. Enter the password "**1234567890**".
5. Once downloaded, open the **Ez iCam App** on your smartphone or tablet and let the fun begin.

*Press and hold the **Down Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones and tablets listed below:

- iPhone 5, 5S, 6 & 6 plus (iOS 8)
- iPad Air & Mini (iOS 8)
- Android 4X Quad-core devices

COMPATIBILITY

Compatibility varies by device. Content playback, sharing and access to the camera's memory card might not be available on some devices.

Micro SD Card	1080p 30fps	720p 60fps
32 GB	240 mins	320 mins
16 GB	120 mins	160 mins
8 GB	60 mins	80 mins

TECH SPECS

Looping Video: OFF/ON

Time Stamp: OFF/Date/Date & Time

Exposure: + - 2.0/+ - 1.7/ + - 1.3/+ - 1.0/+ - 0.7/+ - 0.3/0

Photo Resolution: 12M/8M/5M/2M

Burst Photo: On 3 Photos

Time Lapse: 2s/3s/5s/10s/20s/30s/60seconds

Continuous Lapse: OFF/ON

Power Frequency: 50Hz/60Hz/Auto

Language: English, Traditional Chinese, Italian, Spanish, Portuguese, German, Dutch, French, Czech, Polish, Turkish, Russian, Japanese, Korean, or Thai

Date & Time: MM/DD/YY, DD/MM/YY, or YY/MM/DD

Sound Indicator: Shutter ON/OFF, Start Up 1/2/3/None, Beep ON/OFF, Volume 1/2/3

MADE IN CHINA

SAFETY

The Action Camera allows you to record every journey from start to finish. Great for holidays, cycling, road races, hiking, etc. You can neatly attach the camera to handle bars, helmets, boats, and much more. Please follow the below procedures before recording.

- **DO NOT HOLD CAMERA WHILE DRIVING**
- **DO NOT ADJUST CAMERA WHILE MOVING (CLIMBING, DRIVING, BIKING, ETC.)**
- **DO NOT ALLOW CHILDREN TO PLAY WITH CAMERA**
- **ENSURE MOUNTS ARE PLACED CORRECTLY AND SECURELY PRIOR TO SETTING OFF.**
- **ENSURE WATERPROOF HOUSING IS SECURELY FASTENED PRIOR TO EMERGING INTO WATER.**

ACTION CAMERA

Wi-Fi • Waterproof • Full HD
Quick Start Guide
7140-60



HDMI



Full HD



Waterproof



1.5 Hours



WiFi

CONGRATULATIONS on your new ACTION CAMERA

Now let's get started! This is your Instruction manual to help you learn the basics of capturing life's most incredible moments!

Power ON:
Press the **Power/Mode Button**

Power OFF:
Press and hold the **Power/Mode Button**

ACCESSORIES




ACCESSORIES LISTED

1. Clip Mount
2. Curved Mount
3. Screw-in Mount
4. Long Mount
5. Sideways Mount
6. Short Mount
7. Base Mounts
8. Secondary Backing
9. Waterproof Case
10. Back Clip

Also included: Micro cleaning cloth, instruction manual, and cable ties.

11. Tether & Adhesive Pads
12. Handlebar/Pole Mount
13. Camera Straps
14. Camera Wraps
15. Micro-USB Charging Cable

MOUNTING

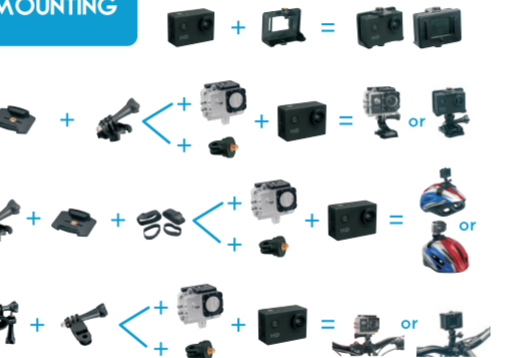

MODES

Turn the Action Camera ON and repeatedly press the **Power/Mode** Button to cycle through the camera mode settings. They will appear in this order: Video, Photo, Photo Burst, Time Lapse, Video & Photo Playback, and Settings.



RECORDING VIDEO

Power on the camera and verify you're in Video Mode. Press the **Shutter/OK** Button. A "beep" will sound and the **Camera Light Indicator** will flash while recording. Press the **Shutter/OK** Button to stop, a beep will sound and the lights will shut off. In the event your camera is low on battery, it will automatically save your video before the battery dies and shuts itself off.

PHOTO MODE

Verify you're in Photo Mode (Note: the Photo icon will show on the screen). To take a photo, press the **Shutter/Select** Button. A camera shutter noise will sound.

PHOTO BURST

Verify you're in Photo Burst Mode (Note: the Photo Burst icon will show on the screen). In Photo Burst Mode, your camera takes 3 photos in 1.5 seconds.

TIME LAPSE

Verify you're in Time Lapse Mode, and that Continuous Lapse is ON while in this mode (Note: the Time Lapse icon will show on the screen). You can select which interval suits the moment (2, 3, 5, 10, 20, 30, or 60 seconds). Press the **Shutter/Select** Button to start the time lapse.

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FOR PORTABLE DEVICE USAGE (<20m from body/SAR needed)

Radiation Exposure Statement:

The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

FOR COUNTRY CODE SELECTION USAGE (WLAN DEVICES)

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.