


modern kids™

MK15-FM

PRO CB TALKER

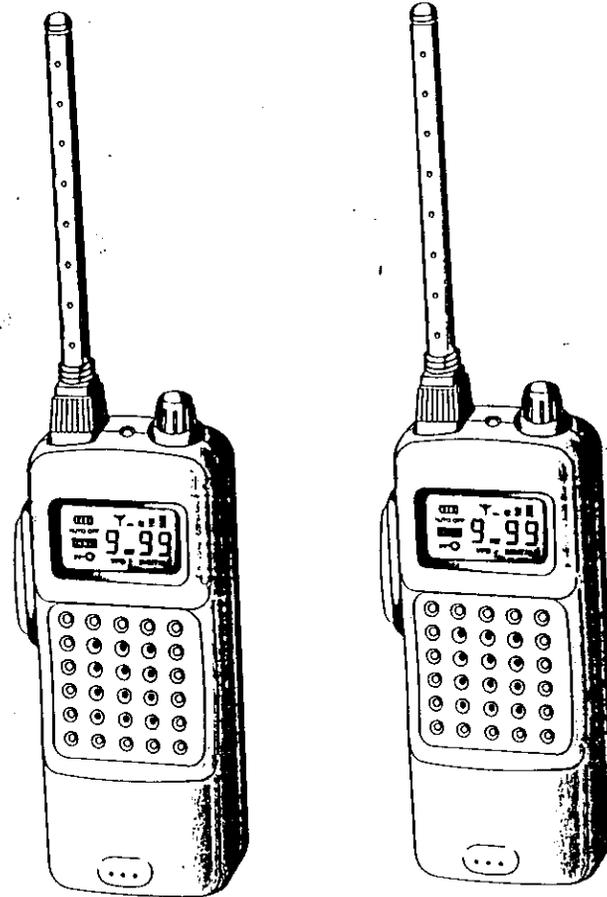

INSTRUCTION MANUAL

BASIC OPERATION - TRANSMIT + RECEIVE

- 1 After battery installation, turn on the unit by rotate the OFF/ON/VOLUME knob (F) clockwise and when you see the LED power indicator (E) glows with noise from the earpiece (C), the unit is 'ON'.
- 2 Push the Press-To-Talk button (B) to talk and release to listen. Talk direct to the mouth piece (D) with the unit 5 to 7 cm (2 to 3 inches) from your mouth.
- 3 Adjust the volume by rotate the OFF/ON/VOLUME knob (F).

- The range can alter depending upon the environment in which it is used. Maximum range will be obtained in open outdoor conditions without tall buildings or trees and with fresh batteries fitted.

*TIPS

To talk to each other, first one of you should press the "Press-To-Talk" button (B) and speak into the microphone (D), and say "OVER" when finished. Then release the "Press-To-Talk" button (B).

Your friend can then press their "Press-To-Talk" button (B) and speak to you!

FAULT FINDING

If the product does not operate correctly please check the following :

FAULT	CAUSE	ACTION
Unit does not work	- May be due to run down battery	- Fit new battery
Increase in static	- May be due to : car engines, power lives, dimmer switches, fluorescent lights, electric motors	- Change your location or point the antenna in different directions
Decrease in range	- Unit does not transmit well through hills, trees, crowds of people, buildings - Weak battery	- Move to a higher location or a more open and flat space - Fit new battery

- Specifications and designs are based on the latest information available at the time of printing and are subject to change without notice.

INTRODUCTION

The Modern Kids™ CB Talker Pro FM walkie talkie is a CB look high performance walkie talkie with high quality sound reproduction. Operation range up to 200m* (650ft).

WARNING

- 1 Do not allow the product to be used in damp conditions or immersed in water.
- 2 Do not place the CB Talker Pro FM walkie talkie next to heat sources such as radiators and sunny windows etc.
- 3 CB Talker Pro FM walkie talkie do not contain any user serviceable parts. Do not dismantle.
- 4 When the CB Talker Pro FM walkie talkie is not in used for long period of time, remove all batteries from the unit. Otherwise the batteries may leak and cause damage to the CB Talker Pro FM walkie talkie.

BATTERY CAUTIONS

- Read and follow all warnings and instructions supplied by the battery manufacturer.
- When you insert the batteries, make sure that the (+) and (-) terminals face in the correct directions.
- Never use batteries that show signs of leaking or cracking.
- Do not use rechargeable batteries.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Used batteries should not be discarded in fire.
- Keep all batteries away from children.

BATTERY INSTALLATION +

- 1 Open battery door (G) by inserting a coin in the slot at the bottom end of the cover and pulling top of coin towards you.
- 2 Snap each unit with one PP3 (MN1604) battery to the battery contacts. (Alkaline battery is highly recommended)
- 3 Close the battery door.

+ Please also see the diagrams shown on the back of the packaging.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.