# The button ⑤ of TR5C Transceiver functions description:

## For LCD panel light out:

press once for LCD panel light out, wait for 3 seconds will turn off the light and back to normal status automatically.

## Known the latest status:

Press twice for known the latest status (LCD panel keep lighten), wait for 3 seconds will turn off the light and back to normal status automatically.

For example: If latest status was Door open trigger form Car2,

when normal status and press twice LCD panel will show the match picture like the right of picture to

prompt user.

Note: -1 or -2 prompt meaning the latest status of Car1 or

Car2.

If no single back from Car1 or Car2, the -1 or -2 will not bee shown.



### Car1 or Car2 Control Selection:

Keep press 2" to change Car1 or Car2 control for transceiver and LCD panel will show the match number (Hour Number) to prompt. (LCD panel keep lighten), wait for 3 seconds will turn off the light and back to normal status automatically.

For example: If the transceiver latest control was for Car1, when keep press 2" that will change to control

Car2 and LCD show number "2" that meaning the all controls of transceiver was for Car2, when keep press 2" again turn to control Car1 and LCD shown number "1". When Car1 or Car2 been Selected and wait for 3 seconds will turn off the light and back to normal status

automatically.

#### For Time and Beep Setup:

Press 5 times go into the Time and Beep Setup mode (LCD panel keep lighten and "AM" or "PM" will flashing that is meaning in setup mode).

When in setup mode, you can refer the key function of following chart to operation.

Button	Description
Button ①	turn "AM/PM" (when "AM" or "PM" flashing) or increase(+) for time number adjusting
Button ②	turn "AM/PM" (when "AM" or "PM" flashing) or decrease(-) for time number adjusting
Button ③	Go to the next item operation. (cycled and the match item will flashing for indication) "AM/PM"→"Hour"→"Hour"→"Hour"→"Hour"→"
Button 4	Beep disable(shock once and show match item) or Beep enable(beep once and show match item)
Button ⑤	press once for exit setup mode directly or do nothing wait for seven seconds to exit setup mode automatically, when exit setup mode will turn off the LCD panel light.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FCC Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Notice: Any changes or modification not expressly approved by the party responsible could void the user's authority to operate the device.