

MANUAL


NUMERIC DISPLAY PAGER

BF TECH.

CONTENTS

1. EXTERNAL VIEW
2. DESCRIPTION OF ICON INDICATORS
3. HOW TO OPERATE & FEATURES
 - 3-1. ACTIVATION SELECTION
 - 3-2. SET TIME
 - 3-3. SET ALARM
 - 3-4. MELODY SET
 - 3-5. POWER OFF
 - 3-6. MESSAGE READING
 - 3-7. CONTINUOUS MESSAGE INDICATION
 - 3-8. DUPLICATE MESSAGE
 - 3-9. RECEIVED MESSAGE FULL INDICATION
 - 3-10. UNREAD MESSAGE ALARMING
 - 3-11. MESSAGE LOCK
 - 3-12. ERASE MESSAGE
 - 3-13. POWER AUTO ON/OFF
 - 3-14. STOPWATCH
 - 3-15. LOW BATTERY INDICATION
 - 3-16. OUT OF RANGE
4. HOW TO CHANGE THE BATTERY

1. EXTERNAL VIEW

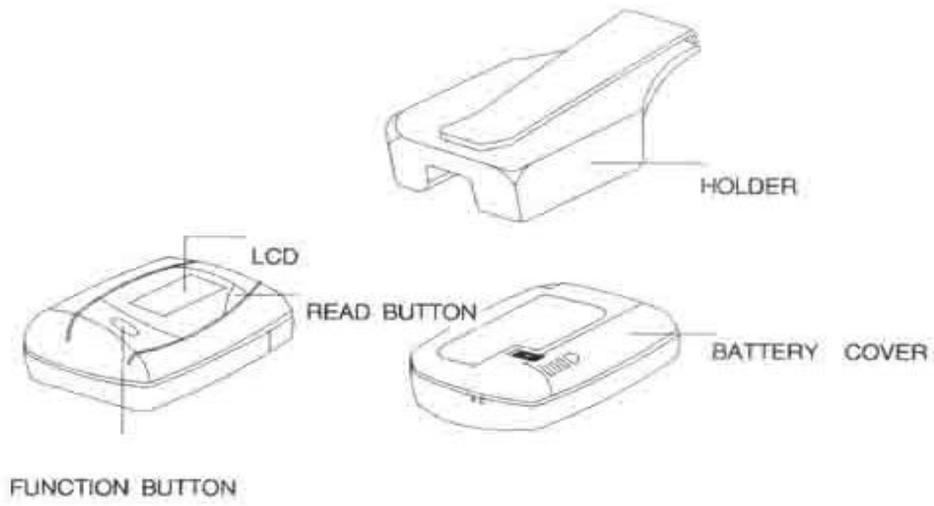


2. DESCRIPTION OF ICON INDICATORS

- 1)  : Buzzer Alert
- 2)  : Melody Alert
- 3)  : Vibration Alert
- 4)  : Time Setting
- 5)  : Alarm
- 6)  : Message Lock
- 7)  : Stopwatch
- 8)  : Auto On/Off
- 9)  : Low Battery
- 10)  : Duplicate Message
- 11)  : In Service Area
- 12)  : Continuous Message

3. HOW TO OPERATE & FEATURES

3-1. ACTIVATION SELECTION


- ▷ The lamp will be on when pressing the Function Button.
- ▷ "TONE OFF?" displays when pressing the Function Button one more time.

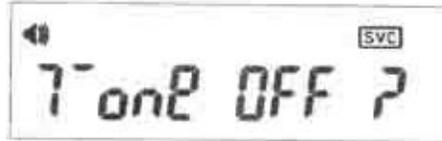


- ▷ Press the Function Button at this time to select the vibration mode, and the symbol of vibration displays.

- ▷ Press the Function Button until "TONE ON?" displays to change the Activation Mode from vibration to buzzer(melody), and then press the Function Button to set the buzzer(melody) mode.
- ▷ Refer to the "3-4. MELODY SET".

(In the buzzer mode)

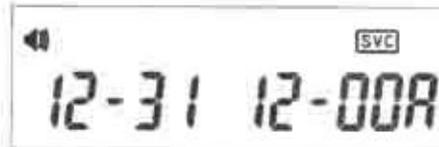


(In the melody mode)

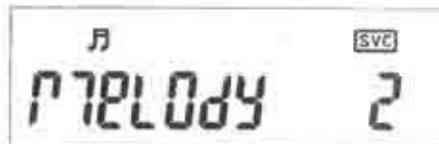

3-2. SET TIME

- ▷ Press the Function Button two times to be displayed "TONE ON?" or "TONE OFF?"; and then press the Read Button to be displayed "SET TIME" in the Function Selection Mode.

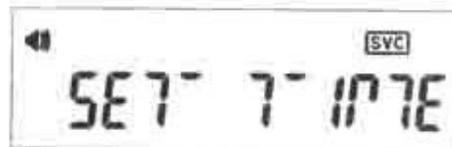

- ※ NOTE : Please adjust the date in February of leap year because this pager will go to February 29 regardless of leap year.


- ▷ Press the Function Button to set Current Time and the digit of Month flashes.



- ▷ Press the Function Button to select Month, Day, Time and AM/PM.
- ▷ Press the Read Button to change them and press the Function Button to fix it.

3-3. SET ALARM

- ▷ Press the Read Button two times to be displayed "SET ALARM" in the Function Selection Mode.

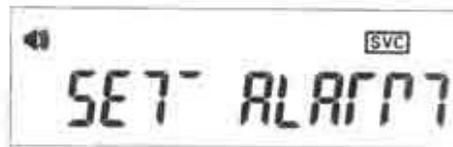


- ▷ Press the Function Button, and the digit of Time flashes.
- ▷ Press the Read Button to change the time as you want and press the Function Button to fix it.
- ▷ Alarm alerts for 30 seconds at the setting time.
- ▷ Press the Read Button to stop alarming tone.




3-4. MELODY SET

- ▷ Press the Read Button three times to be displayed "MELODY SET" in the Function Selection Mode.

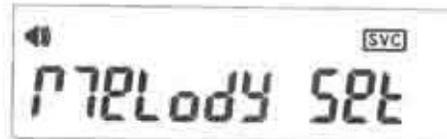


- ▷ Press the Function Button, and selected melody will be played with melody No.

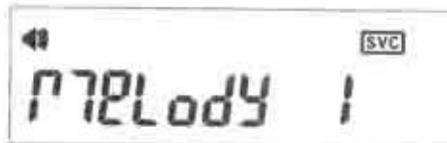

- ▷ Press the Read Button repeatedly to select the appropriate sound and press the Function Button to fix it.

3-5. POWER OFF


- ▷ Press the Read Button four times to be displayed "POWER OFF?" in the Function Selection Mode.

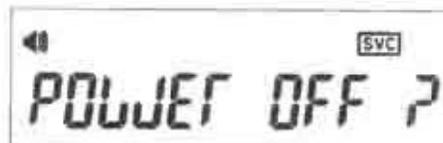


- ▷ Press the Function Button to make power off.
- ▷ Press the Function Button for 2 seconds to turn to standby.

3-6. MESSAGE READING

- ▷ This pager has 15 message slots and each message slot stores up to 20 digits.
- ▷ In case receiving a message, the pager vibrates for 6 seconds or alerts for 15 seconds. And press any button to stop it.


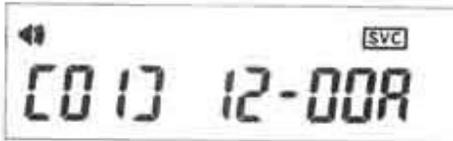


- ▷ Press the Read Button to read the received message, and the receiving time will be displayed with message sequence number.
- ▷ And in case pressing the Read Button one more time, the received message will be displayed.
- ▷ In case no message has been received, "NO PAGE" will be displayed when pressing the Read Button in standby.

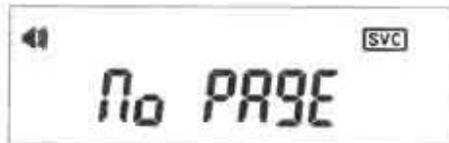

3-7. CONTINUOUS MESSAGE INDICATION

- ▷ In case a received message is more than 13 digits, "▶" symbol displays on the screen.

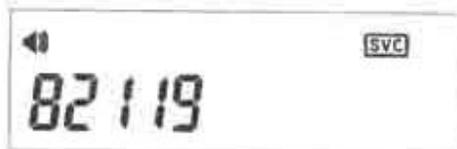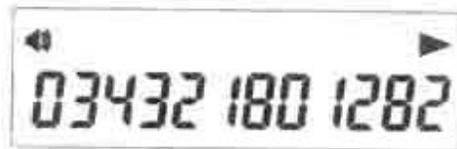

3-8. DUPLICATE MESSAGE

- ▷ When the pager receives the same message, the repeated message is memorized and memorized message is automatically deleted. And the duplicate message symbol displays on the screen.



3-9. RECEIVED MESSAGE FULL INDICATION

- ▷ "PAGE FULL" displays on the screen when the pager stores max 16 messages.




- ▷ When the pager receives more than 16 messages, newly received message is memorized and first message is automatically deleted. However, the locked message can not be deleted.

3-10. UNREAD MESSAGE ALARMING

- ▷ In case a received message is not read, alarming tone alerts every 30 seconds.

3-11. MESSAGE LOCK

- ▷ Press the Function Button to lock the message when a message displays on the screen, and the message lock symbol will be displayed with signal tone.

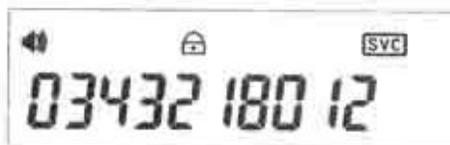


- ▷ Press the Function Button to unlock the message when the message lock symbol displays on the screen.

3-12. ERASE MESSAGE

1) ERASE ALL

- ▷ Press the Function Button and then lamp is on.
- ▷ Press the Function Button one more time for 3 seconds to be displayed "ERASE ALL".

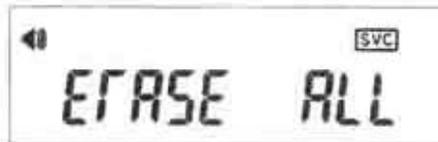

- ▷ Press the Function Button to delete all messages. At this time locked messages can not be deleted.

2) ERASE ONE


- ▷ To select the message you want to delete, Press the Read Button to be displayed "ERASE?" after reading the target message.





- ▷ Press the Function Button to delete the selected message.

3-13: POWER AUTO ON/OFF

- ▷ Press the Read Button after "ERASE ALL" displays, and "SET AUTO" will be displayed.

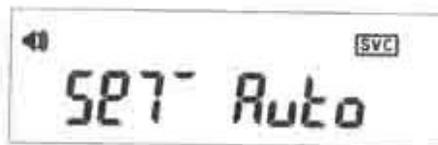


- ▷ Press the Function Button to be displayed "AUTO OFF" or "AUTO ON".
- ▷ Press the Read Button to select "OFF" or "ON" and Press the Function Button to fix it.

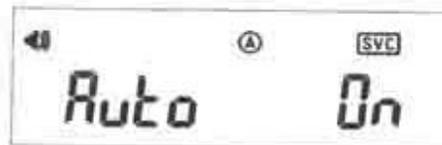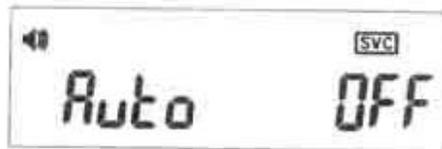

- ▷ In case you select "AUTO ON", the pager will be power off at AM 1:00 and power on at AM 5:00 automatically.

3-14. STOPWATCH


- ▷ Press the Read Button two times after "ERASE ALL" displays, and "STOP WATCH" will be displayed.

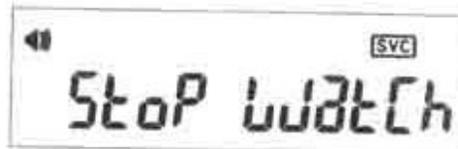

- ▷ Press the Function Button, and it will go to the standby mode.




- ▷ Press the Function Button one more time to count time, and counting time will be displayed on the right side of LCD.

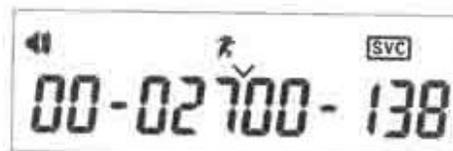

- ▷ Press the Read Button to stop counting time.
- ▷ Press the Function Button to count time once and again.
- ▷ Press the Function Button for three seconds to turn to standby mode.

3-15. LOW BATTERY INDICATION

- ▷ "LO BATT" displays when it has to be changed.






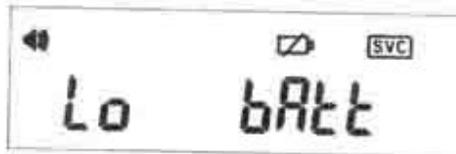


3-16. OUT OF RANGE

- ▷ If the pager is out of range area or no service area, its symbol disappears and then the page can not receive the message.

4. HOW TO CHANGE THE BATTERY

- ▷ This pager is designed to operate with one AAA alkaline battery.
- ▷ First turn off your pager.
 - ① Slide the locking tab to unlocked position.
 - ② Remove the battery cover from the pager.
 - ③ Remove the old battery and install the new battery by aligning to the inside positive and negative mark the pager.
 - ④ Replace the battery cover.
 - ⑤ Slide the locking tab to the locked position.

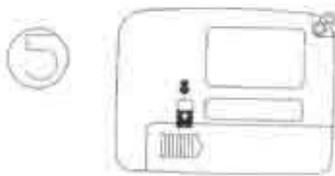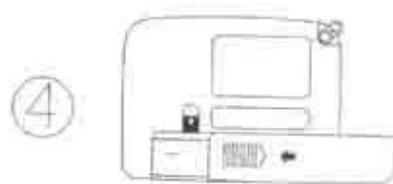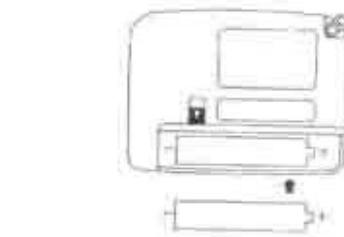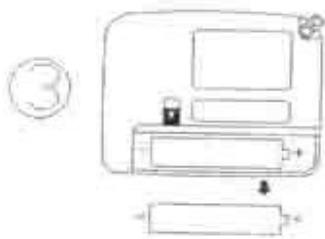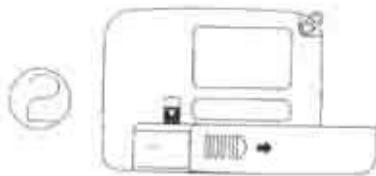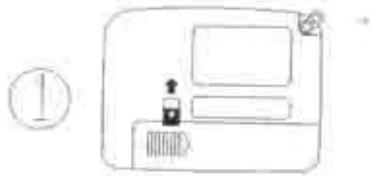

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE CONDITION THAT THIS DEVICE DOES NOT CAUSE HARMFUL INTERFERENCE.