

Panasonic

900MHz Cordless Phone

Model No. **KX-TC1484B**

Pulse-or-tone dialing capability

Operating Instructions



Caller ID Compatible

PLEASE READ BEFORE USE AND SAVE.

Charge the battery for about 15 hours before initial use.

 
Panasonic World Wide Web address: <http://www.panasonic.com>
for customers in the USA or Puerto Rico

Preparation

Basic Operation

Advanced Operation

Useful Information



Before Initial Use

Please read **IMPORTANT SAFETY INSTRUCTIONS** on page 34 before use.
Read and understand all instructions.

Thank you for purchasing your new Panasonic cordless telephone.

Caller ID and Call Waiting Service, where available, are telephone company services. After subscribing to Caller ID, this phone will display a caller's name and phone number. Call Waiting Caller ID, which displays a second caller's name and phone number while the user is on another call, requires a subscription to both Caller ID and Call Waiting.

Attach your purchase receipt here.

 
 
For your future reference


Serial No. _____ Date of purchase _____
(found on the bottom of the unit)


Name and address of dealer _____

Accessories (included)

For extra orders, call 1-800-332-5368.

<input type="checkbox"/> AC Adaptor (p. 7) Order No. PQWATC1461M one	<input type="checkbox"/> Telephone Line Cord (p. 7)  one
<input type="checkbox"/> Battery (p. 8) Order No. P-P504  one	<input type="checkbox"/> Handset Cover (p. 8) Order No. PQYNTC1461B  one
	<input type="checkbox"/> Belt Clip (p. 27) Order No. PQZHTC1481B  one

 


 

For Best Performance

Battery Charge

A rechargeable Ni-Cd battery powers the handset. Charge the battery for about **15 hours** before initial use (p. 8).

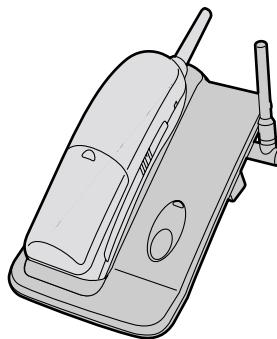


Base Unit Location

Calls are transmitted between the base unit and the handset using wireless radio waves. **For maximum distance and noise-free operation**, the recommended base unit location is:

Away from electrical appliances such as a TV or personal computer.

In a HIGH and CENTRAL location with no obstructions such as walls.

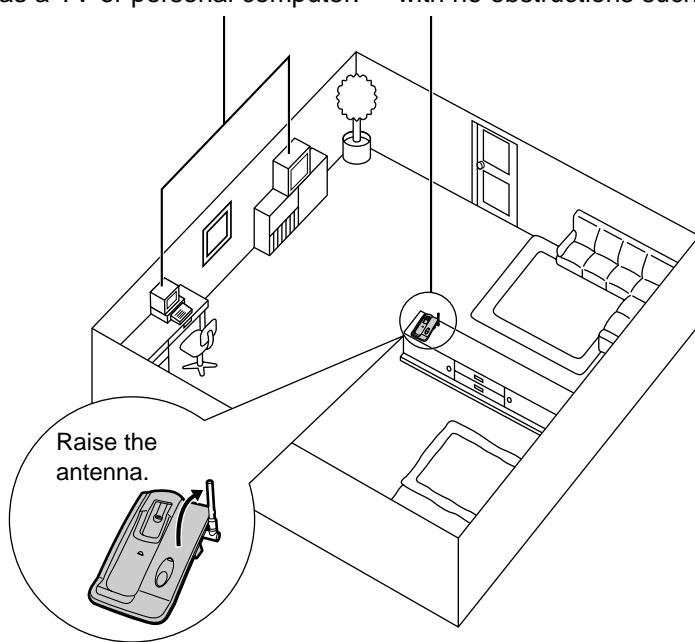

For assistance, please call: 1-800-211-PANA(7262)

Contents

Preparation

Location of Controls	5
Settings	7
Connections	7
Installing the Battery	8
Battery Charge	8
Ringer Volume	9
Programmable Functions	10
Display Language	10
Dialing Mode	10

Basic Operation

Making Calls	11
Answering Calls	12
Caller ID Service	13
Viewing the Caller List	15
Calling Back from the Caller List	17
Editing the Caller's Phone Number	17
Storing Caller List Information in the Phonebook	18
Erasing Caller List Information	19

Advanced Operation


Phonebook	20
Storing Names and Numbers	20
Entering Names and Symbols	21
Finding Stored Items	22
Dialing	22
Editing	23
Erasing	24

Special Features

Automatic Security Code Setting	25
Handset Locator	25
Temporary Tone Dialing (For Rotary or Pulse Service Users)	25
How to Use the PAUSE Button (For Analog PBX Line/Long Distance Service Users)	26
For Call Waiting Service Users	26

Useful Information

Belt Clip	27
Optional Headset	27
Wall Mounting	28
Adding Another Phone	29
Battery Replacement	30
Troubleshooting	31
Important Safety Instructions	34
FCC and Other Information	36
Index	38

 


Location of Controls




Base unit

Preparation

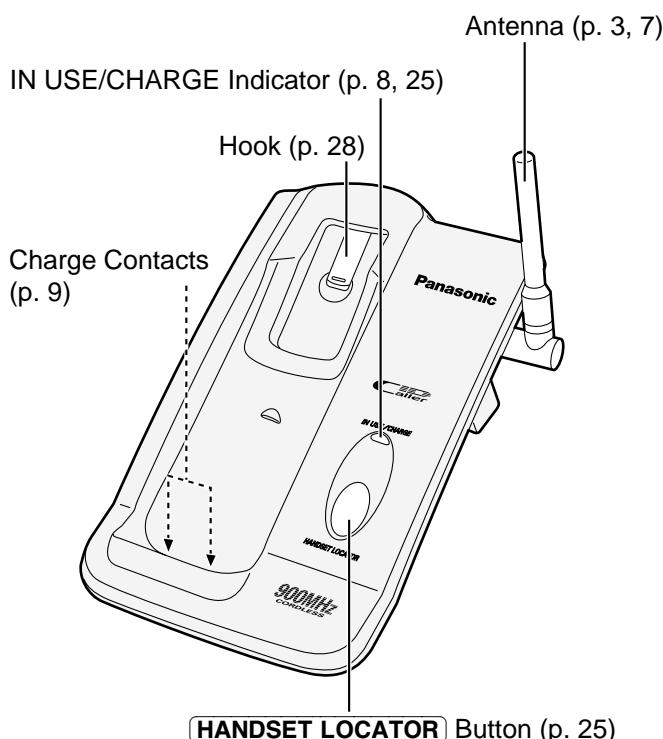


For assistance, please call: 1-800-211-PANA(7262)

 5



► Location of Controls

Handset

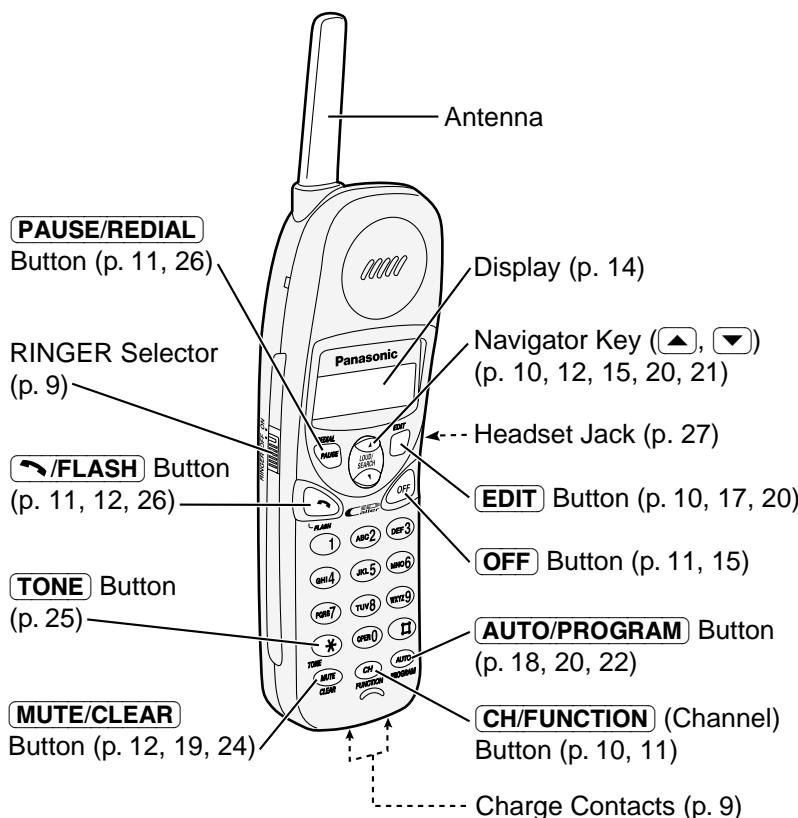


How to use the Navigator key

This key has two active areas that are indicated by arrows.



- Pressing the up or down arrow allows you
 - to enter into the Caller List,
 - to select the function items,
 - to scroll through your phonebook and the Caller List, and
 - to adjust the receiver volume on the handset.

 Throughout these Operating Instructions, the Navigator key is indicated by the arrows or .




Settings




Connections

Preparation

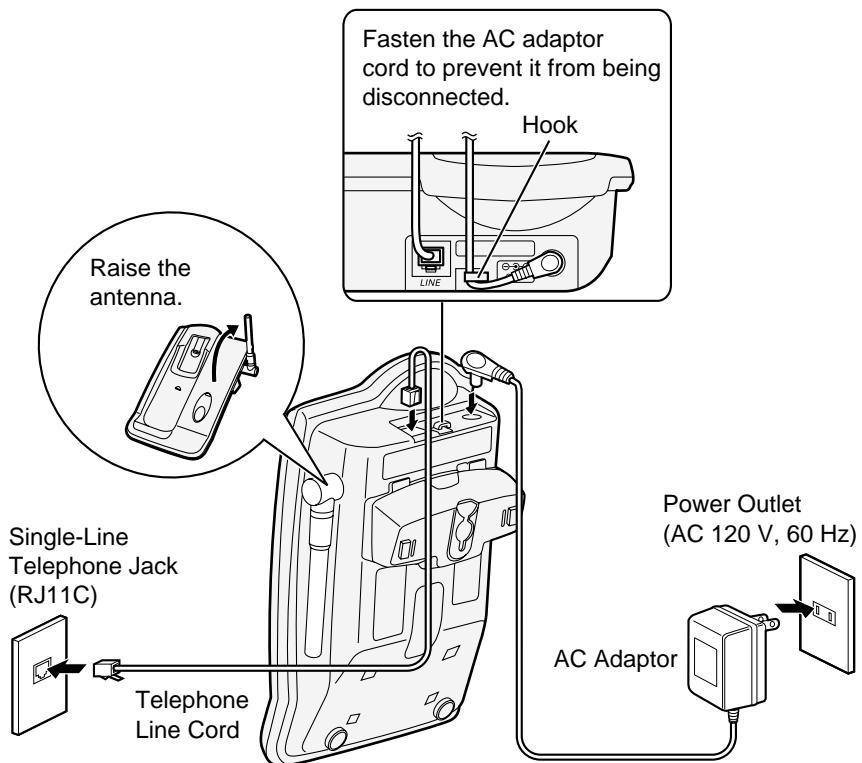

 
- USE ONLY WITH Panasonic AC ADAPTOR PQWATC1461M (Order No. PQWATC1461M).
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- To connect a standard telephone on the same line, see page 29.
- If your unit is connected to a PBX which does not support Caller ID services, you cannot access those services.



▶ Settings

Installing the Battery


Install the battery and close the handset cover, locking it into place.

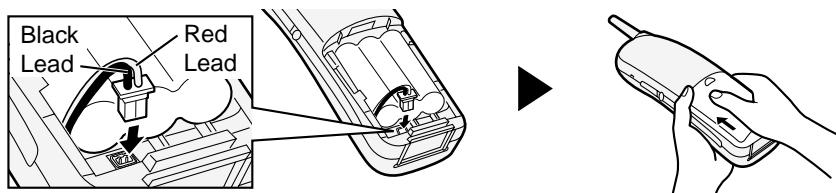

Battery Charge

Place the handset on the base unit and charge for about **15 hours** before initial use.

- The IN USE/CHARGE indicator lights.

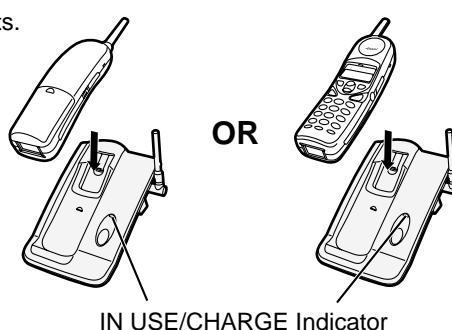


Recharge

Recharge the battery when:

- “RECHARGE” is displayed,
- “” is displayed, or
- the handset beeps intermittently while it is in use.

 RECHARGE





Battery information

After your Panasonic battery is fully charged (p. 8):

Operation	Operating time
While in use (TALK)	Up to about 5 hours
While not in use (Standby)	Up to about 5 days

- The battery operating time may be shortened depending on usage conditions, such as viewing the Caller ID Caller List or phonebook, and ambient temperature.
- **Clean the handset and the base unit charge contacts with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.** Otherwise the battery may not charge properly.
- If the battery is fully charged, you do not have to place the handset on the base unit until "RECHARGE" and "■" are displayed. This will maximize the battery life.
- The battery cannot be overcharged.

Preparation

Standby Mode (While the handset is off the base unit)


The handset goes into the standby mode after you finish using the handset (making/answering a call, viewing the Caller List or phonebook etc.). The display shows "STANDBY".

The battery operating time is conserved in this mode.


Ringer Volume

Set the RINGER selector to ON or OFF.

- When set to OFF, the unit will not ring.

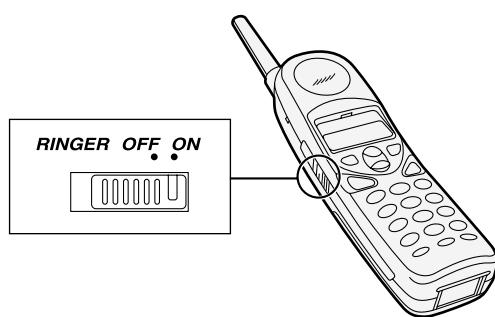

 For assistance, please call: 1-800-211-PANA(7262)



Programmable Functions

You can program the following function items **using the handset near the base unit**.

Make sure the unit is in the standby mode.

- You can exit the programming mode at any time by pressing **OFF**.
- If you do not press any buttons for 60 seconds, the unit will return to the standby mode.

Display Language

You can select ENGLISH, SPANISH or FRENCH as the display language. Your phone comes from the factory set to ENGLISH. If you want to select the other language, program as follows:

1 Press **CH/FUNCTION**.

- The current setting is displayed.

LANGUAGE : ENG

2 Select "ENG", "ESP" or "FRA" by using **▼** or **▲**.

Ex. SPANISH is selected.

IDIOMA : ESP

3 Press **EDIT** to save.

- A beep sounds.
- The handset will return to the standby mode.

Dialing Mode

If you have touch tone service, set to TONE. If rotary or pulse service is used, set to PULSE. Your phone comes from the factory set to TONE.

1 Press **CH/FUNCTION** twice.

- The current setting is displayed.

 
DIAL MODE : TONE

2 Select "PULSE" or "TONE" by using **▼** or **▲**.

DIAL MODE : PULSE

3 Press **EDIT** to save.

- A beep sounds.
- The handset will return to the standby mode.



Making Calls



To have a hands-free conversation, connect an optional headset to the handset (p. 27).

1 Press **FLASH**.

- After a few seconds, the display will show the receiver volume.

CONNECTING

2 Dial a telephone number.

- The dialed number is displayed.

TALK VOL. 1112222

3 To hang up, press **OFF** or place the handset on the base unit.

- If an alarm tone sounds in step 1, move closer to the base unit or place the handset on the base unit, and try again.
- If additional dialing is necessary after using speed dialing functions such as phonebook dialing (p. 22) or REDIAL, wait until speed dialing is finished to continue further dialing. Otherwise, the unit may not dial properly.

If noise interferes with the conversation

Press **CH/FUNCTION** to select a clearer channel in the talk mode or move closer to the base unit.

Basic Operation

To redial the last number dialed

Press **FLASH** → **PAUSE/REDIAL**.

To dial after confirming the entered number

1 Dial a phone number.

- If you misdial, press **MUTE/CLEAR**. One digit is erased from the right. Dial the correct phone number.

3334444

2 Press **FLASH**.

- After a few seconds, the display will show the receiver volume and phone number.

CONNECTING

 
3 To hang up, press **OFF** or place the handset on the base unit.

TALK VOL. 3334444

To redial after confirming the last number dialed

Press **PAUSE/REDIAL** → **FLASH**.

For assistance, please call: 1-800-211-PANA(7262)



► Making calls

To select the receiver volume

Press **▲** or **▼** while talking.

- Each time you press **▲** or **▼**, the volume level will change by 4 levels.

 
Ex. Receiver volume:
level 4



To mute your conversation

Press **MUTE/CLEAR** while talking.

- "MUTE" and the receiver volume are displayed.
- The other party cannot hear you but you can hear them.



To resume the conversation

Press **MUTE/CLEAR** again.

Answering Calls

When a call is received, the unit rings. If you subscribe to a Caller ID service, the calling party information will be displayed after the first ring (p. 13). If you do not subscribe to a Caller ID service, "INCOMING CALL" will be displayed. In order to view the Caller ID information, please wait until the second ring to answer a call.

 
Lift the handset off the base unit and press **FLASH**.

- You can also answer a call by pressing any button except **OFF** (Any Key Talk).

When an optional headset is connected (p. 27), make sure to use the headset to talk with the caller. If you want to have a normal cordless phone conversation, disconnect the headset.

Backlit LCD display

The lighted handset display will stay on for a while after pressing a handset button.



Caller ID Service



This unit is compatible with a Caller ID service offered by your telephone company. If you subscribe to a Caller ID service, the calling party's information will be displayed after the first ring.

The unit can record information of up to 40 callers, including the date and time received, in the Caller List. When the 41st call is received, the first call is deleted.

Using the list, you can automatically call back a caller. You can store the callers' numbers from the Caller List into the phonebook.

If you subscribe to a Call Waiting Caller ID Feature, when a second call is received while talking, the new caller's name, phone number and the date and time received will be displayed (p. 26).

Basic Operation

How caller information is displayed when a call is received

 
The display shows the caller's name, phone number and the date and time received after the first ring.

ROBINSON, TINA
111-222-3333
6/10 3:10 PM NEW CALL 36

After you answer the call, the display will show the receiver volume.

TALK VOL. ■






► Caller ID Service


- Caller information cannot be displayed in the following cases:
 - If the caller dialed from an area which does not provide a Caller ID service, the display will show "OUT OF AREA".
 - If the caller has requested not to display his/her information, the display will show "PRIVATE CALLER".
 - If the Caller ID information is interfered with during reception, the display will show "ERROR".
- If your unit is connected to a PBX which does not support Caller ID services, you cannot access those services.
- The name display service may not be available in some areas. For further information, please contact your telephone company.


To check the number of new calls

 If you have received 10 new calls, the display will show the following:



What the display means

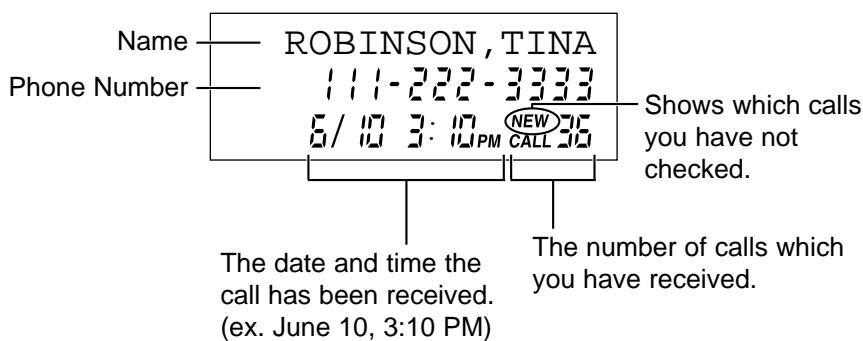

 

Viewing the Caller List

To check who has called, follow the steps below.

Make sure the unit is in the standby mode.

- 1 Lift the handset off the base unit and press **▼** or **▲** to enter the Caller List.

- The display will show, for example, the following:

SMITH, JACK
222-333-4444
6/11 3:10 PM NEW CALL 03

- 2 To search from the most recent call, press **▼**.
To search from the oldest call, press **▲**.

- To scroll between callers, press **▼** or **▲**.


- 3 To exit the list, press **OFF**.
• 2 beeps sound and the handset will return to the standby mode.

Basic Operation

- If the Caller List is empty, you cannot enter the Caller List by pressing **▼** or **▲**.
- Once new calls have been checked, "NEW" will not be displayed.
- If you do not press any buttons for 60 seconds, the unit will return to the standby mode.

► Caller ID Service

Ex. When you search from the most recent call:

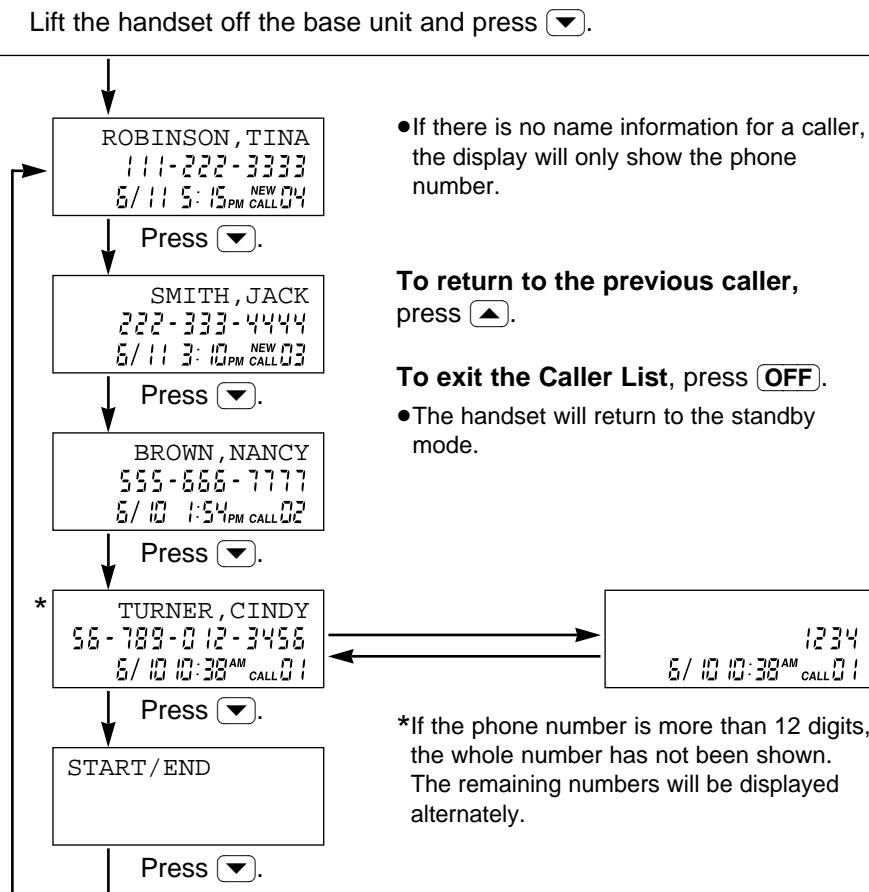


- If there is no name information for a caller, the display will only show the phone number.


To return to the previous caller, press **▲.**

To exit the Caller List, press **OFF.**

 - The handset will return to the standby mode.



 - * If the phone number is more than 12 digits, the whole number has not been shown. The remaining numbers will be displayed alternately.



Calling Back from the Caller List

1 Lift the handset off the base unit and press **▼** or **▲** to enter the Caller List.

2 Scroll to the desired caller by using **▼** or **▲**.

3 Press **FLASH**.

- The displayed phone number is dialed automatically.

TURNER, CINDY
234-456-7890
1/12 11:20 AM CALL 33

TALK VOL
2344567890

- In some cases, you may have to edit the number before dialing (See below).
- If a phone number is not displayed in the caller information, you cannot call back that caller.

Editing the Caller's Phone Number

The unit can edit a phone number into one of 3 patterns.

Make sure the unit is in the standby mode.

1 Lift the handset off the base unit and press **▼** or **▲** to enter the Caller List.

2 Scroll to the desired caller by using **▼** or **▲**.

3 Press **EDIT** to select a pattern.


- Each time you press **EDIT**, the number is rearranged into one of 3 different patterns.

(a) 1 - **Area code** - **Phone no.**

(b) **Phone no.**

(c) **Area code** - **Phone no.**

- The order in which patterns (a)-(c) are displayed depends on how the telephone number is displayed in step 2.

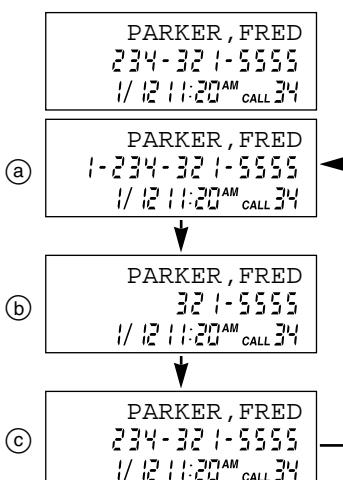

4 After editing the number, you can continue with calling back or storing procedures.

To call back, press **FLASH** (See above).

 
To store the number in the phonebook, press **AUTO/PROGRAM**.

Follow the instructions on the display (p. 18).

- The number edited in step 3 will not be maintained in the Caller List.

For assistance, please call: 1-800-211-PANA(7262)

Basic Operation



► Caller ID Service

Storing Caller List Information in the Phonebook

You can store numbers that are in the Caller List in the phonebook.
Make sure the unit is in the standby mode.

1 Lift the handset off the base unit and press **▼** or **▲** to enter the Caller List.

2 Scroll to the caller you want to store in the phonebook by using **▼** or **▲**.

- If the number requires editing, see page 17.

TURNER, CINDY
234-456-7890
1/12 11:20 AM CALL 33

 
3 Press **AUTO/PROGRAM**.

STORE CID TO ?
CALL --

4 Press a memory station number (**0** to **9**).

- A beep sounds.
- On the LCD memory station number **1** shows “**1**”, **0** shows “**0**”.
- The handset will return to the standby mode.

- You can exit the programming mode at any time by pressing **OFF**.



Erasing Caller List Information

After checking the Caller List, you can erase some or all of the entries.
Make sure the unit is in the standby mode.

To erase a specific caller from the Caller List

- 1 Lift the handset off the base unit and press **▼** or **▲** to enter the Caller List.
- 2 Scroll to the caller you want to erase from the Caller List by using **▼** or **▲**.
- 3 Press **MUTE/CLEAR**.
 - A beep sounds and the information is erased.
 - After a few seconds, the display will show the next or previous caller information.

REAGAN, TOM
 888-777-6666
 1/12 12:20 AM CALL 25

CLEARED

Basic Operation

 
To erase all entries in the Caller List

Before erasing all entries, make sure that “^{NEW} _{CALL}” is not displayed in the recent Caller List.

- 1 Lift the handset off the base unit and press **▼** or **▲** to enter the Caller List.
- 2 Press and hold **MUTE/CLEAR** until “CLEAR ALL CID?” is displayed.
- 3 Press **MUTE/CLEAR**.
 - A beep sounds and all entries are erased.
 - The handset will return to the standby mode.

CLEAR ALL CID?

NO ITEMS STORED



Phonebook

You can store up to 10 names and phone numbers in the phonebook. Using the phonebook, you can make a call by selecting a name on the handset display.

Storing Names and Numbers

Make sure the unit is in the standby mode.

1 Press **AUTO/PROGRAM**.

SELECT STATION

--

2 Press a memory station number (**0** to **9**).

EMPTY

- If an item is already stored, that information is displayed.

01

3 Press **EDIT**.

ENTER NAME :

01

4 Enter a name, up to 15 characters, using the dialing buttons (**1** to **9**), **▼** or **▲**.

TOM

- See the steps for entering names and symbols (p. 21).
- If a name is not required, press **EDIT** and go to step 6.

01

5 Press **EDIT**.

ENTER NUMBER :

6 Enter a phone number, up to 24 digits.

TOM

- Each time you press **MUTE/CLEAR**, the digit is erased from the right. To erase all of the digits, press and hold **MUTE/CLEAR**.
- To show the cursor, press **▼** after entering a digit. Each time you press **MUTE/CLEAR**, the digit under the cursor is erased.
- When you store the last number dialed, press **PAUSE/REDIAL** instead of entering a phone number.

098

 
7 Press **EDIT** to save.

TOM
098

- A beep sounds.
- The handset will return to the standby mode.

0987654321

- If a pause is required for dialing, **PAUSE/REDIAL** can be stored in a phone number counting as one digit (p. 26) in step 6.
- You can exit the programming mode at any time by pressing **OFF**.
- If you do not press any buttons for 60 seconds, the unit will return to the standby mode.



Entering Names and Symbols

The handset dialing buttons (1 to 9), ▼ and ▲ can be used to enter letters and symbols. The letters are printed on the dialing buttons.

Pressing each button selects a character as shown below.

Keys	Number of times key is pressed			
	1	2	3	4
1	Blank	—	*	!
2	A	B	C	(
3	D	E	F)
4	G	H	I	"
5	J	K	L	,
6	M	N	O	;

Keys	Number of times key is pressed			
	1	2	3	4
7	P	Q	R	S
8	T	U	V	?
9	W	X	Y	Z
▼	To move the cursor to the left			
▲	To move the cursor to the right			

- To show the cursor, press ▼ after entering a character.
- To enter another character using the same dialing button, press * or wait for 3 seconds.

If you make a mistake while entering a name

Use ▼ or ▲ to move the cursor to the incorrect character, press **MUTE/CLEAR** to delete and enter the correct character. Each time you press **MUTE/CLEAR**, a character under the cursor is erased.

To erase all characters, press and hold **MUTE/CLEAR**.

For example, to enter “TOM”:

 
- 1 Press **AUTO/PROGRAM**.
- 2 Press a memory station number (0 to 9).
- 3 Press **EDIT**.
- 4 Press 8.
- 5 Press 6 three times, then wait for 3 seconds.
- 6 Press 6.
- 7 When finished, press **EDIT** to save.
 - Follow steps 6 and 7 on page 20 to complete the operation.

- If you enter a blank, press 1.
- To show the cursor, press ▼ after entering a character. While entering names, the cursor will flash on the display.

ENTER NAME :
01
T
TO
TOM
01
ENTER NUMBER :

Advanced Operation

For assistance, please call: 1-800-211-PANA(7262)



► Phonebook

Finding Stored Items

Make sure the unit is in the standby mode.


1 Press **AUTO/PROGRAM**.

2 Press **▲** or **▼**.

- The first item or last item is displayed.

ANN
123-456-7890
02

3 Scroll to the desired item by using **▲** or **▼**.

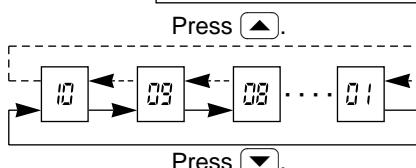

- You can find the items using the memory station numbers (0 to 9) directly in step 2.

- You can exit the phonebook at any time by pressing **OFF**.

- If "EMPTY" is displayed in step 2 or 3, the phonebook is empty.

- If the phone number is more than 12 digits, the whole number has not been shown. The remaining numbers will be displayed alternately.

TURNER, CINDY
56-789-012-3456
06

TURNER, CINDY
1234
06

Dialing

1 Press **AUTO/PROGRAM**.

2 Press **▲** or **▼**.

- The first item or last item is displayed.

3 Scroll to the phonebook item that you want to dial by using **▲** or **▼**.

FRANK
444-5555
03

4 Press **FLASH**.

- The number is dialed automatically.

TALK VOL.
4445555

5 To hang up, press **OFF** or place the handset on the base unit.

 
- You can find the items using the memory station numbers (0 to 9) directly in step 2.

- You can exit the phonebook at any time by pressing **OFF**.

■ If you press **FLASH** first, follow the steps below:

Press **FLASH** → **AUTO/PROGRAM** → **Station Number (0 to 9)**.

(**▲** and **▼** cannot be used for finding the items.)



Editing

Make sure the unit is in the standby mode.

1 Press **AUTO/PROGRAM**.

2 Press **▲** or **▼**.

- The first item or last item is displayed.

3 Scroll to the phonebook item you want to change by using **▲** or **▼**, and press **EDIT**.

JANE
345-6789
04

JANE
345-6789
04

4 Edit the name using the dialing buttons, **▼** or **▲** (p. 21), up to 15 characters.

JANE WALKER
345-6789
04

5 Press **EDIT**.

JANE WALKER
3456789

6 Add a number to the current number.

- If you do not need to change the number, go to step 7.
- To move the cursor, press **▼** or **▲**. The digit is added to the right of the cursor. Each time you press **MUTE/CLEAR**, the digit under the cursor is erased. To erase all of the digits, press and hold **MUTE/CLEAR**.

JANE WALKER
0983456789

 
Advanced Operation

 
7 When finished, press **EDIT** to save.

- A beep sounds.
- The handset will return to the standby mode.

- You can find the items using the memory station numbers (0) to (9) directly in step 2.

- You can exit the phonebook at any time by pressing **OFF**.





► Phonebook

Erasing

Make sure the unit is in the standby mode.

To erase a specific caller from the Phonebook

- 1 Press **AUTO/PROGRAM**.
- 2 Press **▲** or **▼**.
 - The first item or last item is displayed.
- 3 Scroll to the phonebook item you want to erase by using **▲** or **▼**.
- 4 Press **MUTE/CLEAR**.
 - A beep sounds.
 - The handset will return to the standby mode.

HELEN
555-777-8888
05

CLEARED

 
- You can find the items using the memory station numbers (0 to 9) directly in step 2.
- You can exit the phonebook at any time by pressing **OFF**.

To erase all entries in the Phonebook


- 1 Press **AUTO/PROGRAM**.
- 2 Review phonebook record by using **▲** or **▼**.
- 3 Press and hold **MUTE/CLEAR** until "CLEAR ALL ?" is displayed.
- 4 Press **MUTE/CLEAR**.
 - A beep sounds and all entries are erased.
 - The handset will return to the standby mode.

CLEAR ALL ?

NO PHONEBOOK



Special Features

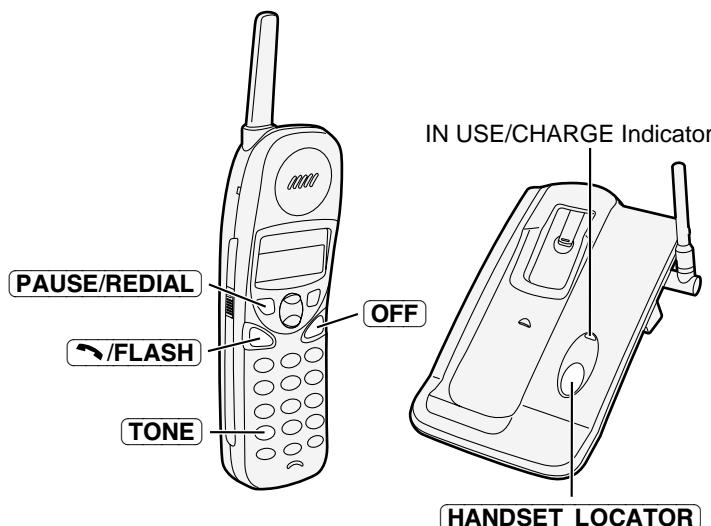

Automatic Security Code Setting

Each time you place the handset on the base unit, the unit automatically selects one of more than 65,000 security codes. These codes help prevent the unauthorized use of your telephone line by another cordless telephone user.

Handset Locator

You can locate the handset or page the handset user with beep tones from the base unit.

- 1 Press **HANDSET LOCATOR**.
 - The IN USE/CHARGE indicator flashes. The handset beeps for 1 minute and "PAGING" is displayed on the handset.
- 2 To stop paging, press **HANDSET LOCATOR** again or press **OFF** on the handset.

 
Advanced Operation

Temporary Tone Dialing (For Rotary or Pulse Service Users)

Press **TONE** before entering access numbers which require tone dialing.

- The dialing mode changes to tone. You can enter numbers to access an answering service, electronic banking service, etc. When you hang up, the mode will return to pulse.

For assistance, please call: 1-800-211-PANA(7262)



► Special Features

How to Use the PAUSE Button (For PBX Line/Long Distance Calls)

We recommend you press **PAUSE/REDIAL** if a pause is required for dialing with a PBX or to make a long distance call.

Ex. Line access number **9** (PBX)
9 ➔ **PAUSE/REDIAL** ➔ Phone number

- Pressing **PAUSE/REDIAL** once creates a 3 second pause. This prevents misdialing when you redial or dial a stored number.
- Pressing **PAUSE/REDIAL** more than once increases the length of the pause between numbers.

For Call Waiting Service Users

Press **FLASH** if you hear a call-waiting tone while talking.

 
- The first call is put on hold and you can answer the second call.
- To return to the first caller, press **FLASH** again.
- The call waiting service cannot be used when a parallel connected telephone is in use.
- If this function does not operate properly, consult your telephone company for details.

Call Waiting Caller ID Feature

Call Waiting Caller ID Feature allows your unit to display the second caller's information. After you hear a call-waiting tone while talking, the unit will display the caller's name, the phone number and the date and time received.

BROWN, NANCY
555-666-7777
6/10 1:54 PM NEW CALL


- Please contact your telephone company for details and availability in your area.




Belt Clip

You can hang the handset on your belt or pocket using the belt clip.

To attach the belt clip

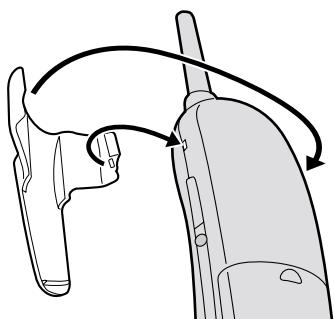

To remove the belt clip

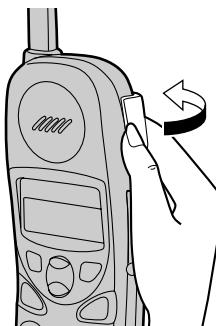


Optional Headset

Plugging an optional headset into the handset allows a hands-free phone conversation. Please use only a Panasonic KX-TCA87 or KX-TCA90 headset. To order, call the accessories telephone number on page 2.

Connecting an optional headset to the handset

Open the headset jack cover, and connect an optional headset to the headset jack as shown below.

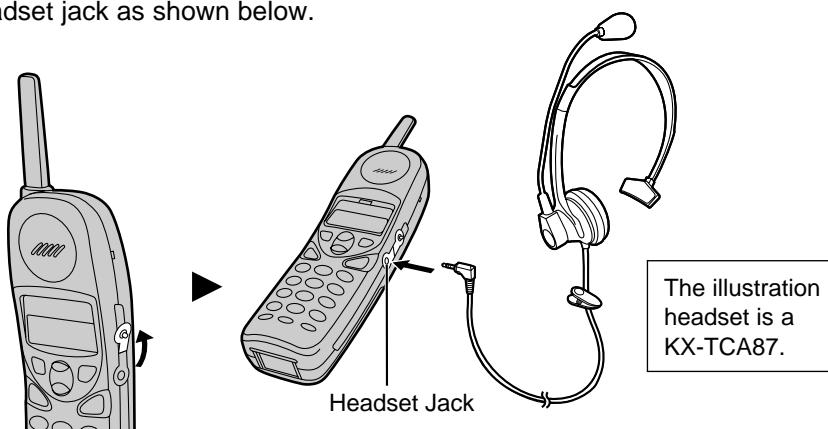

Useful Information


When an optional headset is connected to the handset, make sure to use the headset to talk with the caller. If you want to have a normal cordless phone conversation, disconnect the headset.

For assistance, please call: 1-800-211-PANA(7262)


Wall Mounting

This unit can be mounted on a wall phone plate.


- 1 Remove the wall mounting adaptor.

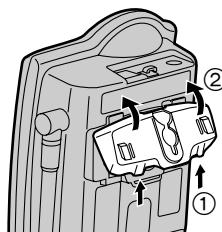


- 2 Push the lower side of the hook (①) and pull down the hook until it locks (②), **so the tab holds the handset**.

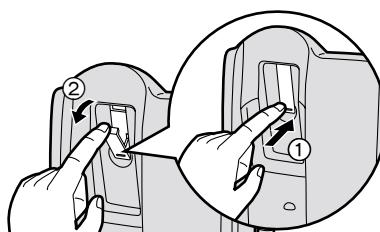

- 3 Connect the AC adaptor. Tuck the telephone line cord inside the wall mounting adaptor, then push it in the direction of the arrow.
•The word "UP WALL" should face upward.

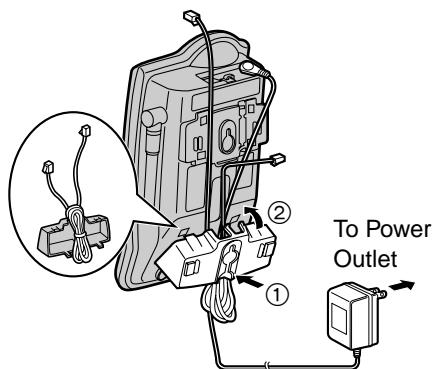


- 4 Connect the telephone line cord. Mount the unit, then slide down.
•Raise the antenna.

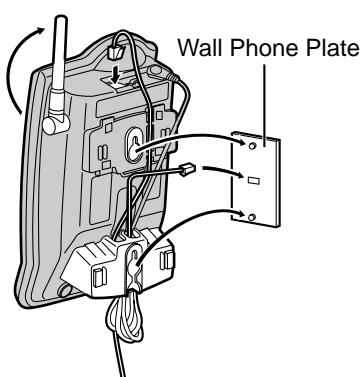

5 To charge the battery:


Insert the tab to the handset hole (①) and fix the charge contacts (②).

- Make sure to place the handset with the keypad facing down.
- The IN USE/CHARGE indicator lights.

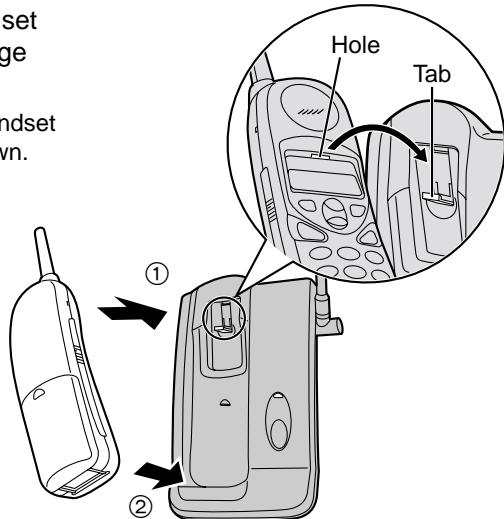


Adding Another Phone

This unit will not function during a power failure. To connect a standard telephone on the same line, use the Panasonic T-Adaptor KX-J66. To order, call the accessories telephone number on page 2.

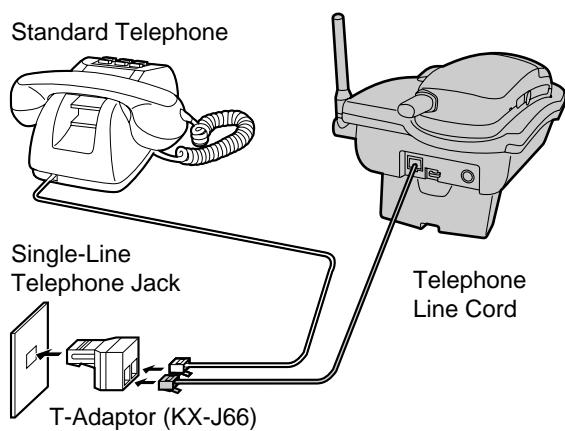

Useful Information

 
For assistance, please call: 1-800-211-PANA(7262)



Battery Replacement


If "RECHARGE" and "⌚" are displayed after a few telephone calls even if the battery was fully charged, replace the battery with a new Panasonic P-P504 battery. To order, call the accessories telephone number on page 2.

1 Press the notch on the handset cover firmly (①) and slide it as indicated by the arrow (②).

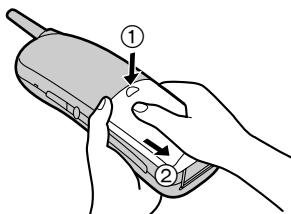

2 Remove the old battery. Then install the new one.


- Insert the battery plug into the connector as shown in the picture.
- Be sure wires are free from being pressed by the battery body or handset cover.

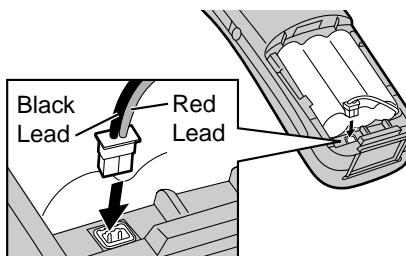

3 Close the cover. Make sure you charge the new battery for about 15 hours.

 A nickel cadmium battery that is recyclable powers the product you have purchased. At the end of its useful life, under various state and local laws, it is illegal to dispose of this battery into your municipal waste stream. Please call 1-800-8-BATTERY for information on how to recycle this battery.






Troubleshooting



Problem	Cause and Remedy
The unit does not work.	<ul style="list-style-type: none"> ● Check the settings (p. 7–9). ● Charge the battery fully (p. 8). ● Clean the charge contacts and charge again (p. 9). ● Install the battery properly (p. 8, 30). ● Place the handset on the base unit and unplug the AC adaptor to reset. Plug in, and try again.
An alarm tone sounds.	<ul style="list-style-type: none"> ● You are too far from the base unit. Move closer and try again. ● Place the handset on the base unit and try again. ● Plug in the AC adaptor. ● Raise the base unit antenna.
Static, sound cuts in/out, fades. Interference from other electrical units.	<ul style="list-style-type: none"> ● Locate the handset and the base unit away from other electrical appliances (p. 3). ● Move closer to the base unit. ● Raise the base unit antenna. ● Press CH/FUNCTION to select a clearer channel in the talk mode.
The handset does not ring.	<ul style="list-style-type: none"> ● The ringer volume is set to OFF. Set to ON (p. 9). ● If a power failure occurs, the handset loses communication with the base. When power returns, place the handset on the base unit once then try again.
The handset display is blank.	<ul style="list-style-type: none"> ● Install the battery properly (p. 8, 30). ● Charge the battery fully (p. 8).
You cannot program items, such as the dialing mode.	<ul style="list-style-type: none"> ● Programming is not possible while the unit is in the talk mode or when viewing the Caller List/phonebook. ● Do not pause for over 60 seconds while programming. ● Move closer to the base unit. ● ▼ or ▲ may have been pressed when you picked up the handset. Press OFF and try again.

Useful Information

 For assistance, please call: 1-800-211-PANA(7262)



► Troubleshooting

Problem	Cause and Remedy
You cannot store a name and phone number in the phonebook.	<ul style="list-style-type: none"> • You cannot store an item in the phonebook while the unit is in the talk mode. • Do not pause for over 60 seconds while storing.
While programming or searching, the handset starts to ring and stops the program/search.	<ul style="list-style-type: none"> • To answer the call, press FLASH. Start again from the beginning after hanging up.
The handset does not display the caller's name and/or phone number.	<ul style="list-style-type: none"> • You need to subscribe to a Caller ID service from a telephone company. • Other telephone equipment may be interfering with your phone. Disconnect it and try again. • Other electrical appliances connected to the same outlet may be interfering with the Caller ID information. • Telephone line noise may be affecting the Caller ID information.
The display goes to the standby mode while viewing the Caller List.	<ul style="list-style-type: none"> • Do not pause for over 60 seconds while searching.
When a second call is received during a conversation, the unit does not display the new caller's name and/or phone number.	<ul style="list-style-type: none"> • The caller requested not to send his/her information. See page 14.
HANDSET LOCATOR does not function.	<ul style="list-style-type: none"> • The handset is too far from the base unit. • The handset is engaged in an outside call. Wait until the IN USE/CHARGE indicator light goes out.

Problem**Cause and Remedy**

You cannot redial by pressing **PAUSE/REDIAL**.

- When pressing **PAUSE/REDIAL** after **FLASH**, more than 32 digits long number will not be redialed correctly.
- When pressing **FLASH** after **PAUSE/REDIAL**, more than 24 digits long number will not be redialed correctly.

“RECHARGE” and “

- Charge the battery fully (p. 8).

While talking, the call is disconnected.

- The battery needs to be recharged. Charge the battery fully (p. 8).

You charged the battery fully, but “RECHARGE” and “

- Clean the charge contacts and charge again (p. 9).
- Install a new battery (p. 30).

The IN USE/CHARGE indicator light does not go out while charging.

- This is normal.

You cannot have a conversation using the handset.

- When an optional headset is connected (p. 27), you must use the headset to talk with the caller. To have a normal cordless phone conversation, disconnect the headset.

You cannot have a conversation using the headset.

 
- Make sure that an optional headset is connected properly (p. 27).

If you cannot solve your problem

- Call our customer call center at 1-800-211-PANA(7262).
- Panasonic's e-mail address for customer inquiries: consumerproducts@panasonic.com for customers in the USA or Puerto Rico ONLY

Useful Information

For assistance, please call: 1-800-211-PANA(7262)




Important Safety Instructions

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from AC outlets before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit near water, for example, near a bathtub, washbowl, kitchen sink, or the like.
5. Place this unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.
10. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
11. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorized servicenter when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
12. Unplug this unit from the wall outlet and refer servicing to an authorized servicenter when the following conditions occur:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized servicenter.
 - E. If the unit has been dropped or physically damaged.
 - F. If the unit exhibits a distinct change in performance.
13. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
14. Do not use this unit to report a gas leak, when in the vicinity of the leak.

 SAVE THESE INSTRUCTIONS

**CAUTION:**

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery(ies) specified.
2. Do not dispose of the battery(ies) in a fire. They may explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
5. Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

WARNING:

 
TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

- The AC adaptor is used as the main disconnect device, ensure that the AC outlet is located/installed near the unit and is easily accessible.

Useful Information

For assistance, please call: 1-800-211-PANA(7262)

35



FCC and Other Information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:ACJ----. If requested, this number must be provided to the telephone company.

Registration No. (found on the bottom of the unit)
Ringer Equivalence No. (REN) 0.1B

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

 
If trouble is experienced with this equipment, for repair or warranty information, please contact a Factory Servicenter or other Authorized Servicer. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

WHEN PROGRAMMING EMERGENCY NUMBERS AND(OR) MAKING TEST CALLS TO EMERGENCY NUMBERS:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call.
- 2) Perform such activities in the off-peak hours, such as early morning or late evenings.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The USOC jack is RJ11C and the jack is Part 68 compliance.

 
This equipment is hearing aid compatible as defined by the FCC in 47 CFR Section 68.316.

When you hold the phone to your ear, noise might be heard in your Hearing Aid. Some Hearing Aids are not adequately shielded from external RF (radio frequency) energy. If noise occurs, use an optional headset accessory or the speakerphone option (if applicable) when using this phone. Consult with your audiologist or Hearing Aid manufacturer about the availability of Hearing Aids which provide adequate shielding to RF energy commonly emitted by digital devices.

- **Environment**—do not place the unit in a room where the temperature is less than 5°C (41°F) or greater than 40°C (104°F). Allow 10 cm (4") clearance around the unit for proper ventilation. Avoid excessive smoke, dust, mechanical vibration, shock, or direct sunlight.
- **Routine care**—wipe the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder. When you leave the unit unused for a long period of time, unplug the AC adaptor from the outlet.
- **If there is any trouble**—disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, have your unit repaired by one of the authorized Panasonic Factory Service Centers. If the known working phone does not operate properly, consult your telephone company.

Useful Information

For assistance, please call: 1-800-211-PANA(7262)



Index

A

Accessories 2
 Answering calls 12
 Automatic Security Code
 Setting 25

I

Installation
 AC adaptor 7
 adding another phone 29
 Battery 8
 Telephone line cord 7

B

Backlit LCD 12
 Base Unit location 3
 Battery, Charge 3, 8
 Battery life 9
 Battery replacement 30
 Belt Clip 27
 Making Calls 11
 Mute 12

C

Call waiting caller ID 26
 Call waiting tone 26
 Caller ID, display 14
 Caller ID service 12, 13
 Caller List
 editing 17
 erasing 19
 storing 18
 viewing 15, 16
 Calling back from Caller ID List 17
 Pulse service 25

P

PAUSE 26
 Phonebook 20
 dialing 22
 editing 23
 erasing 24
 finding 22
 name and symbols 21
 storing 20

D

Dialing mode 10

R

Redial 11
 Ringer Off 9
 Ringer Volume 9
 Rotary service, tone dialing 25

F

FCC and other information 36
 Function Menu 10

S

Handset Locator 25
 Headset, optional 27

 
Safety Instructions 34
 Shipping product for service 39

T

Troubleshooting 31

V

Volume control 12



For product service

- Call 1-800-211-PANA(7262) or 1-800-833-9626 for the location of an authorized servicenter.
- Panasonic's e-mail address for customer inquiries:
consumerproducts@panasonic.com
for customers in the USA or Puerto Rico ONLY

 
When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.

Symptom

- Send the unit to an authorized servicenter, prepaid and adequately insured.
- Do not send your unit to the Panasonic Consumer Electronics Company listed on the back cover or to executive or regional sales offices. These locations do not repair consumer products.

- This cordless telephone is designed for use in the United States of America. Sale or use of this product in other countries may violate local laws.
- Ce téléphone sans fil est conçu pour être utilisé aux États-Unis d'Amérique. La vente ou l'emploi de cet appareil dans certains autres pays peut constituer une infraction à la législation locale.
- Este teléfono sin cordón fue elaborado para uso en los Estados Unidos de América. La venta o el empleo de este producto en ciertos países puede constituir violación de la legislación local.
- このコードレス電話機は、日本国外での使用を目的として設計されており、日本国内での使用は法律違反となります。従って、当社では日本国内においては原則として修理などのサービスは致しかねます。



**If you need assistance with the set-up or operation,
please call 1-800-211-PANA(7262)**

**Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way, Secaucus, New Jersey 07094**

**Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park
Carolina, Puerto Rico 00985**

