



On / Off

- Press (⏻) power key to turn on the device. When device turned on, LCD displays battery power, channel number and Master(A) / Slave(B) mode.
- Press and hold (⏻) for 2 second and the power is off. OFF display on screen.

Channel Select

- Press △ or ▽ button, enter into the select mode.

Lock / Unlock Button

- Channel will be locked automatically without any buttons pressed. LCD displayed lock icon. In lock mode, the power can be off, but channel number cannot be changed.
- When locked, press △ and ▽ button up to 1 sec to unlock. Unlock icon will not be showing on LCD screen.

LED/ Battery Status

※ Transmitter:

- LED lights blue when the battery is sufficient.
- LED lights red when the battery is insufficient.

※ Receiver:

- LED lights off when no signal is received but the battery is sufficient.
- LED lights red when signal is received but the battery is insufficient.

A(Master)/B(Slave) mode setting (transmitter only)

- Mode sets with switch (12), and reboot is required after.
- When set to Master, LCD displays A.
- When set to Slave, LCD displays B.

Battery Saving (receiver only)

- The power turns off when no signal is received within 20 mins.

Channel synchronization function

- When the device is turned off, press ▽ and ⏻ at the same time to turn on the device.
Then press △ or ▽ to choose enter sync mode or not.

※ Specifications are subject to change without prior notice.

Channel synchronization function

- '50' means channel sync function on, '5f' means channel sync function off.
- Press ⏻ key to confirm setting.

Channel synchronization mode on

※ Transmitter:

- In A mode, press mute key (9) to send the sync signals, and (1) flashes in purple.
- In B mode, press mute key (9) to search for A signal, and once confirmed, press (9) again to connect.

※ Receiver:

- The receivers will receive sync signal for first 30 seconds after device turned on, once sync successfully, (1) flashes in purple for 3 second then turns blue. LCD now displays channel number synced.
- If the receiver failed to sync within 30 seconds, then it will resume to the previous channel set.
- When syncing the devices, the transmitters and the receivers need to be within 3 meter radius.

Earphone requirement

- This model is designed for 3.5mm stereo earphone jack only, we recommend to use the device with earphone provided by the supplier.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

FCC INFORMATION

The Federal Communication Commission Radio Frequency Interference Statement includes the following paragraph:

The equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.