


**WARNING: CHOKING HAZARD-**  
Small parts. Not for children under 3 years.

# Lightning McQueen

## 2-Sided Stunt Racer

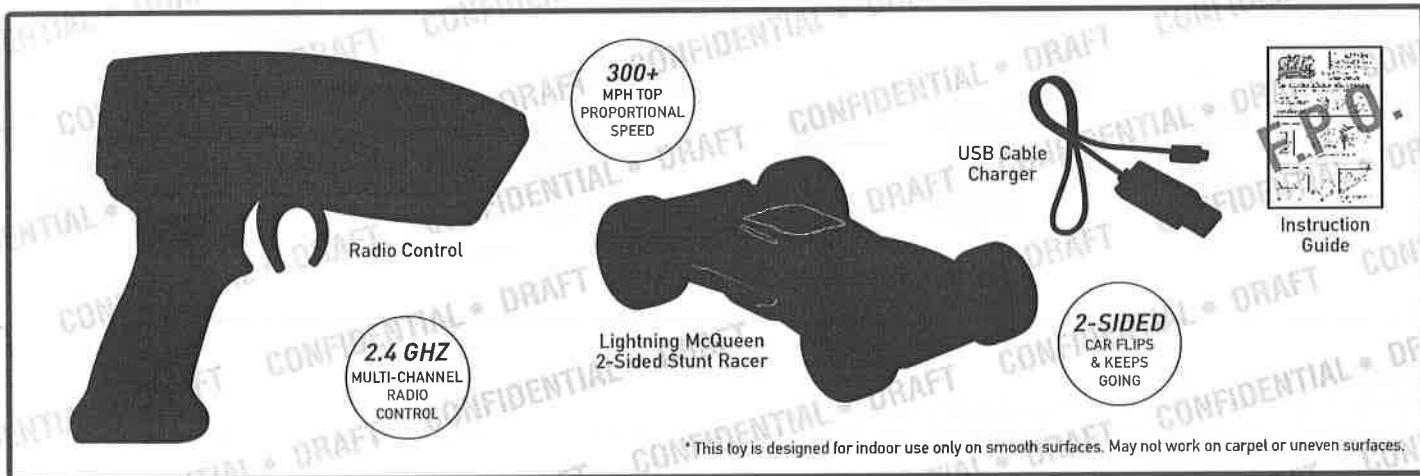

### PREPARATION :

#### Adult Assistance Required


- Ask an adult to help remove all packaging materials before giving this toy to a child.
- Follow battery instructions to prepare the Stunt Racer and Radio Control before playing.
- The Car needs to pair (link) with the radio control BEFORE playing.

### BATTERY INSTRUCTIONS :

#### CHARGING THE LIGHTNING MCQUEEN STUNT RACER

Stunt Racer includes a pre-charged built-in rechargeable Lithium Polymer battery (3.7V, 350mAh).

- Set the switch on side of Stunt Racer to CHARGE position (Dia. A).
- Attach the USB charger (included) to a charging source such as a computer (Dia. B).
- Connect the USB charger jack to the charging socket on the Racer (Dia. C). Check to ensure that the USB plug is properly connected.
- Normal charge time takes about 60 minutes depending on residual charge. The LED light on USB charger will light up. Do not overcharge. Do not leave the Stunt Racer unattended when charging.
- When the USB charger's LED light turns off, the built-in battery is fully charged. Unplug the charger jack from the charging socket.

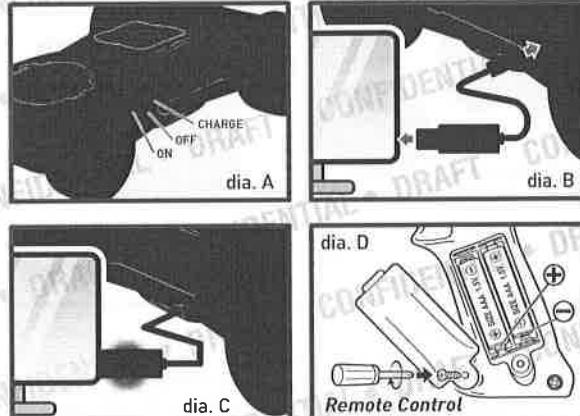

Notes : Each charge enables the Stunt Racer to operate for approx. 10 minutes. Let the motor cool for a few minutes before charging.

**REMOTE CONTROL:** Ask an adult to help open the battery cover on the back of the remote control with a screwdriver and install 2 new AAA alkaline batteries (not included) as shown (dia. D). Replace cover and screw.

**BATTERY INSTRUCTIONS :** Always check batteries in case of leakage. Be sure to insert batteries correctly and follow the toy and battery manufacturers' instructions. Never mix old batteries with new batteries, or mix carbon-zinc, alkaline or nickel-cadmium batteries. Do not mix different brands of batteries. Do not use rechargeable batteries. Do not attempt to recharge batteries which are not rechargeable. Do not short-circuit the battery contacts. Always remove exhausted or dead batteries from the product. Dispose of batteries safely. Caution: Batteries inside this product may explode or leak when in contact with fire. Always remove the batteries from the toy when they are not in use.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### PAIRING INSTRUCTIONS :

**IMPORTANT - The Car needs to pair (link) with the radio control BEFORE playing.**

- Set the Car's function selector to ON. Place it on a flat & smooth surface. Aim the radio control at the Car for a few seconds for linkage.
- Pairing is for one set of Car and radio control only.
- If the toy has been idle for a while, it will automatically shut off to save battery life. Set the Function Selector on the Car to OFF then to ON to reactivate the toy.

## PLAY INSTRUCTIONS:


The Stunt Racer has two sides - you can see Lightning McQueen on top and bottom sides.

Jumping or driving over obstacles may cause the Racer to flip. That's ok. Just keep on going, the Racer runs whichever way it lands!

Before playing, select a large, spacious area away from people or objects. You may set up a ramp against a wall or solid surface to play the stunt racing.

Aim the Radio Control to McQueen Stunt Racer, press trigger and turn dial to operate :

## FULL FUNCTION RADIO CONTROL!


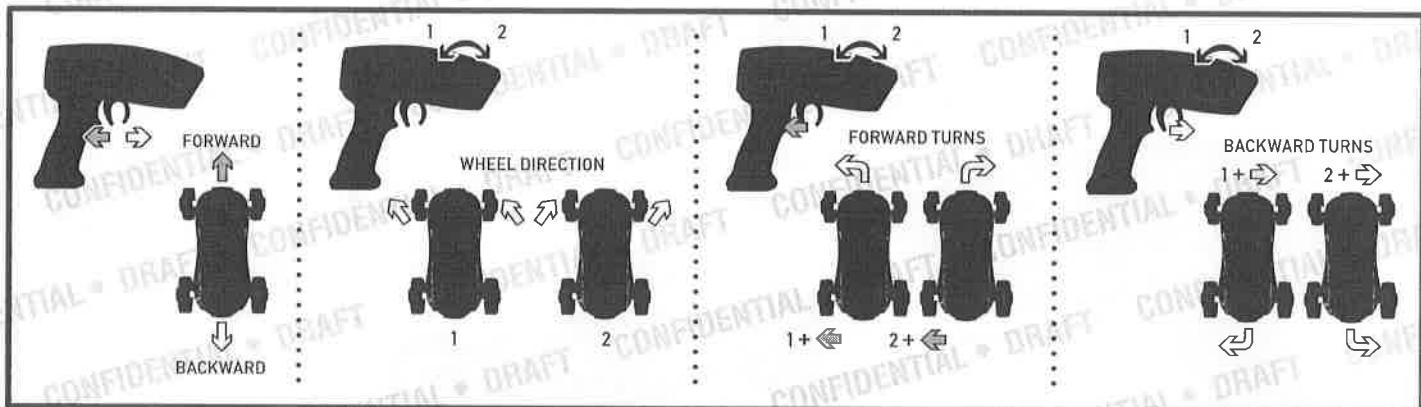


## MAINTENANCE AND CARE


Follow the tips below to keep your Racer in good condition :

- After running at high speed or performing stunt activities, tires may become displaced. Check tire positions and adjust manually as needed.

### Front Tires

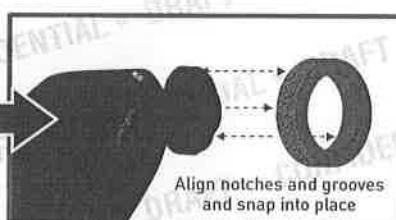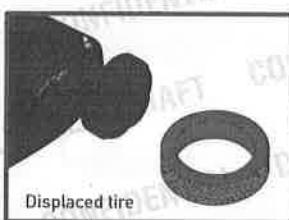

### Back Tires

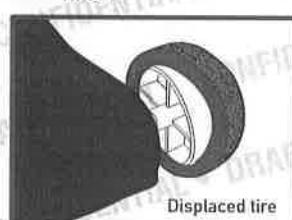

- Always keep wheels clean and free of debris. Dust on the tires may cause the Racer to slip.
- Clean the toy with a clean dry cloth only.

## HELPFUL HINTS :

- This toy is designed for indoor use only. Always play in a large, spacious area clear of breakable objects.
- AVOID COLLISIONS WITH WALLS AND HARD OBJECTS. HIGH SPEED CRASHES MAY CAUSE DAMAGE TO THE RACER AND/OR ITS SURROUNDINGS.
- For best results, operate the Racer on a flat, low pile carpet. Avoid playing on high pile carpets, hard surfaced, slippery or dusty floors.
- Avoid operating the Racer near walls since the signal may rebound from the walls and make the unit difficult to control.
- If the Racer is not responding properly, reset the function switch to OFF for 5 seconds and then back to ON.
- If the Racer stops responding after the radio control was dropped, batteries in the radio control may be displaced. Try reinstalling the batteries in the radio control.
- When the built-in battery's charge is low, the Racer will stop moving and you may hear a humming noise from the car. It is time to recharge the built-in battery.
- Do not operate the Racer near stairs or in areas that may result in a high fall causing damage to the toy.
- Do not operate the Racer on public roads or in a public place.
- Do NOT operate the toy in wet areas. Do NOT immerse the toy or radio control in water.
- Always keep wheels clean and free of debris. Clean the toy with a clean dry cloth only.
- Only one set of car & radio control can be linked at a time. Ensure power is off on other radio control cars.
- For best results, aim the radio control in the direction of the toy.
- When playing indoor, operate the toy on a smooth, even floor in a spacious area clear of delicate or breakable objects. Do NOT operate the toy near stairs as it may fall and incur damage.
- Floor surface (ie, texture, smoothness) may affect vehicle performance while driving in reverse mode.
- Do not attempt to manually turn or apply force on the back wheels while in motion. This may damage the mechanisms.
- Do not modify or change any component inside the toy or radio control.
- Keep tires away from fingers, face, hair and loose clothing. Do not attempt to stop the tires when they are in motion.
- Turn power off when the toy is not in use. Remove all batteries from the toy and radio control before storing the toy for a long period of time.

## SAFETY WARNINGS :

- Warning! Remove all packaging attachments before giving the toy to a child.
- Contains small parts that could be swallowed.
- Keep fingers, hair and loose clothing away from tires and wheels when the Chaser is switched on.
- Do not pick up the Racer when it is in motion.
- Do not race the Racer toward people, animals, walls, furniture or breakable objects. Collision with the Racer at high speed may cause damage and/or injuries.
- Always wear shoes when playing with the toy. The Racer may cause bodily injuries when traveling at high speed.
- Do not modify or change the toy.
- Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

00276, 00277, 00260 (Ass't No. 00274) / 00278, 00279, 00280 (Ass't No. 00296) / 00314, 00317, 00318 (Ass't No. 00313) / 00319 / 00244, 00247 (Ass't No. 00249) / 00297 / 00305  
00252, 00257 (Ass't No. 00258) / 00303 / 00308 / 00236 / 00233

Size: 7.5" x 4.25"

TOY-CAR  
TOY-REMOTE CONTROL