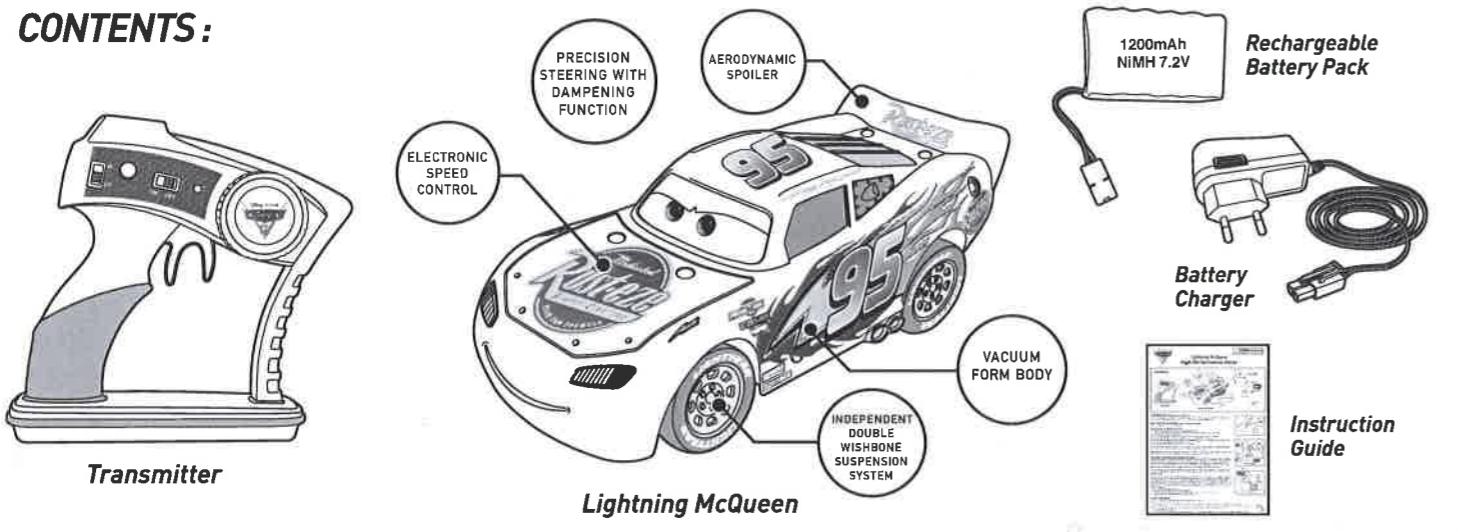


**CONFIDENTIAL**

20 JAN 2017

WARNING: CHOKING HAZARD-
Small parts. Not for children under 3 years.

Lightning McQueen High Performance Racer

CONTENTS:**PREPARATION: Adult Assistance Required**

Remove all packaging materials before giving to a child. Follow battery instructions to prepare the High Performance Racer and transmitter before playing. The Racer needs to pair (link) with the transmitter BEFORE playing.

BATTERY INSTRUCTIONS: Adult Assistance Required

Always turn power off before replacing batteries.

CHARGING THE RECHARGEABLE BATTERY:

The Racer includes one NiMH (7.2V, 1200mAh) rechargeable battery pack.

1. Connect the rechargeable battery pack to the battery charger (dia. A). Ensure plugs are properly connected.
2. Plug in the battery charger to a power source.
3. Normal charge time takes about 130 minutes. The LED light on the charger remains red while charging.
4. Do not overcharge. Do not leave the 7.2V rechargeable battery unattended while charging.
5. When the battery charger's LED light turns green, the rechargeable battery pack is fully charged. Unplug the charger from the power source then unplug the rechargeable battery pack from the charger.
6. Each charge enables the Racer to operate for approx. 15 minutes.

CAR: Ask an adult to help open the battery cover on the bottom with a screwdriver and install the 7.2V rechargeable battery pack (included) as shown (dia. B). Replace cover and screw. Reset function selector to ON.

TRANSMITTER: Ask an adult to help open the battery cover on the bottom with a screwdriver and install 4 new AA alkaline batteries (not included) as shown (dia. C). Replace cover and screw. Reset function selector to ON.

BATTERY CAUTION (FOR TRANSMITTER): Always check batteries in case of leakage. Be sure to insert batteries correctly and follow the toy and battery manufacturers' instructions. Never mix old batteries with new batteries, or mix carbon-zinc, alkaline or rechargeable batteries. Do not mix different brands of batteries. Do not use rechargeable batteries. Do not attempt to recharge batteries which are not rechargeable. Do not short-circuit the battery contacts. Always remove exhausted or dead batteries from the product. Dispose of batteries safely. CAUTION: Batteries inside this product may explode or leak when in contact with fire. Always remove the batteries from the toy when they are not in use.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notes: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



SAFETY WARNINGS:

- Warning! Remove all packaging attachments before giving the product to a child.
- Contains small parts that could be swallowed.
- Do not pick up the Racer while it is in motion. Keep fingers, hair and loose clothing away from tires and wheels when the Racer is switched on.
- Do not drive the Racer towards people, animals, walls, furniture or breakable objects. Collision with the Racer at high speed may cause damage and/or injuries.
- Always wear shoes when operating the product. The Racer may cause bodily injuries when traveling at high speed.
- Do not modify or change the product.
- CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PAIRING INSTRUCTIONS:

IMPORTANT - The Racer needs to pair (link) with the transmitter BEFORE playing.

1. Set the Racer and transmitter's function selectors to ON.
2. The LED lights on Racer and transmitter will blink to indicate linkage (dia. D). When pairing is completed, the LED Lights will remain red.
3. Pairing is for one set of High Performance Racer and transmitter only.
4. If the Racer and transmitter have been left idle for a while, they will automatically shut off to save battery life. Set the function selectors on the Racer and transmitter to OFF then to ON again to re-link.

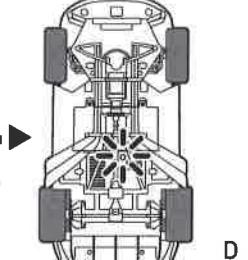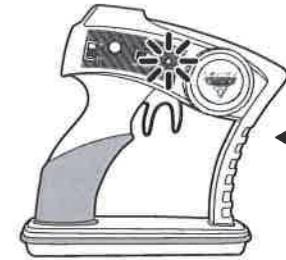


D


PLAY INSTRUCTIONS:

Before playing, select a large spacious area away from people and clear of obstacles or delicate/breakable objects.


1. Switch on the transmitter.
2. Switch on the Racer.
3. Raise the tires off the ground and check all controls are working properly before driving the Racer (dia. E).
4. If the wheels bend to the sides while moving forward or backward, use the Steering Trim Knob (dia. F) to control the bias movements. Be sure to do this in small increments.
5. Select high (HI) or low (LO) speed setting on the transmitter for the Racer (dia. G). **Tip:** Choose low speed for practice to familiarize with the Racer's performance.
6. Follow instructions for the transmitter (dia. H) to operate the Racer. **Tip:** Always point the transmitter in the direction of the Racer.
7. After playing, turn off the Racer then power off the transmitter.

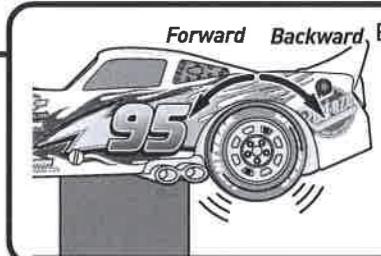

E

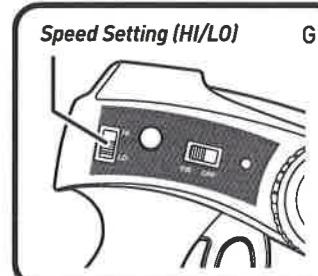

G

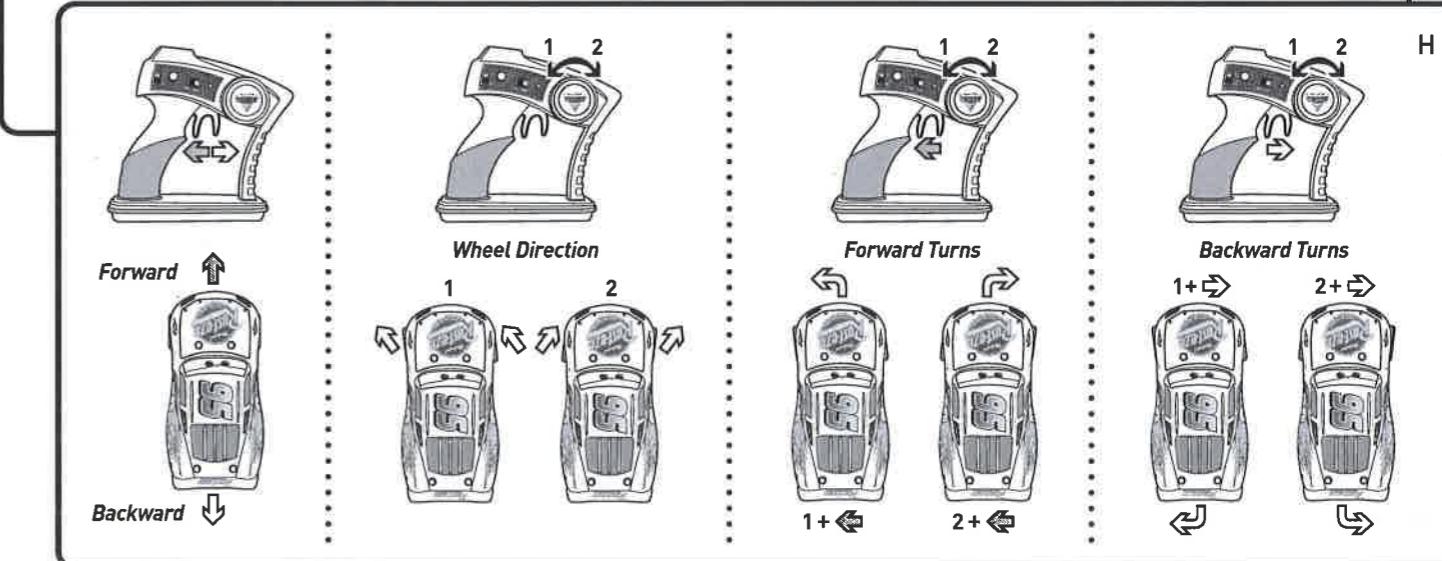**HELPFUL HINTS:**

- AVOID COLLISIONS WITH WALLS AND HARD OBJECTS. HIGH SPEED CRASHES MAY DAMAGE THE RACER AND/OR ITS SURROUNDINGS.
- For best results, aim the transmitter in the direction of the Racer. Operate the Racer on flat, low pile carpets. Avoid playing on high pile carpets, hard surfaced, slippery or dusty floors.
- When the rechargeable battery's power is low, the Racer will stop moving. It is time to recharge the battery pack.
- Do not operate the Racer near stairs or in areas that may result in high falls causing damage to the toy.
- Do not operate the Racer on public roads or in public places. Do NOT operate the Racer in wet areas. Do NOT immerse the Racer or transmitter in water.
- Always keep wheels clean and free of debris. Clean the Racer and transmitter with a clean, dry cloth only.
- Only one set of Racer and transmitter can be linked at a time. Ensure power is off on other transmitter cars.
- When playing indoor, operate the toy on a smooth, even floor in a spacious area clear of delicate or breakable objects.
- If the Racer is not responding properly, reset the function selector to OFF for 5 seconds and then back to ON.
- If the Racer stops responding after the transmitter was dropped, batteries in the transmitter may be displaced. Try reinstalling the batteries in the transmitter.
- Do not attempt to manually turn or apply force on the back wheels while the Racer is in motion. This may damage the mechanisms.
- Do not modify or change any component inside the toy or transmitter.
- Keep tires away from fingers, face, hair and loose clothing. Do not attempt to stop the tires when they are in motion.
- Turn power off when the product is not in use. Remove all batteries from the Racer and transmitter before storing away for a long period of time.
- The vacuum form body is non-replaceable.

Ages 8+ No. 00238

Printed in China. Actual products may vary.
Retain this instruction guide for future reference.

© Disney/Pixar Visit disney.com/cars

Manufactured For
THINKWAY TOYS
POINT LOOKOUT, N.Y. 11569
1-800-535-5754

Creating Fun With Technology®
THINK WAY

www.ThinkwayToys.com

FCC 2.4 GHz Sheet

23 / Dec / 2016

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAR
REMOTE CONTROL

00276, 00277, 00260 (Asst. No. 00274) / 00278, 00279, 00280 (Asst. No. 00296) / 00314, 00315, 00317, 00318 (Asst. No. 00313) / 00319 / 00244, 00247 (Asst. No. 00249) / 00297 / 00305
00252, 00257 (Asst. No. 00258) / 00238 / 00233

DI-CUT **BLACK**

Size: W7.5" x H4.25"