

KD C16500CA_KDUS_AW_UM_01_160722 C16501CA_KDUS_AW_UM_01_160722 C16502CA_KDUS_AW_UM_01_160722

Actual Scale Units: mm


Printing colors:





History: voo:

AW

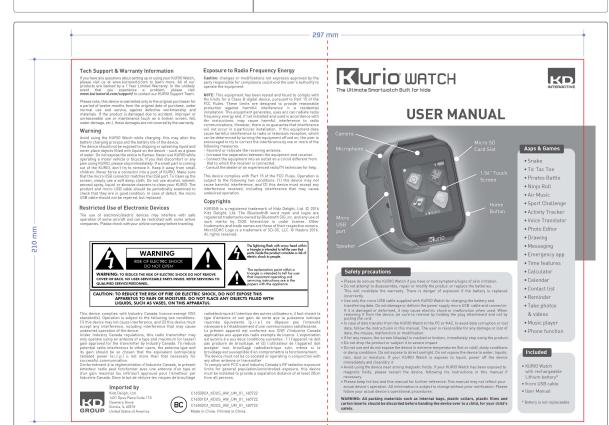













Settings

FOLDER	ITEMS	DESCRIPTION
System	Language	Change the language of the device
	Vibrations	Activate / Deactivate the vibrations
	Bluetooth	Manage the Stuetooth features
	Saving	Decide where to save the photos and videos taken: Internal Memory or Micro SD card (if inserted)
	Factory reset	Reset your KURIO Watch device to factory settings. Note: You will lose all your data
	About	See the firmware version, credits and legals
Display	Time & Date	Set the date and time of your KURO Watch
	Brightness	Set the luminosity of your KURIO Watch
	Theme	Change the theme
	Watch Face	Change the watch face
	Notifications indicator	Activate / Deactivate the notifications of the activity tracker (achievements)
	Screen timesut	Set the screen timeout
Sounds	Volume	Adjust the volume of your KURIO Watch
	Mute	Activate / Deactivate the volume
	Buttons	Activate / Deactivate the sound when pressing a button on the screen
	Incoming call	Select the Phone ringtone (when the KURIO Watch is paired to a smartphone by Bluetcoth). MP3 sounds loaded on the internal memory of the Kurio Watch (not on the Nicro SD card) can be used as ringtone.
	Alarm	Select the Marm ringtone.
LCE	ICE details	Edit the Economic details A comment is control to come this constant con Recognition 1778

PC requirements: From any version after Windows XP. MAC requirements: From any version after MAC OS 10.10.













