

Title : Information Document	NO. : SCE-0006
	Date : Jun. 22. 2000
<div data-bbox="406 537 618 569" data-label="Section-Header"> <h3>3. <u>USER MANUAL</u></h3> </div> <div data-bbox="406 615 902 646" data-label="Section-Header"> <h4>3.1 NAME : REMOTE KEYLESS ENTRY SYSTEM</h4> </div> <div data-bbox="467 690 1221 766" data-label="Text"> <p>This RKE System is to be installed on motor vehicles as OE(= original equipment) item.</p> </div> <div data-bbox="467 772 1133 806" data-label="Text"> <p>It is intended for auto-locking/unlocking of the door</p> </div> <div data-bbox="406 844 730 875" data-label="Section-Header"> <h4>3.2 SYSTEMS CONSTRUCTION</h4> </div> <div data-bbox="467 919 693 951" data-label="Section-Header"> <h5>SYSTEM IN VEHICLE</h5> </div> <div data-bbox="406 1001 1305 1218" data-label="Diagram"> </div> <div data-bbox="467 1302 667 1333" data-label="Section-Header"> <h5>SYSTEM FOR TEST</h5> </div> <div data-bbox="406 1369 1157 1589" data-label="Diagram"> </div> <div data-bbox="440 1650 1218 1722" data-label="Text"> <p>* Through the use of LED, operating state is displayed by LED.      LED 'ON' means that DATA is sended to the ETACS.</p> </div>	