

**TELSON INFORMATION & COMMUNICATION CO., LTD.**

**TEL : 82-2-851-2780 ~ 5(EXT210)  
FAX : 82-2-857-9583**

# **PRO120**

## **USER MANUAL**

### **0.5 WATT FAMILY RADIO SERVICE**

**TELSON INFORMATION & COMMUNICATION CO., LTD.**

TEL : 82-2-851-2780 ~ 5(EXT210)  
FAX : 82-2-857-9583

## **PRO120**

### **TABLE OF CONTENTS**

USER'S MANUAL

THEORY OF OPERATION

LIST OF TEST EQUIPMENT

LIST OF ACTIVE DEVICES

BLOCK DIAGRAM

SCHEMATICS

PCB MAP

LINE DRAWING

PARTS LIST

PARTS DATA

PHOTOGRAPH

# TELSON INFORMATION & COMMUNICATION CO., LTD.

TEL : 82-2-851-2780 ~ 5(EXT210)  
FAX : 82-2-857-9583

## 1. FRS PRODUCT DESCRIPTION

The Family Radio Service ( FRS ) is the newest generation in personal two - way communications. FRS radios operate in a license - free band, on one license - free channels.

The PRO120 is a lightweight, palmsized two - way radio that you can carry almost anywhere - use it at shopping malls, sporting events, amusements, or any other activity where communications are needed for convenience or safety.

The radio provides about a 2miles range of communications - allowing you to keep in touch with family, friends or a neighborhood watch group.

The RPO120 is 1 channels model. You can talk to another person using any FRS radio, provided that you can on the same frequency with button.

# TELSON INFORMATION & COMMUNICATION CO., LTD.

TEL : 82-2-851-2780 ~ 5(EXT210)  
FAX : 82-2-857-9583

## 2. CONTROLS AND FUNCTIONS

- Push-To Talk button - Permits radio transmissions
- Power switch - Used to turn the radio on/off
- Volume switch – Used to adjust the listening volume
- PTT switch –
- Red L.E.D – Lights in transmission
- Antenna
- Belt Clip - Used to secure the radio to a belt, or another convenient location.
- Battery Compartment - Houses 4 AAA size batteries which provide power to the unit.

(Located on back of unit)

# TELSON INFORMATION & COMMUNICATION CO., LTD.

TEL : 82-2-851-2780 ~ 5(EXT210)  
FAX : 82-2-857-9583

## 3 . OPERATING INSTRUCTIONS

. Install 4 new AAA size batteries, The (-) flat bottom of the battery rests on the (-) terminal of the battery compartment, and the (+) top contacts the (+) terminal. Refer to drawing below for proper battery installation.

Note : Always remove batteries if product will not be used for long periods of time.

- . Replace the battery compartment door.
- . Turn the power on rotating the power/volume knob clockwise. the radio will sound a melody tone.
- . To transmit, Hold the radio 2-3 inches from your mouth, Press the Push-To-Talk button on the radio side, and speak clearly into the microphone area of the radio. For best quality, Speak slowly and to a normal tone of voice. There is no need to speak loudly.
- . When your transmission is complete, Please the PTT button and listen for a reply.
- . When not using the radio, Conserve battery power by turning the unit off.

Rotate the Power/Volume knob counter-clockwise to detent.