

USER'S MANUAL



P^{plus}™ **Numeric Pager**

SUN TELECOM
INTERNATIONAL

ST 750™

Congratulations on your purchase of a *ST750* Pager. Your new pager will instantly keep you in touch with everyone important to you. The *ST750* pager is reliable, easy to use, as well as affordable. It provides many features that incorporate the most advanced electronic paging technologies. Please read this manual carefully before using your pager for a better understanding of pager operation.

SUN TELECOM
INTERNATIONAL

CONTENTS

 
1. FEATURES	4
2. BUTTONS	5
3. ICONS AND DESCRIPTIONS	6
4. TURNING YOUR PAGER ON	7
5. TURNING YOUR PAGER OFF	8
6. RECEIVING AND READING MESSAGES	9
7. DUPLICATE MESSAGES	10
8. CHANGING THE ALERT STATUS	11
9. MEMORY CAPACITY	12
10. LOW BATTERY INDICATOR	12
11. LOCKING MESSAGES	13
12. DELETING MESSAGES	14
13. ALARM	16
14. TIME AND DATE	17
15. AUTOMATIC ON / OFF	18
16. LIGHT	19
17. BATTERY INFORMATION	19
18. CANNED MESSAGE	20

1. *FEATURES*

- ▶ 16 Message Memories
- ▶ 8 Locked Messages
- ▶ 4 Beeps
- ▶ 5 Melodies
- ▶ Vibrator
- ▶ Silent
- ▶ Time Stamp
- ▶ Time/Date
- ▶ 3 Alarms
- ▶ Automatic On/Off
- ▶ Light
- ▶ Deletion of All or Individual Messages
- ▶ In Range Indicator
- ▶ Low Battery Indicator
- ▶ Duplicate Message Indicator
- ▶ Unread Message Indicator
- ▶ Memory Full Indicator
- ▶ 5 Canned Messages
- ▶ Out of Range

(Specifications are subject to change without prior notice)

2. **BUTTONS**

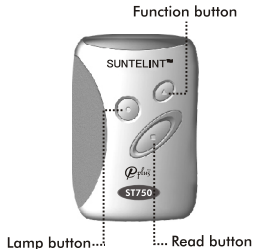

FUNCTION BUTTON

- Enter into menu mode
- Turn Pager on



LAMP BUTTON

- Turn the Light on or off
- Exit from menu mode



READ BUTTON

- Read Messages
- Select settings and features

 : Reception Area

 : Alert (Beep) on

 : Alert (Melody) on

 : Alert (Vibrator) on

 : Alarm on

 : Auto pager off

 : Message Lock

 : Duplicate Message

OFF : Pager Off

 : Change Battery

FULL : Message Full

 : Message longer than 12 Char



< Stand by Mode >

Press the function button for 2 seconds or longer while pager is in the Off mode.

Time and date will appear in the bottom center of the screen.

Upon inserting a battery, pager will vibrate and beep briefly as it enters the normal reception mode.



 
Press the function button for 2 seconds or longer to enter the function menu.

Pager will beep once and "SET ALERT ?" will be displayed.

Press the function button once more and "POWER OFF ?" will be displayed.

Then press the read button to turn off pager.

"OFF" sign will appear in the top right corner of the screen.



When a message is received, the selected alert (one of 5 melodies/4 beeps/vibrator/silent) will be activated. Press the read button to stop the alert and read messages. The following will be displayed in the order of the newest to the oldest message: Message number, time stamp, and message.

Reading Messages with 13 Characters or More

Messages with 13 or more characters will display "►" at the top right corner of the screen. Press the read button to read the rest of the message.



 
Reading Locked Messages:

In order to read locked messages, there must be no unread messages.

Press the function button to enter into the locked message read mode.

Press the read button to display and read locked messages.

7. *DUPLICATE MESSAGE*



Duplicate message indicator will be displayed on the screen when the pager receives a message that is identical to a message in memory.

▼⏏
SET ALERT ?

▼⏏
BEEP 1

▼🎵
MELODY 1

▼≈
VIBRATOR

▼
SILENT

Press the function button for 2 seconds or longer to enter into the function menu.

Pager will beep once and "SET ALERT ?" will be displayed.

Press the read button to select the set alert mode.

Each press of the function button in the set alert mode will activate, in order, 4 beeps, 5 melodies, vibrator and silent.

 
Press the read button to make selection while the desired alert is displayed.

Pager has a memory capacity to store 16 numeric messages.



When the battery capacity falls below the operational level, the low battery icon will be displayed and the voltage alarm tone will be activated.

11. *LOCKING MESSAGES*



A maximum of 8 messages can be locked.
Select a message to be locked and press the function button.

When "**Lock ?**" is displayed, press the read button to lock the message.

"**Locked ?**" and its icon will be displayed.

12. *DELETING MESSAGE*



Individual Deletion:

To delete a locked message, press the function button while the message is displayed.

When "**Delete ?**" appears, press the read button. "**Deleted**" will be displayed upon completion.



To delete an unlocked message, press the function button twice while the message is displayed. Press the read button to delete the message when "**Delete ?**" appears.



Deletion of All Messages:



Forward to "**Delete All ?**" mode by pressing the function button in the function menu. (rf. Sections 2 and 5)

Press the read button to delete all messages except unlocked messages.

▼◀
SET ALARM ?

▼◀
1 - OFF 06:00A

▼◀ ⚠
1 - ON 06:00A

Forward to "SET ALARM ? " by pressing the function button in the function menu. (rf. Sections 2 and 5)

 
Press the read button to select the set alarm mode.

Press the function button to choose alarm 1, 2, 3 and the read button to move to the next field.

Press the function button to toggle between Alarm On and Off.
Press the function button to change hour, then press the read button to move to the next field.

Press the function button to change minutes.

14. *TIME AND DATE*



SET TIME ?

Forward to "SET TIME ?" by pressing the function button in the function menu. (rf. Sections 2 and 5)

Press the read button to select the set time mode.

Press the function button to change month, then press the read button to move to the next field.

Follow the same procedure to set time.

15. **AUTOMATIC ON/OFF**

▼◀
SET AUTO ?

▼◀
AUTO OFF ?

▼◀
AUTO ON ?

▼◀
ON 01:00A

▼◀
OFF 05:00A

To Enable Automatic On

1. From the function menu press the function button.
2. Press the read button until "AUTO ON/OFF ?" is displayed.
3. Press and release the function button until "AUTO ON ?" is displayed and then press the read button.
4. Press the function button to adjust the hour digit.
5. Press the read button to move the cursor to the hour digit.
6. Repeat steps 4 and 5 to adjust the on and off time setting.
7. Press the read button to activate your selection.

To Disable Automatic On

1. From the function menu press the function button.
2. Press the read button until "AUTO ON/OFF ?" is displayed.
3. Press and release the function button until "AUTO OFF ?" is displayed.
4. Press the read button to activate your selection.

Note: Factory default is 01:00AM~05:00AM.

16. *LIGHT*

Press the lamp button to activate the light.

17. *BATTERY INFORMATION*

The pager is designed to operate with a "AAA" size alkaline battery.

Note : Do not use carbon zinc batteries.

A rectangular box representing a pager's LCD screen. In the top left corner, there is a small icon of a signal tower with the number '40' next to it. The word 'HONEY' is displayed in a large, bold, black, sans-serif font.

 
A rectangular box representing a pager's LCD screen. In the top left corner, there is a small icon of a signal tower with the number '40' next to it. The word 'FRIEND' is displayed in a large, bold, black, sans-serif font.

A rectangular box representing a pager's LCD screen. In the top left corner, there is a small icon of a signal tower with the number '40' next to it. The words 'LOVE YOU' are displayed in a large, bold, black, sans-serif font.

The *ST750* pager comes with 7 preprogrammed messages, which will be displayed on the LCD when the corresponding code is entered.

To send a canned message.

1. Dial the pager number on a telephone and wait for a beep sound.
2. Enter the number from 1 to 5.



Following is the list of preprogrammed canned message.

CODE	Displayed Message	MELODY
1	Honey	Today
2	Friend	Die Forelle
3	Love you	Hymne a l'Amour
4	Home	Sting
5	Office	Doremi song

FCC

DECLARATION OF CONFORMITY

PRODUCT NAME : Numeric Pager

MODEL NUMBER : ST-750PP

FCC RULES : TESTED TO COMPLY WITH FCC PART 15, CLASS B

OPERATING ENVIRONMENT: FOR HOME OR OFFICE USE

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

INFORMATION TO USER:

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- ❑ Reorient/Relocate the receiving antenna.
- ❑ Increase the separation between the equipment and receiver.
- ❑ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ❑ Consult the dealer or an experienced radio/TV technician for help.

Caution : Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate this equipment.

The party responsible for product compliance

SUN TELECOM
INTERNATIONAL

11321 Decimal Drive Louisville, KY 40299