


- Assure equipment is powered off.
- Unpack Optimus Communications Board (OCB).
- Connect wiring harness from interface board (A) to the connector (B) on the OCB.
- Position the OCB as shown. Do not over extend the connection (B)
- Secure the OCB with two (2) screws as shown (C). Do not over torque screws.
- Secure top cover to main body and perform diagnostics

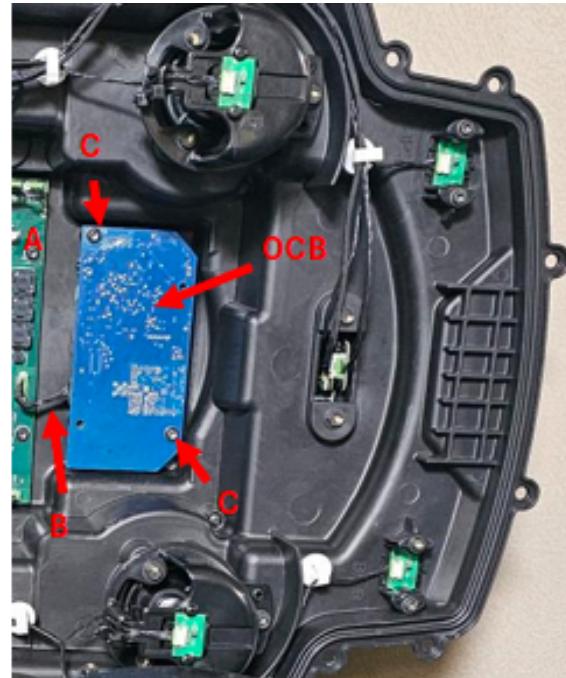

## FCC/IC Statement

This product contains a modular approved radio:

FCC ID	IC	Module
A8TBM70ABCDEFGH	12246A-BM70BLES1F2	BLE



### WARNING



***The user that changes or modifications not expressly approved by The Toro Company could void the user's authority to operate the equipment. Module shall be installed in a flat horizontal position.***

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Ce produit contient une radio approuvée modulaire :

FCC ID	IC	Module
A8TBM70ABCDEFGH	12246A-BM70BLES1F2	BLE

**WARNING**

**L'utilisateur qui effectue des changements ou des modifications non expressément approuvés par The Toro Company pourrait perdre son autorité à utiliser l'équipement. Le module doit être installé dans une position horizontale plate.**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.