

UI ELEMENT

13

UI ELEMENT

14


MAIN LAUNCHER

15

SETTINGS

16

SETTINGS

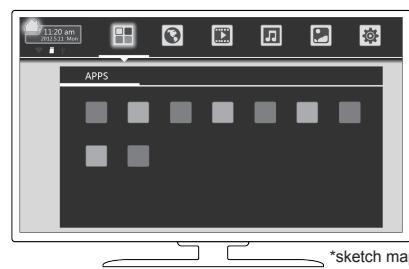17

- The Media Player tabs contain: Video/Music/Pic
- Video tab & music tab lists information as: media type/preview, file name, time.
- Pic tab shows a matrix of picture preview.

MAIN LAUNCHER




- Main Launcher tab contains:**
 - Time information (You can set time information at settings)
 - Function status contains: Wi-Fi; Micro SD card; USB connection (White for working, gray for standby)




- Often used Apps contains: 6 of the most used app icons in recent time




- You can put at most two often used widgets on the blank space. (*Attention: Not all apps have widgets!)

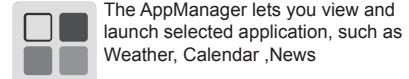

The AppManager lets you view and launch selected application, such as Weather, Calendar, News

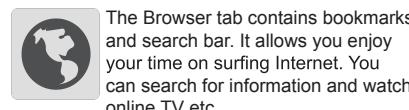

The Browser tab contains bookmarks and search bar. It allows you to enjoy your time on surfing Internet. You can search for information and watch online TV etc.

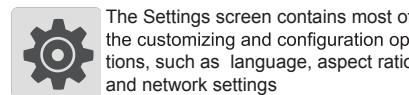

The Settings screen contains most of the customizing and configuration options, such as language, aspect ratio and network settings

MEDIA PLAYER

18

BROWSER

19

APPLICATIONS

20

ADVANCED FEATURES

21

EXCEPTION HANDLING

22

•Video

You can play the video on the USB flash drive, Micro SD card etc. Use to control Play/Pause; Use to change Next/Prev video; Use arrow buttons to control menu.

•Picture

You can play the picture on the USB flash drive, Micro SD card etc. Use to control Play/Pause; Use to change Next/Prev picture; Use Up/Down buttons to control menu, Use Right/Left buttons to zoom in/out.

•Music

You can play the music on the USB flash drive, Micro SD card etc. Use to control Play/Pause; Use to change Next/Prev music; Use arrow buttons to control menu.

***Attention:** When you need to play media files from your USB flash drive or mobile HDD, please make sure that your power supply is over 5V/1.5A. For more stable experience, 5V/2A is better.

- Menu Key : Call out the menu of browser
- Back key : Back to the last page
- Search Key : Call out the search bar to search or input web address
- Page +/- Key : Help you page up/down with just one click

Menu of Browser

- Set a new window (At most 4)
- Bookmarks
- Refresh the Current Sheet
- Forward
- More: Add bookmark; Find on page; Select text; Page info; Downloads; Settings; Close

APPLICATIONS

Install from USB Flash Drive/Micro SD card

1. Open the Browser.
2. Press search key and input your website address
3. Download the APK file which you like if there is a link for download (If you have problems with downloading, please make sure there is enough room in your internal storage)
4. You will find the file in your Micro SD card folder

Install from ApkInstaller

1. Open the ApkInstaller
2. Find the icon of the application, and enter it
3. Press the install button
4. You can find the application in tab "Apps" after installation

Remove Applications

1. Enter SETTINGS
2. Enter "Applications--Manage applications"
3. Find the application you want to remove in tab "All"
4. Enter the icon and press "Uninstall"
5. Press "OK" to confirm uninstall

DLNA



1. Enter the APP MediaSharing. You will see a list of devices that support DLNA on the left.

2. Choose the device on the left, you will see a list of media files that the device shared.

3. Choose and press the media file you want to play. It will take a little longer for video files. Music and picture play screenshots are as followed:

- 1) You can drag the progress bar during playing music or video. You can also have basic functions like forward/rewind and prev/next
- 2) Picture player can zoom in/out and rotate the picture as you like, it also provide filmslide function

4. Menu of MediaSharing. Operating tips:
 - 1) Refresh: Refresh the list of supported devices
 - 2) Settings: Turn on/off the function of sharing, turn on/off when booting and set TV's device name


System restore

If the Android Dongle can not start successfully, please proceed as follows:

*Please read carefully before operation!

1. Unplug your storage devices, such as: Micro SD card, USB flash drive, mobile HDD and etc.
2. Unplug the power supply

3. Press the RECOVERY button (as the figure below), then plug in the power, release the RECOVERY button until the screen changes into updating status

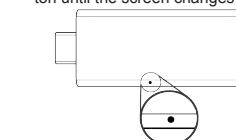

4. Use Up/Down button to choose "wipe data/factory reset" and enter it

5. Use Up/Down button to choose "Yes -- delete all user data" and enter it

(*Warning!: It will delete all of user's information after confirmation)

6. Use Up/Down button to choose "reboot system now" and enter it, the product will reboot after confirmation

7. The product will enter the system successfully

*Attention:

RECOVERY button only helps to enter factory recovery screen. It is different from RESET and user's misoperation will occur permanent loss of user data!