

CVT Android Dongle Wi-Fi settings


1. Enter Settings—>Wi-Fi
2. Turn on Wi-Fi



3. When Wi-Fi function turned on, It will list all the hotspot information that can be scanned.
4. Choose and enter one of the hotspots to connect to the wireless Internet.



5. If the hotspot is in security mode like WPA/WPA2, you have to enter the right password to connect
6. When connected successfully, you can enter “Advanced” to find more information as picture showed below.

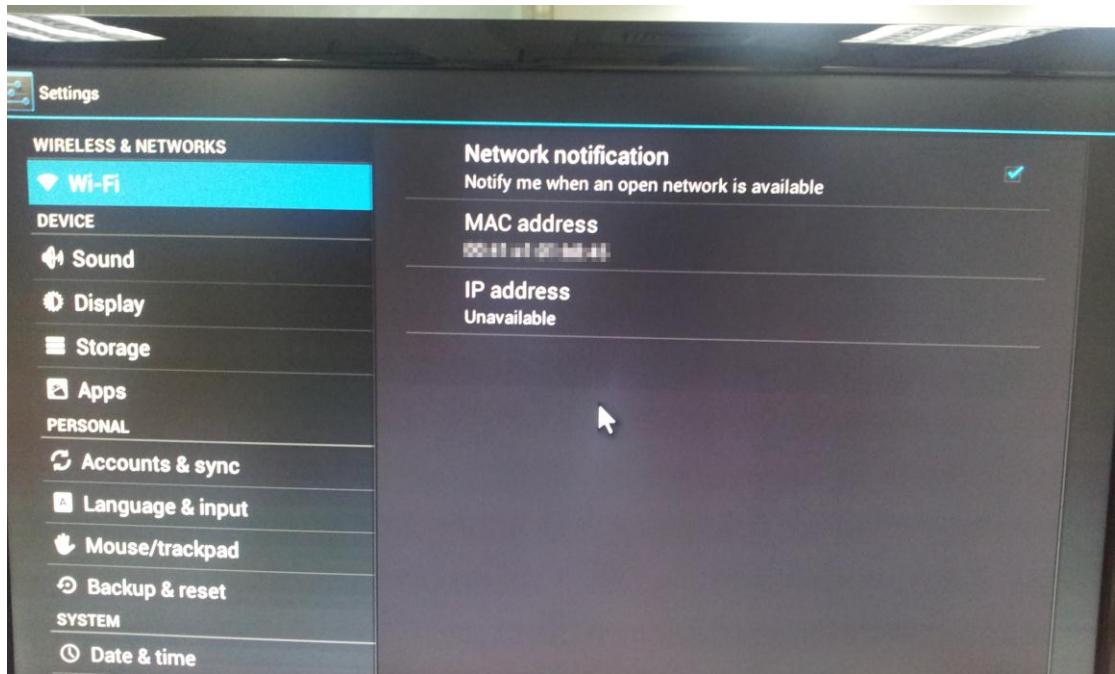

7. Long press a hotspot if you want to change information.
8. Check the "Show advanced options" and it will show a window like picture bellow:



9. You can set WPS, Proxy and IP information.

*Attention: Users can not change channels in this setting mode.