

## Remote Keyless Entry – Operational Description

This hand-held radio transmitter allows you to lock or unlock the doors of a vehicle within a 30meter range. The FOB key does not need to be pointed at the vehicle to activate the system.

The transmitter will provide basic LOCK and UNLOCK functions.

### **To Unlock doors:**



Press and release the UNLOCK button on the RKE Transmitter once to unlock.

### **To Lock doors:**



Press and release the LOCK button on the RKE Transmitter once to lock.

### **To operate Remote Start :**



Press Lock, followed by Remote Start twice within 5 seconds to start engine.  
Press Remote Start twice within 5 seconds to turn off engine.

### **To Operate Panic Button:**



Press and release the PANIC button on the RKE Transmitter once to turn the Panic Alarm On and Off.

### **To Open Trunk:**



Press and release the Trunk button on the RKE transmitter twice in 5 seconds to open trunk.

## Keyfob Power Supply

The Keyfob is operated on one 3V Manganese Dioxide Lithium Coin Battery (CR2032). Minimum operating voltage is approximately 2.6V, after which the transmitter will cease operation, and the battery will need to be replaced.

The recommended replacement battery is one **CR2032** battery.

With the transmitter buttons facing down, use a thin coin to pry the two halves of the transmitter apart. Use care to ensure that the rubber gasket is not damaged during removal.

Remove and replace the batteries. Avoid touching the new batteries with your fingers. Skin oils may cause battery deterioration. If you touch a battery, clean it with rubbing alcohol.

Do not touch the printed circuit board or the battery terminals that are on the back housing.

To reassemble the transmitter case, snap two halves together. Make sure there is an even 'gap' between the two halves.