

Operation:

- 1) Press the selected button to the transmitter
- 2) While the button is pressed the status led will flash
- 3) Release the button and let will shut off

Battery Replacement:

- 1) Remove the screw and open the transmitter case
- 2) Remove battery and replace with GP-23A (12v)
- 3) Replace cover and tighten screw

5 Button -TRANSMITTER

