

Installation and Product Safety Manual

MM-014763-001

Rev. C, Mar/09



M7300
Mobile Radio
700 and 800 MHz
Dual-Band Half-Duplex
Front and Remote-Mount
Mobile Radios
with CH-721 Scan and System
Control Heads



Tyco Electronics

Our commitment. Your advantage.

MANUAL REVISION HISTORY

REV.	DATE	REASON FOR CHANGE
-	Jun/08	Original release.
A	Sep/08	Revised specifications, equipment tables, option and accessories tables, list of tools required, and performance test procedures.
B	Mar/09	Revised specifications, introduction, list of tools required, and information for optional cables. Added information for new microphones with straight connectors. Added wiring diagram.
C	Mar/09	Added rooftop-mount antenna mounts AN-125001-002 and -006, and antenna elements AN-225001-001 and AN-225001-005.

Tyco Electronics' Technical Publications would particularly appreciate feedback on any errors found in this document and suggestions on how the document could be improved. Submit your comments and suggestions to:

Tyco Electronics Wireless Systems
Technical Publications
221 Jefferson Ridge Parkway
Lynchburg, VA 24501

or fax your comments to: 1-434-455-6851

or e-mail us at: techpubs@tycoelectronics.com

CREDITS

OpenSky and EDACS are registered trademarks of M/A-COM, Inc.

ProVoice is a trademark of M/A-COM, Inc.

AMBE and IMBE are registered trademarks of Digital Voice Systems, Inc.

Bird is a registered trademark of Bird Electronic Corporation.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

SmartSiren is a registered trademark of Federal Signal Corporation.

All other brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

NOTICE

This device is made under license under one or more of the following U.S. Patents: 4,590,473; 4,636,791; 5,148,482; 5,185,796; 5,271,017; 5,377,229; 4,716,407; 4,972,460; 5,502,767; 5,146,497; 5,164,986; 5,185,795.

The voice coding technology embodied in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc. The user of this technology is explicitly prohibited from attempting to decompile, reverse engineer, or disassemble the Object Code, or in any other way convert the Object Code into human-readable form.

Repairs to this equipment should be made only by an authorized service technician or facility designated by the supplier. Any repairs, alterations or substitution of recommended parts made by the user to this equipment not approved by the manufacturer could void the user's authority to operate the equipment in addition to the manufacturer's warranty.

The software contained in this device is copyrighted by M/A-COM, Inc. Unpublished rights are reserved under the copyright laws of the United States.



This product conforms to the European Union WEEE Directive 2002/96/EC. Do not dispose of this product in a public landfill. Take it to a recycling center at the end of its life.

This manual is published by M/A-COM, Inc. without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by M/A-COM, Inc., at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of M/A-COM, Inc.

TABLE OF CONTENTS

	<i>Page</i>
1 REGULATORY AND SAFETY INFORMATION.....	6
1.1 SAFETY SYMBOL CONVENTIONS.....	6
1.2 RF ENERGY EXPOSURE AWARENESS AND CONTROL INFORMATION FOR FCC OCCUPATIONAL USE REQUIREMENTS.....	6
1.2.1 Federal Communications Commission Regulations.....	7
1.3 COMPLIANCE WITH RF EXPOSURE STANDARDS.....	7
1.3.1 Mobile Antennas	8
1.3.2 Approved Accessories	9
1.3.3 Contact Information.....	9
1.4 OCCUPATIONAL SAFETY GUIDELINES AND SAFETY TRAINING INFORMATION	9
1.5 COMMON HAZARDS	9
1.6 SAFE DRIVING RECOMMENDATIONS.....	10
1.7 OPERATING RULES AND REGULATIONS	11
1.8 OPERATING TIPS.....	11
2 SPECIFICATIONS	12
2.1 GENERAL.....	12
2.2 TRANSCEIVER.....	12
2.3 REGULATORY	13
3 INTRODUCTION	14
3.1 GENERAL DESCRIPTION	14
3.2 RELATED PUBLICATIONS.....	16
3.3 REPLACEMENT PARTS	17
3.4 TECHNICAL ASSISTANCE.....	17
4 UNPACKING AND CHECKING THE EQUIPMENT.....	18
4.1 MATERIALS	18
4.2 MATERIAL INSPECTION.....	18
5 PLANNING THE INSTALLATION.....	23
5.1 GENERAL INFORMATION	23
5.2 TOOLS REQUIRED.....	23
5.3 LOCATING COMPONENTS	26
6 ANTENNA INSTALLATION.....	27
6.1 ANTENNA MOUNTING LOCATIONS	27
6.1.1 Direct Center or Center-Rear of Rooftop	28
6.1.2 Center of Trunk Lid.....	28
6.2 ANTENNA INSTALLATION PROCEDURE.....	28
6.2.1 Install the Mobile Antenna	28
6.2.2 Install the GPS Antenna (Required Only if Radio has GPS Receiver Option).....	29
7 FRONT-MOUNT RADIO INSTALLATION.....	31
7.1 MOUNTING THE FRONT-MOUNT RADIO	31
7.1.1 Mounting Bracket Installation.....	33
7.1.2 Inserting the Radio into the Mounting Bracket	35
7.2 FRONT-MOUNT RADIO'S DC POWER INSTALLATION.....	35
7.2.1 Overview of On/Off Power Wiring Configurations	35
7.2.2 DC Power Cable and Main Fuse Holder Installation.....	36
8 REMOTE-MOUNT RADIO INSTALLATION	39
8.1 MOUNTING THE REMOTE-MOUNT RADIO	39

TABLE OF CONTENTS (Continued)

	<i>Page</i>
8.1.1 Mounting Bracket Installation	39
8.1.2 Inserting the Radio into the Mounting Bracket.....	43
8.2 REMOTE-MOUNT RADIO'S DC POWER INSTALLATION.....	43
8.2.1 Overview of On/Off Power Wiring Configurations.....	43
8.2.2 DC Power Cable and Main Fuse Holder Installation	44
8.3 CONTROL HEAD INSTALLATION	48
8.3.1 General Information.....	48
8.3.2 Control Head Mechanical Installation	51
8.3.3 Control Head-to-Radio CAN Cable Connections	52
8.3.4 Control Head Power Cable Installation	54
9 SPEAKER INSTALLATION.....	58
9.1 FRONT-MOUNT RADIO INSTALLATION.....	58
9.2 REMOTE-MOUNT RADIO INSTALLATION	58
10 MICROPHONE ATTACHMENT	59
11 OPTIONAL CABLES	60
11.1 M5300/M7300 OPTION CABLE CA-012349-001	60
11.2 SERIAL PROGRAMMING CABLES CA-013671-010 AND -020	63
11.3 CH-721 OPTION CABLE CA-011854-001.....	64
11.4 CH-721 SERIAL PROGRAMMING CABLE CA-104861.....	65
12 GPS NMEA-FORMATTED SERIAL DATA CONNECTION.....	66
13 INITIAL POWER-UP TEST.....	67
14 PERFORMANCE TESTS.....	68
14.1 CHANGING OPERATING MODE FOR TESTS.....	68
14.1.1 Changing from OpenSky to Conventional.....	68
14.1.2 Changing from Conventional to OpenSky.....	69
14.2 REQUIRED TEST EQUIPMENT	69
14.3 TRANSMITTING INTO A DUMMY LOAD.....	70
14.4 TRANSMITTING INTO THE MOBILE ANTENNA	71
14.5 TEST PERFORMANCE DATA FORM	73
15 COMPLETE THE INSTALLATION.....	74
16 WARRANTY	75

FIGURES

	<i>Page</i>
Figure 5-1: Typical Front-Mount Mobile Radio Installation in a Standard Passenger Vehicle	24
Figure 5-2: Typical Remote-Mount Mobile Radio Installation in a Standard Passenger Vehicle.....	24
Figure 5-3: M7300 Front-Mount and Remote-Mount Mobile Radios — Front and Rear Views.....	25
Figure 6-1: Recommended Antenna Mounting Locations with Antenna Part Numbers	27
Figure 6-2: Crimping Instructions for TNC RF Connector	29
Figure 7-1: Front-Mount M7300 Radio Dimensions.....	32
Figure 7-2: Front-Mount Mounting Bracket Kit KT101533V1	33
Figure 7-3: Mounting Bracket FM101319V1 (Marked KTB0310) Dimensions [for Front-Mount M7300 Mobile Radio (Radio Not Shown)].....	34
Figure 8-1: Remote-Mount M7300 Radio Dimensions.....	40
Figure 8-2: Remote-Mount Mounting Bracket Kit KT23117	41
Figure 8-3: Mounting Bracket FM103111V1 Dimensions [for Remote-Mount M7300 Mobile Radio (Radio Not Shown)].....	42
Figure 8-4: Wiring Diagram for a Remote-Mount Radio Installation.....	46
Figure 8-5: CH-721 Scan Model Control Head Front Panel	49
Figure 8-6: CH-721 System Model Control Head Front Panel	49
Figure 8-7: CH-721 Rear Panel (both control head models).....	50
Figure 8-8: Standard U-Shaped Control Head Mounting Bracket (Kit Part Number KT-008608).....	51
Figure 8-9: Optional Control Head Mounting Pedestal (Part Number MACDOS0012).....	51
Figure 8-10: CAN Link Connections for a Single Control Head Installation	53
Figure 8-11: Typical CAN Link Connections for a Multi-Control Head Installation	53
Figure 10-1: Attaching the Microphone to the CH-721Control Head	59
Figure 11-1: M5300/M7300 Option Cable CA-012349-001.....	60
Figure 11-2: Serial Programming Cables CA-013671-010 and -020	63
Figure 11-3: CH-721 Option Cable CA-011854-001	64
Figure 11-4: Programming Cable CA-104861	65
Figure 14-1: Wattmeter Connections for Antenna System Tests	70

TABLES

	<i>Page</i>
Table 1-1: Recommended Minimum Safe Lateral Distance from Transmitting Antenna.....	8
Table 4-1: M7300 Mobile Radio Catalog and Part Numbers	18
Table 4-2: CH-721 Control Head Catalog and Part Numbers	18
Table 4-3: Installation Kit MAMW-NZN6W for Front-Mount M7300 Mobile Radio	19
Table 4-4: Installation Kit MAMW-NZN7R for Remote-Mount M7300 Mobile Radio with CH-721 Control Head.....	19
Table 4-5: Additional Options and Accessories for M7300 Mobile Radios	20
Table 4-6: Additional Options and Accessories for CH-721 Control Heads.....	22
Table 11-1: M5300/M7300 Option Cable CA-012349-001 Interconnections.....	61
Table 14-1: Required Test Equipment	69

1 REGULATORY AND SAFETY INFORMATION

1.1 SAFETY SYMBOL CONVENTIONS

The following conventions are used in this manual to alert the user to general safety precautions that must be observed during all phases of operation, installation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere violates safety standards of design, manufacture, and intended use of the product. Tyco Electronics assumes no liability for the customer's failure to comply with these standards.



The **WARNING** symbol calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a **WARNING** symbol until the conditions identified are fully understood or met.



The **CAUTION** symbol calls attention to an operating procedure, practice, or the like, which, if not performed correctly or adhered to, could result in damage to the equipment or severely degrade equipment performance.



The **NOTE** symbol calls attention to supplemental information, which may improve system performance or clarify a process or procedure.

1.2 RF ENERGY EXPOSURE AWARENESS AND CONTROL INFORMATION FOR FCC OCCUPATIONAL USE REQUIREMENTS

Before using the two-way mobile radio, read this important RF energy awareness and control information and operational instructions to ensure compliance with RF exposure guidelines.



This radio is intended for use in occupational/controlled conditions, where users have full knowledge of their exposure and can exercise control over their exposure to remain below RF exposure limits. This radio is NOT authorized for general population, consumer, or any other use.



Changes or modifications not expressly approved by Tyco Electronics could void the user's authority to operate the equipment.

This two-way radio uses electromagnetic energy in the radio frequency (RF) spectrum to provide communications between two or more users over a distance. It uses RF energy or radio waves to send and receive calls. RF energy is one form of electromagnetic energy. Other forms include, but are not limited to, electric power, sunlight, and x-rays. RF energy, however, should not be confused with these other forms of electromagnetic energy, which, when used improperly, can cause biological damage. Very high levels of x-rays, for example, can damage tissues and genetic material.

Experts in science, engineering, medicine, health, and industry work with organizations to develop standards for exposure to RF energy. These standards provide recommended levels of RF exposure for

both workers and the general public. These recommended RF exposure levels include substantial margins of protection. All two-way radios marketed in North America are designed, manufactured, and tested to ensure they meet government-established RF exposure levels. In addition, manufacturers also recommend specific operating instructions to users of two-way radios. These instructions are important because they inform users about RF energy exposure and provide simple procedures on how to control it. Refer to the following websites for more information on what RF energy exposure is and how to control exposure to assure compliance with established RF exposure limits:

<http://www.fcc.gov/oet/rfsafety/rf-faqs.html>

<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>

1.2.1 Federal Communications Commission Regulations

Before it was marketed in the United States, the M7300 two-way mobile radio was tested to ensure compliance with FCC RF energy exposure limits for two-way mobile radios. When two-way radios are used as a consequence of employment, the FCC requires users to be fully aware of and able to control their exposure to meet occupational requirements. Exposure awareness can be facilitated by the use of a label directing users to specific user awareness information. The radio has an RF exposure product label. Also, this Installation and Product Safety Manual and the applicable Operator's Manual include information and operating instructions required to control RF exposure and to satisfy compliance requirements.

1.3 COMPLIANCE WITH RF EXPOSURE STANDARDS

The M7300 two-way mobile radio is designed and tested to comply with a number of national and international standards and guidelines regarding human exposure to RF electromagnetic energy. This radio complies with the IEEE and ICNIRP exposure limits for occupational/controlled RF exposure environment at duty-cycle times of up to 50% (50% transmit, 50% receive), and it is authorized by the FCC for occupational use. In terms of measuring RF energy for compliance with the FCC exposure guidelines, the radio's antenna radiates measurable RF energy only while it is transmitting (talking), not when it is receiving (listening), or in a standby mode.

The M7300 two-way mobile radio complies with the following RF energy exposure standards and guidelines:

- United States Federal Communications Commission (FCC), Code of Federal Regulations; 47 CFR § 2 sub-part J.
- American National Standards Institute (ANSI)/Institute of Electrical and Electronic Engineers (IEEE) C95.1-2005.
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-2005.
- IC Standard RSS-102, Issue 2, 2005: Spectrum Management and Telecommunications Radio Standards Specification. Radiofrequency Exposure Compliance of Radiocommunication Apparatus (All Frequency Bands).



CAUTION

Table 1-1 lists the recommended minimum safe lateral distances for a controlled environment and for unaware bystanders in an uncontrolled environment, from transmitting antennas (i.e., monopoles over a ground plane, or dipoles) at rated radio power for mobile radios installed in a vehicle. Transmit only when unaware bystanders are at least the uncontrolled recommended minimum safe lateral distance away from the transmitting antenna.

Based on the highest radiated RF power and the highest antenna gain in antennas to be used with M7300, the distances listed in Table 1-1 are considered as safe distances for controlled and uncontrolled environments with the M7300 mobile radio transmitting at a maximum 50% duty cycle:

Table 1-1: Recommended Minimum Safe Lateral Distance from Transmitting Antenna

ANTENNA PART NUMBER (Catalog Number)	ANTENNA DESCRIPTION	RECOMMENDED MINIMUM LATERAL HUMAN BODY DISTANCE FROM TRANSMITTING ANTENNA	
		CONTROLLED ENVIRONMENT (Centimeters)	UNCONTROLLED ENVIRONMENT (Centimeters)
AN-025167-001 (Cat. No. MAMW-AN3J)	700/800 MHz Standard Rooftop-Mount; 3 dBd Gain	28	69
AN-025167-002 (Cat. No. MAMW-AN3K)	700/800 MHz Elevated-Feed Rooftop-Mount; 3 dBd Gain	28	69
AN-025167-004 (Cat. No. MAMW-AN3V)	700/800 MHz GPS Combo Rooftop-Mount; 3 dBd Gain	28	69
AN-025167-005 (Cat. No. MAMW-NAN3W)	700/800 MHz GPS Combo Elevated-Feed Rooftop-Mount; 3 dBd Gain	28	69
AN-025167-006 (Cat. No. MAMW-NAN3X)	700/800 MHz Magnetic-Mount; 3 dBd Gain	29	72
AN-025167-010 (Cat. No. MAMW-NAN5B)	700/800 MHz Low-Profile Rooftop-Mount; 2 dBd Gain	28	69
AN-025167-011 (Cat. No. MAMW-NAN5C)	700/800 MHz GPS Combo Low-Profile Rooftop-Mount; 2 dBd Gain	28	69
AN-025167-014 (Cat. No. MAMW-NAN5U)	700/800 MHz Standard Rooftop-Mount; 5 dBd Gain	39	87
AN-025167-015 (Cat. No. MAMW-NAN5V)	700/800 MHz GPS Combo Rooftop-Mount; 5 dBd Gain	39	87
AN-125001-002 (mount) with AN-225001-001 (element)	700/800 MHz Standard Rooftop-Mount; 3 dBd Gain	36	76
AN-125001-002 (mount) with AN-225001-005 (element)	700/800 MHz Standard Rooftop-Mount; 5 dBd Gain	36	79

1.3.1 Mobile Antennas

The antenna(s) for the radio must be installed in accordance with Section 6 in this manual. Refer to Figure 6-1 on page 27 for applicable antenna part numbers. Installation guidelines presented in Section 6 are limited to metal-body motor vehicles or vehicles with appropriate ground planes.

Use only approved/supplied antenna(s) or an approved replacement antenna. Unauthorized antennas, modifications, or attachments can cause the FCC RF exposure limits to be exceeded.

1.3.2 Approved Accessories

The radio has been tested and meets FCC RF guidelines when used with accessories supplied or designated for use with it. Use of other accessories may not ensure compliance with the FCC's RF exposure guidelines, and may violate FCC regulations. For a list of approved accessories refer to Section 4 in this manual (begins on page 18) and/or the Products and Services Catalog.

1.3.3 Contact Information

For additional information on RF exposure and other information, contact Tyco Electronics using one of the contact links listed in Section 3.4 on page 17.

1.4 OCCUPATIONAL SAFETY GUIDELINES AND SAFETY TRAINING INFORMATION

To ensure bodily exposure to RF electromagnetic energy is within the FCC allowable limits for occupational use. Always adhere to the following basic guidelines:

- The push-to-talk button should only be depressed when intending to send a voice message.
- The radio should only be used for necessary work-related communications.
- The radio should only be used by authorized and trained personnel. It should never be operated by children.
- Do not attempt any unauthorized modification to the radio. Changes or modifications to the radio may cause harmful interference and/or cause it to exceed FCC RF exposure limits. Only qualified personnel should service the radio.
- Always use only authorized accessories (antennas, control heads, speakers/mics, etc.). Use of unauthorized accessories can cause the FCC RF exposure compliance requirements to be exceeded.

The information listed above provides the user with information needed to make him or her aware of a RF exposure, and what to do to assure that this radio operates within the FCC exposure limits of this radio.

1.5 COMMON HAZARDS



WARNING

The operator of any mobile radio should be aware of certain hazards common to the operation of vehicular radio transmissions. Possible hazards include but are not limited to:

- **Explosive Atmospheres** — Just as it is dangerous to fuel a vehicle while its motor running, be sure to turn the radio **OFF** while fueling the vehicle. If the radio is mounted in the trunk of the vehicle, **DO NOT** carry containers of fuel in the trunk.

Areas with potentially explosive atmosphere are often, but not always, clearly marked. Turn the radio **OFF** when in any area with a potentially explosive atmosphere. It is rare, but not impossible that the radio or its accessories could generate sparks.

- **Interference To Vehicular Electronic Systems** — Electronic fuel injection systems, electronic anti-skid braking systems, electronic cruise control systems, etc., are typical of the types of electronic devices that can malfunction due to the lack of protection from radio frequency (RF) energy present when transmitting. If the vehicle contains such equipment, consult the dealer for the make of vehicle and enlist his aid in determining if such electronic circuits perform normally when the radio is transmitting.

- **Electric Blasting Caps** — To prevent accidental detonation of electric blasting caps, **DO NOT** use two-way radios within 1000 feet (305 meters) of blasting operations. Always obey the “**Turn Off Two-Way Radios**” (or equivalent) signs posted where electric blasting caps are being used. (OSHA Standard: 1926.900).
- **Radio Frequency Energy** — To prevent burns or related physical injury from radio frequency energy, do not operate the transmitter when anyone outside of the vehicle is within the minimum safe distance from the antenna as specified in Table 1-1. Refer to Section 1.2 for additional information.
- **Vehicles Powered By Liquefied Petroleum (LP) Gas** — Radio installation in vehicles powered by liquefied petroleum gas, where the LP gas container is located in the trunk or other sealed-off space within the interior of the vehicle, must conform to the **National Fire Protection Association standard NFPA 58**. This requires:
 - The space containing the radio equipment must be isolated by a seal from the space containing the LP gas container and its fittings.
 - Outside filling connections must be used for the LP gas container.
 - The LP gas container space shall be vented to the outside of the vehicle.
- **Vehicles Equipped with Airbags** — For driver and passenger safety, avoid mounting the radio’s control head (or any other component) above or near airbag deployment areas. In addition to driver-side and passenger-side front-impact airbags, some vehicles may also be equipped with side-impact airbags. For occupant safety, verify the location of all airbags within the vehicle before installing the radio equipment.

1.6 SAFE DRIVING RECOMMENDATIONS

The American Automobile Association (AAA) advocates the following key safe driving recommendations:

- Read the literature on the safe operation of the radio.
- Keep both hands on the steering wheel and the microphone in its hanger whenever the vehicle is in motion.
- Place calls only when the vehicle is stopped.
- When talking from a moving vehicle is unavoidable, drive in the slower lane. Keep conversations brief.
- If a conversation requires taking notes or complex thought, stop the vehicle in a safe place and continue the call.
- Whenever using a mobile radio, exercise caution.

1.7 OPERATING RULES AND REGULATIONS

Two-way radio systems must be operated in accordance with the rules and regulations of the local, regional, or national government.

In the United States, the M7300 mobile radio must be operated in accordance with the rules and regulations of the Federal Communications Commission (FCC). Operators of two-way radio equipment, must be thoroughly familiar with the rules that apply to the particular type of radio operation. Following these rules helps eliminate confusion, assures the most efficient use of the existing radio channels, and results in a smoothly functioning radio network.

When using a two-way radio, remember these rules:

- It is a violation of FCC rules to interrupt any distress or emergency message. The radio operates in much the same way as a telephone “party line.” Therefore, always listen to make sure the channel is clear before transmitting. Emergency calls have priority over all other messages. If someone is sending an emergency message – such as reporting a fire or asking for help in an accident, do not transmit unless assistance can be offered.
- The use of profane or obscene language is prohibited by Federal law.
- It is against the law to send false call letters or false distress or emergency messages. The FCC requires keeping conversations brief and confine them to business. To save time, use coded messages whenever possible.
- Using the radio to send personal messages (except in an emergency) is a violation of FCC rules. Send only essential messages.
- It is against Federal law to repeat or otherwise make known anything overheard on the radio. Conversations between others sharing the channel must be regarded as confidential.
- The FCC requires self-identification at certain specific times by means of call letters. Refer to the rules that apply to the particular type of operation for the proper procedure.
- No changes or adjustments shall be made to the equipment except by an authorized or certified electronics technician.



Under U.S. law, operation of an unlicensed radio transmitter within the jurisdiction of the United States may be punishable by a fine of up to \$10,000, imprisonment for up to two (2) years, or both.

1.8 OPERATING TIPS

The following conditions tend to reduce the effective range of two-way radios and should be avoided whenever possible:

- Operating the radio in areas of low terrain, or while under power lines or bridges.
- Obstructions such as mountains and buildings.



In areas where transmission or reception is poor, communication improvement may sometimes be obtained by moving a few yards in another direction, or moving to a higher elevation.

2 SPECIFICATIONS¹

2.1 GENERAL

Dimensions, Front-Mount Mobile Radio: (Height x Width x Depth)	2.4 x 6.9 x 11.3 inches (6.1 x 17.5 x 28.7 centimeters) (Includes knobs but <u>not</u> space required for mounting bracket and cables at rear of radio)
Dimensions, Remote-Mount Mobile Radio: (Height x Width x Depth)	2.0 x 6.9 x 9.2 inches (5.1 x 17.5 x 23.4 centimeters) (Does <u>not</u> include space required for mounting bracket and cables at rear of radio)
Dimensions, Control Head: (Height x Width x Depth)	2.4 x 6.9 x 3.9 inches (6 x 17.5 x 10 centimeters) (Does <u>not</u> include bracket and mounting screws)
Weight, Front-Mount Mobile Radio:	5.9 pounds (2.68 kilograms), less bracket
Weight, Remote-Mount Mobile Radio:	5.25 pounds (3.69 kilograms), less bracket
Weight, Control Head:	1.25 pounds (0.57 kilograms), less bracket
Operating Ambient Temperature Range:	-22 to +140° Fahrenheit (-30 to +60° Celsius)
Storage Temperature Range:	-40 to +185° Fahrenheit (-40 to +85° Celsius)
Altitude:	15,000 feet (4572 meters) maximum
DC Supply Voltage Operating Range:	+13.6 Vdc ±10% (Normal range per TIA-603)
DC Supply Current Requirements:	
Receive (includes control head):	
With Speaker Muted:	1.1 amps maximum
With 0.5-Watt Speaker Output Power:	1.5 amps maximum
With 10-Watt Speaker Output Power:	3.5 amps maximum
With 15-Watt Speaker Output Power:	4.0 amps maximum
Transmit (includes control head):	
With 15-Watt RF Output Power:	8 amps maximum, 6 amps typical
With 35-Watt RF Output Power:	15 amps maximum, 12 amps typical
Quiescent/Off Current:	
Mobile Radio:	100 microamps maximum
Control Head:	100 microamps maximum

2.2 TRANSCEIVER

Frequency Ranges:

Receive:

700 MHz Operation:

764 to 767 MHz, 769 to 775 MHz and 773 to 776 MHz
(repeater and talk-around operations) [See footnote²]
851 to 869 MHz (repeater and talk-around operations)

800 MHz Band:

¹ These specifications are primarily intended for the use of the installation technician. See the appropriate Specifications Sheet for the complete specifications.

² 764 to 767 MHz and 773 to 776 MHz per old FCC 700 MHz band plan. 769 to 775 MHz added August 30, 2007 by new FCC 700 MHz band plan.

Transmit:	
700 MHz Talk-Around Operation:	764 to 767 MHz, 769 to 775 MHz and 773 to 776 MHz
700 MHz Repeater Operation:	794 to 797 MHz, 799 to 805 MHz and 803 to 806 MHz
800 MHz Talk-Around Operation:	[See footnote ³] 851 to 869 MHz
800 MHz Repeater Operation:	806 to 824 MHz
Transmit Output Power:	
700 MHz Band RF Channels:	1.5 to 19 watts (programmable range)
800 MHz Band RF Channels:	5 to 35 watts (programmable range)
Channel Spacing:	12.5 kHz or 25 kHz (mode dependent)
Voice and Data Communications Modes:	Half-Duplex
Frequency Stability:	±1.5 ppm with AFC disabled; ±0.5 ppm with AFC
Receiver Sensitivity:	
700 MHz OTP Mode:	-111 dBm minimum at 1% BER (static)
800 MHz OTP Mode:	-111 dBm minimum at 1% BER (static)
700 MHz P25 Mode (TIA-102 Method):	-116 dBm minimum at 5% BER (static)
800 MHz P25 Mode (TIA-102 Method):	-116 dBm minimum at 5% BER (static)
700 MHz EDACS Mode:	-119 dBm minimum at 12 dB SINAD
800 MHz EDACS Mode:	-118 dBm minimum at 12 dB SINAD
Receiver Intermodulation Rejection:	77 dB minimum at 12.5 kHz
Audio Frequency Response:	300 to 3000 Hz
Audio Output Power from Control Head:	15 watts RMS minimum into 4-ohm external speaker; 1 watt into 4-ohm headset
Audio Distortion from Control Head:	< 5% at 5 watts into 4-ohm external speaker
Voice-Coding Method:	
OTP Mode:	Advanced Multi-Band Excitation (AMBE)
EDACS, ProVoice and P25 Modes:	Improved Multi-Band Excitation (IMBE)
P25 Phase 1 Mode:	Advanced Multi-Band Excitation Plus (AMBE+)
Data Rate:	
OTP Mode:	19.2 kbps
EDACS and ProVoice Modes:	9.6 kbps
P25 Mode:	4800 symbols/second

2.3 REGULATORY

FCC Type Acceptance:	OWDTR-0051-E
Applicable FCC Rules:	Part 15 and Part 90
Industry Canada Certification:	3636B-0051
Applicable Industry Canada Rules:	RSS-119

³ 764 to 767 MHz, 773 to 776 MHz, 794 to 797 MHz and 803 to 806 MHz per old FCC 700 MHz band plan. 769 to 775 MHz and 799 to 805 MHz added August 30, 2007 by new FCC 700 MHz band plan.

3 INTRODUCTION

This manual contains installation procedures for the M7300 mobile radio and the CH-721 control heads. Procedures cover the mounting and cabling of the equipment, as well as the basic test procedures. In addition, product safety-related information is included.

3.1 GENERAL DESCRIPTION

The M7300 mobile radio is a high-performance dual-band digital mobile radio. Shown in Figure 5-3 on page 25, the M7300 radio provides standard and advanced mobile radio communication functions. It can operate with the following radio systems/standards:

- 700 MHz and 800 MHz OpenSky® trunked radio networks using the OpenSky Trunking Protocol (OTP);
- 800 MHz Enhanced Digital Access Communications System (EDACS®) trunked radio networks;
- 800 MHz ProVoice™ trunked radio networks;
- 800 MHz APCO Project 25 Phase I compliant Common Air Interface (P25 CAI) trunked radio networks;
- 700 MHz talk-around communications in accordance with the APCO Project 25 Phase I standard; and,
- Conventional FM repeater-based and FM talk-around voice communications in 700 and 800 MHz bands in accordance with the TIA/EIA-603 conventional land-mobile radio standard.

The M7300 is designed to operate in a mobile environment, typically within a motor vehicle. It must be connected to an external transmit/receive antenna such as one mounted to the vehicle's rooftop or trunk lid. In high-power transmit mode on a 700 MHz RF channel, the radio's rated transmit output power is 19 watts. In high-power transmit mode on an 800 MHz RF channel, the radio's rated transmit output power is 35 watts. Several different types of external-mount antennas are approved and available for use with the radio, as listed in Table 1-1 and Table 4-5.

Front-mount and remote-mount configurations are available. In the front-mount configuration, the control head is an integral part of the mobile radio. In the remote-mount configuration of the M7300, the control head is located near the radio operator's position and the radio is mounted remotely from the control head, typically in the vehicle's trunk. The remote-mount radio is shown in Figure 5-3 on page 25.

Control heads used with the M7300 radio include the CH-721 Scan and the CH-721 System model control heads. See Figure 8-5 (page 49) through Figure 8-7. Both heads feature a large 3-line graphical vacuum-fluorescent display, front panel controls and buttons for user control of the mobile radio, an internal high-power audio amplifier to drive an externally-connected speaker, and a front panel microphone connector. The CH-721 System control head also has a 12-button numeric keypad that provides Dual-Tone Multi-Frequency (DTMF) functionality and easier operator system/group selection control at the control head's front panel.

The remote-mount M7300 radio is designed for remote mounting in a motor vehicle's trunk, or some other preferably unoccupied section in a vehicle, such as a fire truck's equipment shelf. Up to four (4) control heads can be connected to a front-mount M7300, and up to five (5) control heads can be connected to a remote-mount M7300. The radio is remotely controlled by a control head(s) connected to it via 3-wire Controller Area Network (CAN) cables. Between the radio and control head(s), the CAN link carries digitized microphone and speaker audio, controlling data such as button presses and radio messages, and user data such as that for a mobile data terminal connected to the serial port of the radio or control head. For proper operation, the CAN link must be terminated appropriately on each end. In multiple control head installations, two or more control heads are interconnected to the mobile radio in a series ("daisy-chain") fashion via CAN link cables.

As shown in Figure 8-7 on page 50, the CH-721 Scan and System model control heads used in remote-mount radio installations have several connectors located on the head's rear panel. These connectors include a DC power connector, two (2) CAN port connectors used for CAN link interconnections, an external speaker connector, a 9-pin serial port connector for connecting optional equipment such as a mobile data terminal, and a 25-pin accessory connector. Both CH-721 models can interface to an optional Federal Signal Electronic siren/light control system for broadcasting via a public address (PA) speaker.

The radio must be powered by an external +13.6-volt (nominal) DC power source. In mobile applications, the motor vehicle's electrical system is utilized as the source of DC power. In a remote-mount radio installation, the control head(s) connected to the radio is also powered by the same DC power source, but separately fused. When the control head is powered-up by the operator, it "wakes up" the radio by transmitting data to the radio via the CAN link.

The radio provides half-duplex voice and data communications. Voice communications are accomplished via a "push-to-talk" (PTT) type microphone and a speaker connected to the control head.

For data communications, the radio has an industry-standard 9-pin serial interface port for connecting optional data-type equipment, such as a Mobile Data Terminal (MDT), a laptop PC, an external display, or a key-entry device. This port works seamlessly with equipment from popular manufacturers and off-the-shelf applications. OpenSky employs User Datagram Protocol over Internet Protocol (UDP/IP) data packet transfers, providing "plug and play" connectivity for data-type devices.

700 MHz operating bands of the radio include the repeater output bands (mobile receive) of 764 to 767 MHz, 769 to 775 MHz and 773 to 776 MHz, and the repeater input bands (mobile transmit) of 794 to 797 MHz, 799 to 805 MHz and 803 to 806 MHz. The radio also provides talk-around operation in the 764 to 767 MHz, 769 to 775 MHz and 773 to 776 MHz bands.

800 MHz operating bands of the radio include 806 to 824 MHz repeater input band (mobile transmit) and the 851 to 869 MHz band used for repeater output and talk-around communications.

The radio has an optional built-in Global Positioning System (GPS) tracking receiver. GPS provides quick and accurate unit location information to dispatchers via the radio network. The GPS receiver determines the unit's location and the radio transmits it to the radio network. The GPS antenna can be integrated into the mobile transmit/receive antenna (i.e., a "combination" antenna). Alternately, the GPS antenna can be located/mounted completely separate from the mobile transmit/receive antenna.

The radio and control head exceed tough environmental specifications included within military standard MIL-STD-810F, the radio industry standard TIA/EIA-603, and the radio standard established by the U.S. Forest Service.

An M7300 radio operating on an OpenSky radio network uses Time-Division Multiple-Access (TDMA) digital modulation technology on the radio frequency link. TDMA allows multiple radio users to share a single RF channel. In addition, a single RF channel can support simultaneous digital voice and data communications.

OpenSky employs Advanced Multi-Band Excitation (AMBE[®]) speech and data compression technology developed by Digital Voice Systems, Inc. When operating on an OpenSky radio network, AMBE gives an M7300 the ability to provide exceptional voice quality via the limited bandwidth of the radio frequency path, even when the received RF signal is weak (i.e., even in "fringe" areas). AMBE is performed by a Digital Signal Processor (DSP) integrated circuit within the radio programmed to perform an AMBE compression algorithm during mobile transmissions, and an AMBE expansion algorithm during mobile reception.

Speech compression electronic circuitry—be it AMBE or another type such as IMBE[®]—is sometimes referred to as "vocoding" circuitry for voice coding, or simply a "vocoder" circuit.

The M7300 mobile radio supports operation on APCO Project 25 phase I compliant Common Air Interface (P25 CAI) trunked radio networks, and operation in a talk-around mode in accordance with the APCO Project 25 phase I standard. P25 radio systems utilize Improved Multi-Band Excitation (IMBE) speech and data compression technology, also developed by Digital Voice Systems, Inc.

Like AMBE technology, IMBE technology allows the M7300 to deliver exceptional voice quality, even in areas where the received RF signal strength is weak. IMBE replicates human speech better than other voice compression technologies, resulting in better voice quality and better speaker recognition. The Telecommunications Industry Association (TIA) funded an independent study to evaluate compression technologies. The findings showed that when compared with other industry-recognized compression technologies, IMBE provided the highest voice quality. In the study, radio users were asked to listen to coded speech produced by four different compression technologies (i.e., vocoder circuits) operating under a variety of conditions. The users rated the speech on a scale of one to five, with five being the best quality. Under each operating conditions, IMBE was rated the best.

The M7300 mobile radio can also operate using M/A-COM's digital voice technology called ProVoice. Like P25 radio systems, ProVoice also employs IMBE technology.

EDACS and ProVoice trunked radio networks employ analog FM and 2-level Gaussian Frequency-Shift Keying (GFSK) modulation techniques on the RF channels. Data is transmitted on an RF channel at a 9600 bits-per-second rate.

For over-the-air secure radio communications, the M7300 mobile radio may be equipped for 64-bit DES (Data Encryption Standard) encryption or 128/256-bit AES (Advanced Encryption Standard) encryption. With encryption, voice and/or user data signals transmitted and received by the radio on an RF channel are digitally encrypted ("scrambled") to virtually eliminate unauthorized monitoring via the RF channel.



Tyco Electronics recommends the buyer use only an authorized representative to install and service this product. The warranties provided to the buyer under the terms of sale shall be null and void if this product is installed or serviced improperly, and Tyco Electronics shall have no further obligation to the buyer for any damage caused to the product or to any person or personal property.

3.2 RELATED PUBLICATIONS

The following publications contain additional information about the M7300 mobile radio:

- Quick Guide for OpenSky mode: MM-014368-001
- Quick Guide for EDACS, Conventional and P25 (ECP) modes: MM-014369-001
- Operator's Manual (for all modes): MM-014716-001
- Maintenance Manual: MM-014718-001

Both quick guides are included with each mobile radio equipment package when it ships from the factory. Operator manuals, installation manuals, maintenance manuals, and quick guides are available at www.tewireless.com via a Wireless Information Center login and Tech Link.

3.3 REPLACEMENT PARTS

Replacement parts can be ordered through the Customer Resource Center. To order replacement parts through the Customer Resource Center, call, fax or e-mail our ordering system:

United States and Canada:

- Phone Number: 1-800-368-3277 (toll free)
- Fax Number: 1-800-833-7592 (toll free)
- E-mail: customerfocus@tycoelectronics.com

International:

- Phone Number: 1-434-455-6403
- Fax Number: 1-434-455-6676
- E-mail: InternationalCustomerFocus@tycoelectronics.com

3.4 TECHNICAL ASSISTANCE

Should the mobile radio or control head require repair, or if there are questions or concerns about the installation of this equipment, contact the Technical Assistance Center (TAC) using the following telephone numbers or e-mail address:

- United States and Canada: 1-800-528-7711 (toll free)
- International: 1-434-385-2400
- Fax: 1-434-455-6712
- E-mail: tac@tycoelectronics.com

4 UNPACKING AND CHECKING THE EQUIPMENT

4.1 MATERIALS

A typical set of materials for an M7300 mobile radio installation includes:

- **M7300 Mobile Radio** — See Table 4-1 below for catalog and part numbers.
- **CH-721 Scan or System Control Head** — See Table 4-2 below for catalog and part numbers.
- **Installation Kit MAMW-NZN6W for Front-Mount M7300** — Contents listed in Table 4-3.
or:
- **Installation Kit MAMW-NZN7R for Remote-Mount M7300 and CH-721** — Contents listed in Table 4-4.
- **One or Two Antennas** — As listed in Table 4-5. (Second antenna is required for the GPS receiver.)
- **Microphone** — See Table 4-6 for microphone part numbers.

Table 4-1: M7300 Mobile Radio Catalog and Part Numbers

CATALOG NUMBERS	PART NUMBER	DESCRIPTION
MAMW-SDMxa (AES Encryption)	RU-144750-061	700 & 800 MHz Dual-Band Half-Duplex M7300 Mobile Radio for Front and Remote-Mount Configurations
MAMW-SDMxe (DES Encryption)		
MAMW-SDMxx (No Encryption)		

Table 4-2: CH-721 Control Head Catalog and Part Numbers

CATALOG NUMBER	PART NUMBER	DESCRIPTION
MAMW-NCP9G	CU23218-0001	CH-721 Scan Control Head, Local-Control for Use on a Front-Mount Mobile Radio
MAMW-NCP9E	CU23218-0002	CH-721 Scan Control Head, Remote-Control for Use with a Remote-Mount Mobile Radio
MAMW-NCP9H	CU23218-0003	CH-721 System Control Head, Local-Control for Use on a Front-Mount Mobile Radio
MAMW-NCP9F	CU23218-0004	CH-721 System Control Head, Remote-Control for Use with a Remote-Mount Mobile Radio

4.2 MATERIAL INSPECTION



After removal from the carton, examine the radio, control head and other components for broken, damaged, loose or missing parts. If any are noted, contact the Customer Resource Center (see page 17) immediately to discuss and arrange the return of the equipment to Tyco Electronics for replacement. Any unauthorized attempts to repair or modify this equipment will void the warranty and could create a safety hazard.

Upon removing items from the carton and verifying that all equipment is accounted for, proceed with the installation.

**Table 4-3: Installation Kit MAMW-NZN6W
for Front-Mount M7300 Mobile Radio**

ITEM	QTY.	PART NUMBER	DESCRIPTION
1	1	KT101533V1	Kit, Front-Mount Mounting Bracket. Includes M5300/M7100/M7300 Mounting Bracket FM101319V1 (marked KTB0310), M5 stainless-steel hardware to attach radio to bracket, self-tapping hardware to attach bracket to mounting surface, ½-inch rubber grommet, and 7-inch cable ties. See Figure 7-2 on page 33.
2	1	CA-012365-001	Cable, M5300/M7300 DC Power. Includes 10-AWG, 20-Foot DC Power Cable with straight connector, (2) waterproof HFB fuse holders, (1) 15-amp AGC fuse and (1) 3-amp AGC fuse.
3	2	CD-014027-001	Terminator, CAN; 3-Pin, Straight Body.
4	1	LS102824V10	Speaker, External Mobile; 20-Watt (with 4.6-foot cable).
5	1	CA-012349-001	Cable, M5300/M7300 Option. See Section 11.1 (page 60).
6	1	FM-104859-001	Cap, Waterproof (For CH-721's DB-9 serial port connector).

**Table 4-4: Installation Kit MAMW-NZN7R
for Remote-Mount M7300 Mobile Radio with CH-721 Control Head**

ITEM	QTY.	PART NUMBER	DESCRIPTION
1	1	KT23117	Kit, Remote-Mount Mobile Radio Mounting Bracket. Includes M5300/M7100/M7300 Mounting Bracket FM103111V1 and M5 stainless-steel hardware to attach radio to bracket. See Figure 8-2 on page 41.
2	1	KT-008608	Kit, CH-721 Mounting Bracket. Includes (1) U-Shaped Mounting Bracket and #8 stainless-steel hardware to attach control head to bracket.
3	1	CA-012365-001	Cable, M5300/M7300 DC Power. Includes 10-AWG, 20-Foot DC Power Cable with straight connector, (2) waterproof HFB fuse holders, (1) 15-amp AGC fuse and (1) 3-amp AGC fuse.
4	1	CA-012616-001	Cable, CH-721 DC Power. Includes 12-AWG, 10-foot DC Power Cable with straight connector, (2) waterproof HFB fuse holders, (1) 3-amp AGC fuse, and (1) 5-amp AGC fuse.
5	2	CD-014027-001	Terminator, CAN; 3-Pin, Straight Body.
6	1	CA-009562-030	Cable, CAN; 30 feet, Right-Angle-to-Straight Connectors.
7	1	LS102824V10	Speaker, External Mobile; 20-Watt (with 4.6-foot cable).
8	1	MAMROS0034-NN006	Cable, Speaker; 6-Inch, Straight Connector.
9	1	FM-104859-001	Cap, Waterproof (For CH-721's DB-9 serial port connector).
10	1	FM-104859-002	Cap, Waterproof (For CH-721's DB-25 accessory connector).

Table 4-5: Additional Options and Accessories for M7300 Mobile Radios

PART NUMBER	DESCRIPTION
AN-025167-001 (Cat. No. MAMW-NAN3J)	Antenna, 700/800 MHz, Standard Rooftop-Mount, 3 dBd Gain, NMO Mounting Base, 15-foot (4.6-meter) RG-58 A/U (or equivalent) Low-Loss RF Cable, Male TNC and Mini-UHF RF Connectors; Factory-Tuned
AN-025167-002	Antenna, 700/800 MHz, Elevated-Feed, Rooftop-Mount, 3d dB Gain, NMO Mounting Base, 15-foot (4.6-meter) RG-58 A/U (or equivalent) Low-Loss RF Cable, Male TNC and Mini-UHF RF Connectors; Factory-Tuned
AN-025167-004	Antenna, 700/800 MHz GPS Combo, Rooftop-Mount, 3 dBd Gain, NMO Mounting Base, 15-foot (4.6-meter) RG-58 A/U (or equivalent) Low-Loss RF Cable, Male TNC and Mini-UHF RF Connectors, 16.5-foot (5-meter) RG174/U (or equivalent) GPS RF Cable with Male SMA RF Connector (attached); 2.7 to 3.3 Vdc or 4.8 to 5.2 Vdc Bias; Factory-Tuned
AN-025167-005	Antenna, 700/800 MHz GPS Combo, Elevated-Feed Rooftop-Mount, 3 dBd Gain, NMO Mounting Base, 15-foot (4.6-meter) RG-58 A/U (or equivalent) Low-Loss RF Cable, Male TNC and Mini-UHF RF Connectors, 16.5-foot (5-meter) RG174/U (or equivalent) GPS RF Cable with Male SMA RF Connector (attached); 2.7 to 3.3 Vdc or 4.8 to 5.2 Vdc Bias; Factory-Tuned
AN-025167-006	Antenna, 700/800 MHz, Magnetic-Mount, 3 dBd Gain, 15-foot (4.6-meter) RG-58 A/U (or equivalent) Low-Loss RF Cable, Male TNC and Mini-UHF RF Connectors; Factory-Tuned
AN-025167-010	Antenna, 700/800 MHz, Low-Profile, Rooftop-Mount, 2 dBd Gain, NMO Mounting Base, 15-foot (4.6-meter) RG-58 A/U (or equivalent) Low-Loss RF Cable, Male TNC and Mini-UHF RF Connectors, Factory-Tuned
AN-025167-011	Antenna, 700/800 MHz GPS Combo, Low-Profile, Rooftop-Mount, 2 dBd Gain, NMO Mounting Base, 15-foot (4.6-meter) RG-58 A/U (or equivalent) Low-Loss RF Cable, Male TNC and Mini-UHF RF Connectors, 16.5-foot (5-meter) RG174/U (or equivalent) GPS RF Cable with Male SMA RF Connector (attached); 2.7 to 3.3 Vdc or 4.8 to 5.2 Vdc Bias; Factory-Tuned
AN-025167-014	Antenna, 700/800 MHz, Standard Rooftop-Mount, 5 dBd Gain, NMO Mounting Base, 15-foot (4.6-meter) RG-58 A/U (or equivalent) Low-Loss RF Cable, Male TNC and Mini-UHF RF Connectors, Factory-Tuned
AN-025167-015	Antenna, 700/800 MHz GPS Combo, Rooftop-Mount, 5 dBd Gain, NMO Mounting Base, 15-foot (4.6-meter) RG-58 A/U (or equivalent) Low-Loss RF Cable, Male TNC and Mini-UHF RF Connectors, 16.5-foot (5-meter) RG174/U (or equivalent) GPS RF Cable with Male SMA RF Connector (attached); 2.7 to 3.3 Vdc or 4.8 to 5.2 Vdc Bias; Factory-Tuned
AN-025187-001 (Cat. No. MAMW-NAN5F)	Antenna, GPS Receive Only, Roof-Mount, 17-foot (5.2-meter) RG174/U (or equivalent) RF Cable with Male SMA RF Connector (attached); 2.7 to 3.3 Vdc or 4.8 to 5.2 Vdc Bias
AN-025187-003 (Cat. No. MAMW-NAN3L)	Antenna, GPS Receive Only, Magnetic-Mount, 17-foot (5.2-meter) RG174/U (or equivalent) RF Cable with Male SMA RF Connector (attached); 2.7 to 3.3 Vdc or 4.8 to 5.2 Vdc Bias
AN-125001-002 (mount) with AN-225001-001 (element)	Antenna, 700/800 MHz, Standard Rooftop-Mount, 3 dBd Gain, NMO Mounting Base, 15-foot (4.6-meter) LMR-195 (or equivalent) Low-Loss RF Cable, Male TNC and Mini-UHF RF Connectors; Factory-Tuned
AN-125001-002 (mount) with AN-225001-005 (element)	Antenna, 700/800 MHz, Standard Rooftop-Mount, 5 dBd Gain, NMO Mounting Base, 15-foot (4.6-meter) LMR-195 (or equivalent) Low-Loss RF Cable, Male TNC and Mini-UHF RF Connectors; Factory-Tuned

Table 4-5: Additional Options and Accessories for M7300 Mobile Radios (Cont.)

PART NUMBER	DESCRIPTION
CA-012349-001 (Cat. No. MAMW-NCL8B)	Cable, M5300/M7300 Option. See page 60.
CA-013671-010	Cable, TIA/EIA-232 Serial Programming (10 feet). See page 63.
CA-013671-020	Cable, TIA/EIA-232 Serial Programming (20 feet). See page 63.
CN-014756	Connector, RF; TNC Male Crimp-Type for RG58U, RG58A/U and RGU400 Coaxial Cable
KT-012350-001 (Cat. No. MAMW-NMK5F)	Kit, GPS Receiver for M5300/M7300
KT-015037	Kit, Front-Mount to Remote-Mount Conversion for M5300/M7300 Radio. Includes CH-721 Conversion Kit, CH-721 Mounting Bracket Kit, CH-721 DC Power Cable, CAN Cable, CAN Terminator, Speaker Cable, Etc.
KT-014494-002	Kit, Remote-Mount to Front-Mount Conversion for M5300/M7300 Radio and CH-721 Control Head.
CD-014027-001	Terminator, CAN; 3-Pin, Straight Body



Mounting of the radio, control head, and/or antenna in ways other than those described in this manual may adversely affect performance, violate FCC rules on RF exposure, and even damage the unit, posing a potential safety hazard.

Table 4-6: Additional Options and Accessories for CH-721 Control Heads

PART NUMBER	DESCRIPTION
CA-009562-006	Cable, CAN; 6 feet, Right-Angle-to-Straight Connectors
CA-009562-030	Cable, CAN; 30 feet, Right-Angle-to-Straight Connectors
CA-009562-090	Cable, CAN; 90 feet, Right-Angle-to-Straight Connectors
CA-009562-250	Cable, CAN; 250 feet, Right-Angle-to-Straight Connectors
CA-011854-001	Cable, CH-721 Option
CA-104861	Cable, CH-721 Programming
MAMROS0075-N1210	Cable, DC Power; 12-AWG, 10-Foot, Straight Connector
MAMROS0075-N1220	Cable, DC Power; 12-AWG, 20-Foot, Straight Connector
MAMROS0075-R1210	Cable, DC Power; 12-AWG, 10-Foot, Right-Angle Connector
MAMROS0075-R1220	Cable, DC Power; 12-AWG, 20-Foot, Right-Angle Connector
MACDOS0012	Kit, Control Head Pedestal Mounting. Includes Pedestal Mount and Mounting Screws
MACDOS0013-CN004	Kit, Speaker; 20-Watt (Includes 6-Inch Cable MAMROS0034-NN006 (Straight Connector))
MC-101616-040	Microphone, Standard with Conxall Flush-Mount 45-Degree Connector (Included with catalog number MAMW-NMC7Z)
MC-101616-041 (See footnote ⁴ .)	Microphone, Standard with Conxall Flush-Mount 90-Degree Connector (Included with catalog number MAMW-NMC7Z)
MC-103334-040	Microphone, DTMF with Conxall Flush-Mount 45-Degree Connector (Included with catalog number MAMW-NMC9C)
MC-103334-041 (See footnote ⁴ .)	Microphone, DTMF with Conxall Flush-Mount 90-Degree Connector (Included with catalog number MAMW-NMC9C)
MC-103334-050	Microphone, Noise-Canceling with Conxall Flush-Mount 45-Degree Connector (Included with catalog numbers MAMW-NMC9D)
MC-103334-051 (See footnote ⁴ .)	Microphone, Noise-Canceling with Conxall Flush-Mount 90-Degree Connector (Included with catalog numbers MAMW-NMC9D)
344A4678P1	Microphone Hanger. (Included with catalog numbers MAMW-NMC7Z, MAMW-NMC9C and MAMW-NMC9D)
CD-014027-001	Terminator, CAN; 3-Pin, Straight Body
MACDOS0010	Terminator, CAN; 3-Pin, Right-Angle Body

⁴ As of the publication of this manual, microphones with 90-degree connectors (sometimes called “straight connectors”) are not available. See Section 3.3 for additional information.

5 PLANNING THE INSTALLATION

5.1 GENERAL INFORMATION

Figure 5-1 on page 24 illustrates a typical front-mount radio installation, and Figure 5-2 on page 24 illustrates a typical remote-mount radio installation. Before starting, plan the installation carefully so it will meet the following requirements:

- The installation is safe for the operator and passengers within the vehicle.
- The equipment is installed away from the airbag deployment areas.
- The installation allows for convenient access by the operator, as applicable (i.e., the control head).
- The equipment is protected from water damage.
- The installation is neat and allows easy service access.
- The mobile radio is mounted in a location assuring the vehicle occupant's safety and out of the way of passengers and auto mechanics.



A professional radio installer should perform the installation!

5.2 TOOLS REQUIRED

The following tools are recommended to complete the installation. Where specific vendor names and model or part numbers are given, equivalent substitutes may be used:

- Non-Insulated Crimp Tool: Thomas & Betts WT-111-M
- Insulated Terminal Crimp Tool: Klein 1005
- Fuse Holder Crimp Tool: Thomas & Betts – WT-112M or California Terminal Products No. 1250 or Channelock No. 909
- 3-Blade Coax Cable Stripper for RG-58 Cable similar to Tyco Electronics 1490490-1 (includes blades)
- Ratcheting Hex-Crimp Tool for 50-Ohm TNC and BNC RF Connectors and RG-58 Cable similar to Tyco Electronics 58433-2 (includes Crimper 354940-1 and Die Set 58436-1) or Emerson Network Power 24-9960P
- Non-Metallic Fish Tape, 25-Foot: Klein-Lite 50156
- Various Socket and Driver Sets
- Soft-Jaw Pliers: Tessco 450520 or equivalent
- Phillips-Head Screwdrivers, #1 and #2
- Flat-Blade Screwdrivers, #1 and #2
- 4-Millimeter Hex Key Wrench
- $\frac{1}{8}$ -Inch Hex Key Wrench (Allen Wrench)
- Two $\frac{5}{16}$ -Inch Combination or Open-End Wrenches (Needed for GPS Receiver Option)
- $\frac{3}{4}$ -Inch Hole Saw with Depth Protection: Ripley HSK 19 or Antenex HS34
- Clutch-Type Cordless Drill with Drill Bits and Driver Bits
- Deburring Tool (for $\frac{3}{8}$ -inch and smaller holes)
- Flush-Cut and Large Wire Cutters
- Various Fasteners (e.g., machine screws and nuts, Tek screws, etc.)
- Tie Wraps: 6-inches or larger



A separate list of test equipment is included in Section 14.2 on page 69.

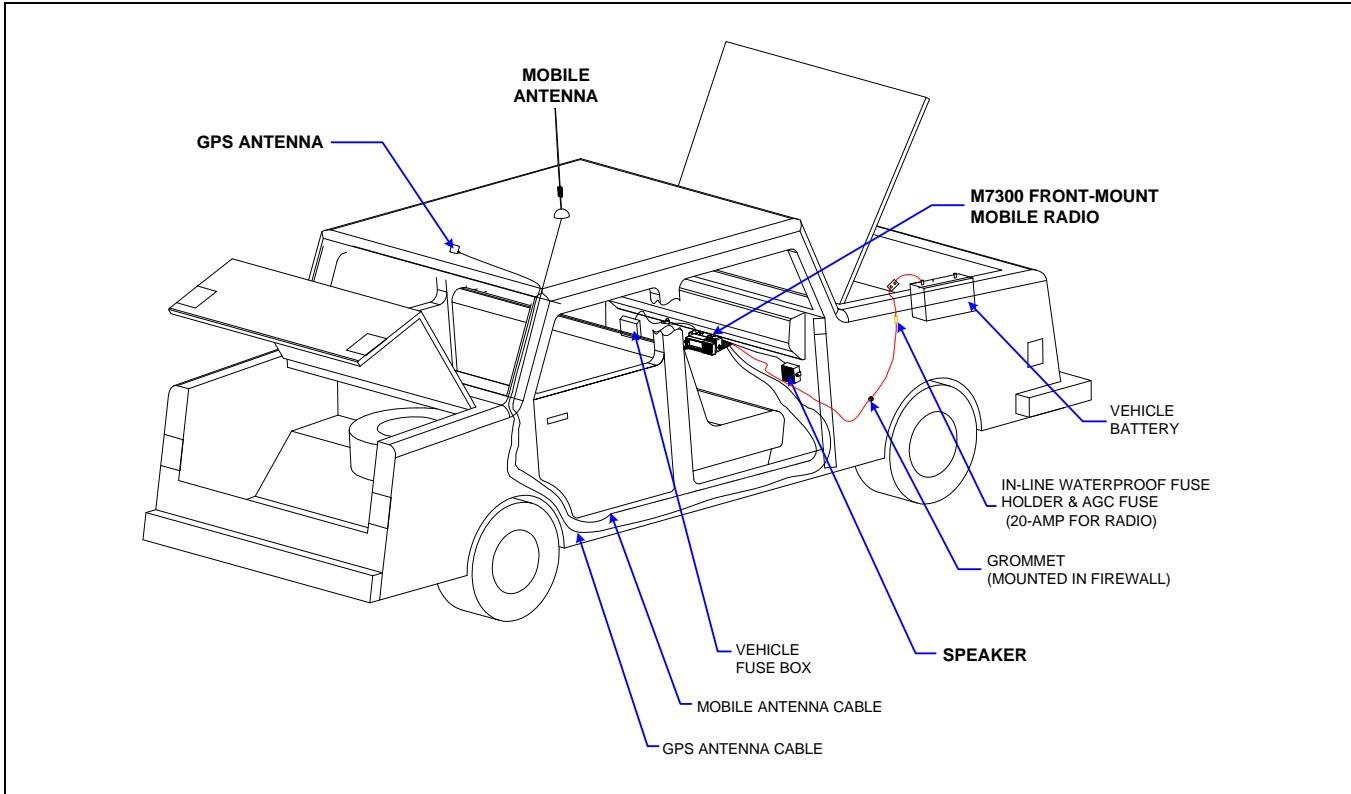


Figure 5-1: Typical Front-Mount Mobile Radio Installation in a Standard Passenger Vehicle

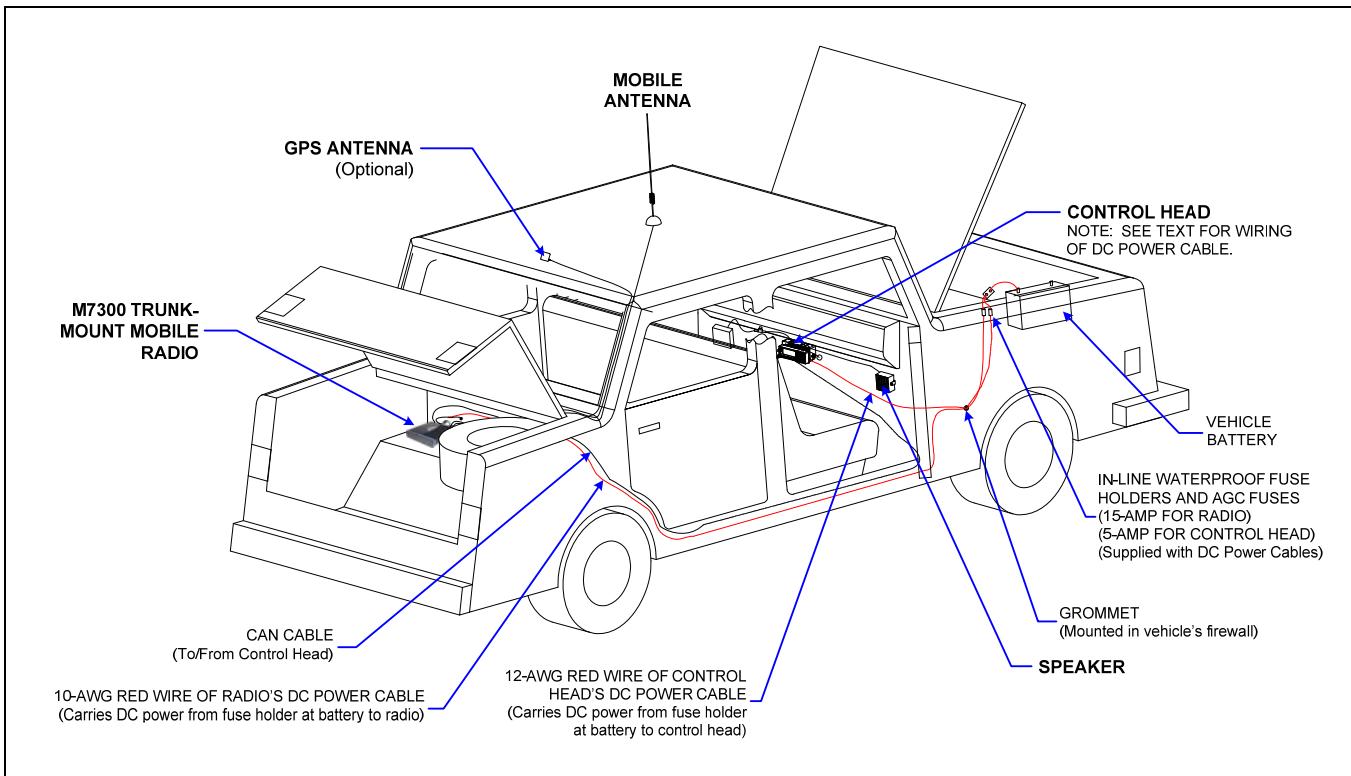


Figure 5-2: Typical Remote-Mount Mobile Radio Installation in a Standard Passenger Vehicle

FRONT VIEWS

Front-Mount M7300 Mobile Radio
(With Scan Control Head)



Remote-Mount M7300 Radio



REAR VIEW (Enlarged)

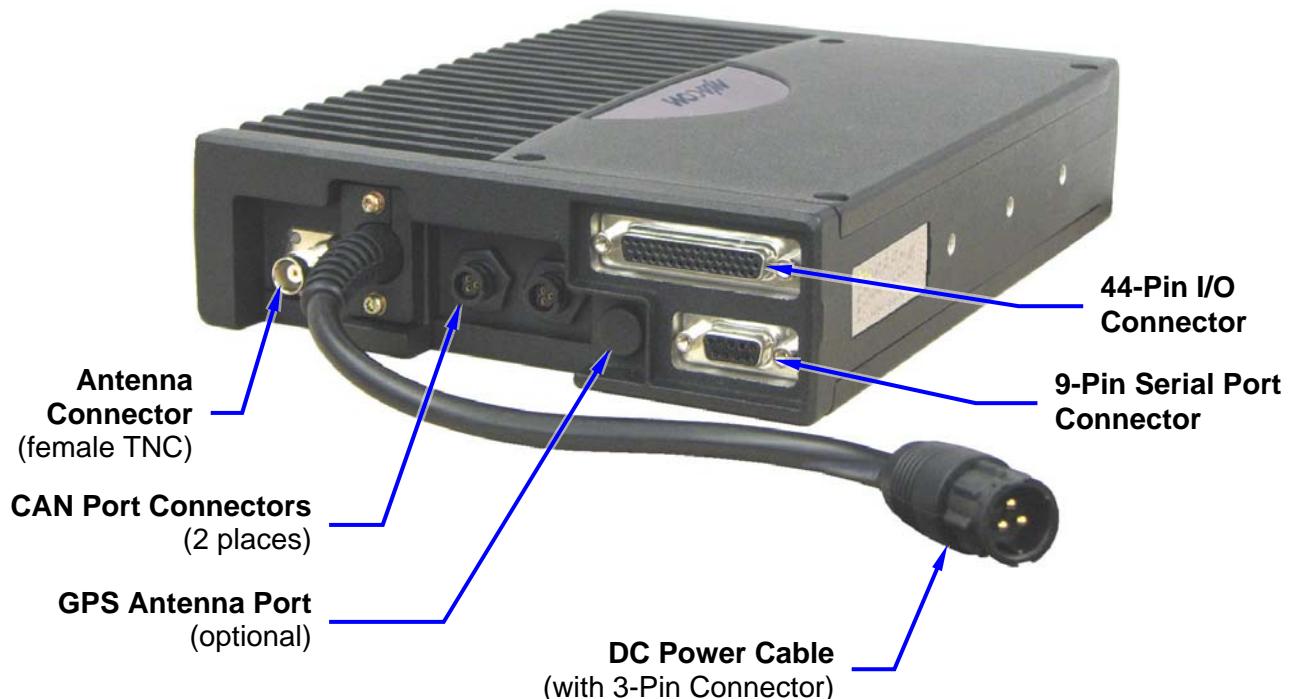


Figure 5-3: M7300 Front-Mount and Remote-Mount Mobile Radios — Front and Rear Views

5.3 LOCATING COMPONENTS

Plan the mounting locations of all components (radio, control head, antenna, and cables) and determine the routes for all wiring and cables. Particularly consider the connection of the radio for planning purposes.

- Determine the customer's preferences, if any, for location of components. Comply with these preferences as long as they are consistent with safety recommendations and guidelines presented in this manual, and other generally accepted professional radio installation practices.
- For a front-mount installation, the radio is typically located under the vehicle's dash panel. However, it may be mounted above the dash, or at some other location per customer requirements, available space, and/or mounting surface strength. Radio and control head dimensions are listed in Section 2.1 on page 12. As noted in that section, these dimensions do not include space required at the rear of the radio for cables. Several inches of clearance space is required.
- For a remote-mount radio installation, the radio is typically located in the motor vehicle's trunk, or some other preferably unoccupied section in a vehicle, such as a fire truck's equipment shelf, and the control head is typically located under the vehicle's dash panel. Radio and control head dimensions are listed in Section 2.1 on page 12. As noted in that section, these dimensions do not include space required at the rear of the radio and control head for cables. Several inches of clearance space is required at the back of the control head, and at least six (6) inches is recommended at the back of the radio. In addition, several inches of clearance space is required at each side of the radio for access to the screws that secure the radio to its mounting bracket.
- When selecting a mounting location, verify sufficient clearance behind the radio can be maintained so cables will not be stressed, crushed, twisted, or bent at severe angles. This also applies to the control head in a remote-mount radio installation. Also, the front and sides of the units must have clearance for air circulation, access to mounting screws, mounting hardware, etc.
- Verify the drilling of holes and the insertion of screws will not damage or interfere with any existing vehicle components (for example, a fuel tank, fuel lines, the transmission housing, etc.), or any existing vehicle wiring.
- For antenna location and installation-related information, refer to Section 6.



The radio must be kept out of direct sunlight and away from heat sources. Adequate free-air ventilation must be provided to its rear fins. The radio will automatically reduce its transmit RF output power when its ambient temperature exceeds approximately +140° Fahrenheit (+60° Celsius).



All cables should have a service loop near each connector end. Do not bend the cables at severe angles near the connector end. Above all, after all components are installed, verify no cable is under any tension. Failure to do so may lead to damaged cables, causing intermittent radio operation or complete radio failure.

6 ANTENNA INSTALLATION


6.1 ANTENNA MOUNTING LOCATIONS



At this time, review all information presented in the REGULATORY AND SAFETY INFORMATION section of this manual (see page 6). A transmitting antenna must be installed in accordance with the guidelines presented in the REGULATORY AND SAFETY INFORMATION section. Use Table 1-1 on page 8 and Figure 6-1 below as a guide for determining the best possible mounting configuration/location in order to reduce human exposure to radio frequency (RF) electromagnetic energy during transmit mode.

Antennas must be mounted in one of three possible locations on the vehicle. Figure 6-1 shows the recommended locations and antenna part numbers. Also, see Table 4-5 for additional information. Always follow the antenna manufacturer's instructions when mounting an antenna.

TOP VIEW OF A TYPICAL VEHICLE

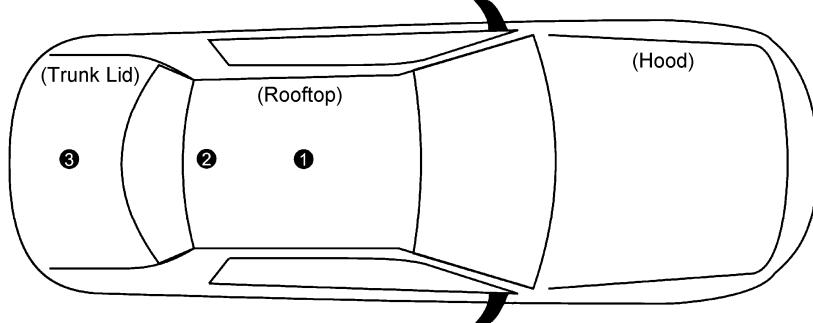

ANTENNA PART NO.*	ANTENNA DESCRIPTION	LOCATION(S)		
		③	②	①
AN-025167-001	700/800 MHz Standard Rooftop-Mount, 3 dBd Gain	✓		✓
AN-025167-002	700/800 MHz Elevated-Feed Rooftop-Mount, 3 dBd Gain	✓	✓	✓
AN-025167-004	700/800 MHz GPS Combo Rooftop-Mount, 3 dBd Gain	✓		✓
AN-025167-005	700/800 MHz GPS Combo Elevated-Feed Rooftop-Mount, 3 dBd Gain	✓	✓	✓
AN-025167-006	700/800 MHz Magnetic-Mount, 3 dBd Gain	✓		
AN-025167-010	700/800 MHz Low-Profile Rooftop-Mount, 2 dBd Gain	✓		✓
AN-025167-011	700/800 MHz GPS Combo Low-Profile Rooftop-Mount, 2 dBd Gain	✓	✓	✓
AN-025167-014	700/800 MHz Standard Rooftop-Mount, 5 dBd Gain			✓
AN-025167-015	700/800 MHz GPS Combo Rooftop-Mount, 5 dBd Gain			✓
AN-125001-002 (mount) with AN-225001-001 (element)	700/800 MHz Standard Rooftop-Mount, 3 dBd Gain	✓		✓
AN-125001-002 (mount) with AN-225001-005 (element)	700/800 MHz Standard Rooftop-Mount, 5 dBd Gain			✓
AN-025187-001	GPS Receive Only, Roof-Mount	✓	✓	
AN-025187-003	GPS Receive Only, Magnetic-Mount	✓	✓	

* See Table 4-5 on page 20 for the respective antenna catalog numbers.

Figure 6-1: Recommended Antenna Mounting Locations with Antenna Part Numbers

6.1.1 Direct Center or Center-Rear of Rooftop

The center of the vehicle's roof is the best location for a rooftop-mount antenna (location ❶ in Figure 6-1). For optimal performance, the mounting area under the antenna must be a flat with a minimum radius of six (6) inches of metal ground plane. It must be located directly in the center of the roof to minimize human exposure to RF electromagnetic energy. Other obstructions such as a light bar or another antenna may prevent the antenna from being mounted in the direct center of the roof. In this case, the antenna should be mounted a minimum of one foot away from and behind the obstruction but in the middle of the roof with respect to the left and right sides of the vehicle (location ❷ in Figure 6-1).

6.1.2 Center of Trunk Lid

Certain vehicles do not allow for the antenna to be placed in the center or center-rear of the roof. In this case, the next best location for the antenna is in the direct center of the trunk lid (location ❸ in Figure 6-1). In this case, an elevated-feed-point antenna is recommended. Although this type of antenna does not require a metal ground plane, it must be located directly in the center of the trunk lid to minimize human exposure to RF electromagnetic energy.

6.2 ANTENNA INSTALLATION PROCEDURE



NOTE

An antenna **must** be installed before completing the radio installation.

6.2.1 Install the Mobile Antenna

Table 4-5 (page 20) and Figure 6-1 (page 27) list the mobile radio antennas available for use with the radio. As presented in the previous section, various mounting locations exist. Optimal performance is achieved via a rooftop antenna mounted in the direct center of the motor vehicle's roof. The following mobile antenna installation procedure is recommended:

1. Once the mounting location is selected, refer to the antenna manufacturer's mounting and testing instructions included with the antenna kit for installation guidance. Install the antenna in accordance with these instructions. If necessary, contact the Technical Assistance Center. See page 17 for TAC contact information.



WARNING

The antenna cable should never be cut to a shorter length. Instead, excess cable must be tied and stowed. This not only prevents the antenna from radiating above its intended or configured power, but it also allows for future installation considerations such as a relocation of the mobile radio within the vehicle. Installations requiring longer cables are treated as custom and separately specified.

2. Route the cable from the antenna base to the location of where the mobile radio will be installed. Remove headliner panel, interior panels, etc., as necessary. The cable must be kept out of casual contact from persons within the vehicle. Tie and stow the cable as necessary to protect it from possible chafing.
3. Using an appropriate crimp tool, crimp the supplied TNC RF connector to the end of the antenna cable. For crimping instructions, see Figure 6-2 or the instructions supplied with antenna.

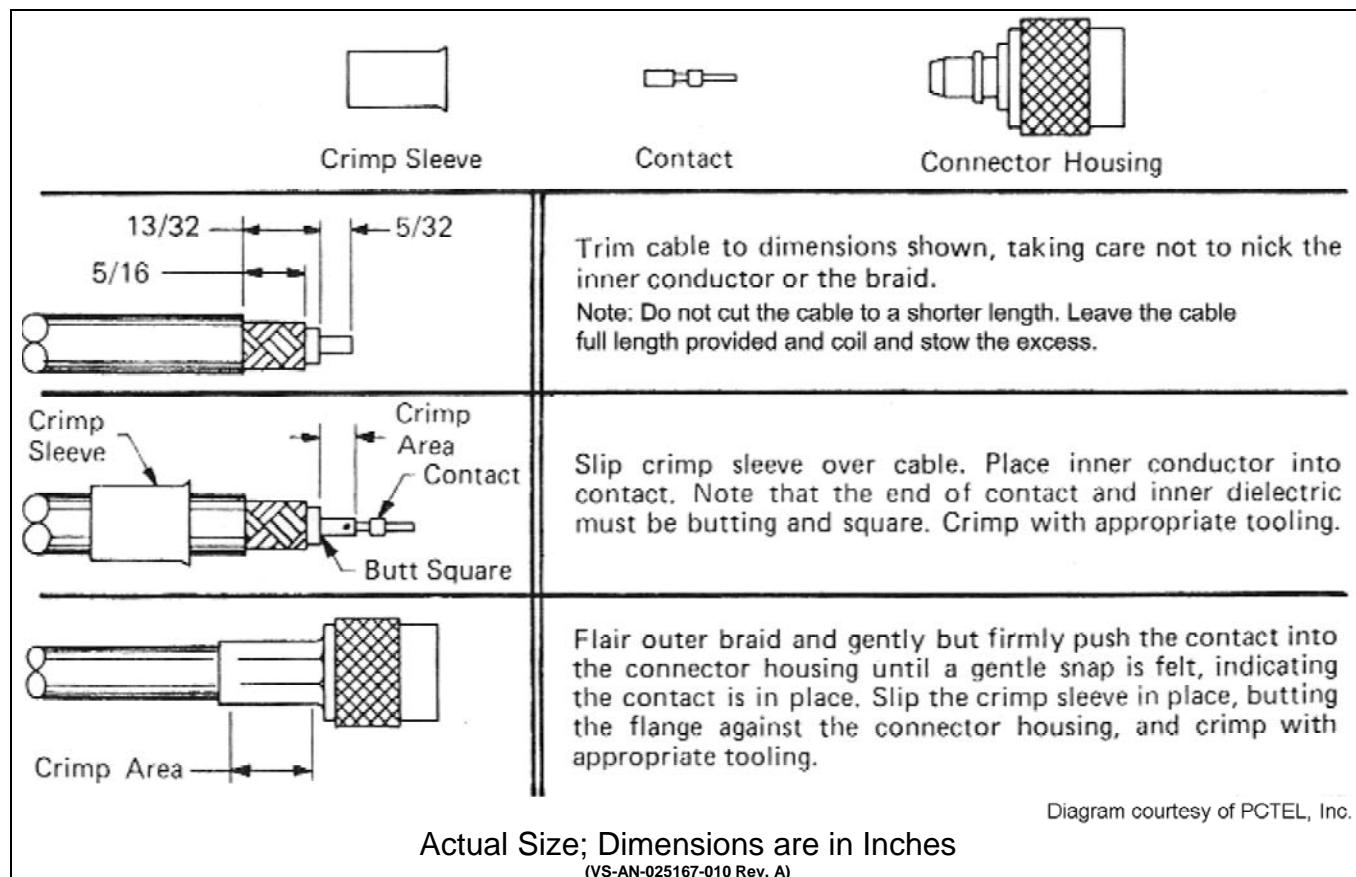


Figure 6-2: Crimping Instructions for TNC RF Connector

4. The antenna cable is connected to the radio's TNC receptacle-type (female) RF connector per a procedure presented later in this manual. The cable and its TNC connector must be protected from damage, dirt, and/or metal shavings which may be generated during the mechanical and electrical installation of the radio. Temporarily tying the connector and cable-end within a small plastic bag is recommended.

6.2.2 Install the GPS Antenna (Required Only if Radio has GPS Receiver Option)

If the M7300 radio is equipped with the GPS receiver option, the GPS receiver requires connection to an externally-mounted GPS antenna. The GPS antenna must be kept at least six (6) inches away from any other antenna mounted on the vehicle and it must have at least six inches of surface ground plane beneath it. The following antenna installation procedure is recommended:



A combination ("combo") antenna kit includes a GPS antenna built into the base of the mobile antenna. Refer to Table 4-5 (page 20) and/or Figure 6-1 (page 27) for available combo antennas.

1. Once the mounting location is selected, refer to the antenna manufacturer's mounting and testing instructions for installation guidance. Install the antenna in accordance with these instructions. If necessary, contact the Technical Assistance Center. See page 17 for TAC contact information. **Do not alter the GPS antenna cable length; tie and stow excess cable as necessary.**

2. Route the cable from the antenna base to the location of where the radio will be installed. Remove headliner panel, interior panels, etc., as necessary. The cable must be kept out of casual contact from persons within the vehicle. Tie and stow it as necessary to protect it from possible chafing.
3. The antenna cable is connected to the radio's SMA receptacle-type (female) RF connector per a procedure presented later in this manual. The cable and its (male) SMA connector must be protected from damage, dirt, and/or metal shavings which may be generated during the mechanical and electrical installation of the radio. Temporarily tying the connector and cable-end within a small plastic bag is recommended.

7 FRONT-MOUNT RADIO INSTALLATION



This section includes detailed instructions for mechanically installing and wiring a front-mount M7300 mobile radio. For remote-mount M7300 mobile radio installation procedures, refer to Section 8 which begins on page 39.

7.1 MOUNTING THE FRONT-MOUNT RADIO

The Mounting Bracket Kit for the front-mount M7300 mobile radio includes a heavy-gauge steel U-shaped mounting bracket. The radio should be attached to a mounting surface using this bracket. The bracket can be mounted above or below the radio. Kit contents are shown in Figure 7-2, and bracket dimensions are shown in Figure 7-3.

Both the radio and the mounting bracket have multiple holes in both sides for adjusting the radio within the bracket. The design allows for both front-to-rear tilting of the radio within the bracket for best viewing angle, and a front-to-rear position offset. The radio has six (6) threaded mounting holes, three (3) per side, and the mounting bracket has ten (10) corresponding holes, five (5) per side. The radio must be secured to the bracket using at least four of the six M5 socket-head screws included in the Mounting Bracket Kit (2 screws per side).

Typically, the radio is front-to-rear centered within the bracket. However, it can be front-to-rear offset by approximately 2 inches (5.1 centimeters), if required. Also, the radio can be positioned straight in the bracket (i.e., parallel with the bottom surface of the bracket), or it can be tilted up or down at an angle of between approximately 10 to 20 degrees. When positioned straight and centered front-to-rear within the bracket, the radio extends approximately 2.5 inches (6.4 centimeters) from the front and rear edges of the bracket. In the rear, additional clearance must be included for cables. The area directly at the front of the radio must be completely clear of all objects (e.g., gear shift, other radio equipment, etc.) so the operator can easily access and visualize the radio's control head.

The mounting bracket must be attached to a secure metal surface that meets or exceeds the minimum 1/16-inch-thick steel sheet metal requirement in accordance with the following **WARNING**. For example, it can be attached directly to the bottom of the dash if the gauge of the sheet metal is high and the surface is firm and flat, or it can be attached to the transmission hump, etc., if a mounting wedge (not included) is utilized. The front-mount M7300 radio weighs approximately 9.2 pounds (4.17 kilograms).



At a minimum, the mounting surface should be 16-gauge (approximately 1/16-inch thick) steel sheet metal. Mounting to plastic or other material with low tensile and shear strength could lead to an unsafe and/or failed mounting condition, turning the radio and its mounting bracket into a projectile during a high-shock incident such as a motor vehicle accident. If the selected mounting surface does not meet the minimum 16-gauge steel sheet metal requirement, the surface should be reinforced with a metal backing plate (not supplied) or it should be reinforced using some other approved mounting method.



In addition to improving safety of the installation, firm mounting also prevents unreasonable vibration that could damage the radio, adversely affect transceiver performance and/or cause its cable connections to loosen. An improperly mounted M7300 radio may experience degradation in the quality of voice and data communications.

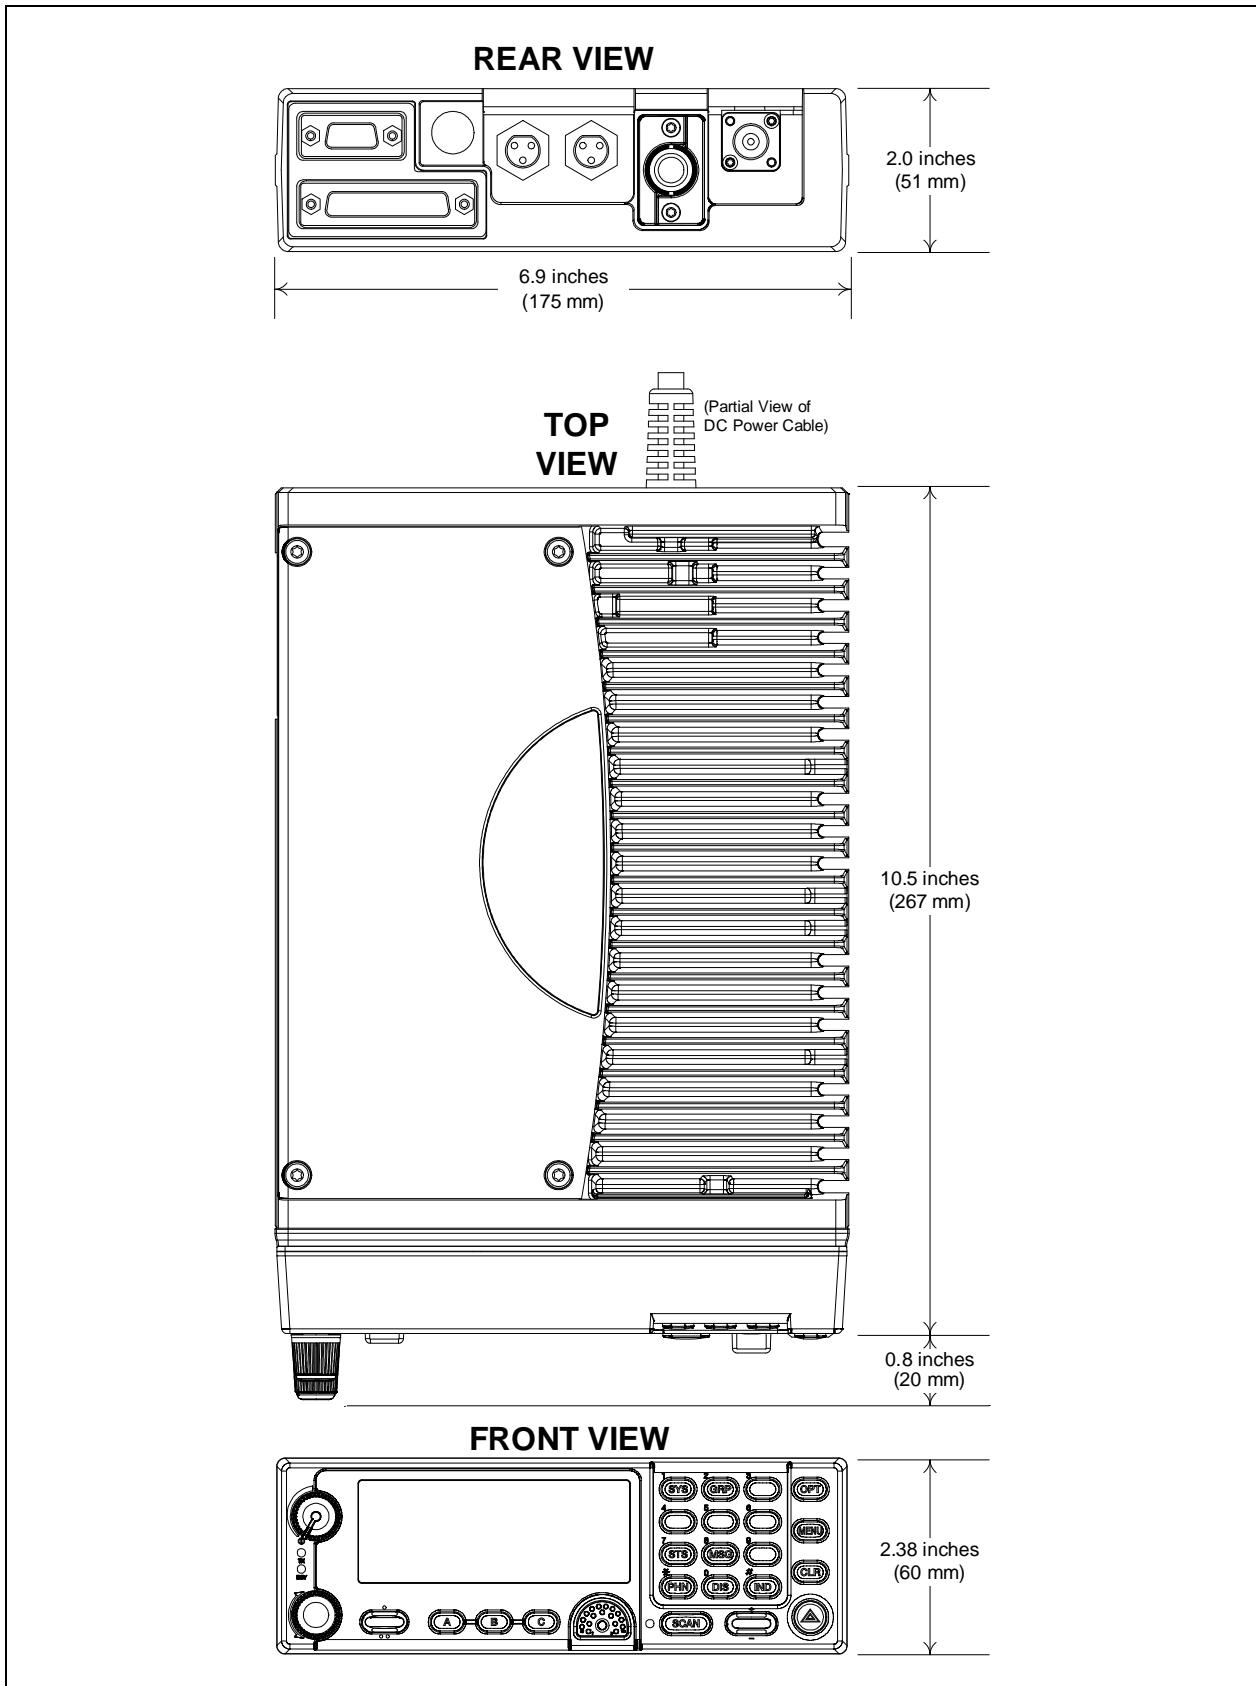


Figure 7-1: Front-Mount M7300 Radio Dimensions

7.1.1 **Mounting Bracket Installation**

The front-mount M7300 radio's mounting bracket is included with the Front-Mount Mounting Bracket Kit KT101533V1. Kit contents are shown in Figure 7-2. This kit is Item 1 listed in Table 4-3 (page 19).

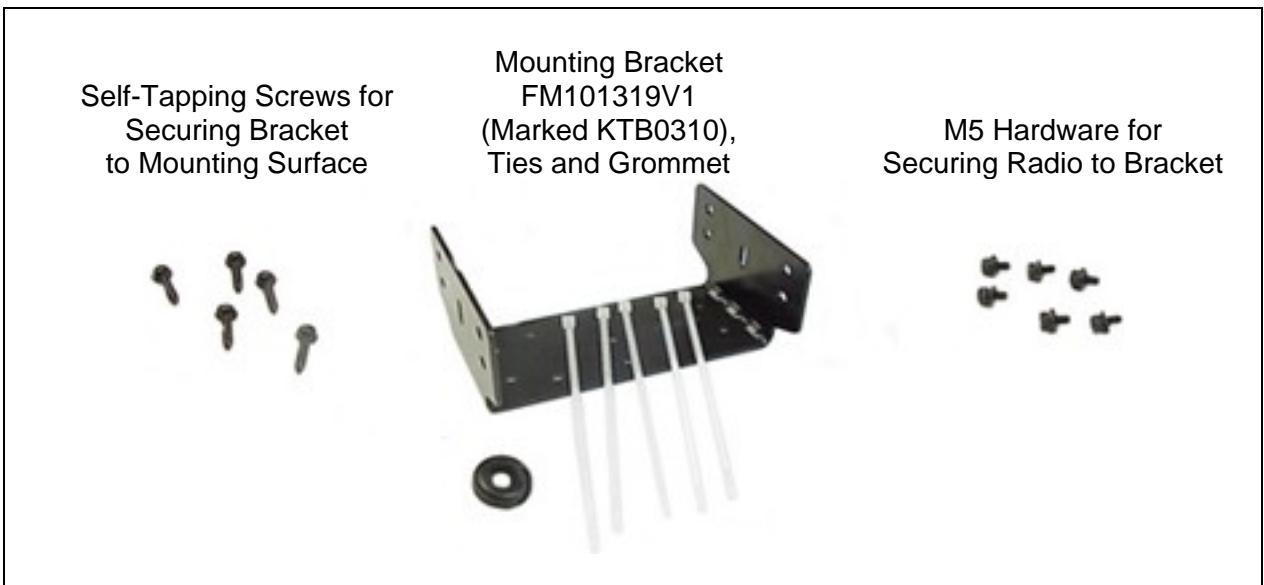



Figure 7-2: Front-Mount Mounting Bracket Kit KT101533V1

When selecting a mounting location for the radio, verify sufficient clearance can be maintained around the radio for installation and service access. A minimum clearance of approximately 4 inches (10 centimeters) is recommended at the rear, left and right sides of the radio. As previously stated, the area directly at the front of the radio must be completely clear of objects so the operator can easily access and visualize the radio's control head.

As illustrated in Figure 7-3, the bracket is both left-to-right and front-to-rear symmetrical. It has eleven (11) holes for securing it to a mounting surface. At least four (4) of these holes must be used to secure the bracket to the mounting surface. Five 20-millimeter-long self-tapping screws are included in the Mounting Bracket Kit for this purpose. However, some other type of hardware (not supplied) may be used, such as #10-32 stainless-steel self-locking hardware (i.e., machine screws with washers and locking nuts), or self-drilling screws. Self-drilling screws such as "TEK" screws do not require drilling of a pilot hole prior to installation. Do not use common self-threading sheet metal screws because they will loosen over time with vehicle vibrations.

The following mounting procedure is recommended:

1. Determine the best radio-to-bracket position and angle by test-fitting the radio into the mounting bracket at the selected vehicle mounting location. Slide the radio between the sides of the bracket and temporarily secure it to the bracket with several of the M5 socket-head screws from the bracket kit. When positioned straight and centered front-to-rear within the bracket, the radio extends approximately 2.5 inches (6.4 centimeters) from the front and rear edges of the bracket. In the rear, additional clearance must be included for cables. The area directly at the front of the radio must be completely clear of all objects (e.g., gear shift, other radio equipment, etc.) so the operator can easily access and visualize the radio's control head.
2. At the rear of the radio, verify sufficient clearance is available for cables and service access.

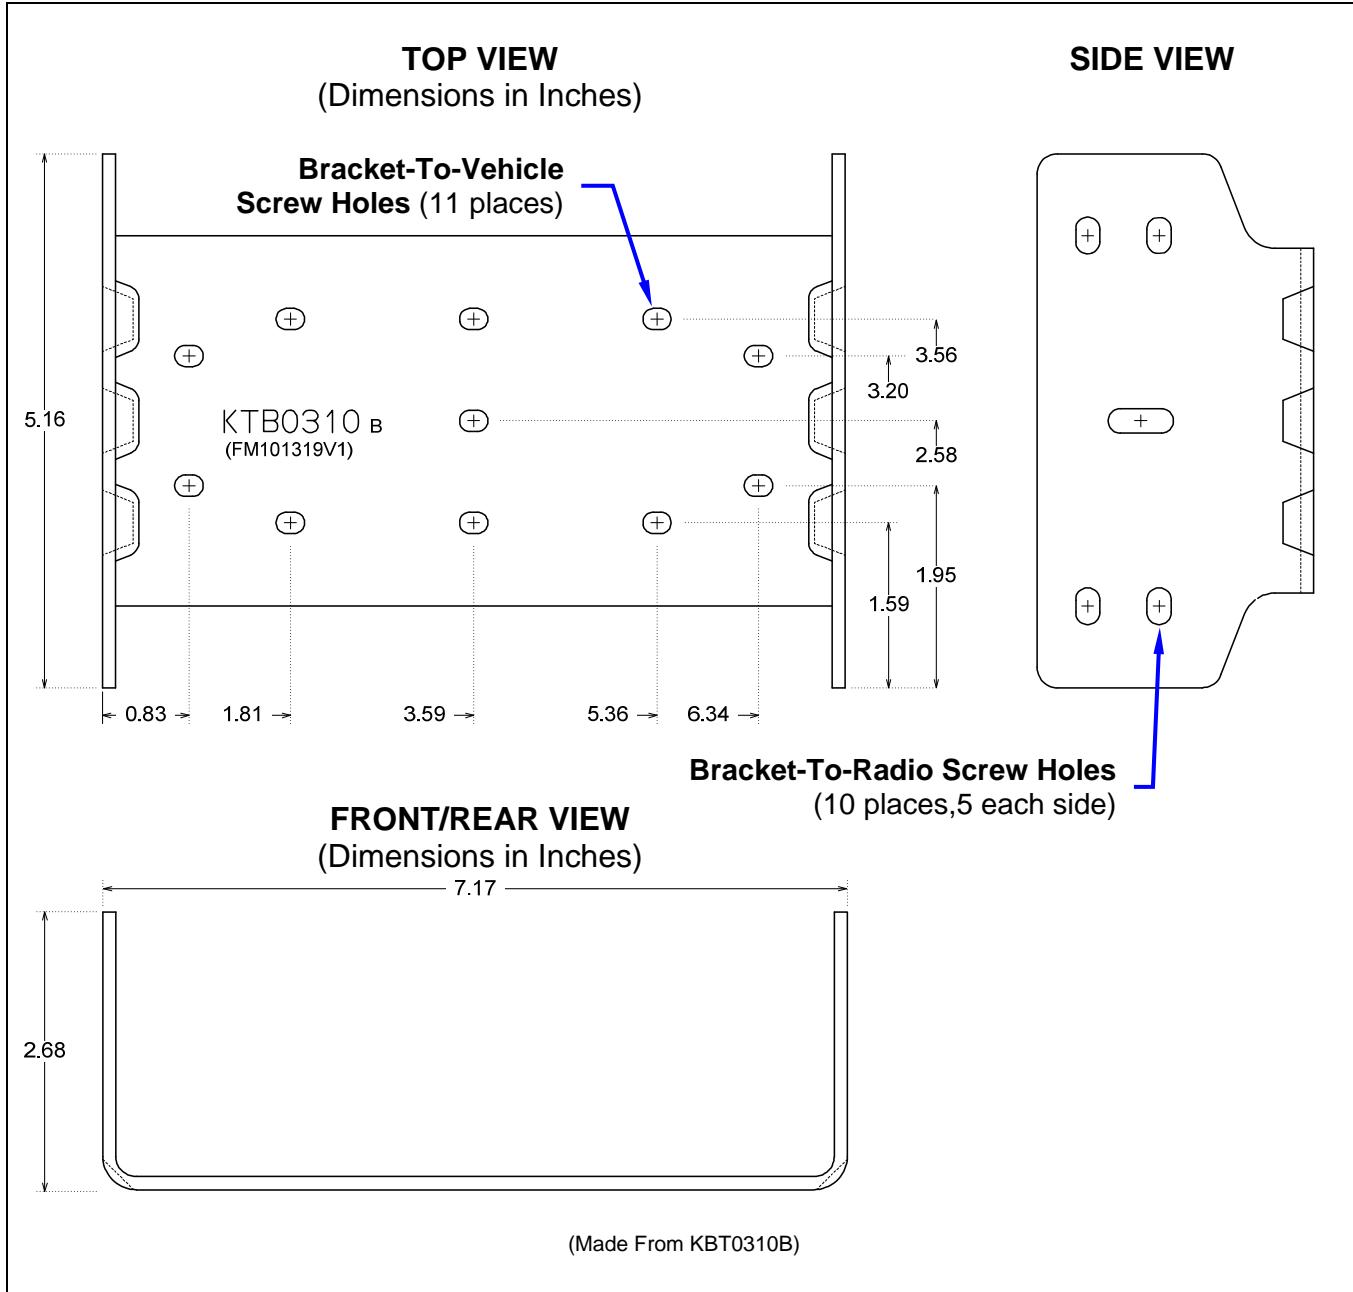

**Figure 7-3: Mounting Bracket FM101319V1 (Marked KTB0310) Dimensions
[for Front-Mount M7300 Mobile Radio (Radio Not Shown)]**

3. If the mounting surface is not flat (such as the top of a transmission hump), construct a suitable mounting wedge as necessary, and attach the wedge to the surface using an approved attachment method. Never mount the bracket directly to a non-flat surface.
4. On the mounting surface, mark the selected location for the bracket, and then remove the radio from the bracket.
5. Clean and remove any foreign material from the mounting surface.

- Using the bracket as a template, and/or the dimensional information shown in Figure 8-3, mark and drill at least four (4) mounting holes into the mounting surface as required per the type of hardware used.



Before drilling holes and/or installing mounting screws, verify these operations will not damage or interfere with any existing vehicle component (the fuel tank, a fuel line, the transmission housing, existing vehicle wiring, etc.). Always check to see how far the mounting screws will extend below the mounting surface prior to installation. Always deburr drilled holes before installing screws.

- Temporarily remove the bracket and deburr all of the newly drilled holes.
- If necessary, apply an approved paint or rust-inhibitor at the holes in the mounting surface.
- Set the bracket back into place.
- Install and tighten the mounting screws/hardware.
- Verify the bracket is firmly secured to the mounting surface. A secure mount prevents unreasonable vibration, which could damage the radio and/or cause its cable connections to loosen.
- If the rear of the radio is easily accessible when the radio is positioned in the selected position within the bracket, it is recommended that the radio be temporarily inserted into the bracket. Otherwise, do not mount the radio into the bracket at this time, because several cable connections must be made at the rear of the radio.

7.1.2 Inserting the Radio into the Mounting Bracket

The radio should now be inserted into the mounting bracket according to this procedure:

- Lay the radio into the mounting bracket with the front of the radio facing in the correct direction (usually towards the rear of the vehicle).
- Secure the radio to the bracket using at least four (4) of the six (6) M5 x 10 mm stainless-steel socket-head screws included with the Mounting Bracket Kit. These screws have captive lockwashers. Kit contents are shown in Figure 7-2. This kit is Item 1 listed in Table 4-3 (page 19).
- Tighten all screws using a 4-millimeter hex key wrench until each lockwasher is fully compressed and the radio is firm and flush in between the brackets.
- Check the mounting area for proper clearance for cable service looping and for air circulation, plus an area to secure and rest the excess cable lengths.



Proper mounting is one factor that ensures optimal radio performance. An improperly mounted radio may experience degradation in the quality of voice and data communications.

7.2 FRONT-MOUNT RADIO'S DC POWER INSTALLATION

7.2.1 Overview of On/Off Power Wiring Configurations

The following power wiring configurations are supported:

- Radio turns on and off automatically with vehicle's ignition switch/key** — This configuration allows the on/off state of the vehicle's ignition switch/key to control the on/off power state of the

radio. The white wire of the radio's DC Power Cable is connected to a fused switched power source, typically identified as vehicle "Accessory" power. This source must switch on (up to positive (+) battery voltage potential) when the vehicle's ignition switch/key turns on, and it must switch off (to near zero volts) when the ignition switch/key turns off. The required fuse rating is 3 amperes. When using this configuration, the on/off/volume control must be left in the on position for automatic power-up/down to function properly.



NOTE In a front-mount M7300 radio installation, to fuse the white wire of the radio's DC Power Cable, a waterproof (HFB type) fuse holder and a 3-amp AGC fuse are included with the cable.

- **Radio turns on and off with a manual switch** — This configuration is used when, for example, the radio must remain on even when the ignition key must be removed from the vehicle and a separate on/off switch is acceptable. The white wire of the radio's DC Power Cable is connected to one side of a manually-controlled switch, and the other side of this switch is connected to unswitched and fused vehicle power. The required fuse rating is 3 amperes. When using this configuration, the on/off/volume control must be left in the on position for automatic power-up/down to function properly.
- **Radio turns on with its on/off/volume control ("hot wired")** — This configuration allows radio on/off power control only via its on/off/volume control. It may be desired if, for example, the radio must remain on even when the ignition key must be removed from the vehicle and a separate on/off switch is not desired and/or not acceptable. The white wire of the radio's DC Power Cable must be connected to unswitched and fused vehicle power. The required fuse rating is 3 amperes.

In all of the above cases, the radio's main DC power input (red wire) must be connected through an in-line fuse to unswitched vehicle DC power. The red wire must be connected to raw battery power (positive battery terminal) via the supplied fuse.

7.2.2 DC Power Cable and Main Fuse Holder Installation

The radio's DC Power Cable has a 3-pin connector, a 20-foot red wire (for the main power connection), a 20-foot white wire (for the switched power source connection), and a 4-foot black wire (for the ground connection). It is supplied with waterproof fuse holders, two AGC-type fuses, and non-insulated ring terminals. The following installation procedures are recommended:

7.2.2.1 Black Wire Connection (Ground Wire)

1. Connect the radio's DC Power Cable to the radio by mating its 3-pin connector to the radio's 3-pin power cable connector as follows: Visually align the key and firmly push and turn the outer locking ring clockwise until it stops. A click will be sensed to confirm proper mating.
2. Prepare to connect the cable's black wire to vehicle ground by locating an area of vehicle metal within approximately two (2) feet of the radio. This surface must have a solid and stable connection to vehicle ground. If not, add grounding strap(s) as necessary.
3. Strip the area of any paint or dirt to expose a bare metal surface, approximately $\frac{3}{4}$ -inch square.
4. Drill a hole in the approximate center of the bare metal surface, and deburr it. A $\frac{3}{8}$ -inch non-insulated ring terminal is supplied with the cable to make this ground connection. Therefore, hole diameter should be appropriate for the utilized grounding screw/bolt size and type used to connect the ring terminal to the bare metal surface. This hardware is not supplied.
5. Cut the black wire to the required length plus some additional length for a service loop, then strip insulation back approximately $\frac{1}{4}$ -inch.

6. Crimp a $\frac{3}{8}$ -inch non-insulated ring terminal (supplied with the cable) to the end of the black wire.
7. Attach the ring terminal and black wire to the bare metal surface using stainless-steel self-locking hardware (i.e., machine screws with washers and locking nuts) or other appropriate hardware to ensure a reliable terminal-to-metal contact. Tighten securely.
8. Apply an approved paint or rust-inhibitor over the remaining exposed bare metal surface and around the ring terminal.

7.2.2.2 Red Wire and Main Fuse Holder Connection (Radio's Main Power Wire)

1. Continue installation of the radio's DC Power Cable by routing its 20-foot 10-AWG red wire to the location of the vehicle's battery (or its main DC bus bar or stud). Remove interior panels, door kick panels, etc., and route the wire through existing channels in the vehicle body as necessary. Protect the wire from possible chafing where necessary. Tie and stow the wire as necessary.



CAUTION

Plan the routing of the 10-AWG red wire carefully, using an existing access hole in the vehicle's firewall if possible. Alternately, drill a new hole approximately $\frac{1}{2}$ -inch in diameter and install a small rubber grommet (one supplied with the bracket kit) to protect the wire from chafing at the hole's sharp metal edge. **To prevent fumes from entering the passenger compartment, this hole/grommet/wire combination must also be sealed with a silicon-based sealer before completing the installation.**



CAUTION

Do not install any wiring or fuse holder over or in the near vicinity of the vehicle's engine. Excessive engine heat can cause permanent damage to these components and can lead to intermittent electrical connection to the battery.



WARNING

Before making connections to the battery's positive post, carefully disconnect the battery's negative (ground) cable(s). This will prevent tools or other metallic objects which come in contact with the battery's positive terminal from shorting to vehicle ground, causing sparks or even a fire or an explosion! When disconnecting the negative cable(s), cover/insulate the positive post(s) if it is not already so a tool cannot short between the posts. Some vehicles, such as those with diesel engines have more than one battery; in this case, disconnect the negative cables at all batteries.

Radio and control head fuses should not be installed until all wiring is complete. This will prevent the radio from powering up prematurely and/or causing an in-rush of current that could lead to shorting of the battery, sparks, or even fire.

2. Obtain one of the waterproof (HFB type) fuse holders included with the DC Power Cable.
3. **Observe and follow the previously presented WARNING!**
4. Cut the red wire to the required length for connection to the battery's positive (+) battery terminal (or the main DC bus bar or stud).
5. Prepare to splice the waterproof fuse holder into the red wire by cutting it again, at approximately three (3) to six (6) inches from the end.
6. Strip all three (3) wire ends back approximately $\frac{3}{8}$ -inch, place a fuse holder shell on each wire, and securely crimp a fuse holder terminal to each wire end. Before crimping, verify fuse holder shells are oriented in the correct directions (i.e., with each large end towards the wire end).

7. Label this fuse holder and red wire appropriately (e.g., “M7300 Main Power: 15-AMP FUSE”).
8. **Do NOT install a fuse into the fuse holder at this time.**
9. Crimp an appropriate electrical terminal to the short red wire. A corrosion-resistant $\frac{3}{8}$ -inch ring terminal is included with the cable for this purpose, but another size corrosion-resistant terminal type (not supplied) may be used if required.
10. Connect the ring terminal directly to the battery’s positive post (or if present, to a stud on the battery’s main/non-switched power distribution terminal block).
11. Continue with the speaker installation procedures presented in Section 9.1 on page 58.



A front-mount M7300 mobile radio installation may be equipped with additional CH-721 control heads in a multi-head installation. In this case, refer to Section 8.3 (begins on page 48) for control head installation procedures.

8 REMOTE-MOUNT RADIO INSTALLATION



NOTE

This section includes detailed instructions for mechanically installing and wiring a remote-mount M7300 mobile radio. For front-mount M7300 mobile radio installation procedures, refer to Section 7 which begins on page 31.

8.1 MOUNTING THE REMOTE-MOUNT RADIO

This section provides details on mounting a remote-mount M7300 mobile radio in the vehicle. Control head installation procedures are included in Section 8.3 which begins on page 48.

As an assembled unit, the radio weighs approximately 8 pounds (3.63 kilograms). The preferred mounting of the radio is on top of a firm, flat surface. Radio dimensions are shown in Figure 8-1.



NOTE

Installation Kit MAMW-NZN7R (contents listed in Table 4-4 on page 19) contains the most complete set of materials for installing the remote-mount M7300 mobile radio. Therefore, the following instructions make repeated reference to this kit. Item numbers given in parenthesis refer to items in the kit.



NOTE

Prior to beginning the installation, verify the radio has the proper version of software and verify it has been configured properly for customer usage. Consult with the radio system network administration personnel as necessary.



CAUTION

Though generally mounted in a trunk or remote location, the remote-mount mobile radio must be kept away from heat sources. Mounting it in a location which is out of direct sunlight is recommended but not required. Adequate ventilation space must be provided to the side fins. The radio reduces its RF output power when its ambient temperature exceeds approximately +140° Fahrenheit (+60° Celsius).



WARNING

At a minimum, the mounting surface should be 16-gauge (approximately 1/16-inch thick) steel sheet metal. Mounting to plastic or other material with low tensile and shear strength could lead to an unsafe and/or failed mounting condition, turning the radio and its mounting bracket into a projectile during a high-shock incident such as a motor vehicle accident. If the selected mounting surface does not meet the minimum 16-gauge steel sheet metal requirement, the surface should be reinforced with a metal backing plate (not supplied) or it should be reinforced using some other approved mounting method.



CAUTION

Before drilling holes and/or installing mounting screws, verify these operations will not damage or interfere with any existing vehicle component (the fuel tank, a fuel line, the transmission housing, existing vehicle wiring, etc.). Always check to see how far the mounting screws will extend below the mounting surface prior to installation. Always deburr drilled holes before installing screws.

8.1.1 Mounting Bracket Installation

The remote-mount radio's mounting bracket is included with the Remote-Mount Mounting Bracket Kit KT23117. Kit contents are shown in Figure 8-2. This kit is Item 1 listed in Table 4-4 (page 19).

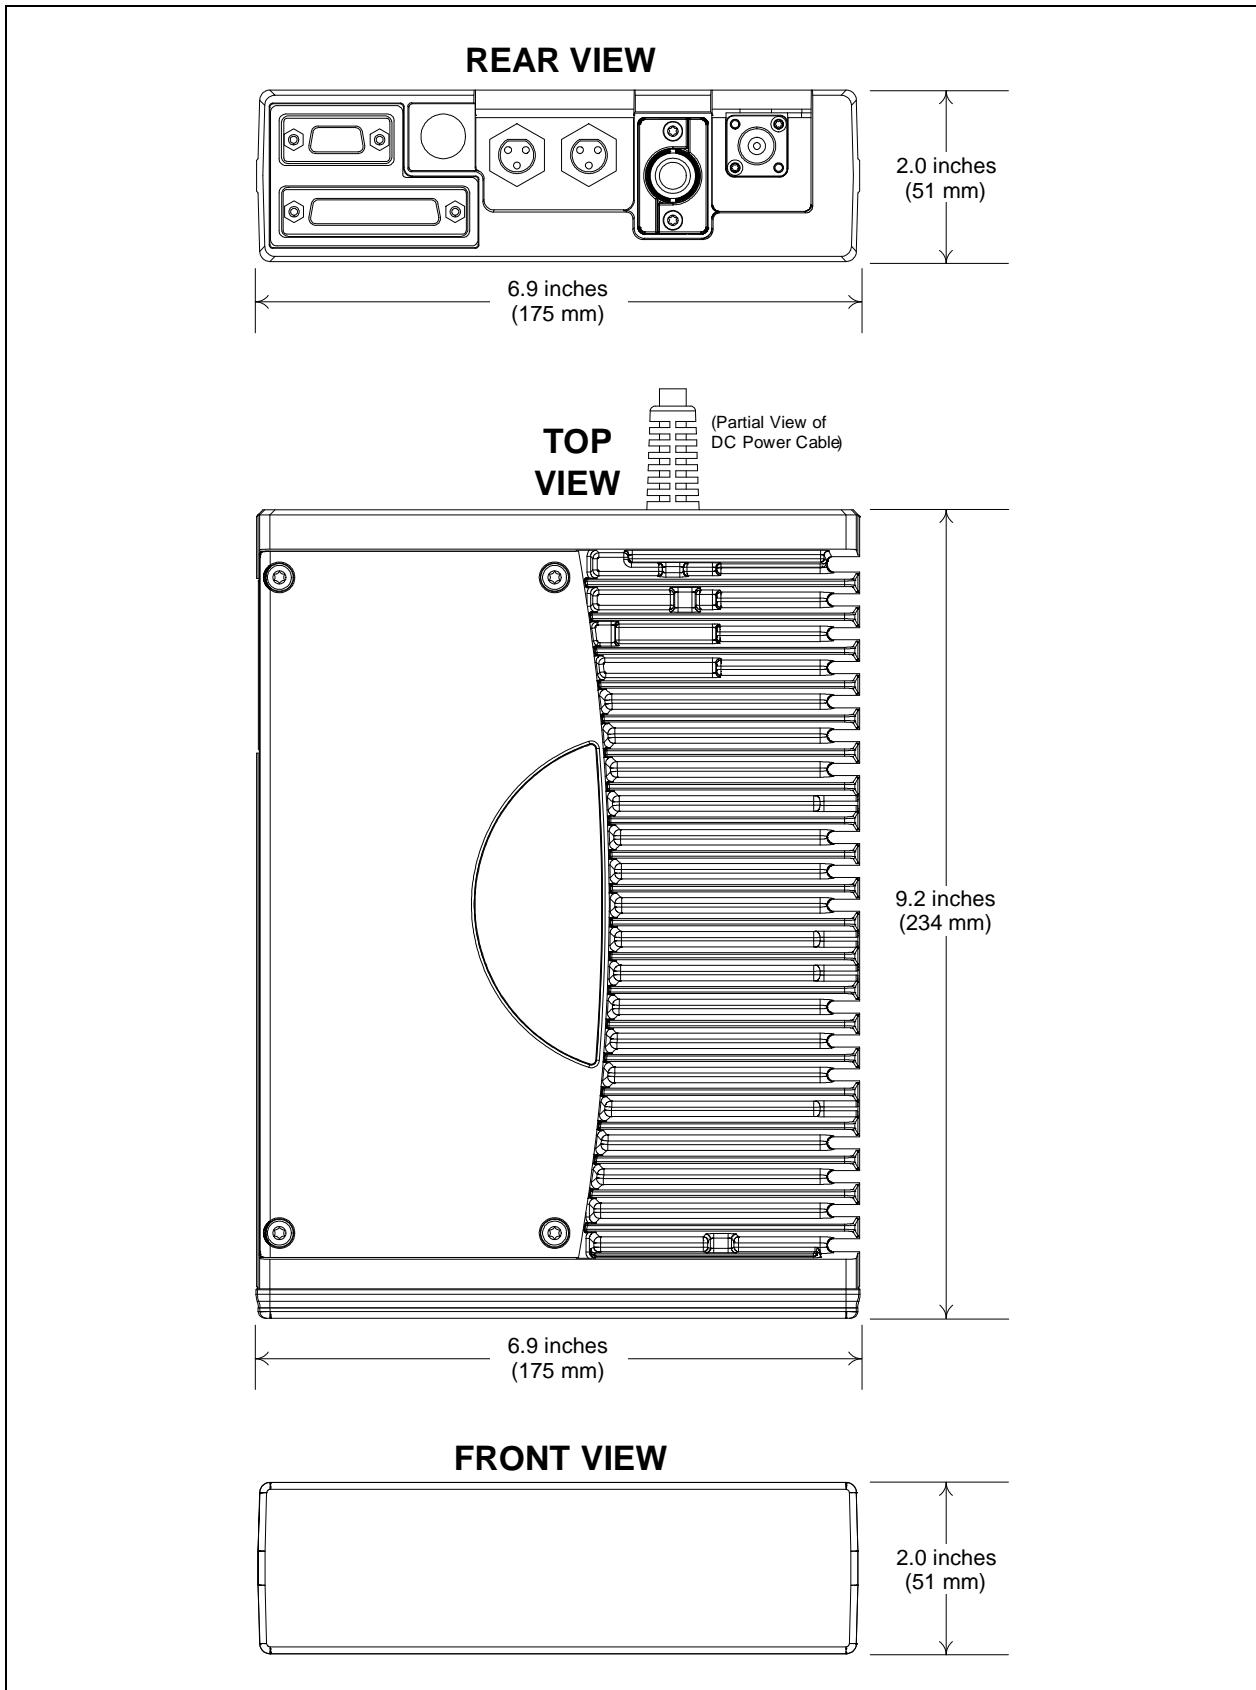


Figure 8-1: Remote-Mount M7300 Radio Dimensions

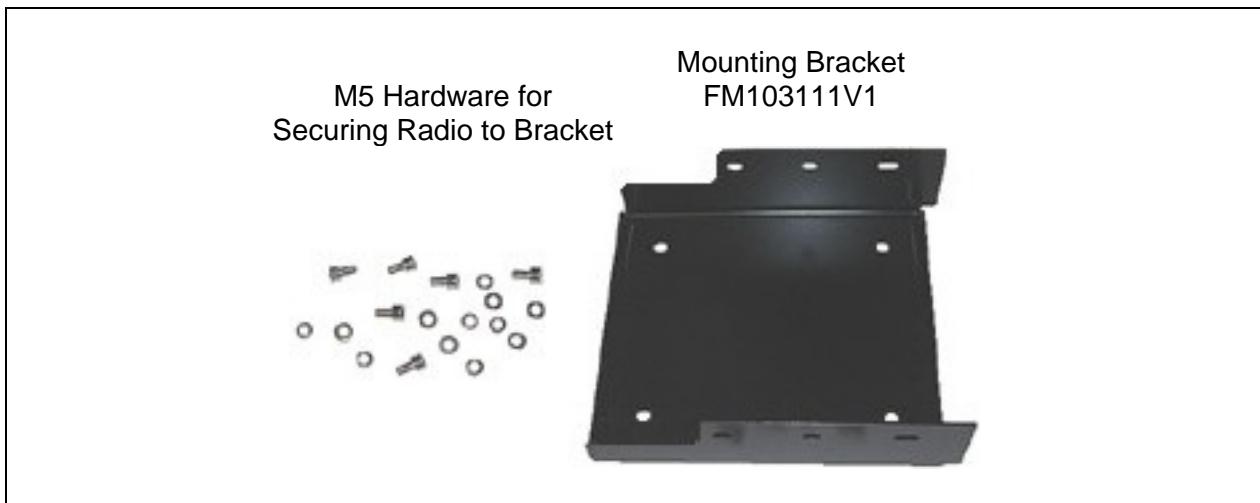


Figure 8-2: Remote-Mount Mounting Bracket Kit KT23117

Typically, the radio's mounting bracket is mounted in the vehicle's trunk, on the top surface of the trunk tray or on the trunk floor. However, it can be suspended from the trunk's rear deck if the surface is completely flat and the thickness of deck's sheet metal is adequate.

When selecting a mounting location for the radio, verify sufficient clearance can be maintained around the radio for installation and service access. A minimum clearance of four (4) inches (approximately 10 centimeters) is recommended at the rear, left and right sides of the radio, and at least 2 inches (approximately 5 centimeters) of clearance is recommended at the front of the radio.

As illustrated in Figure 8-3, the bracket is left-to-right symmetrical and the shortest portion of its side rails are at the rear.


As installations differ, bracket-to-vehicle mounting screws are not included. Utilization of $\frac{1}{4}$ -inch-diameter, 28-thread-per-inch ($\frac{1}{4}$ -28) stainless-steel self-locking hardware (i.e., machine screws with washers and locking nuts) is highly recommended. However, $\frac{1}{4}$ -inch stainless-steel self-drilling screws may be employed to speed installation time. Self-drilling screws such as "TEK" screws do not require drilling of a pilot hole prior to installation. Do not use common self-threading sheet metal screws because they will loosen over time with vehicle vibrations.

The bracket has four (4) available mounting holes. All four must be used to secure the bracket to its mounting surface.

The following mounting procedure is recommended:

1. Using the mounting bracket as a template, and/or the dimensional information shown in Figure 8-3, mark and drill four (4) mounting holes into the mounting surface as required per the type of hardware used. When the radio is installed in the bracket, it will extend approximately one (1) inch past the front edge bracket, and at the rear, it will extend approximately $\frac{1}{2}$ -inch past the rear edge of the bracket. This distance at the rear does not include space required for cable connections at the rear of the radio. As previously stated, a clearance of least four (4) inches (approximately 10 centimeters) at the rear of the radio is recommended.
2. Temporarily remove the bracket and deburr all of the newly drilled holes.
3. If necessary, apply an approved paint or rust-inhibitor at the holes in the mounting surface.
4. Set the bracket back into place, and verify front-to-rear orientation.

5. Install and tighten the mounting screws/hardware.
6. Verify the bracket is firmly secured to the mounting surface. A secure mount prevents unreasonable vibration, which could damage the radio and/or cause its cable connections to loosen.

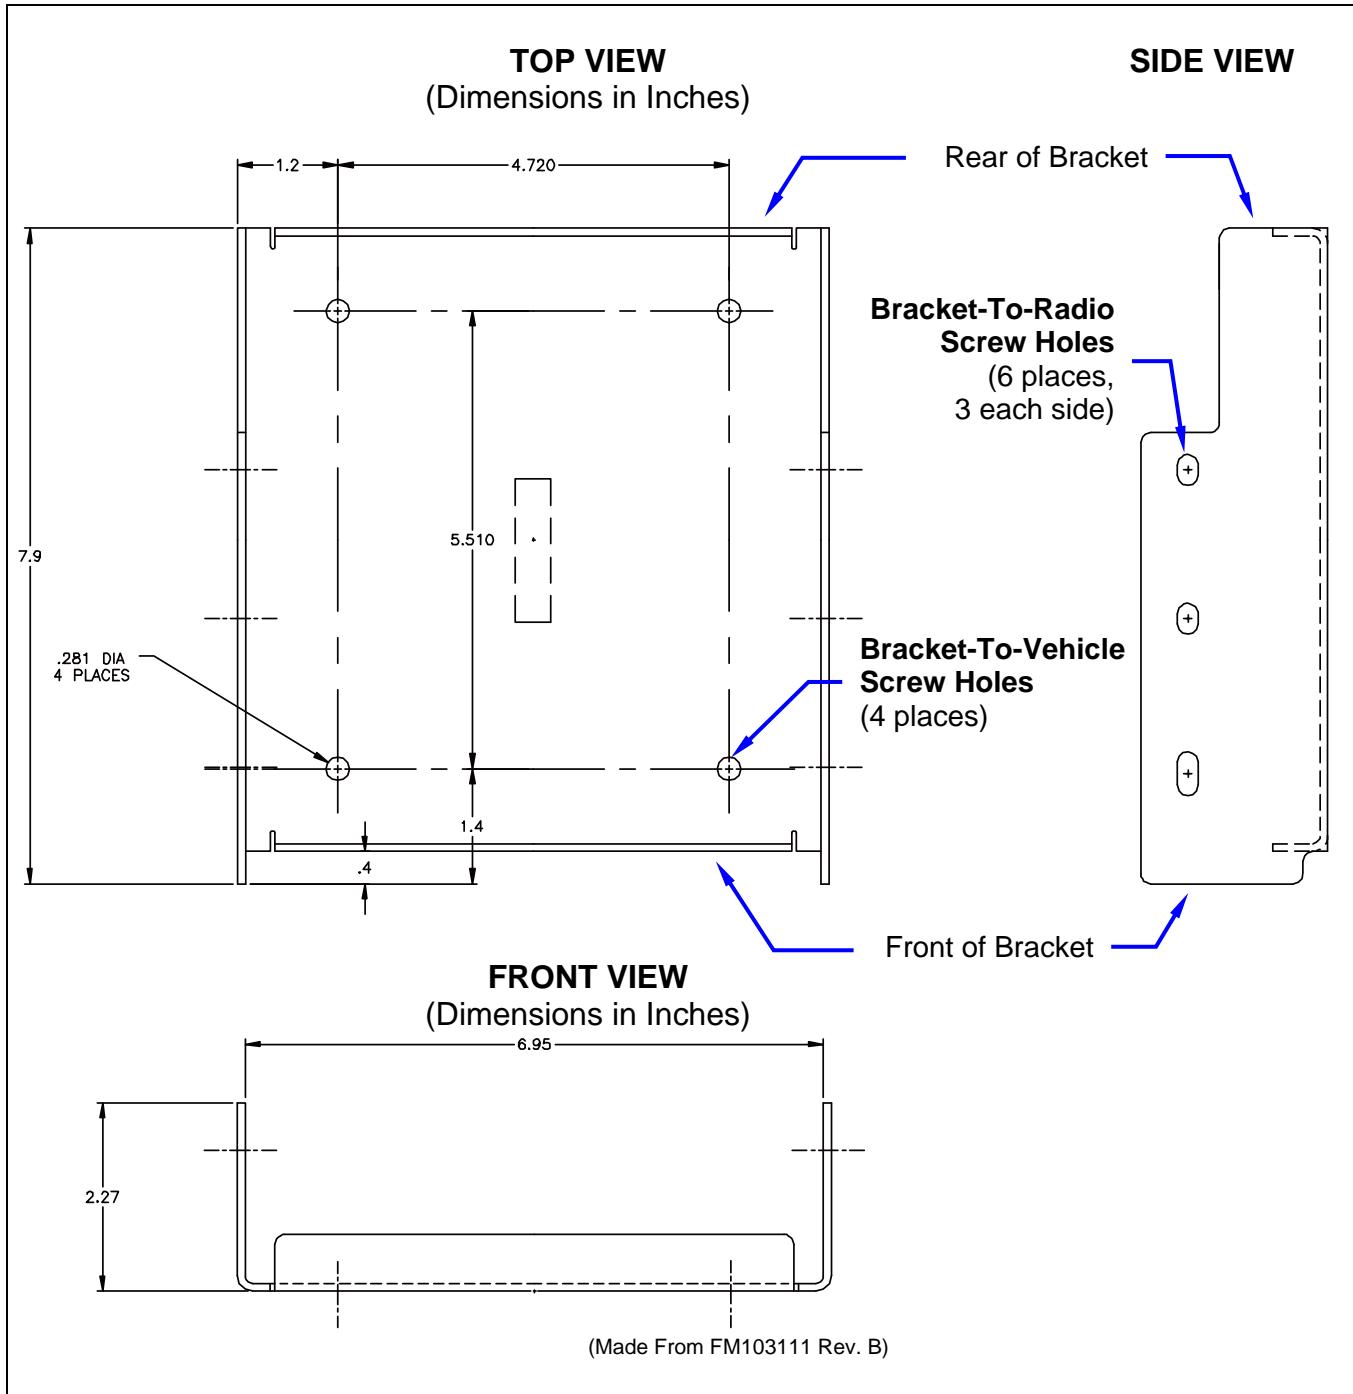

**Figure 8-3: Mounting Bracket FM103111V1 Dimensions
[for Remote-Mount M7300 Mobile Radio (Radio Not Shown)]**

8.1.2 Inserting the Radio into the Mounting Bracket

The radio should now be inserted into the bracket according to this procedure:

1. Lay the radio down into the mounting bracket with the front of the radio at the front of the mounting bracket.
2. Attach the radio into the mounting bracket using the six (6) M5 x 10 mm stainless-steel socket-head screws, and flatwashers and lockwashers included with the Mounting Bracket Kit (item 1 in Table 4-4). Tighten all six screws using a 4-millimeter hex key wrench until each lockwasher is fully compressed and the radio is firm and flush in between the brackets.
3. Check the mounting area for proper clearance for cable service looping and for air circulation, plus an area to secure and stow the excess cable lengths.



Proper mounting is one factor that ensures optimal radio performance. An improperly mounted radio may experience degradation in the quality of voice and data communications.

8.2 REMOTE-MOUNT RADIO'S DC POWER INSTALLATION

8.2.1 Overview of On/Off Power Wiring Configurations

Radio on/off power control is accomplished by the control head, except in the case of a data-only radio installation which has no control head. In a standard installation, when the control head is turned on, it “wakes-up” the radio via data activity on the CAN link. The following power wiring configurations are supported:

- **Radio turns on and off automatically with vehicle's ignition switch/key** — This configuration allows the on/off state of the vehicle's ignition switch/key to control the on/off power state of the radio. The white wire of the control head's DC Power Cable is connected to a fused switched power source, typically identified as vehicle “Accessory” power. This source must switch on (up to positive (+) battery voltage potential) when the vehicle's ignition switch/key turns on, and it must switch off (to near zero volts) when the ignition switch/key turns off. The required fuse rating is 3 amperes. When using this configuration, the CH-721 control head's on/off/volume control must be left in the on position for automatic power-up/down to function properly.



In a remote-mount radio installation, to fuse the white wire of the control head's DC Power Cable, a waterproof (HFB type) fuse holder and a 3-amp AGC fuse are included with the cable.

- **Radio turns on and off with a manual switch** — This configuration is used when, for example, the radio must remain on even when the ignition key must be removed from the vehicle and a separate on/off switch is acceptable. The white wire of the control head's DC Power Cable is connected to one side of a manually-controlled switch, and the other side of this switch is connected to unswitched and fused vehicle power. The required fuse rating is 3 amperes. When using this configuration, the CH-721 control head's on/off/volume control must be left in the on position for automatic power-up/down to function properly.
- **Radio turns on with control head's on/off/volume control (“hot wired”)** — This configuration allows radio on/off power control only via the control head's on/off/volume control. It may be desired if, for example, the radio must remain on even when the ignition key must be removed from the vehicle and a separate on/off switch is not desired and/or not acceptable. The white wire of the

control head's DC Power Cable must be connected to unswitched and fused vehicle power. The required fuse rating is 3 amperes.

In all of the above cases, both the radio's main DC power input (red wire) and the control head's main DC power input (also a red wire) must each be connected through an in-line fuse to unswitched vehicle DC power. The red wire of the radio's DC Power Cable must be connected to raw battery power (positive battery terminal) via the supplied fuse. Likewise, the red wire of the control head's DC Power Cable must also be connected to unswitched vehicle DC power via another supplied fuse. The white ignition wire of the radio's DC Power Cable is only used for the data-only radio (i.e., no control head), and it is the only means for turning its power on in the data-only radio installation.

8.2.2 DC Power Cable and Main Fuse Holder Installation

The radio's DC Power Cable has a 3-pin connector, a 20-foot red wire (for the main power connection), a 20-foot white wire (only connected in a data-only radio installation), and a 4-foot black wire (for the ground connection). It is supplied with waterproof fuse holders, two AGC-type fuses, and non-insulated ring terminals. The following installation procedures are recommended:

8.2.2.1 Black Wire Connection (Ground Wire)

1. Connect the radio's DC Power Cable to the radio by mating its 3-pin connector to the radio's 3-pin power cable connector as follows: Visually align the key and firmly push and turn the outer locking ring clockwise until it stops. A click will be sensed to confirm proper mating.



Do not confuse the radio's DC Power Cable which has a 10-AWG red wire with the control head's DC Power Cable which has a 12-AWG red wire. The radio requires much more DC operating current than the control head. Therefore, it requires the larger wire size of 10-AWG. **The part number of the radio's DC Power Cable is CA-012365-001.**

2. Prepare to connect the cable's black wire to vehicle ground by locating an area of vehicle metal within approximately two (2) feet of the radio. This surface must have a solid and stable connection to vehicle ground. If not, add grounding strap(s) as necessary.
3. Strip the area of any paint or dirt to expose a bare metal surface, approximately $\frac{3}{4}$ -inch square.
4. Drill a hole in the approximate center of the bare metal surface, and deburr it. A $\frac{3}{8}$ -inch non-insulated ring terminal is supplied with the cable to make this ground connection. Therefore, hole diameter should be appropriate for the utilized grounding screw/bolt size and type used to connect the ring terminal to the bare metal surface. This hardware is not supplied.
5. Cut the black wire to the required length plus some additional length for a service loop, then strip insulation back approximately $\frac{1}{4}$ -inch.
6. Crimp a $\frac{3}{8}$ -inch non-insulated ring terminal (supplied with the cable) to the end of the black wire.
7. Attach the ring terminal and black wire to the bare metal surface using stainless-steel self-locking hardware (i.e., machine screws with washers and locking nuts) or other appropriate hardware to ensure a reliable terminal-to-metal contact. Tighten securely.
8. Apply an approved paint or rust-inhibitor over the remaining exposed bare metal surface and around the ring terminal.

8.2.2.2 Red Wire and Main Fuse Holder Connection (Radio's Main Power Wire)

1. Continue installation of the radio's DC Power Cable by routing its 20-foot 10-AWG red wire to the location of the vehicle's battery (or its main DC bus bar or stud). Remove interior panels, door kick panels, etc., and route the wire through existing channels in the vehicle body as necessary. Protect the wire from possible chafing where necessary. Tie and stow the wire as necessary.



Plan the routing of the 10-AWG red wire carefully, using an existing access hole in the vehicle's firewall if possible. Alternately, drill a new hole approximately $\frac{3}{8}$ -inch in diameter and install a small rubber grommet to protect the wire from chafing on the hole's sharp metal edge. **To prevent fumes from entering the passenger compartment, this hole/grommet/wire combination must also be sealed with a silicon-based sealer before completing the installation.**



Do not install any wiring or fuse holder over or in the near vicinity of the vehicle's engine. Excessive engine heat can cause permanent damage to these components and can lead to intermittent electrical connection to the battery.



Before making connections to the battery's positive post, carefully disconnect the battery's negative (ground) cable(s). This will prevent tools or other metallic objects which come in contact with the battery's positive terminal from shorting to vehicle ground, causing sparks or even a fire or an explosion! When disconnecting the negative cable(s), cover/insulate the positive post(s) if it is not already so a tool cannot short between the posts. Some vehicles, such as those with diesel engines have more than one battery; in this case, disconnect the negative cables at all batteries.

Radio and control head fuses should not be installed until all wiring is complete. This will prevent the radio from powering up prematurely and/or causing an in-rush of current that could lead to shorting of the battery, sparks, or even fire.

2. Obtain one of the waterproof (HFB type) fuse holders included with the DC Power Cable.
3. **Observe and follow the previously presented WARNING!**
4. Cut the red wire to the required length for connection to the battery's positive (+) battery terminal (or the main DC bus bar or stud).
5. Prepare to splice the waterproof fuse holder into the red wire by cutting it again, at approximately three (3) to six (6) inches from the end.
6. Strip all three (3) wire ends back approximately $\frac{3}{8}$ -inch, place a fuse holder shell on each wire, and securely crimp a fuse holder terminal to each wire end. Before crimping, verify fuse holder shells are oriented in the correct directions (i.e., with each large end towards the wire end).
7. Label this fuse holder and red wire appropriately (e.g., "M7300 Main Power: 15-AMP FUSE").
8. **Do NOT install a fuse into the fuse holder at this time.**
9. Crimp an appropriate electrical terminal to the short red wire. A corrosion-resistant $\frac{3}{8}$ -inch ring terminal is included with the cable for this purpose, but another size corrosion-resistant terminal type (not supplied) may be used if required.

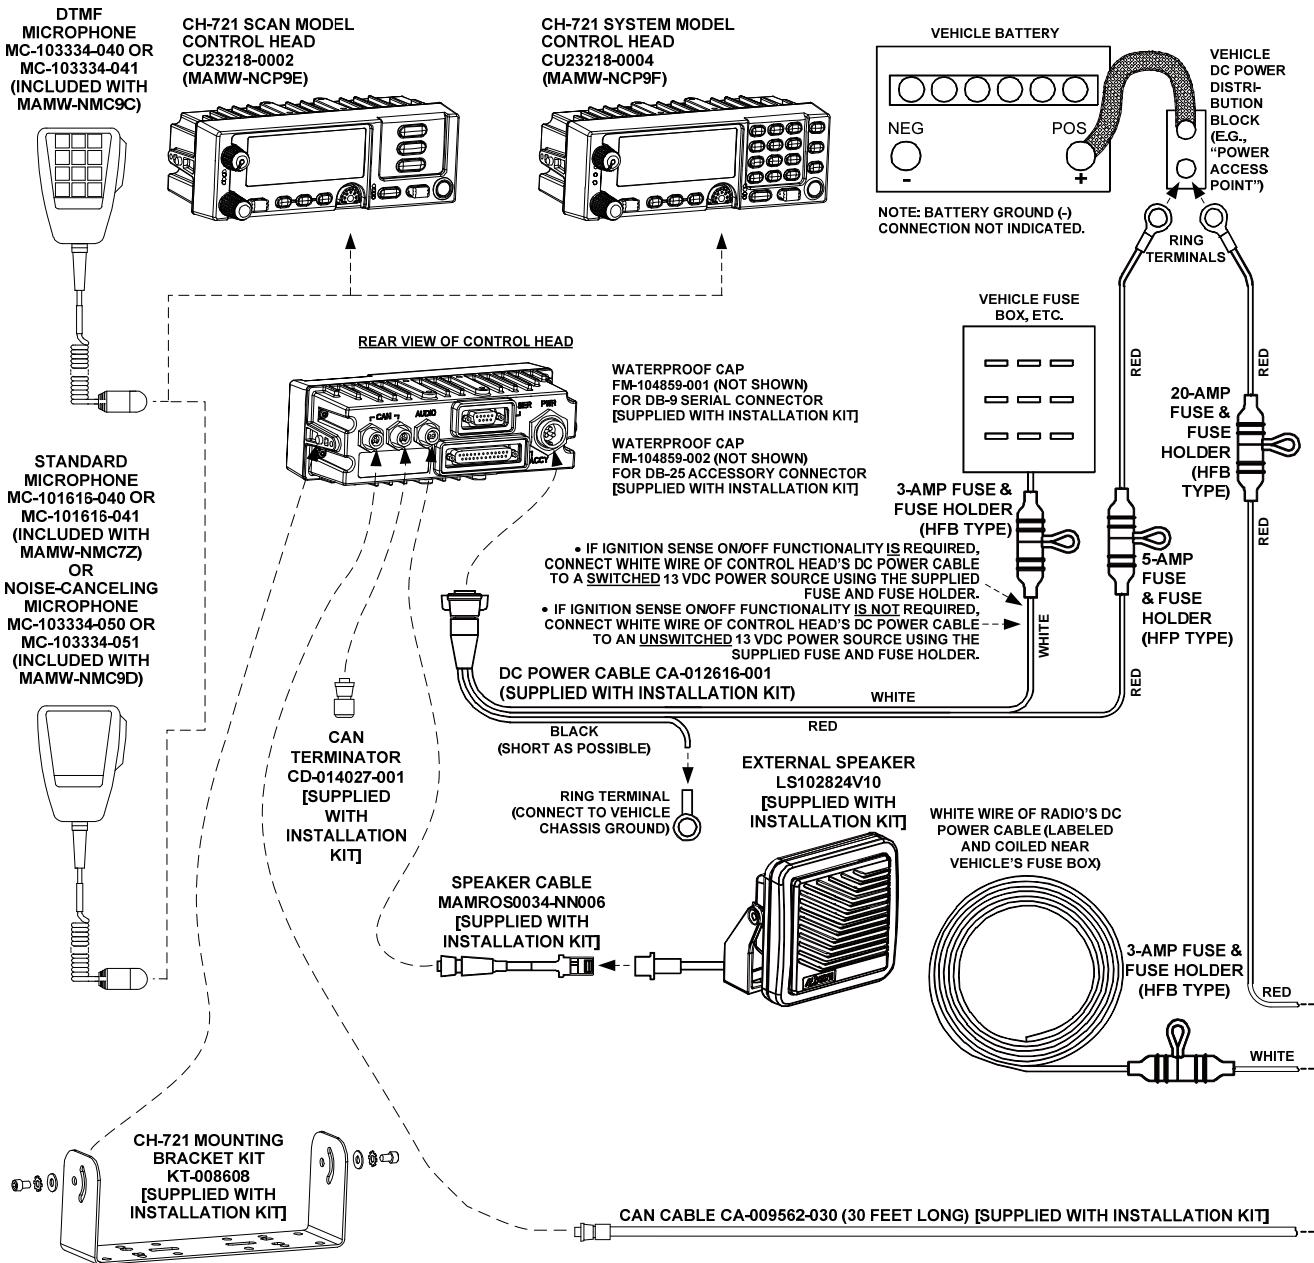


Figure 8-4: Wiring Diagram for a Remote-Mount Radio Installation

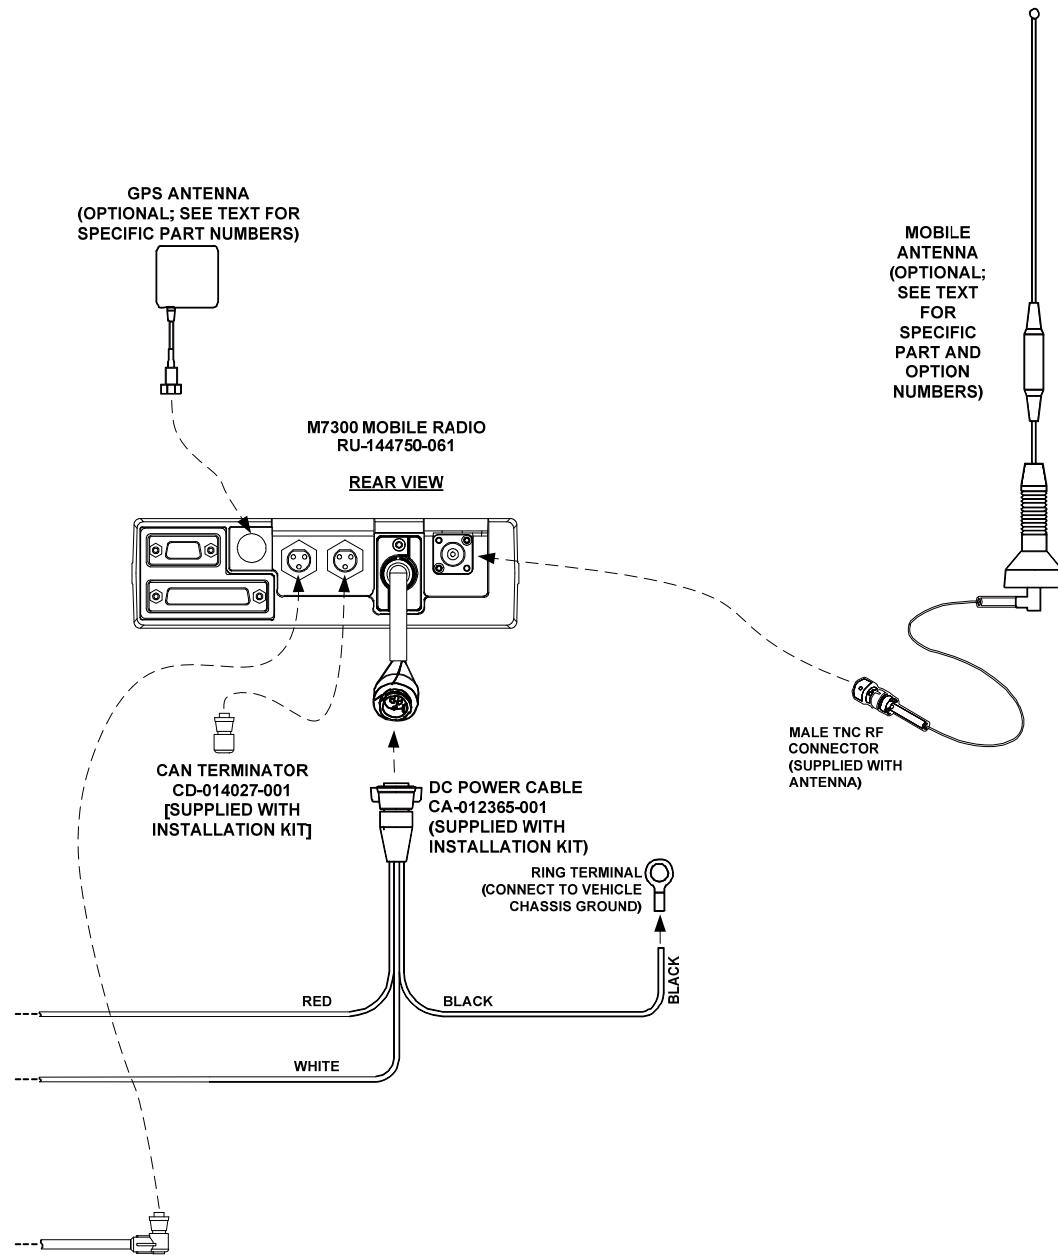


Figure 8-4: Wiring Diagram for a Remote-Mount Radio Installation (Cont.)

10. Connect the ring terminal directly to the battery's positive post (or if present, to a stud on the battery's main/non-switched power distribution terminal block).

**NOTE**

Most M7300 radio installations have one or more control heads connected to the radio. In an installation of this type, the white wire of the radio's DC Power Cable requires no electrical connection. Rather than be cut from the cable, it is recommended that it be routed up to the vehicle's fuse box, coiled, labeled, and stowed for possible future use. The white wire of the control head's DC Power Cable is the radio installation's ignition sense input for on/off power control of both the control head and radio. Radio on/off power control is accomplished by the control head. The control head "wakes-up" the radio via data activity on the CAN link.

8.2.2.3 White Wire Connection (for Data-Only Radio Installations)

In the case of a data-only radio installation (i.e., no control head connected to the radio), the white wire of the radio's DC Power Cable is used as the radio installation's ignition sense input. Therefore, it requires electrical connection to a fused switched power source. The following procedure is recommended:

1. Route the 20-foot white wire of the radio's DC Power Cable to the location of the vehicle's switched power source connection point, typically identified as "Accessory" power. Remove interior panels, door kick panels, etc., and route the wire through existing channels in the vehicle body as necessary. Protect the wire from possible chafing where necessary. Tie and stow the wire as necessary.
2. Connect this white wire through a fuse to the switched power source in accordance with the instructions presented within the respective subsection of Section 8.3.4.2 (page 55) for the control head's white wire. Follow the procedure in Section 8.3.4.2.1 (page 55) if the vehicle's ignition switch/key must control the data-only radio's on/off power. Follow the procedure in Section 8.3.4.2.2 (page 56) if a manually-controlled switch must control the data-only radio's on/off power.

**NOTE**

The "hot wired" wiring configuration (as depicted in Section 8.3.4.2.3) cannot be utilized for the data-only radio, since this configuration does not employ the DC Power Cable's white wire.

**CAUTION**

When servicing the radio and/or control head, always manually power-down the radio equipment via the control head's on/off/volume control knob, and then remove the main power fuse near the battery.

8.3 CONTROL HEAD INSTALLATION

8.3.1 General Information

The remote-mount M7300 mobile radio must be connected to a control head to provide the operator-to-radio interface. Two different control heads are available — the CH-721 Scan model and the CH-721 System model. See Figure 8-5 and Figure 8-6 respectively. The CH-721 Scan model control head features three (3) large menu selection buttons. The System model control head has a 12-button keypad to allow advanced operations without the need of a DTMF-capable microphone.

Figure 8-7 on page 50 illustrates the rear panel of the two control head models. Both models have identical rear panels and rear panel connectors.

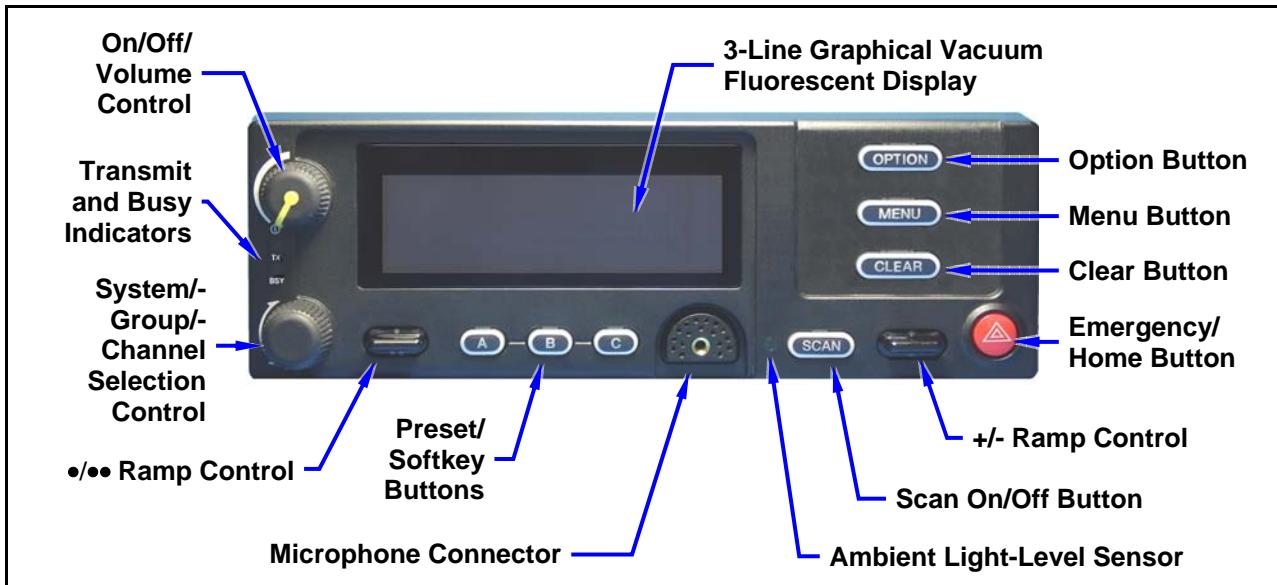


Figure 8-5: CH-721 Scan Model Control Head Front Panel

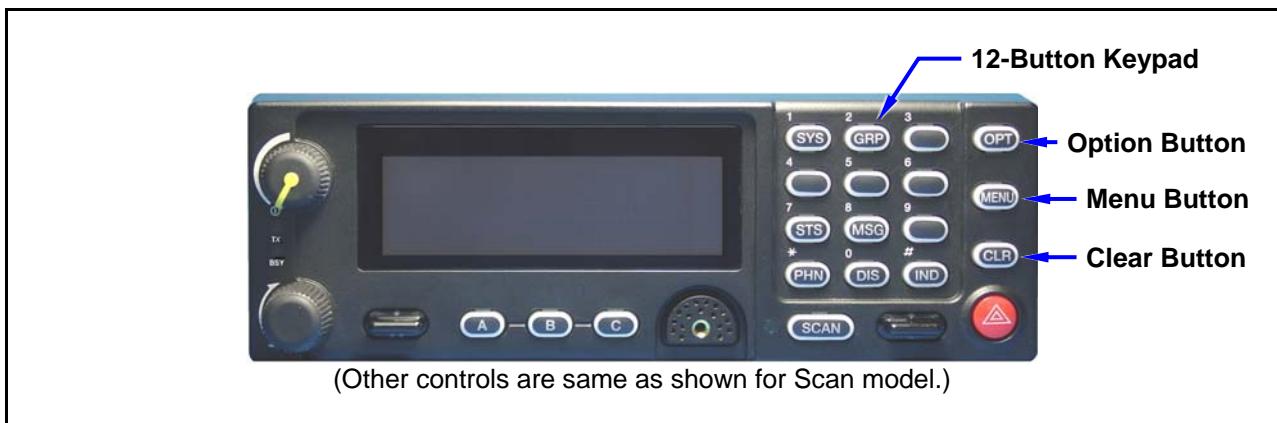


Figure 8-6: CH-721 System Model Control Head Front Panel

The CH-721 control heads feature a large easy-to-read 3-line graphical vacuum fluorescent display, an on/off/volume control knob, menu controls and buttons, trunking mode buttons, an emergency/home button, a scan on/off button, and three (3) preset buttons. Other front panel components include a microphone connector and LED-type indicators. One LED indicator is the busy indicator that lights when the radio is receiving a call and one is the transmitter-enabled indicator that lights when the radio is transmitting. The front panel also has an ambient light sensor for automatic display dimming.

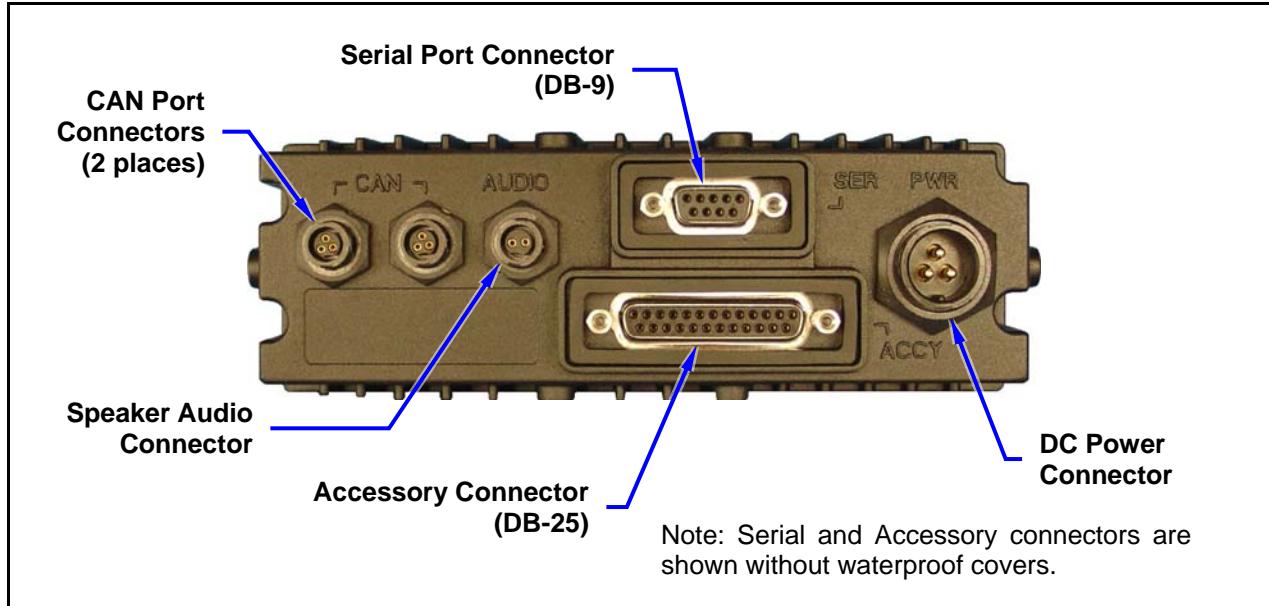


Figure 8-7: CH-721 Rear Panel (both control head models)



Prior to installing the control head, verify it has the proper software version installed and verify it has been properly configured for customer use.



Because Installation Kit MAMW-NZN7R contains the most complete set of materials for installing the radio and control head, the following instructions make repeated reference to items within this kit. Item numbers given in parenthesis refer to items in the kit as listed in Table 4-4 on page 19.

In a mobile installation, more than one control head can be connected to one mobile radio for multi-head installations. A multi-head installation may be required in a vehicle such as a fire truck or any large vehicle where more than one operator may require use of the radio. Multi-head installations also provide other benefits such as intercom functionality between different operator positions.

8.3.2 Control Head Mechanical Installation

8.3.2.1 Selecting the Mounting Location

When selecting a location for the CH-721 control head, first observe the safety and operator-convenience related information presented in Section 5.1 on page 23. Always consider and include clearance for the microphone's connector that must mate to the mic connector on the front panel of the head, and clearance for the connectors/cables that must mate to the connectors on the rear panel of the head. The CH-721 control head can be mounted under or on top of a mounting surface (typically the vehicle's dash) as space permits using either the standard U-shaped mounting bracket or the optional mounting pedestal.

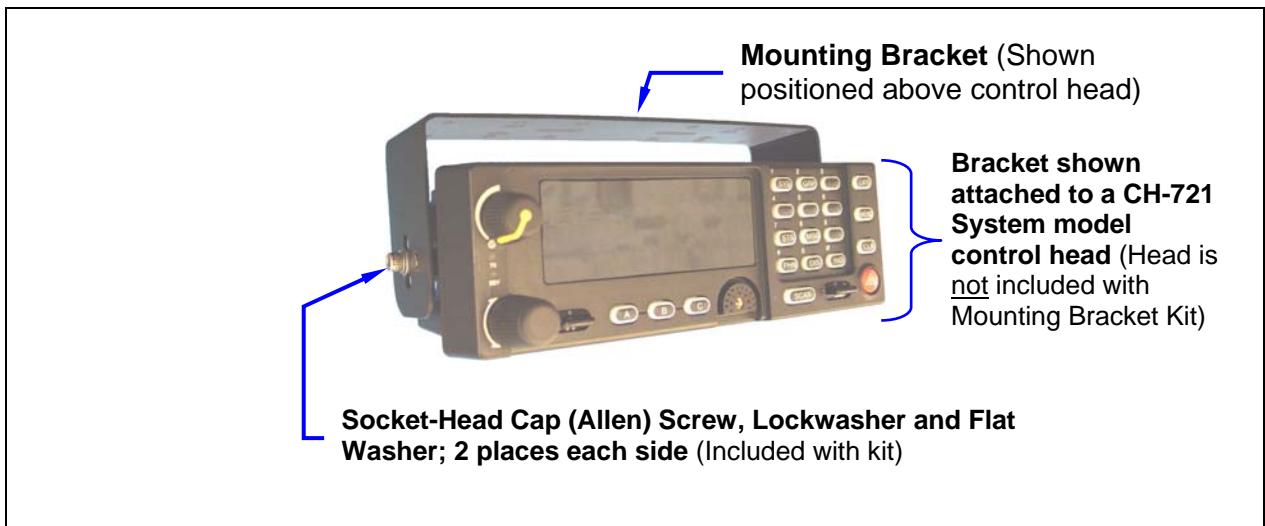


Figure 8-8: Standard U-Shaped Control Head Mounting Bracket (Kit Part Number KT-008608)



Figure 8-9: Optional Control Head Mounting Pedestal (Part Number MACDOS0012)

8.3.2.2 Using the Standard U-Shaped Mounting Bracket

If the standard U-shaped mounting bracket will be used to mount the control head, the following mounting procedure is recommended. As listed in Table 4-4 on page 19, this bracket is item 2 in the Installation Kit.

1. Using the mounting bracket as a template, mark and drill mounting holes into the mounting surface as required. The round and elliptical holes in the bracket's vehicle mounting surface are symmetrical, so forwards/backwards positioning is not important during this step. However, positioning is important in the next step.



Before drilling holes and/or installing mounting screws, verify these operations will not damage or interfere with any existing vehicle component (the fuel tank, a fuel line, the transmission housing, existing vehicle wiring, etc.). Always check to see how far the mounting screws will extend below the mounting surface prior to installation. Always deburr drilled holes before installing screws.

2. Postion the bracket at the mounting surface so the two round holes in its two side "ears" are nearest to the normal location of the operator (typically towards the rear of the vehicle) and the two slotted holes are furthest from the normal location of the operator (typically towards the front of the vehicle).
3. Install and tighten the mounting screws. Screws for mounting the bracket to the mounting vehicle's surface are not included, as all installations differ. Self-threading screws are recommended. Use of self-drilling screws may cause damage to some mounting surfaces, such as a plastic dash panel.
4. Verify the bracket is held firmly to the mounting surface. Firm mounting prevents unreasonable vibration, which could damage the control head and/or cause its cable connections to loosen.
5. Slide the control head into the bracket, placing the two pegs protruding from its left and right sides into the respective round holes in the bracket's two side "ears."
6. In each side "ear" of the mounting bracket, start a #8-32 hex-socket-head cap (Allen) head screw with a lockwasher and a flat washer by inserting the screw through the slotted hole in the bracket and then into the threaded hole in the side of the control head. This hardware is included with Mounting Bracket Kit. The lockwasher should be adjacent to the screw head and the flat washer should be adjacent to the bracket. Turn each screw clockwise as observed from the head of the screw.
7. The control head can be positioned at various angles for best display viewing at the normal position of the operator. As necessary, turn it on the pegs to a good position and tighten both screws using an $\frac{1}{8}$ -inch hex key (Allen) wrench until the control head is held firmly in place. Do not over-tighten.

8.3.2.3 Using the Mounting Pedestal (Optional)

An optional Mounting Pedestal, part number MACDOS0012, may be purchased separately to replace the standard U-shaped mounting bracket. This pedestal can be attached to the bottom of the control head as shown in Figure 8-9, and then mounted to a mounting surface below the two. It can also be attached to the top of the head and then mounted to a mounting surface above the two.

8.3.3 Control Head-to-Radio CAN Cable Connections

8.3.3.1 General Information

A remote-mount radio installation requires a CAN cable between every two "CAN devices" and CAN terminators on each end of the CAN link. The M7300 mobile radio is considered a CAN device, and each CH-721 control head in the installation is also considered a CAN device. Figure 8-10 illustrates CAN

cable and CAN terminator connections for a single control head installation. Figure 8-11 illustrates this for a multi-head control head installation where, for example, one control head is located at the main operator location and another is located near the rear of the vehicle. Because CAN devices do not have internal terminators, the CAN link must be terminated at both ends via external CAN terminators, as depicted in the following figures.

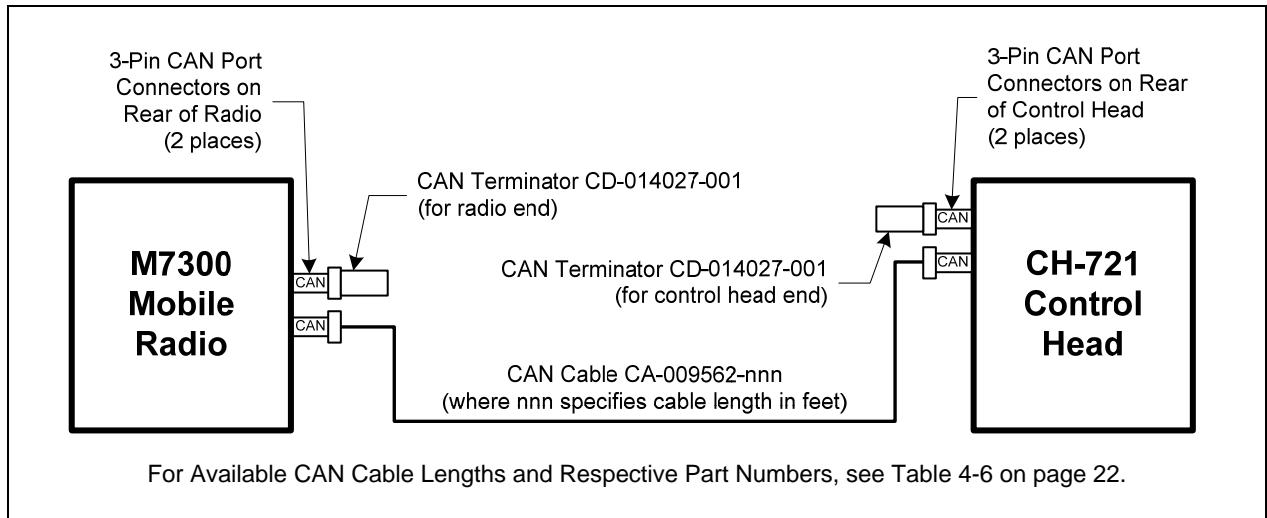


Figure 8-10: CAN Link Connections for a Single Control Head Installation

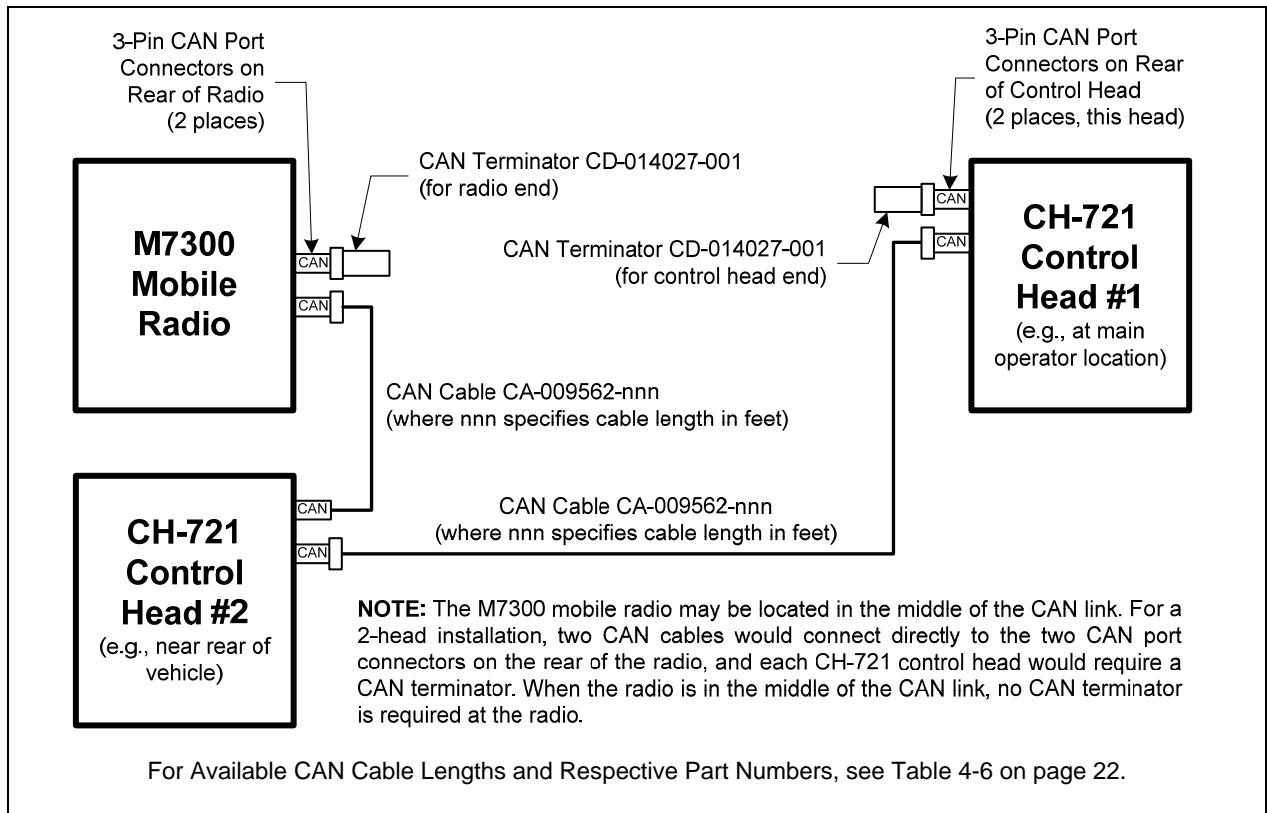


Figure 8-11: Typical CAN Link Connections for a Multi-Control Head Installation

Both the radio and the control head have two CAN ports to support “daisy-chaining” of multiple control heads or other CAN devices. Figure 5-3 on page 25 shows the radio’s two CAN port connectors, which

are located near the center of the radio's rear panel. Figure 8-7 on page 50 shows the two CAN port connectors on the control head's rear panel.

8.3.3.2 Make CAN Link Terminations and Cable Connection

Follow this procedure for an installation which has only one control head. For a multi-control head installation, refer to Figure 8-11 as necessary.

1. Mate a CAN Terminator (item 5 in Table 4-4 on page 19) with either one of the two smaller 3-pin CAN port connectors on the rear panel of the CH-721. This action makes the CAN termination at the control head end of the CAN link.



NOTE

When mating any CAN connection (terminators and cables) to a rear panel connector, visually align the $\frac{3}{4}$ -moon-shaped keys of the connectors, and then gently push and turn the outer locking ring of the plug (male) connector clockwise until it stops. A mild click will be sensed to confirm proper mating. Without visual alignment as a guide, it is possible with excessive force to mate the CAN connectors improperly. Damage to the connector(s) may result. Therefore, visual alignment is recommended when mating CAN connectors.

2. Obtain a CAN Cable and mate it to the other CAN port connector on the rear panel of the CH-721. Typically, item 6 in Table 4-4 is utilized, a 30-foot CAN cable.
3. Route the cable through the vehicle's interior wire/cable channeling to the radio. Remove interior panels, door kick panels, etc., as necessary. Protect the cable from possible chafing as necessary.
4. Mate this other end of the cable to one of the two CAN port connectors on the rear panel of the radio.
5. Mate another CAN Terminator to the other CAN port connector on the rear panel of the radio. This action makes the CAN termination at the radio-end of the CAN link.
6. Loop, tie and stow the excess cable as necessary, leaving a service loop at the back of the radio and at the back of the control head.

8.3.4 Control Head Power Cable Installation

Plan the route of the control head's DC Power Cable carefully. Do not route the cable where it will be damaged by heat sources or by casual contact, and protect it from wire chafe per standard installation methods. The following procedures are recommended:

8.3.4.1 Install DC Power Cable and Make Power and Ground Connections

1. Connect the control head's DC Power Cable (item 4 in Table 4-4 on page 19) to the large 3-pin connector at the rear of the head. Visually align the key and gently push and turn the outer locking ring clockwise until it stops. A click will be sensed to confirm proper mating.
2. At the back of the control head, locate a nearby section of vehicle chassis ground and strip this area of any paint or dirt to expose a bare metal surface.
3. Cut the black wire of the control head's DC Power Cable to the required length, plus a service loop of at least six (6) inches, then strip it and crimp a $\frac{3}{8}$ -inch ring terminal to it. Two ring terminals of this type are included with the cable.
4. Drill a hole as necessary and attach this ring terminal to chassis ground. Use stainless-steel self-locking hardware (i.e., machine screws with washers and locking nuts) or other appropriate hardware to ensure a reliable terminal-to-metal contact. Tighten securely.

5. At the back of the control head, tie and stow the cable as necessary.
6. For the positive 12-volt DC main power source connection, route the cable's red wire to the location of an **unswitched** 12-volt DC power source, typically near the vehicle's battery. Remove interior panels, door kick panels, etc. Protect the wire from possible chafing as necessary. This is the control head's main DC power source.
7. Obtain one of the waterproof (HFB-type) fuse holders included with the control head's DC Power Cable.
8. Cut excess length from the red wire and splice the fuse holder into it, near the location of the unswitched 12-volt DC power source connection point.
9. Using an appropriate electrical terminal, connect the red wire to the unswitched DC power source. A $\frac{3}{8}$ -inch ring terminal is included with the cable for this purpose, but another terminal type (not supplied) may be used if required.
10. Obtain the 5-amp AGC-type fuse included with the cable, and install it into the fuse holder.



NOTE

Do not share the control head's fuse with any other device. Doing so can cause excess current to flow through the fuse, causing it to blow unnecessarily.



CAUTION

The fuse for the control head's red wire is rated at 5 amperes. The 3-amp fuse included with the cable must **not** be used for fusing the control head's main DC power. It fuses the head's white wire.

8.3.4.2 Connect DC Power Cable's White Wire

A review of the information presented in Section 8.2.1 (page 43) may be beneficial at this time. As required per the chosen power-up configuration, connect the white wire by following one of the three procedures presented in the respective sub-section that follows.

8.3.4.2.1 Control Head and Radio Turn on with Vehicle's Ignition Switch/Key

With this wiring configuration, the control head and radio automatically turn on and off with the vehicle's ignition switch/key. The white wire of the control head's DC Power Cable is sometimes referred to as the "white ignition switch wire" or the "ignition sense input wire." In this configuration, the white wire connects to a switched power source, typically identified as "Accessory" power, that switches on and off with the vehicle's ignition switch/key. When using this configuration, the CH-721 control head's on/off/volume control must be left in the on position for automatic power-up/down to function properly.



NOTE

The white ignition sense wire must be connected to a fused power source that switches from approximately zero volts to approximately +13.6 volts when the vehicle's ignition switch/key is turned from the OFF position to the ACCESSORY and RUN positions. Use of a switched power source that is subject to voltage changes as a result of other actions, such as opening a vehicle door, may result in undesirable radio operation and/or a degradation of radio performance.

1. Locate the vehicle's switched ignition or "Accessory" power connection point that will be used for the switched ignition 12-volt DC power source. This point is typically located at or near the vehicle's fuse panel. It may be necessary to consult the vehicle manufacturer's wiring diagram.

2. Route the white wire of the control head's DC Power Cable from the back of the head to the area near this connection point. Protect the wire from possible chafing as necessary.
3. Obtain one of the waterproof (HFB-type) fuse holders included with the control head's DC Power Cable.
4. Cut excess length from the white wire and splice the fuse holder into it, near the location of the connection point.
5. Using an appropriate electrical terminal, connect the white wire to the switched power connection point. An open-barrel spade terminal is included with the cable for this purpose, but another type of terminal (not supplied) may be used as required.
6. Obtain the 3-amp AGC-type fuse included with the cable, and install it into the fuse holder.
7. Tie and stow all wiring as necessary so it remains out of the way of casual contact and wire chafe is avoided.

8.3.4.2.2 Control Head and Radio Turn On with a Manual Switch

With this wiring configuration, the control head and radio are manually turned on and off via an on/off switch mounted separately from the control head and radio, not through the vehicle's ignition switch/key. This configuration is used when, for example, the radio must remain on even when the ignition key must be removed from the vehicle and a separate on/off switch is acceptable and/or required. In this configuration, the white wire connects to a fused switched power source such as that provided by a toggle switch mounted on the vehicle's dash panel. When using this configuration, the CH-721 control head's on/off/volume control must be left in the on position for automatic power-up/down to function properly.

1. Route the white wire of the control head's DC Power Cable from the back of the head to an area near the location of the panel-mounted on/off switch. Protect the wire from possible chafing as necessary.
2. Cut a short section (6 to 8 inches) off the end of the white wire and strip the ends.
3. Obtain one of the waterproof (HFB-type) fuse holders included with the control head's DC Power Cable, and crimp one half of it to one end of the short section of wire.
4. Using an appropriate electrical terminal, connect this short white wire to unswitched 12-volt DC power source at or near the vehicle's fuse box.
5. Cut another section of white wire from the cable. This wire must be long enough to reach from this fuse holder to the location of the panel-mounted on/off switch.
6. Strip one end of this wire and crimp the other half of the waterproof fuse holder to this wire end.
7. Strip the other end of this wire and, using an appropriate electrical terminal, connect it to the common terminal of the switch.
8. Connect the white wire of the power cable to the load (switched) side of the switch.
9. If not already, mount the switch to the vehicle's dash panel, or other customer-selected location.
10. Obtain the 3-amp AGC-type fuse included with the cable, and install it into the fuse holder.
11. Tie and stow these wires as necessary so they remain out of the way of casual contact and wire chafe is avoided.
12. Label this power switch accordingly. For example: "**RADIO ON/OFF**."

8.3.4.2.3 Control Head and Radio Are “Hot Wired”

In the “hot-wired” configuration, the control head and radio are turned on and off only by the control head’s on/off/volume control located on the front panel of the control head. In this configuration, the control head’s white wire must be connected to **unswitched and fused 12-volt** vehicle power. Follow the procedure presented in Section 8.3.4.2.1, except connect the white wire to **unswitched** battery power instead of switched (“Accessory”) power.

9 SPEAKER INSTALLATION

9.1 FRONT-MOUNT RADIO INSTALLATION

In a front-mount radio installation, total speaker cable length (of both cables) is approximately 10 feet (308 centimeters). Therefore, to include service loops in these cables, the speaker must be mounted within approximately 9.5 feet (290 centimeters) of the M7300 mobile radio.

1. Select a location for the speaker that will allow for proper listening range with a moderate volume setting.
2. Install the speaker using the hardware and mounting bracket supplied with it. For the speaker's part number, see Table 4-3 (page 19).
3. Route the speaker cable to the rear of the M7300 mobile radio.
4. Connect the M5300/M7300 Option Cable CA-012349-001 (item 5 in Table 4-3) to the DB-44 connector on the rear of the radio. Tighten the cable's two (2) jackscrews securely. See Section 11.1 for additional information on this cable.
5. Mate the Option Cable's 2-pin connector (identified P2) to the 2-pin connector on the end of the speaker cable. A mild click will be sensed to confirm proper mating.
6. Route the cables out of the way of casual contact. Tie and stow as necessary.

9.2 REMOTE-MOUNT RADIO INSTALLATION

In a remote-mount radio installation, total speaker cable length (of both cables) is approximately five (5) feet. Therefore, to include service loops in these cables, the speaker must be mounted within approximately 4.5 feet of the installation's CH-721 control head.

1. Select a location for the speaker that will allow for proper listening range with a moderate volume setting.
2. Install the speaker using the hardware and mounting bracket supplied with it. For the speaker's part number, see Table 4-4 (page 19).
3. Route the speaker cable to the rear of the CH-721 control head.
4. Mate the 6-inch speaker cable (item 8 in Table 4-4) to the 2-pin connector at the rear of the control head by visually aligning the $\frac{3}{4}$ -moon-shaped keys of the connectors, and then pushing and turning the outer locking ring of the cable connector clockwise until it stops. A mild click will be sensed to confirm proper mating.
5. Connect the speaker cable's 2-pin plastic connector to the respective mating connector on the 6-inch speaker cable.
6. Route the cables out of the way of casual contact. Tie and stow as necessary.

10 MICROPHONE ATTACHMENT

There are several versions of microphones available for use with the radio. Each has a 17-pin flush-mount type connector that mates with the mic connector on the front panel of the control head. The mic's connector includes a captive thumbscrew that secures it to the mic connector on the front panel of the control head. A microphone clip is included with each microphone. The radio can be configured to provide a monitor function when the microphone is cradled in the clip. Connect the mic to the control head and install the clip as follows:

1. As illustrated in Figure 10-1, grasp the mic's connector with a thumb and index finger on the sides of the connector just adjacent to the thumbscrew.
2. Position the connector in front of the control head's mic connector so the mic cable's strain relief is hanging down and out at an approximate 45 degree angle.
3. Mate the two connectors by pressing them fully together. Do not apply any force to the thumbscrew when mating the connectors.
4. Tighten the thumbscrew finger-tight. Do not use a screwdriver to tighten it.
5. Using the microphone clip as a template, drill mounting holes in the surface of the selected location.
6. Select a mounting surface location that has clearance for the mic when it is clipped to the clip, and then attach the microphone clip to the surface. Use self-locking hardware (i.e., machine screws with washers and locking nuts), self-drilling screws, or other appropriate hardware as necessary. Tighten securely.
7. The microphone clip must be grounded to the vehicle's chassis. If not mounted to a grounded metal surface, complete this requirement by adding a jumper wire attached from chassis ground to the clip.
8. Clip the microphone to the clip.

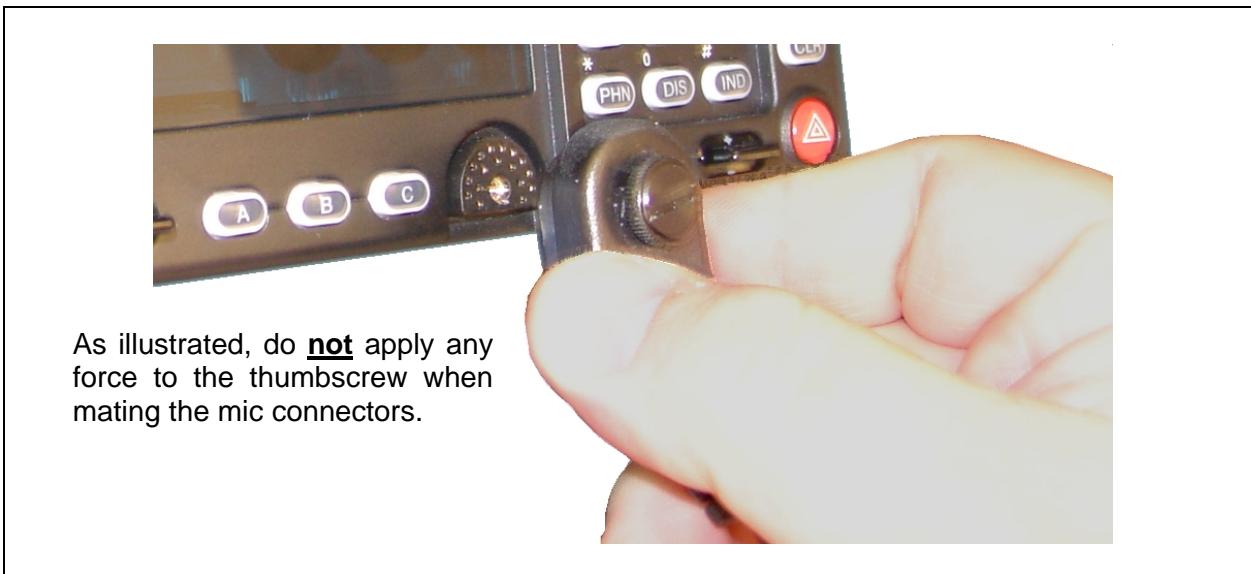


Figure 10-1: Attaching the Microphone to the CH-721 Control Head

11 OPTIONAL CABLES

11.1 M5300/M7300 OPTION CABLE CA-012349-001

M5300/M7300 Option Cable CA-012349-001 connects to the 44-pin I/O connector on the rear of the radio. It breaks out into several smaller standardized connectors, allowing straightforward access to external I/O interfaces provided by the radio. The cable also shortens radio removal and re-installation time when required. The cable is shown in Figure 11-1 below. The cable's 44-pin D-subminiature connector that mates with the connector on the rear of the radio is identified P1.

P2, the cable's 2-pin connector, provides connections for an external speaker in a front-mount M7300 mobile radio installation. See Section 9.1 (page 58) for connection instructions. P2 is not used in a remote-mount radio installation. In a remote-mount radio installation, the audio amplifier in the CH-721 control head drives the external speaker. In this case, the speaker connection is made at the rear of the control head.

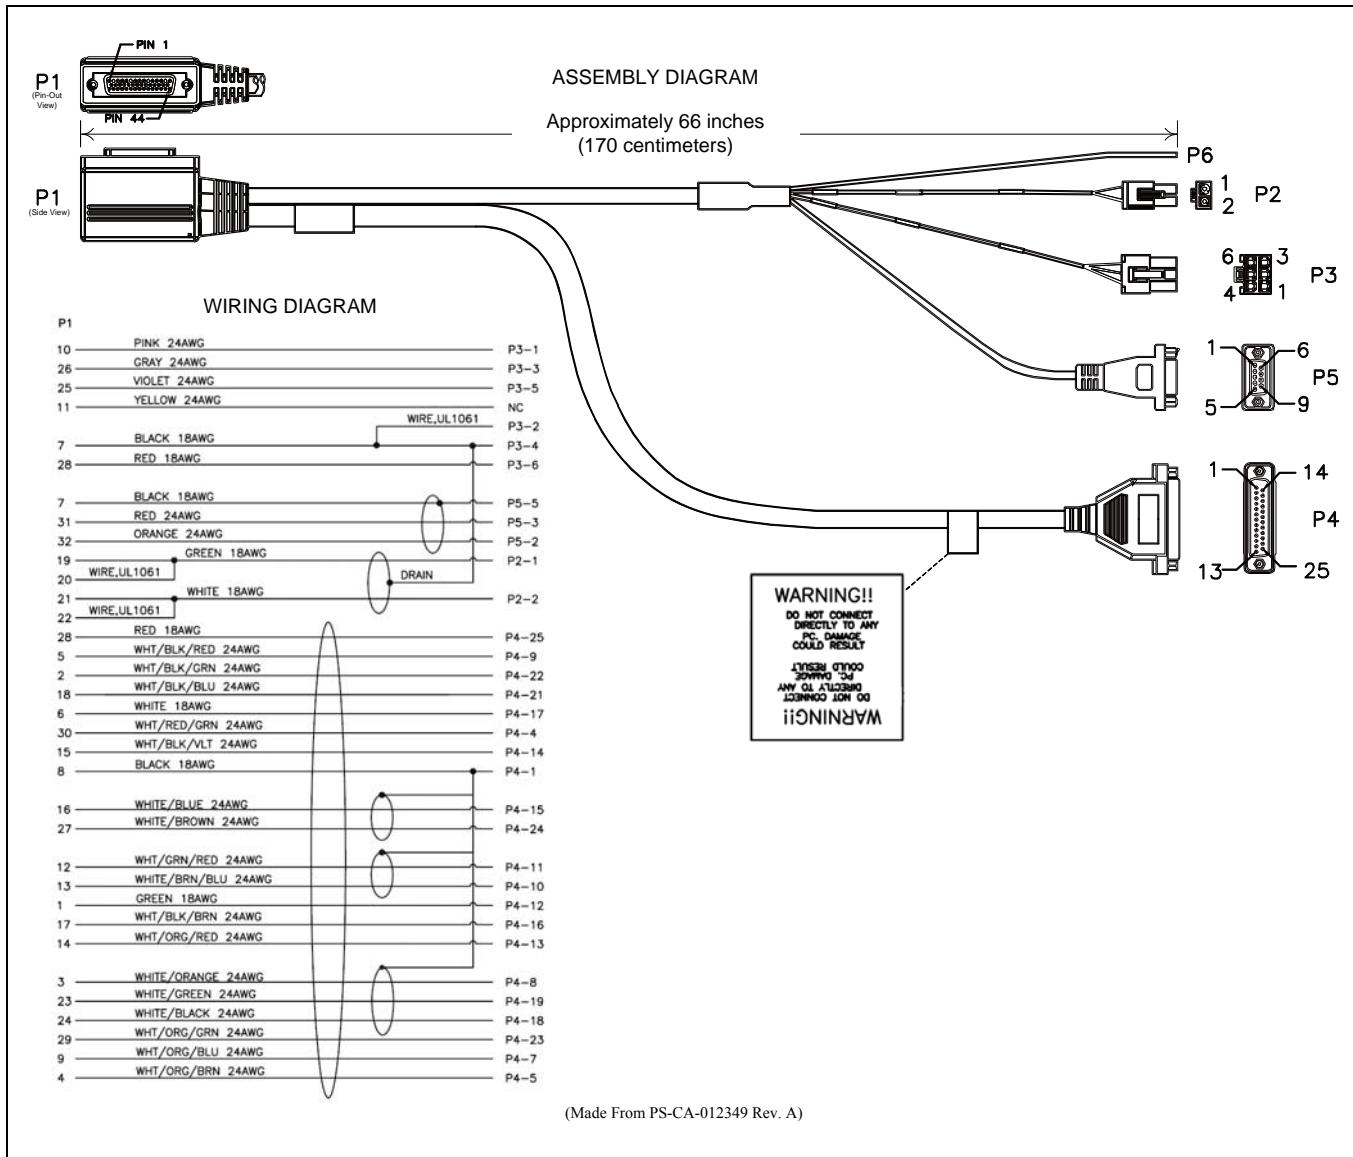


Figure 11-1: M5300/M7300 Option Cable CA-012349-001

P3, the cable's 6-pin connector, is a connector for basics accessories (e.g., hookswitch, etc.).

P4, the cable's D-subminiature 25-pin connector, provides audio and data connections for optional equipment such as an external siren and light system (e.g., Federal Signal SS2000 SmartSiren®).

P5, the cable's D-subminiature 9-pin connector, provides NMEA-formatted GPS serial data connections for the external computer processing the NMEA-formatted GPS data received by the radio's internal GPS receiver. See Section 12 on page 66 for additional information.

Table 11-1: M5300/M7300 Option Cable CA-012349-001 Interconnections

44-PIN I/O CABLE CONNECTOR P1 PIN	SIGNAL NAME	TO/FROM	DESCRIPTION
19	SPKR1	P2 pin 1	Speaker Audio Output 1 (Not used in a remote-mount radio installation)
20	SPKR1		
21	SPKR2	P2 pin 2	Speaker Audio Output 2 (Not used in a remote-mount radio installation)
22	SPKR2		
10	OUT2	P3 pin 1	Digital Output 2 (open-collector)
7	GND	P3 pins 2 & 4	Chassis Ground (fused on radio's PK Board at 3.15 amps)
26	HKSW	P3 pin 3	Hookswitch Digital Input Active = Ground. Inactive = Open
25	INP2	P3 pin 5	Digital Input 2
28	SWA+	P3 pin 6	Switched A+ (DC Power) Output
8	GND	P4 pin 1	Chassis ground (fused on PK Board at 3-amps)
30	DGPS_DATA	P4 pin 4	GPS Receiver Module DGPS Correction Data Serial Data Input (NMEA-Formatted)
4	EXTRX	P4 pin 5	External Rx Audio Output (for non-CAN based radio)
9	EXTMOD	P4 pin 7	External Tx Audio Input (for non-CAN based radio)
3	SDATA	P4 pin 8	In a front-mount M5300/M7300 radio installation, this pin for the siren/PA interface is the siren serial data output (open-collector/open-drain) from the radio's mounted (local) CH-721. It serially transfers siren and light control data from the CH-721 to a connected third-party siren and light system (e.g., Federal Signal SS2000 SmartSiren). Data rate = 1200 bps. Connects to SS2000's DB-9 pin 3. For a remote-mount radio installation, see footnote ⁵ .
5	FDISC	P4 pin 9	Buffered Discriminator Audio
13	ALO	P4 pin 10	Audio Ground/Reference (fused on radio's PK Board at 3.15 amps)

⁵ In a remote-mount M5300/M7300 mobile radio installation, this pin on the radio's DB-44 connector should not be used. It is not functional. Instead, use the respective pin on the CH-721 Option Cable's female DB-25 pin connector. See Section 11.3 for additional information.

Table 11-1: M5300/M7300 Option Cable CA-012349-001 Interconnections

44-PIN I/O CABLE CONNECTOR P1 PIN	SIGNAL NAME	TO/FROM	DESCRIPTION
12	MICHI	P4 pin 11	In a front-mount M5300/M7300 radio installation, MICHI and EXTALO provide the public address (PA) mic audio from the mounted (local) CH-721 to the siren and light system (e.g., Federal Signal SS2000 SmartSiren). Pin 11 connects to SS2000's DB-9 pin 5. Pin 12 connects to SS2000's DB-9 pin 6. For a remote-mount radio installation, see footnote ⁵ .
1	EXTALO	P4 pin 12	
14	VOLHI	P4 pin 13	Volume High
15	CTLON	P4 pin 14	Control On Digital Output (for non-CAN based radio)
16	XTONEENC	P4 pin 15	External Tone Encode Audio
17	XTONEDEC	P4 pin 16	External Tone Decode Audio
6	EXTALO	P4 pin 17	External Audio Output (Balanced, Low)
24	HORNRING	P4 pin 18	In a front-mount M5300/M7300 radio installation, this pin for the siren/PA interface is the horn/ring logic input to the radio's mounted (local) CH-721. When a connected third-party siren and light system (e.g., Federal Signal SmartSiren SS2000) has its horn/ring function active, this input is used to signal the head/radio as such. Connects to SS2000's DB-9 pin 8. For a remote-mount radio installation, see footnote ⁵ .
23	SONOFF	P4 pin 19	In a front-mount M5300/M7300 radio installation, this pin for the siren/PA interface is the siren on/off logic output (open-collector) from the radio's mounted (local) CH-721. It is the signal that powers the connected third-party siren and light system (e.g., Federal Signal SmartSiren SS2000) on and off. Connects to SS2000's DB-9 pin 4. For a remote-mount radio installation, see footnote ⁵ .
18	INP1	P4 pin 21	Digital Input 1
2	OUT1	P4 pin 22	Digital Output 1 (open-collector)
29	TXENB+	P4 pin 23	Transmit Enable B+ (for non-CAN based radio)
27	EXTMIC	P4 pin 24	External Mic Audio Input
28	SWA+	P4 pin 25	Switched A+ DC Power Output (for non-CAN based radio)
32	GPS_NMEA_RX	P5 pin 2	GPS Receiver Position Data Serial Data Output (NMEA-Formatted)
31	GPS_NMEA_TX	P5 pin 3	GPS Receiver Module Initialization Data Serial Data Input (NMEA-Formatted)
7	GND	P5 pin 5	Ground for GPS Serial Data Signals (fused on radio's PK Board at 3.15 amps)
11	IGNITION	(no connection)	Unused/Spare ignition sense input
33 through 44	—	(no connections)	These pins of P1 are not used/not connected

11.2 SERIAL PROGRAMMING CABLES CA-013671-010 AND -020

Serial Programming Cable CA-013671-010 (10 feet long) or CA-013671-020 (20 feet long) can be used to program and configure the M5300 mobile radio via a Personal Computer. Also, either cable can be used to extend GPS NMEA-formatted serial data connections available at connector P5 of the radio's Options Cable. The cables' assembly and wiring diagrams are shown in Figure 11-2 below.

The cable's male DB-9 connector (J1) mates to the female DB-9 serial port connector on the rear of the radio. Alternately, if the cable is being used to carry GPS NMEA-formatted serial data from the radio, this male DB-9 connector mates to connector P5 of M5300/M7300 Option Cable CA-012349-001.

The cable's female DB-9 connector (J2) mates to a PC's male DB-9 serial port connector. If the utilized PC is not equipped with a DB-9 serial port connector, the use of a suitable adapter is required, such as USB-to-RS-232 Adapter Cable CN24741-0001. As of the publication of this manual, CN24741-0001 is available via the Customer Resource Center; refer to Section 3.3 on page 17 for contact information.

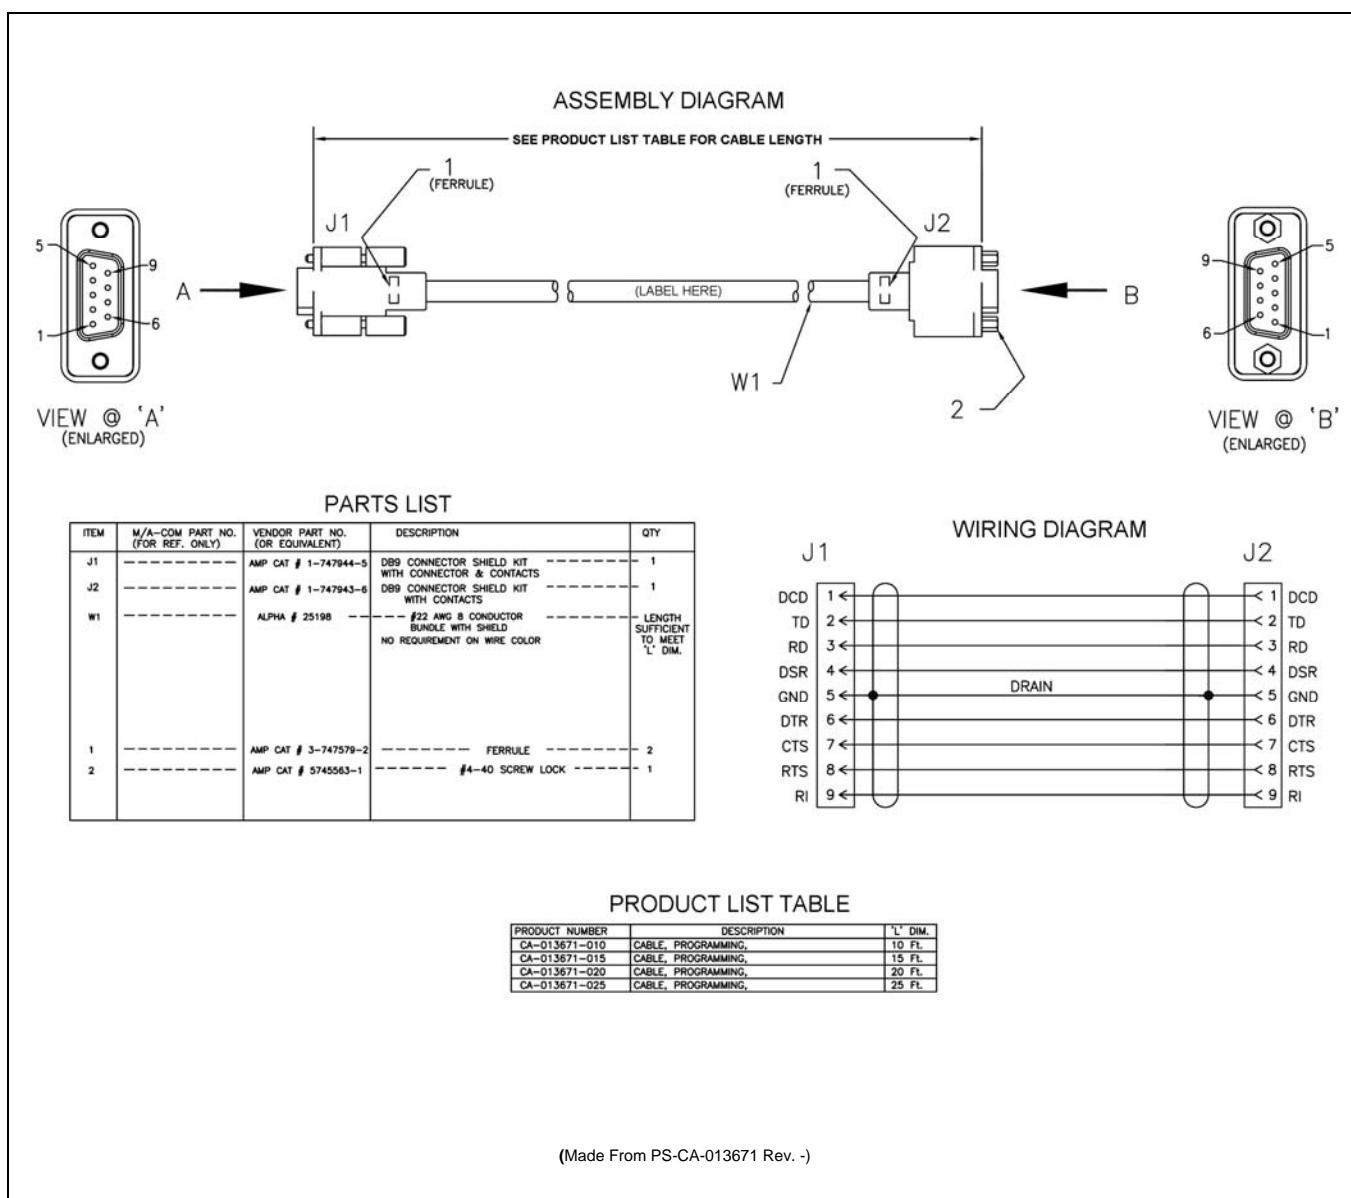


Figure 11-2: Serial Programming Cables CA-013671-010 and -020

11.3 CH-721 OPTION CABLE CA-011854-001

CH-721 Option Cable CA-011854-001 can be used to connect optional equipment to the 25-pin D-subminiature (DB-25) connector on the rear of the CH-721. This cable expands the connections available at the 25-pin connector to three (3) separate connectors. The cable's assembly and wiring diagrams are shown in Figure 11-3 below.

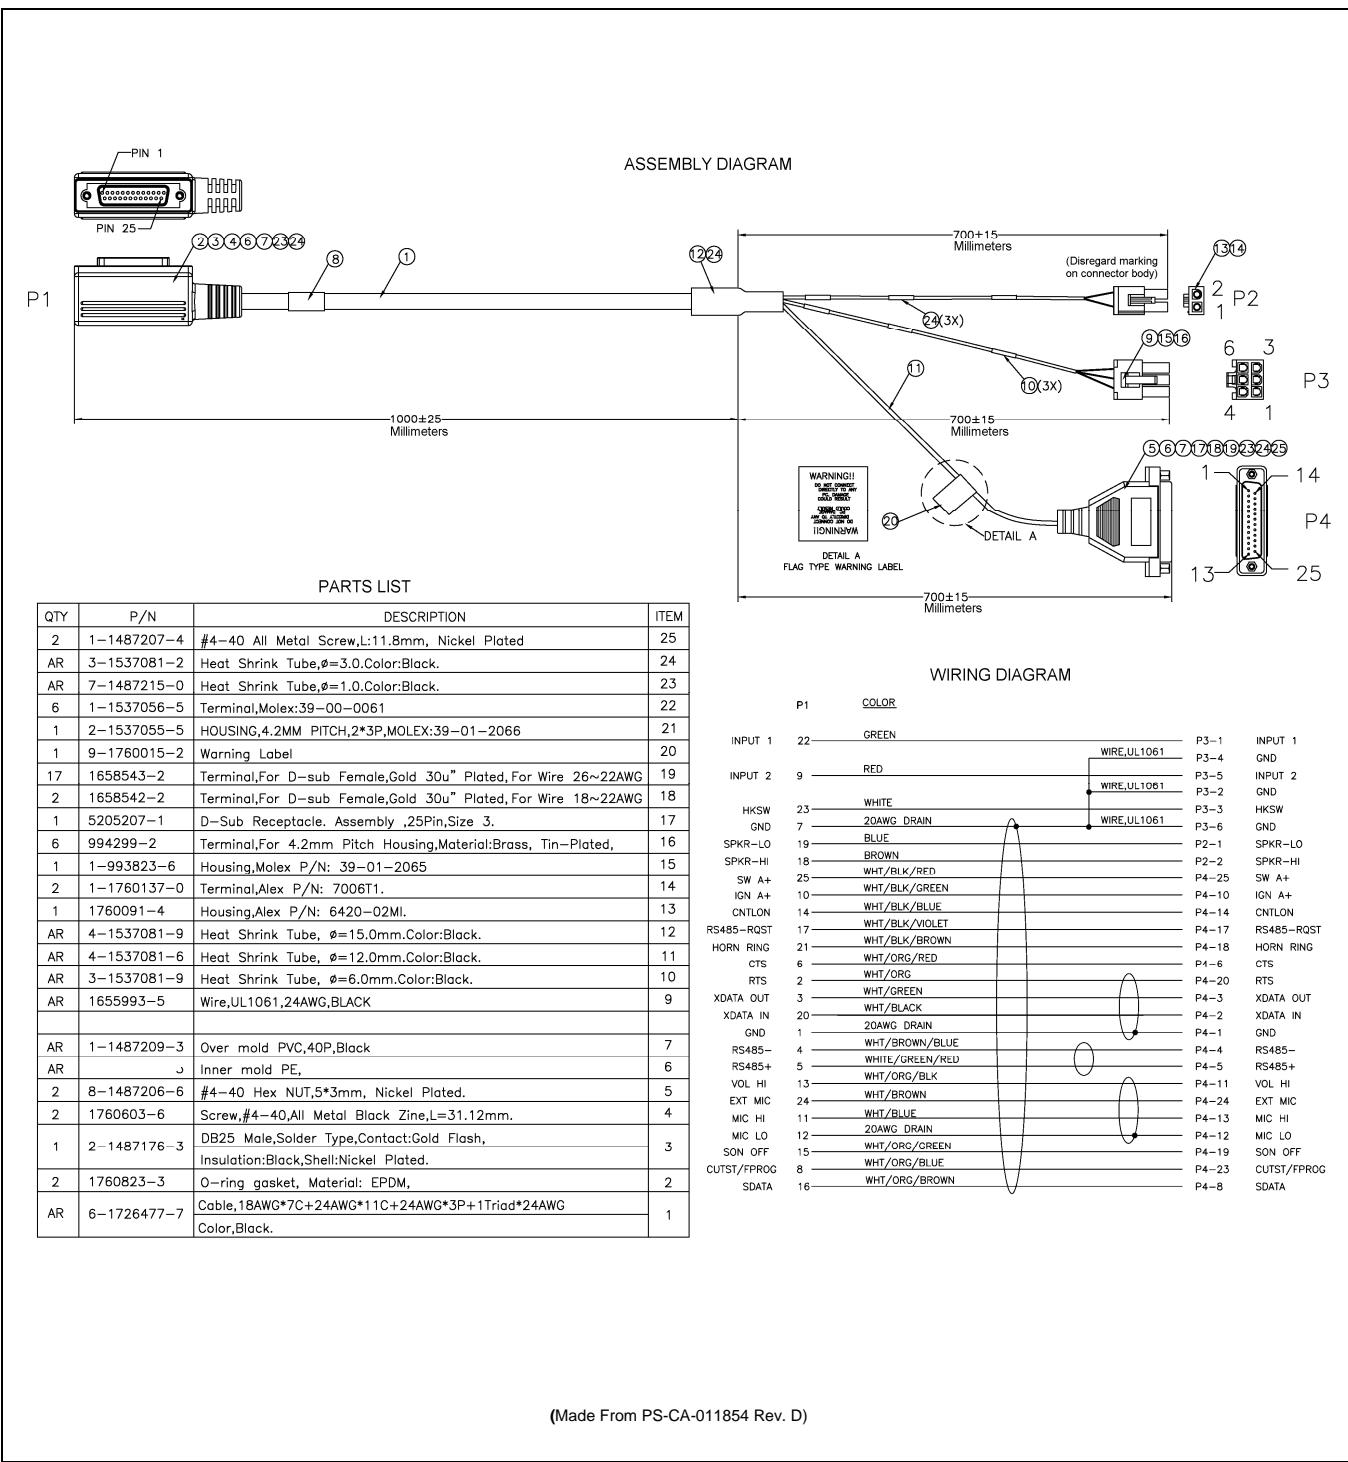


Figure 11-3: CH-721 Option Cable CA-011854-001

11.4 CH-721 SERIAL PROGRAMMING CABLE CA-104861

Serial Programming Cable CA-104861 (5 feet) can be used to program and configure the CH-721 control head via a Personal Computer. This cable has a female DB-9 connector on one end for connection to the PC's serial port connector and a male DB-9 connector on the other end for connection to the serial port connector on the rear of the head. The cable's assembly and wiring diagrams are shown in Figure 11-4 below.

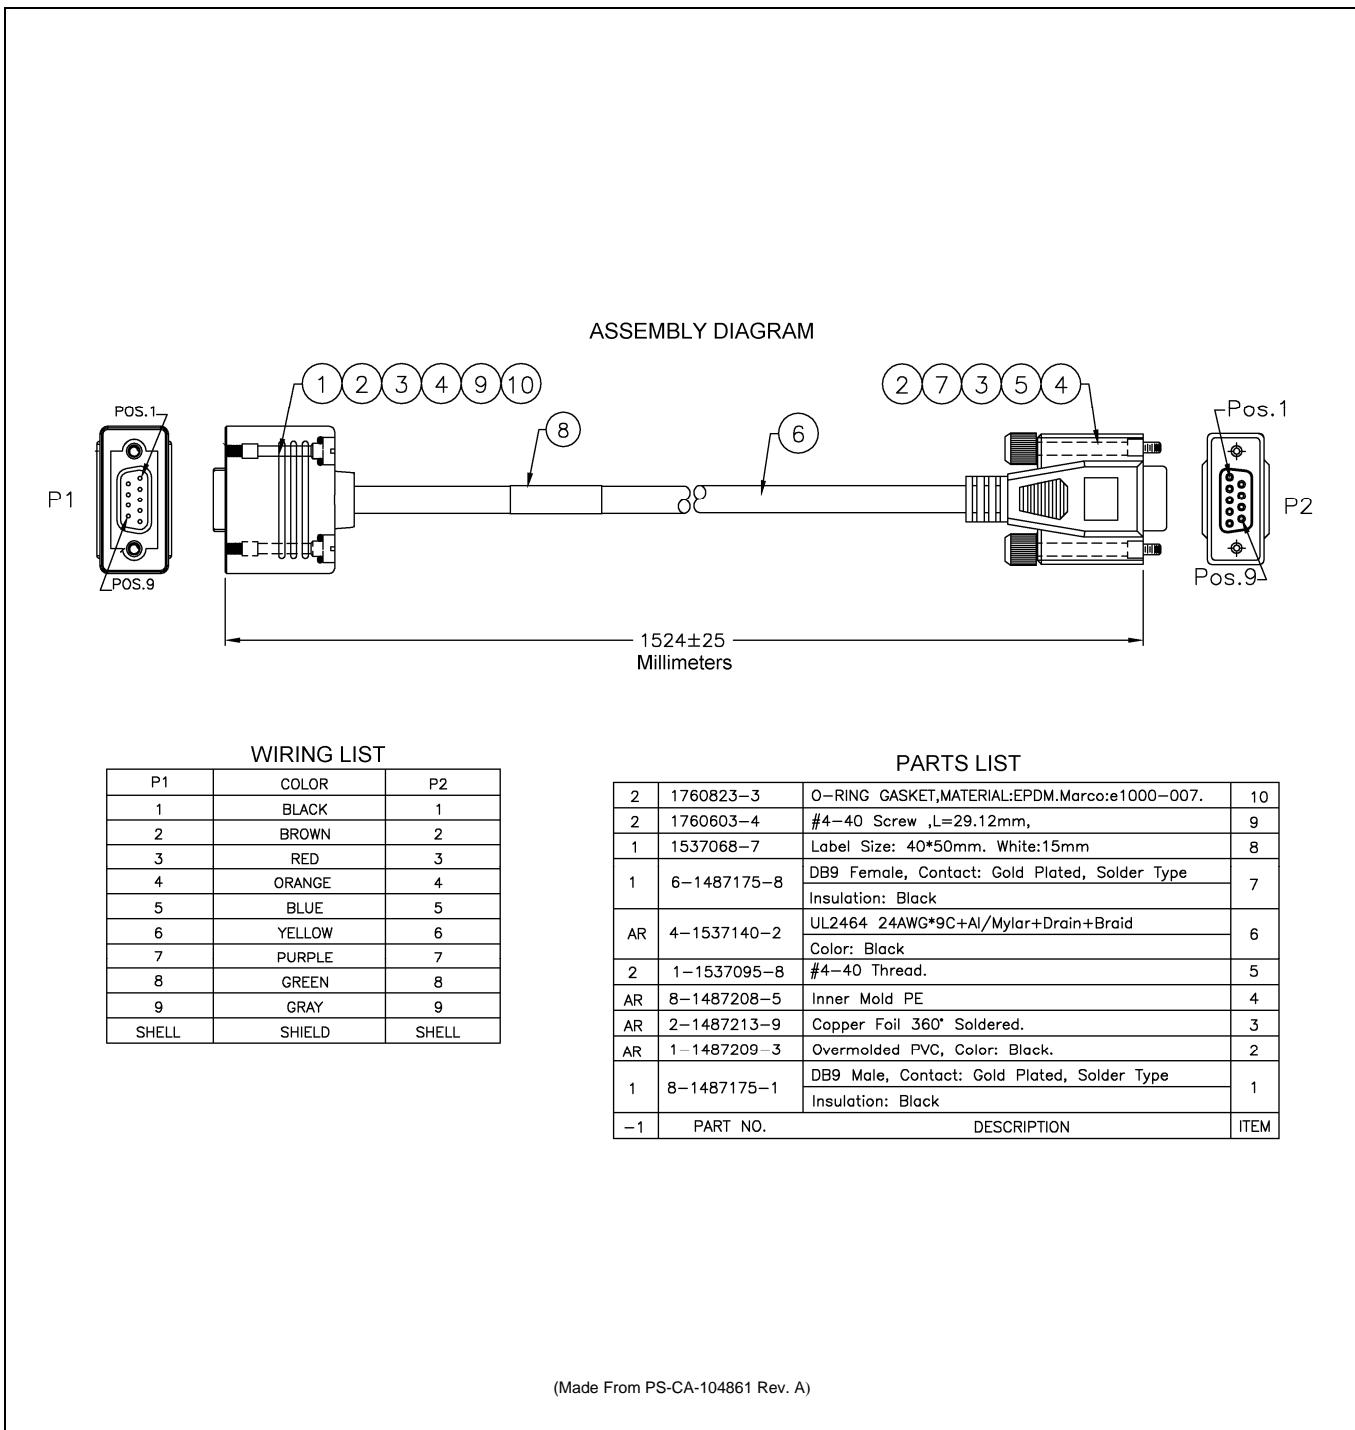


Figure 11-4: Programming Cable CA-104861

12 GPS NMEA-FORMATTED SERIAL DATA CONNECTION

To obtain GPS NMEA-formatted serial data from the radio, use of the M5300/M7300 Option Cable CA-012349-001 is required. Follow this procedure to complete the GPS NMEA-formatted serial data connections:

1. Obtain M5300/M7300 Option Cable CA-012349-001. Each “leg” of this cable is approximately 65 inches long (166 centimeters).
2. Connect the cable’s 44-pin D-subminiature (DB-44) male connector to the DB-44 female connector on the rear panel of the radio. Tighten the two jackscrews with a small flathead screwdriver. Do not over-tighten.
3. Connect the cable’s DB-9 female connector to the computer’s serial port DB-9 male connector — either directly or extended via a serial cable. Available serial cables for extending the length include CA-013671-010 (10 feet) and CA-013671-020 (20 feet); see Section 11.2. Tighten the screws firmly, and then route the cabling as required. If the computer is not equipped with a DB-9 serial port connector, the use of a suitable adapter is required, such as USB-to-RS-232 Adapter Cable CN24741-0001.
4. Follow the manufacturer’s instructions on processing the NMEA-formatted GPS data from the radio.

**NOTE**

If the M5300/M7300 Option Cable is not available, a 3-wire serial cable can be field-fabricated. On the radio end, this cable must interface to the three GPS-related signals of the radio’s 44-pin I/O Cable connector (pins 7, 31 and 32). See Table 11-1 for additional information.

**NOTE**

Industry software to process GPS information through this interface is not supported by Tyco Electronics.

13 INITIAL POWER-UP TEST

1. At the radio's main waterproof (HFB-type) fuse holder installed near the vehicle battery, insert the 15-amp AGC-type fuse that was included with the radio's DC Power Cable.
2. Tie and stow all fuse holders at this location to prevent excess vibration/movement.
3. Carefully reconnect the vehicle's battery ground cable.
4. If not already, temporarily connect the mobile antenna cable from the vehicle-mounted mobile antenna to the female TNC RF connector on the rear panel of the radio. This is a temporary connection until test procedures in Section 14 are complete.
5. If the radio is equipped with the GPS receiver option, permanently connect the antenna cable from the GPS antenna (or mobile/GPS combo antenna) to the female SMA connector on the rear panel of the radio. The male SMA connector on most GPS antenna cables has a 5/16-inch hex collar, so the use of a wrench of this same size is normally required for tightening. However, some may have collars with only knurled surfaces, so a standard wrench or torque wrench cannot be used. In either case, do not over tighten the connector and do not twist the cable when tightening.
6. If the installation is wired so the vehicle's ignition key/switch turns the radio on and off, turn the switch to the Accessory or Run position.
7. If the control head is not already powered up, do so by rotating its on/off/volume control clockwise out of the detent position.
8. Verify the control head has powered-up by observing its display. If the display is not lit, refer to Section 8.2.1 as necessary.



NOTE

Unlike many mobile radio products, the radio powers-up to the **state of last control**.

As long as the software configuration parameters have been loaded, successful installation is almost immediately realized:

- After a short boot-up sequence, the control head displays login information and/or a talk group.
- If no errors are displayed, the installation is most-likely properly wired.
- If an error is displayed, recheck all cable connections, verify all fuses are properly installed, and verify battery power on the load side of the fuses, etc. If problems persist, contact the Technical Assistance Center (see page 17).
- Consult the Operator's Manual for operational information.

Refer to the following section for performance test information.

14 PERFORMANCE TESTS

This section includes procedures to verify the performance of the installation's mobile antenna system. There are three (3) procedures in this section:

- Changing Operating Mode for Tests
- Testing by Transmitting into a Dummy Load (a 50-Ohm RF Terminator)
- Testing by Transmitting into the Mobile Antenna



The accuracy of test results depends upon a DC power source in the range of 13.8 to 16 volts DC, with a current capacity of greater than 8 amps. Make sure the vehicle's battery is fully charged by running the engine for a few minutes before the test, and keep the engine running during the test procedures. **Abide by the following WARNING!**



If the vehicle's engine must remain running, the vehicle location should be well ventilated so exhaust fumes from the engine do not cause harm!



If a vehicle equipped with this radio requires jump-starting, the radio installation's main AGC fuse (15-amp) should be removed from the holder prior to jump-starting. Doing so will prevent damage to the radio system.



NOTE

Prior to installation, the radio's power level should be configured appropriately. The wide range of power levels indicated in the following procedures takes into account such things as: customer's requirements; measurement errors, especially to include uncalibrated equipment; cabling losses; and voltage and temperature variations. By no means should the result from Performance Testing in this section be construed as the exact value of power level output from the radio, as the value is set and more accurately measured in the factory. The values obtained in these test procedures determine a successful installation only.

14.1 CHANGING OPERATING MODE FOR TESTS

To complete tests in this section, placing the radio in a conventional mode and using an average-responding wattmeter to measure RF transmit power is recommended. However, if the radio is not programmed for conventional mode operations (i.e., OpenSky Trunking Protocol (OTP) mode is available but EDACS Conventional P25 (ECP) mode is not), tests will require a peak-reading RF wattmeter to measure RF transmit power. To select either conventional or OpenSky mode, use one of the following procedures:

14.1.1 Changing from OpenSky to Conventional

1. If necessary, apply power to the radio and turn it on.
2. Use the control head's **•/•• Ramp Control** to scroll through the menu until **Mode Menu** appears in the middle line of the display. This control is shown in Figure 8-5 and in Figure 8-6 on page 49.
3. Use the **+/- Ramp Control** to select an available conventional channel/system.

4. Confirm the selection by pressing the **MENU** button, then toggling the **Ramp Control** once (to select **Y** for Yes), followed by pressing the **MENU** button again. The radio will enter the selected mode as indicated by the display.
5. Select a conventional channel for test transmissions using either the **•/•• Ramp Control** or the **System/Group/Channel Selection Control** (required control per programming).

14.1.2 Changing from Conventional to OpenSky

1. If necessary, apply power to the radio and turn it on.
2. Use the control head's **•/•• Ramp Control** to scroll through the menu until an OpenSky system's name is displayed.
3. After a few seconds, the radio will automatically transition to OTP mode for operations on the selected OpenSky system.
4. If the radio is not programmed for auto-login, login to the OpenSky system. For login instructions, refer to the Operator's Manual (publication MM-014716-001) or the respective Quick Guide (publication MM-014368-001) as necessary. The Quick Guide is included with the radio when it ships from the factory.
5. Select a talk group for test transmissions using either the **•/•• Ramp Control** or the **System-/Group/Channel Selection Control** (required control per programming).

14.2 REQUIRED TEST EQUIPMENT

Table 14-1: Required Test Equipment

TEST EQUIPMENT	MODEL / PART NUMBER & DESCRIPTION
Average-Responding Wattmeter (for conv. measurements)	Bird Electronic Corp. Model 43 (or equivalent) with Type N female connectors at input and output ports.
or	
Peak-Reading Wattmeter (for OpenSky measurements)	Bird Electronic Corp. Model 4314B (or equivalent) with Type N female connectors at input and output ports.
Wattmeter Slug	Bird Electronic Corp. Element 50E, 50-Watt, 400 - 1000 MHz (or equivalent).
RF Coaxial Jumper Cable	Pasternack Enterprises PE3661-36 (or equivalent) 50-Ohm Coaxial Cable with TNC male connector and Type N male connector, approximately three (3) feet in length. The utilized cable must have VSWR below 1.5:1 within the RF passband.
N-to-TNC RF Adapter	Pasternack Enterprises PE9090 (or equivalent) Type N male to TNC female adapter. Required to connect the cable of the vehicle-mounted 700/800 MHz antenna to the wattmeter.
50-Ohm RF Terminator ("Dummy Load")	Pasternack Enterprises PE6106 (or equivalent) 50-ohm RF terminator rated at greater than 50 watts power, with Type N male connector.
Vehicle-Mounted Antenna	Tests are performed with the vehicle-mounted 700/800 MHz antenna per the installation described in Section 6 of this manual.

14.3 TRANSMITTING INTO A DUMMY LOAD

1. Using the Type N male to TNC male RF coaxial jumper cable, connect the radio's antenna connector to the wattmeter's input connector. Refer to Figure 14-1 as necessary.
2. Connect the 50-ohm dummy load to the wattmeter's output connector, in place of the antenna cable from the vehicle-mounted 700/800 MHz antenna.



As previously stated, if conventional mode is not available per radio programming (i.e., OTP mode is available but ECP mode is not), a peak-reading RF wattmeter is required to measure RF transmit power. Otherwise, the use of an average-responding wattmeter is recommended. Recommended wattmeter types are listed in Table 14-1.

3. If not already, turn the radio on and set it to the required operating mode (based upon available radio programming and test equipment). Refer to Section 14.1 as necessary.
4. Set the radio to a test talk group or conventional channel, if available.



It is recommended that a test talk group/channel be allocated for this testing. This same group should be used during the antenna test procedure which is presented in the subsequent section.

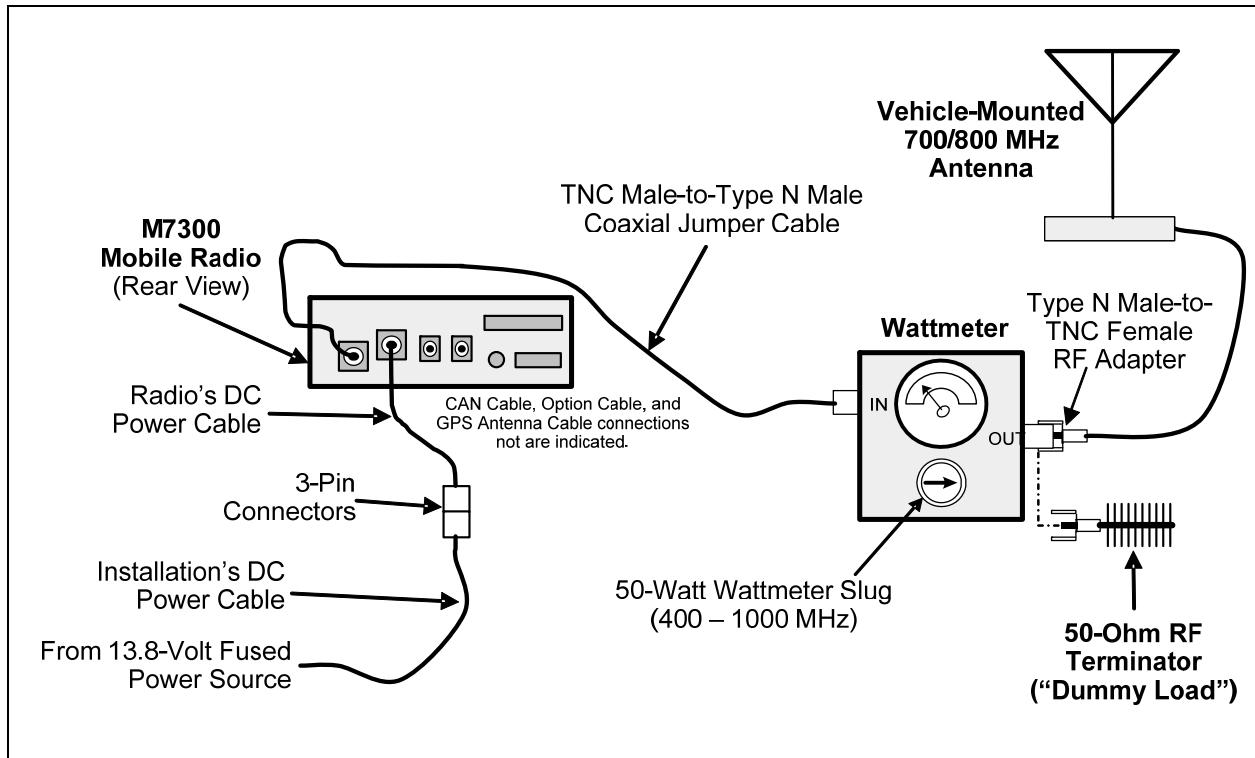


Figure 14-1: Wattmeter Connections for Antenna System Tests

5. Position the wattmeter's slug to measure forward RF output power. Rotate it if necessary. The arrow on the face of the slug must point away from the radio and towards the dummy load for forward power measurements.

6. **For conventional mode transmissions**, set the wattmeter to measure average RF power.
- For OpenSky mode transmissions**, set the wattmeter to measure peak RF power.
7. Key the radio's transmitter via the microphone's PTT button.
8. For a 700 MHz band transmission, compare the wattmeter's reading with the target RF output power range of between **15.1 and 23.9 watts** (19 watts ± 1 dB). This transmit output power range assumes the radio is currently configured for high-power transmit.



Transmit only for as long as needed to take the measurement, then immediately disable the transmission.

9. **If the wattmeter reading is within the range**, record the measured value in the appropriate space on the data collection form near the end of this manual.

If the wattmeter reading is outside the range, verify the radio's power supply voltage (i.e., battery voltage) is within the specified range, recheck all connections and measure the RF output power again. If this fails to produce a reading within the range, replace it and repeat this procedure. If problems persist, contact the Technical Assistance Center (see page 17).

14.4 TRANSMITTING INTO THE MOBILE ANTENNA

1. Connect the antenna cable from the vehicle-mounted 700/800 MHz antenna to the wattmeter as shown in Figure 14-1.
2. If not already, turn the radio on and set it to the required operating mode (based upon available radio programming and test equipment). Refer to Section 14.1 as necessary.
3. Set the radio to a test talk group or conventional channel, if available.



It is recommended that a test talk group/channel be allocated for this testing. Otherwise, interference with other radio users in the system may occur. **Also, during transmissions, always observe the RF exposure-related safety information presented in Section 1.2 (begins on page 6).**

4. Position the wattmeter's slug to measure forward RF output power. Rotate it if necessary. The arrow on the face of the slug must point away from the radio and towards the antenna for forward power measurements.
5. **For conventional mode transmissions**, set the wattmeter to measure average RF power.
- For OpenSky mode transmissions**, set the wattmeter to measure peak RF power.
6. Key the radio's transmitter via the microphone's PTT button.
7. For a 700 MHz band transmission, compare the wattmeter's reading with the target RF output power range of between **15.1 and 23.9 watts** (19 watts ± 1 dB). This transmit output power range assumes the radio is currently configured for high-power transmit.

For an 800 MHz band transmission, compare the wattmeter's reading with the target RF output power range of between **27.8 and 44.1 watts** (35 watts ± 1 dB). This transmit output power range assumes the radio is currently configured for the high-power transmit.



Transmit only for as long as needed to take the measurement, then immediately disable the transmission.

8. If the wattmeter reading is within the range, record the value in the appropriate space on the data collection form near the end of this manual.

If the wattmeter reading is outside the range, verify the radio's power supply voltage (i.e., battery voltage) is within the specified range, recheck all connections, and measure the forward power again. If these checks/corrections fail to produce a reading within the range, check all cabling and connections and repeat the testing procedure to this point. In the event the wattmeter reading still falls outside the range, replace the antenna, make sure all connections are seated firmly, and repeat the testing procedure. If problems persist, contact the Technical Assistance Center (see page 17).

9. Position the wattmeter's slug to measure reverse (reflected) RF power from the antenna. The arrow on the face of the slug must point away from the antenna and to the radio to measure reverse power.
10. Key the radio's transmitter via the microphone's PTT button.
11. Compare the wattmeter reading with the RF power output range of **2 watts or less**.



Transmit only for as long as needed to take the measurement, then immediately disable the transmission.

12. If the wattmeter reading is within the range, record the value in the appropriate space on the data collection form near the end of this manual.

If the wattmeter reading is outside the range, make sure the antenna is consistent with the specified frequency range of the radio. Recheck all antenna connections, and measure the reverse power again. If these checks/corrections fail to produce a reading within the range, replace the antenna and repeat the entire antenna test procedure. Any value exceeding the maximum allowable reflected power value will result in a diminished RF output signal. If problems persist, contact the Technical Assistance Center (see page 17).

13. Disconnect the coaxial cable jumper and wattmeter.
14. Permanently connect the cable from the vehicle-mounted 700/800 MHz antenna to the radio's antenna cable by mating the two TNC connectors together. Use two pairs of soft-jaw pliers to gently tighten this connection. Do not over tighten and do not twist either cable.
15. Make several test calls on the radio system to verify operation of the mobile radio. Before making the calls, select other talk groups or conventional channels, as required to verify operation.



To prevent RF leakage and ensure peak performance, make sure the RF connectors are tight, but do not over-tighten so connector damage will not occur.



Improper installation of the RF cables may lead not only to poor radio performance but also to harmful exposure to RF electromagnetic energy.

Testing is complete. The radio is now ready for normal communications.

14.5 TEST PERFORMANCE DATA FORM

Clip  Here

Enter the information requested on this data collection form. Clip this form and file it as a permanent record of the tested performance of the M7300 mobile radio installation.

Mobile Radio Serial Number

Antenna Make and Model Numbers

 /

Date of Test
(mm/dd/yyyy)

Company Performing Installation

Technician Performing Test

Watts
Power into a Dummy Load

Watts	Watts
Forward Power with Antenna	Reflected Power with Antenna

15 COMPLETE THE INSTALLATION

Double-check the following items before considering the installation completed:

- Verify all newly installed mechanical hardware is mounted securely and all respective mounting hardware is tight.
- Verify all electrical interconnections are connected properly and the associated connector attachment hardware is tight. Pay special attention to all RF antenna cables!
- Verify all related fuses are correctly installed and properly rated.
- Verify all electrical cables and wiring are tied, stowed, and protected so they are out of the way of casual contact, away from sources of extreme heat, and wire chafing cannot occur. Pay special attention to all RF antenna cables!
- To prevent fumes from entering the vehicle's passenger compartment, seal the hole/grommet/wire combination at the firewall with a silicon-based sealer.
- Verify all vehicle components are properly reinstalled such as kick panels, headliners, and seats.
- If the installation includes a separately-mounted on/off power switch for manually turning the radio (and possibly others systems) on and off, verify it is labelled accordingly. For example: "**Radio ON/OFF.**"
- Remove all tools and unused hardware from the vehicle.
- Verify the test performance data has been recorded on the data collection form shown in this manual.

16 WARRANTY

- A. M/A-COM, Inc. (hereinafter "Seller") warrants to the original purchaser for use (hereinafter "Buyer") that Equipment manufactured by or for the Seller shall be free from defects in material and workmanship, and shall conform to its published specifications. With respect to all non-M/A-COM Equipment, Seller gives no warranty, and only the warranty, if any, given by the manufacturer shall apply. Rechargeable batteries are excluded from this warranty but are warranted under a separate Rechargeable Battery Warranty (ECR-7048).
- B. Seller's obligations set forth in Paragraph C below shall apply only to failures to meet the above warranties occurring within the following periods of time from date of sale to the Buyer and are conditioned on Buyer's giving written notice to Seller within thirty (30) days of such occurrence:
 1. for fuses and non-rechargeable batteries, operable on arrival only.
 2. for parts and accessories (except as noted in B.1) sold by Seller's Service Parts Operation, ninety (90) days.
 3. for P7200, P7100^{IP}, P5400, P5300, P5200, P5100, P3300, PANTHER™ 405P and 605P, M7300, M7200 (including V-TAC), M7100^{IP}, M7300 and M3300 radios, two (2) years, effective 10/01/2007.
 4. for all other equipment of Seller's manufacture, one (1) year.
- C. If any Equipment fails to meet the foregoing warranties, Seller shall correct the failure at its option (i) by repairing any defective or damaged part or parts thereof, (ii) by making available at Seller's factory any necessary repaired or replacement parts, or (iii) by replacing the failed Equipment with equivalent new or refurbished Equipment. Any repaired or replacement part furnished hereunder shall be warranted for the remainder of the warranty period of the Equipment in which it is installed. Where such failure cannot be corrected by Seller's reasonable efforts, the parties will negotiate an equitable adjustment in price. Labor to perform warranty service will be provided at no charge during the warranty period only for the Equipment covered under Paragraph B.3 and B.4. To be eligible for no-charge labor, service must be performed at a M/A-COM factory, by an Authorized Service Center (ASC) or other Servicer approved for these purposes either at its place of business during normal business hours, for mobile or personal equipment, or at the Buyer's location, for fixed location equipment. Service on fixed location equipment more than thirty (30) miles from the Service Center or other approved Servicer's place of business will include a charge for transportation.
- D. Seller's obligations under Paragraph C shall not apply to any Equipment, or part thereof, which (i) has been modified or otherwise altered other than pursuant to Seller's written instructions or written approval or, (ii) is normally consumed in operation or, (iii) has a normal life inherently shorter than the warranty periods specified in Paragraph B, or (iv) is not properly stored, installed, used, maintained or repaired, or, (v) has been subjected to any other kind of misuse or detrimental exposure, or has been involved in an accident.
- E. The preceding paragraphs set forth the exclusive remedies for claims based upon defects in or nonconformity of the Equipment, whether the claim is in contract, warranty, tort (including negligence), strict liability or otherwise, and however instituted. Upon the expiration of the warranty period, all such liability shall terminate. The foregoing warranties are exclusive and in lieu of all other warranties, whether oral, written, expressed, implied or statutory. NO IMPLIED OR STATUTORY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE SHALL APPLY. IN NO EVENT SHALL THE SELLER BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES.

This warranty applies only within the United States.

M/A-COM, Inc.
1011 Pawtucket Blvd.
Lowell, MA 01853
1-877-OPENSKY

M/A-COM, Inc.
221 Jefferson Ridge Parkway
Lynchburg, VA 24501
1-800-528-7711

ECR-7047F



Our commitment. Your advantage.

Tyco Electronics Wireless Systems
221 Jefferson Ridge Parkway
Lynchburg, Virginia 24501
(Outside USA, 1-434-385-2400) Toll Free 1-800-528-7711
www.tewireless.com

Printed in U.S.A.