
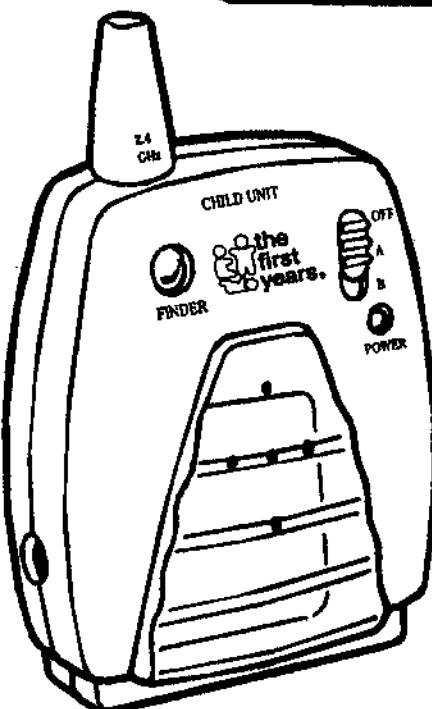


the  
first  
years.  
Ideas Inspired by Parents

# NextGeneration 2.4 GHz Monitor

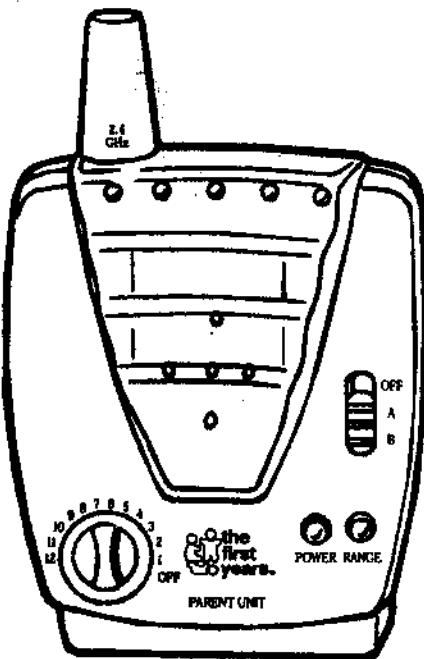

**NOTICE:**  
The changes or modifications  
not expressly approved by the  
party responsible for compliance  
could void user's authority to  
operate the equipment.

## Quick Start Instructions

You'll find detailed instructions inside.  
Please read the safety instructions on page 2.

### 1. Set up the Parent's Unit

- Install the batteries supplied.
- Plug one of the two AC adapters provided into the Parent's Unit, and charge for 10 to 16 hours (16 preferred).  
Note: You may use the Monitor while it is being charged.
- Once batteries are charged, unit can be used in portable mode (without the AC adapter).

### 2. Set up the Child's Unit

- Place the unit near your child (within 6 feet, but well beyond child's reach).
- Position the unit straight up.
- Plug in the second AC adapter provided.
- Slide the channel/off switch to A or B to turn the unit on.

### 3. Use the Monitor (Parent's Unit)

- Slide the channel/off switch to the same channel as the Child's Unit (A or B).
- Rotate the volume dial to the desired level.
- Keep the Parent's Unit with you, and keep it positioned upright.

### To Use the FINDER

- Press the Finder button on the Child's Unit; Parent's Unit will begin to beep.
- Once you locate the Parent's Unit, slide the channel/off switch to off (the beeping will stop); wait at least 5 seconds, then slide it back to the same channel as the Child's Unit.

#### WARNING

This product is a monitoring device designed to assist in the monitoring of children, not as a prevention for injury to or loss of child.

- This product is not a substitute for adult supervision. All children should be monitored at all times by responsible adults.
- This product is not a toy. Do not allow children to play with it.
- To prevent electric shock, strangling by cord, choking, or eye injury, do not place the monitor in, or attach it to, a crib or playpen.
- Never place either unit within a child's reach.



If you have questions about the use of your  
NextGeneration 2.4 GHz Monitor, please call us  
toll-free: 1-800-533-6708.

# Safety Instructions

## DANGER! TO AVOID THE RISK OF FIRE OR ELECTRIC SHOCK

- DO NOT USE THE ADAPTER NEAR WATER (BATHTUB, SINK, SWIMMING POOL, ETC.)
- DO NOT REMOVE THE COVER OR BACK OF EITHER UNIT. THERE ARE NO USER-SERVICEABLE PARTS INSIDE.

## WARNING: WHEN USING THE ADAPTER, KEEP OUT OF REACH OF CHILDREN TO PREVENT ELECTRIC SHOCK, STRANGLING BY CORD, CHOKING, OR EYE INJURY.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

### 1. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

### 2. OBSERVE ALL WARNINGS.

### 3. FOLLOW ALL OPERATING INSTRUCTIONS.

### 4. WATER AND MOISTURE.

This product should not be used near water, for example, near a bathtub or sink, in a wet basement or near a swimming pool.

### 5. VENTILATION.

This product should be situated in such a way that it has proper ventilation. Do not place on a bed, sofa, rug, or similar surface that may block ventilation openings. Do not place in an enclosed area, such as a cabinet or bookcase that might impede the flow of air through the ventilation openings.

### 6. HEAT.

This product should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.

### 7. POWER SOURCE.

This product should be connected to a power supply only of the type described in these instructions or marked on the product itself.

**IMPORTANT.** The following applies only to UL LISTED UNITS. This product is being supplied with the required safety feature of a Polarized Plug. You will note that one prong is larger than the other so that the plug fits into the outlet only one way. DO NOT TAMPER WITH THE PLUG under any circumstances.

### 8. POWER CORD PROTECTION.

The power supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to the cord at the plug, at the convenience receptacle, and at the point it exits from the appliance.

### 9. CLEANING.

Before cleaning, be sure to unplug. Clean only as recommended in these instructions.

### 10. NON-USE PERIODS.

The power cord of the product should be unplugged from the outlet when the Monitor will be unused for a long period of time.

### 11. OBJECT AND LIQUID ENTRY.

Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through the openings.

### 12. DAMAGE REQUIRING SERVICE.

This product should be serviced by qualified service personnel (see below) when:

- A. The power supply cord or plug has been damaged; or
- B. Objects have fallen or liquid has been spilled into it; or
- C. The product has been exposed to rain; or
- D. The product does not appear to operate normally or exhibits a marked change in its performance; or
- E. The product has been dropped or the enclosure damaged.

### 13. WALL MOUNTING.

The Monitor should be mounted to a wall only as recommended in these instructions.


## Service

If your Monitor is not working properly, please call The First Years at 1-800-533-6708.


Often, we can explain how to get your unit working again. If the unit needs repair, you will be requested to pack it carefully and send it to:

The First Years/Service Department  
One Kiddie Drive  
Avon, MA 02322-1171

## Parent's Unit (receiver)

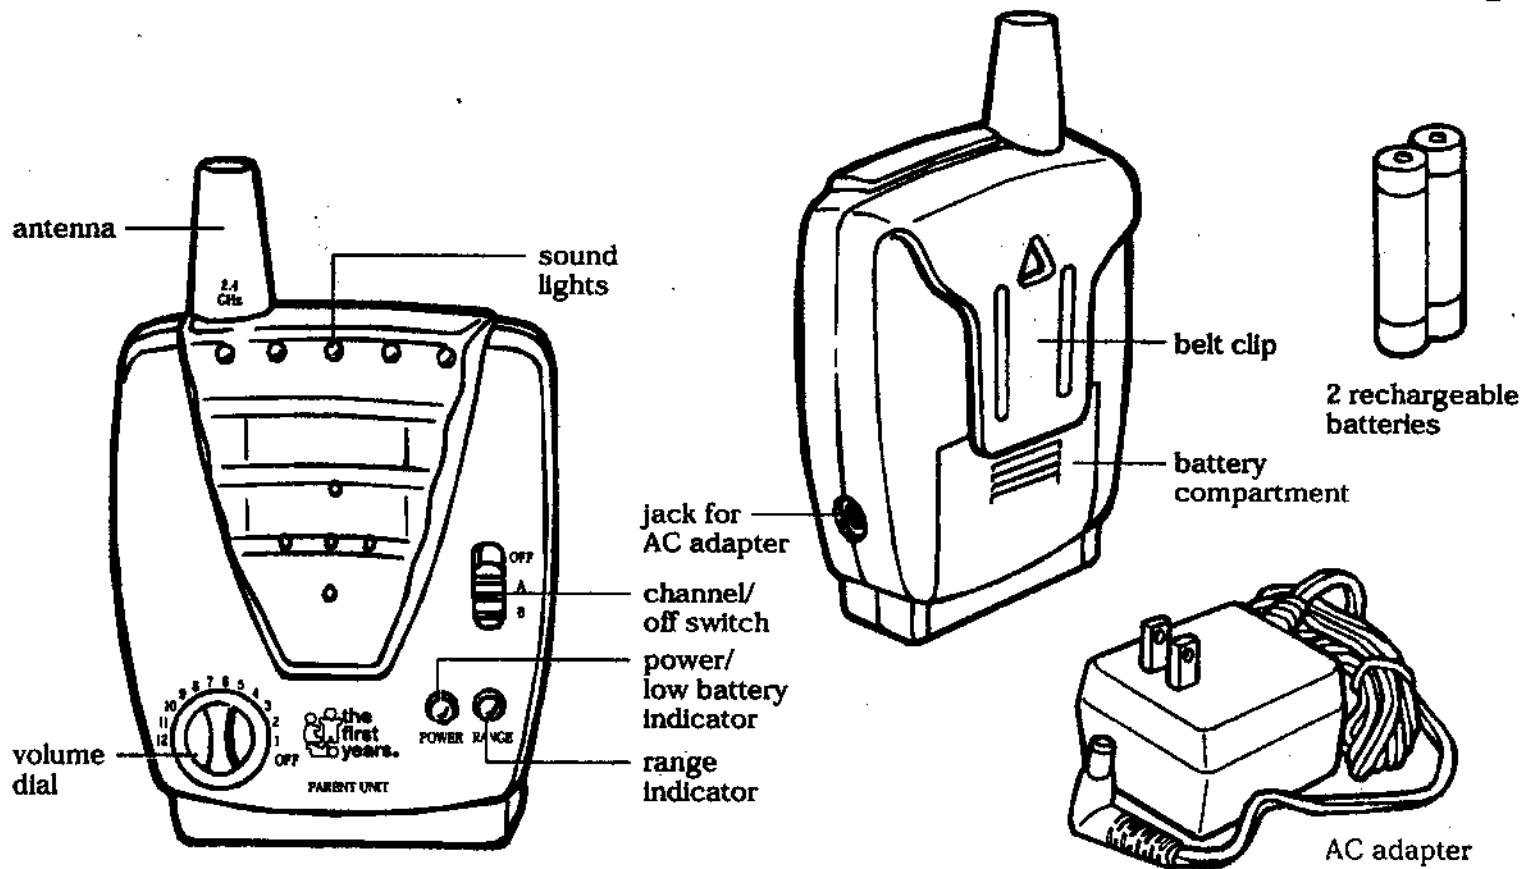

## Child's Unit (transmitter)

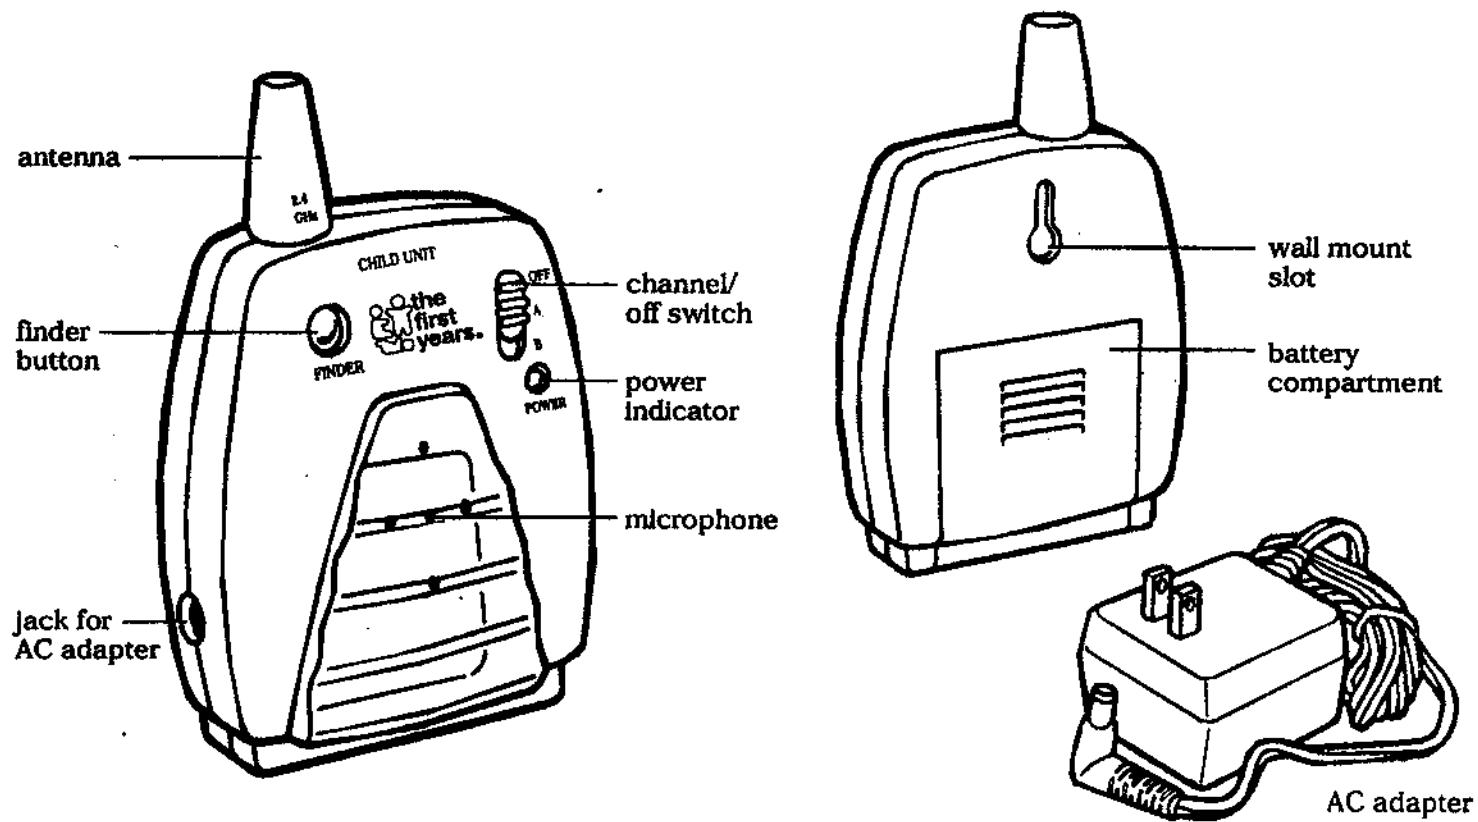

# 1 To Set Up


## Parent's Unit

### 1. Install the batteries

- a. Press on the indented finger grip to release, then slide and lift the battery compartment cover.
- b. Insert the two AA rechargeable batteries supplied. Position them so the + and - contacts are aligned with the corresponding contacts on the battery clip.
- c. Lower the battery compartment cover, and slide it until it clicks into place.

When it's time to change these batteries: Use the pull tab to release the old batteries. Remove them, and replace them with two AA nickel cadmium (NiCd) rechargeable batteries.

**WARNING:** Never plug an AC adapter into the Parent's Unit if you have installed non-rechargeable batteries in the unit; doing so could result in damage to the unit, and the warranty would become void.

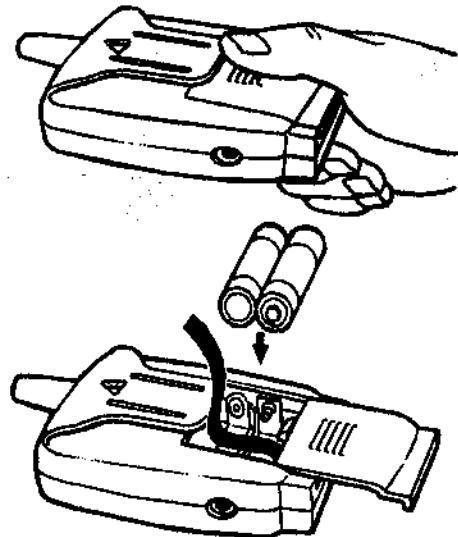


### 2. Charge the batteries. Batteries must be fully charged for optimum performance.

- a. Insert the AC adapter plug into the Jack on the side of the unit, then plug the adapter into an electrical outlet.
- b. Allow the batteries to charge for 10 to 16 hours (16 hours is recommended, as this is the maximum time required to charge the batteries fully.) The power indicator will change from red to green when the batteries are fully charged.

Note: You can use the Monitor while the Parent's Unit is being charged, or it can be charged with the unit off.

**CAUTION:** Always use the AC adapter(s) supplied with this product. Do not use any other adapter. Monitor could be damaged, and warranty would become void.

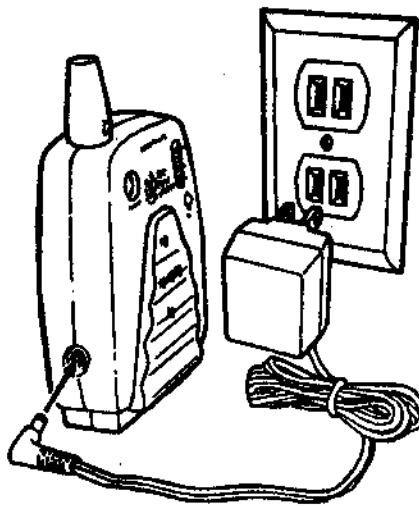

## Child's Unit


### 1. Position the Child's Unit within approximately 6 feet of your child, yet out of the child's reach.

**WARNING:** Do not place Child's Unit in crib or attach to crib.

(To prevent heat build-up, place on an open surface away from heat sources; do not place in an enclosed space.)

### 2. Insert the AC adapter plug into the jack on the side of the unit, then plug the adapter into an electrical outlet.

For battery operation (optional): Unplug the unit, and install two AA non-rechargeable batteries (not included). (See "Care of Your Monitor").

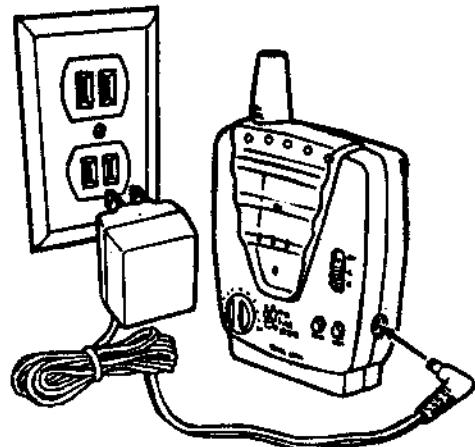

**WARNING:**

Never plug an AC adapter into the Child's Unit when there are non-rechargeable batteries installed; doing so could result in damage to the unit, and the warranty would become void.

Always use the AC adapter(s) supplied with this product. Do not use any other adapter. Monitor could be damaged, and warranty would become void.

### For wall mounting (optional):

1. Securely fasten one #6 flat head wood screw on the wall. (For best results, use a 3/4-inch screw; mount in a solid wood panel, or use a screw anchor).
2. Leave the screw head protruding from the wall by at least 1/4-inch.
3. Fit the screw head slot (on the back of the unit) over the screw head and slide the unit down to seat it firmly.
4. To test that the unit is securely mounted, press on its edges.

## 2 To Use Monitor

**Note:** Batteries must be fully charged for portable use.

1. Slide the channel/off switch on the Child's Unit to either A or B to turn the unit on.
2. Slide the channel/off switch on the Parent's Unit to the same channel as the Child's Unit (A or B). This turns the unit on. (For the Monitor to work properly, both units must be set to the same channel.)
3. Turn the volume dial on the Parent's Unit clockwise to the desired loudness level.
4. Keep the Parent's Unit with you. For best reception keep both units as near upright as possible.

### Range:


The range of the Monitor will vary with the surroundings. You may want to test its workable range by walking through your house and yard observing the range light and listening for the volume and clarity of the sounds being transmitted. If the range indicator turns red, you have gone out of range.

### Using belt clip:

Slide onto your belt or waistband. The belt clip has two slots; you can thread your belt through these slots for added security.

### Changing channels:

Always keep both units set to the same channel (A or B). If clarity is not satisfactory on one channel, switch to the other.

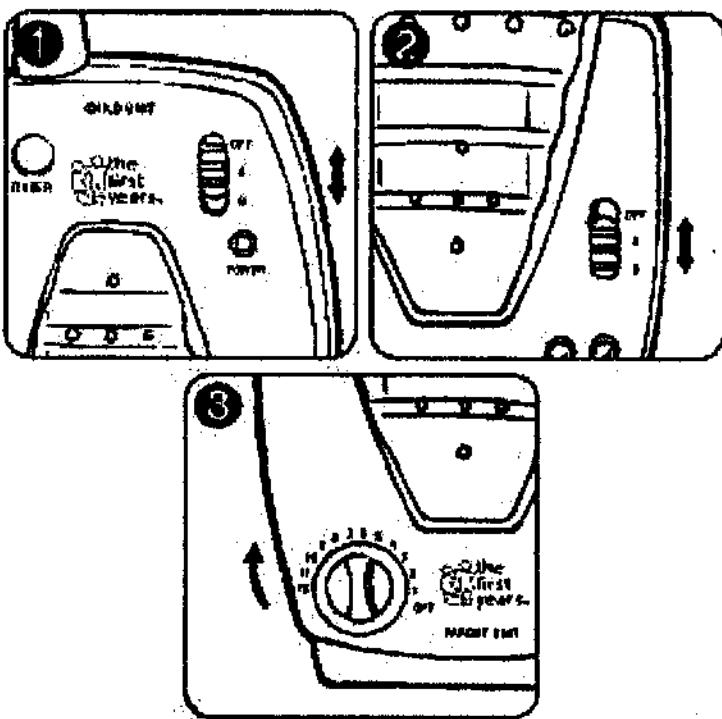

## Lights

Here's how to interpret the lights on the Parent's Unit.

### ① Three Quiet Sound Lights

**No Lights Lit** - No sound from Child's Unit (baby is quiet).

**One or More Lights Green** - Quiet sounds (baby may be whimpering or talking).

### ② Two Loud Sound Lights



**One or More Lights Red** - Loud sounds (baby may be crying or talking loudly).

### ③ Power Indicator

**Light Is Green** - Both units are on and the Monitor is ready to transmit sound.

**Light Is Red** - Batteries in Parent's Unit are weak. Begin recharging as soon as possible.

**Not Lit** - Unit is not receiving power. (See Troubleshooting, "No power.")

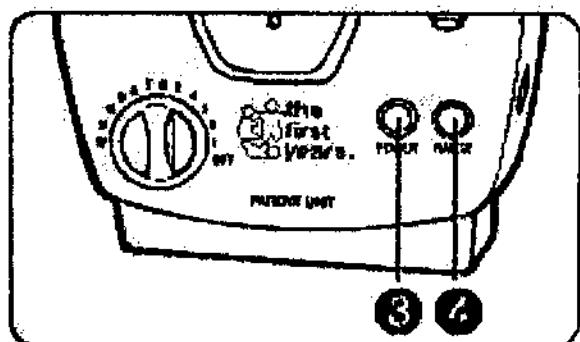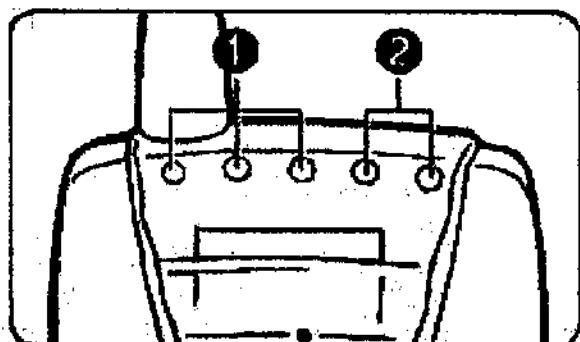

### ④ Range Indicator

**Light Is Green** - Both units are within range. Parent's Unit is receiving sounds transmitted by Child's Unit.

**Light Is Red** - Parent's Unit is not receiving sounds transmitted by Child's Unit. (See "Troubleshooting," "No sound or weak reception.")

## To Use the Finder

1. If the Parent's Unit is misplaced, press the finder button on the Child's Unit. The Parent's Unit will begin to beep.
2. Let the audio signal guide you to the Parent's Unit. Once you locate it, slide the channel/off switch to off. The unit will be turned off, and the beeping will stop.
3. Wait at least 5 seconds, then turn the Parent's Unit back on by resetting the channel/off switch to the same channel as the Child's Unit.

### 3 Care of your Monitor

#### Parent's Unit

##### Recharging Batteries:

When the power indicator on the Parent's Unit is red, power is low. It's best to begin recharging the unit immediately. If the power indicator is not lit, the batteries are dead. To recharge, follow the steps in "To Set Up," Parent's Unit, #2.

For best results: Recharge only after the Monitor has been in use for 8 to 10 hours or when the power indicator turns red. Recharging too frequently will shorten battery life.

##### Replacing Batteries:

The rechargeable batteries in the Parent's Unit need to be replaced when the batteries will not hold a charge (Power indicator stays red after extended charging time), or will hold a charge for only a brief time (less than an hour).

Replace with two AA nickel cadmium (NiCd) rechargeable batteries. For detailed instructions, please see "To Set Up," Parent's Unit, #1.

#### Child's Unit

##### Installing or replacing batteries (for battery operation):

1. Use two standard AA non-rechargeable (alkaline) batteries.
2. Press on the indented finger grip to release, then slide and lift the battery compartment cover.
3. Remove the old batteries, if any, and insert new batteries, matching the + and - contacts to the corresponding contacts on the battery clip as indicated.
4. Lower the battery compartment cover, and slide it until it clicks into place.

**WARNING: Keep batteries away from children. Parents are urged to exercise care in the storage, use, and disposal of all batteries.**

**Do not dispose of batteries in fire. They may explode.**

**Caution: To avoid battery leakage:**

- Be sure to insert batteries correctly following instructions.
- Do not mix old and new, rechargeable and non-rechargeable, or carbon zinc and alkaline batteries.
- Always remove exhausted batteries from the product.
- Never use a screwdriver or any other tool to pry batteries from the compartment, as the supply terminals may be short-circuited.

#### To Clean Both Units

Wipe exterior surfaces with a clean, dry cloth.