

Main Feature

* Digital camera function

Easily portable and you can connect it to your PC and create electronic albums.

Resolution	Screen size	Screen mode
Resolution MAX(maximum)	640×480	(VGA)
Resolution MIN(minimum)	320×240	(CIF)

Depending on the conditions of takes, VGA mode offers you a maximum of 130 pictures and minimum of 100 pictures while CIF mode offers you a maximum of 400 pictures to 350 pictures.

* Digital camcorder function

-With its 15frames per sec, it allows you to create simple movies.

-You can create a real movie album and create your own video mail.

Note that Video mail and camcorder function varies among user's PC.

* Web Cam function

Connect it with a PC and you will be able enjoy to creating electronic movie album as well as real time chat.

-Microsoft Netmeeting

-Greeting Card Making

-Album Making

-Photo Special Effect and etc

Note that you must shut down completely before disconnecting your web cam.

System Requirement

1. Minimum requirements

CPU : Intel®Pentium® PC with a USB Port.

RAM : Over 32MB.

HDD : Over 50MB of space in your hard drive.

VGA : Over 8MB and SVGA type. 800×600 16Bit Color.

O/S : Microsoft®Windows 98/SE/ME, Windows 2000/XP.

Miscellaneous : Internet Explorer 5.0.

2. Recommended requirements

CPU : Over Intel®PentiumIII®800MHz, PC with a USB Port.

RAM : Over 128MB.

HDD : Over 200MB of space in your hard drive.

VGA : Over 32MB and SVGA type. 800×600 24Bit Color.

O/S : Microsoft®Windows 98/SE/ME, Windows 2000/XP.

Miscellaneous : Internet Explorer 5.0.

PC requirements	Movie screen
Over PENTIUM MMX200MHz RAM : 32MB, over VGA 8MB	Under 160×120
Over PENTIUM III 800 MHz, RAM : 128MB, over VGA 32MB	Under 320×240
Over PENTIUM IV 1.5 MHz, RAM : 256MB, over VGA 64MB	Under 640×480

Package Contents

*** LOVEQ product must contain all of the materials written underneath.**




· LOVEQ SLIM (LS-35)




· PROGRAM & MANUAL CD



· Camera tripod (LS SAUCER)

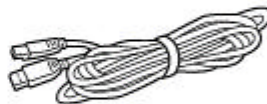

· USB Mini Connecting Cable

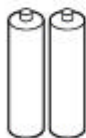

· 2xAAA Batteries

The content might change without notice in order to improve the quality of the product.

Caution

Do not connect the camera with your PC before installing the software. After the software has been installed successfully, reboot your PC and connect the camera to your PC.

When web cam or camcorder mode, before connecting or disconnecting please shut down the LOVEQ software program.

If the program isn't shut down before any work, the software might crash causing problems.

Troubleshooting

How to solve problem when they occur.

Trouble	Troubleshooting
"Disconnect"error messagepops up whileusing the program.	Check if the PC and LOVEQ camera is connected with a cable. Remove LOVEQ program from "configuration>add/remove programs" and reinstall the program before connecting the cable. (Check the installation guide fro details) If you have used other cameras using USB ports, its driver might crush with this one. In this case remove the previous USB driver and reinstall LOVEQ program before connecting the camera.
If you can'tbring any picturesfrom the program.	Change the camera's battery into a new one and delete all the memory before restarting the process.
If it's not possible to take pictures.	Check the camera's battery. If the battery is low, it is not possible to take pictures because the camera will try to save data in its memory. If "change battery" sign shows up on the LCD please do so. if you do not change the battery quickly, you might lose or break all your data in the camera's memory.
If it is not possible to send an e-mail.	Check the mail server's address and if you do not know the address, check it out at your e-mail server's person in charge.

Nomenclature



Battery Installation

* Application of the batteries

When you are not going to use your camera for an extended period of time, remove the batteries to prevent leaks or corrosion.

Use only alkaline batteries. Do not use lithium or manganese batteries on your DXC-2100 because the heat generated by the batteries could damage the camera.

It is a characteristic of alkaline batteries in particular that the life of the battery is shorter at low temperatures (+10°C or below)

Do not apply excessive force to the battery cover.

Do not use new and used batteries together.

For a long-term travel use or using the camera in cold temperatures, please prepare extra batteries for the replacement.(Battery life ? Standby : 2 Weeks, Continuous shot : 2 Hours)

Install the batteries with the correct polarity (+, -) as printed inside of the battery cover.

*When any type of operation does not apply to the camera for 20 seconds, the camera turns to Automatic Power Saving Mode automatically. Push POWER switch to reactivate the camera during this mode.

* Important Battery Information for the Replacement

Install replacement batteries within 15 seconds for saving images stored in the memory. We recommend download images from the camera to your computer before the battery replacement for preventing unexpected image losses.

Image saving time varies Min. 15 seconds to Max. 90 seconds depending on remained battery capacity level.




When low battery displays on the LCD, replace the batteries as soon as possible.

Connecting to Computer

* Mini cable IN/OUT Connecting to computer

Before downloading image or using WEB-CAM mode, connect the camera to you computer with USB mini cable included with the package.

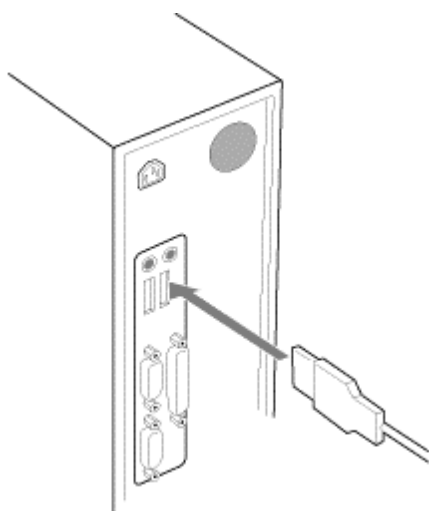

before connecting the camera to computer, make sure computer is installed CD-ROM(included with the package)

Connect USB mini cable to your computer and camera.

after connection USB mini cable to your computer and camera “USB Connect” seen on the lower part of the LCD.


Message of new port searching will appear on the monitor of your computer if connection is successfully done.

* Notice

Even if camera is using power only through USB cable from the computer during this connection, we suggest you to sustain batteries installed in your camera all the time.

When power from USB cable is not available in any reason, unwanted erase of image will happen.

How to use

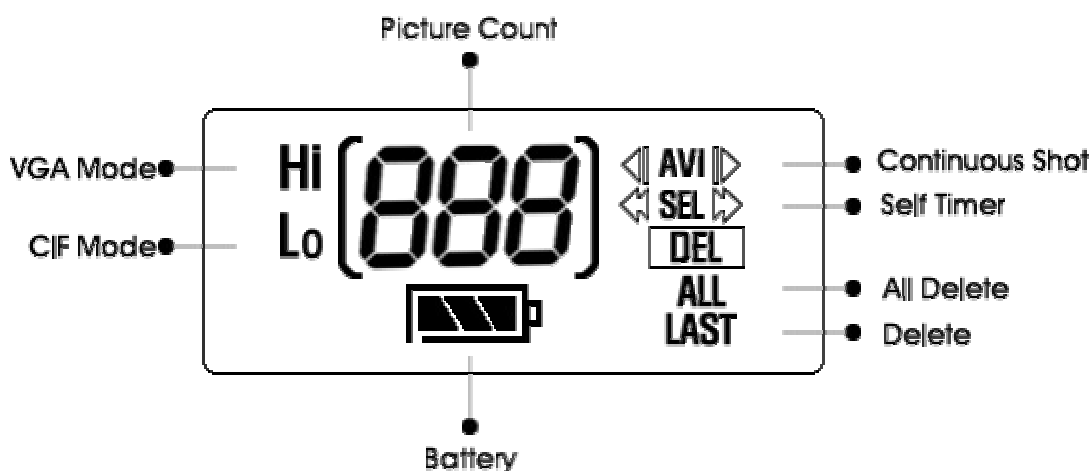

*** select**

Erase one : Used to delete pictures one by one.

A rectangular button with an orange border containing the word "LAST" in bold black capital letters.

Erase all : Used to delete all the pictures at the same time.

A rectangular button with an orange border containing the word "ALL" in bold black capital letters.

Continuous shot : Used for continuous pictures. (While pressing the shutter button) When continuous picture is being taken, it is taken while moving hence little bit of shaking is possible.

A rectangular button with an orange border containing the text "AVI" in bold black capital letters, flanked by double vertical bars on both sides.


self timer : How to use Self Timer function After selecting the key, picture will be taken automatically after 10 seconds. This product doesn't give access to flash mode under these circumstances, in order to preview the picture, you must check it on the LCD screen.

A rectangular button with an orange border containing the text "SEL" in bold black capital letters, flanked by double vertical bars on both sides.

When Hold Key is being used, except for "Power key" all the buttons are turned not functional. (You can reduce waste of power and misused buttons.)



Default power is set to "HIGH" and in this case VGA Mode (640×480) is selected. In LOW mode, CIF Mode(320×240) is selected. (After the take, the power isn't in default mode but in the current mode you have selected.)

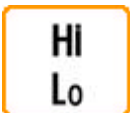A rectangular button with an orange border containing the text "Hi" and "Lo" in bold black capital letters, stacked vertically.

Installation

This is about how to install LOVEQ application program: LOVEQ Album Manager.

* Insert LOVEQ installation disk into your CD-ROM drive. The auto run system installed inside the CD will be executed afterward. (If it is not executed automatically, please run AUTORUN.EXE in the CD-ROM.)




* Click on "Install Dualcam Album Manager software" button and installation program will start with LOVEQ dialogue box popping out.



*It will ask in which directory you want to install it. If you want to install it under the default directory, click on "Next" button. You can click on "Find" button in order to change the directory.



* When installed, it will create a program icon on your program folder. You can either insert a new folder name or chose one from the existing folders.

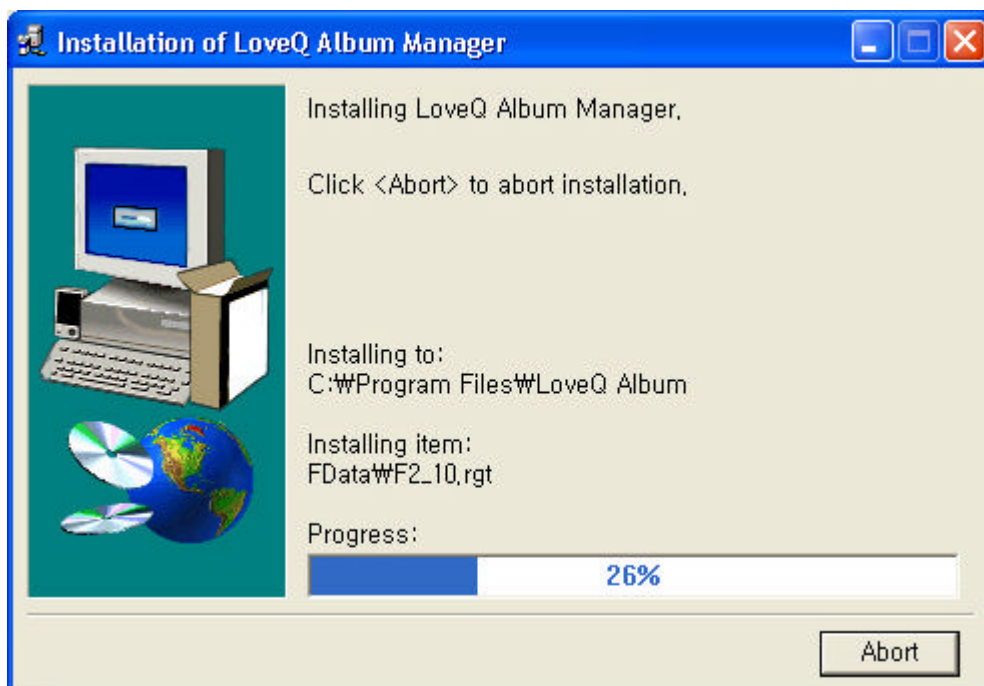

- * Click on "OK" button and reboot the system for the installation to be completed.



How to install the Driver

- After installing Dualcamera Album Manager program, connect the camera to the USB cable.
 - When a message shows up saying that a new hardware was found, it will automatically install the driver.
- However if you are to use the manual installation mode, select the Driver folder in the CD-ROM and it will install.
- Reboot the system and run Dualcamera Album Manager.

Note about Windows 98(SE).

- While installing the Driver, if the PC asks you to insert Windows98(SE) Setup CD, insert it to your CD-ROM and click "OK".

Note about Windows XP.

- From Windows XP you must undo the Driver Signing option from Microsoft.
 - My computer > registered information > Hardware > Driver Manage or Configuration
- > Printers and Other Hardware >
- Left side click SYSTEM > Driver Manage and under Driver Signing option chose "Ignore mode".

Note while capturing movies.


- This program saves movies using the default Codec that's selected in the user's computer. However this results in size matters. As a solution for this we propose Codec DivX that is being widely used among many users.

(Check out at <http://www.divx.com/> for more information.)

1) From the installation CD go to /util/divx/ folder and run DivX4CodecInstaller.exe in order to install the Codec.

2) In WebCam mode under recording, select Divx Codec.

(If you click "Cancel" button it will be recorded with the default Codec.)

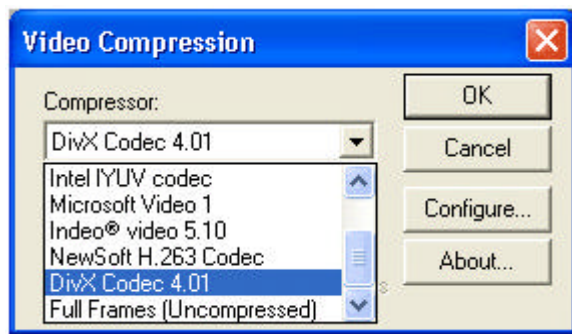


3) If you click record done, the movie will be saved to your album.

If you want to send movies to other people through e-mail you must copy DivX Codec with it so that the recipient can install it to see the movie. (This shall only be done once.)


Album Window

* Album List

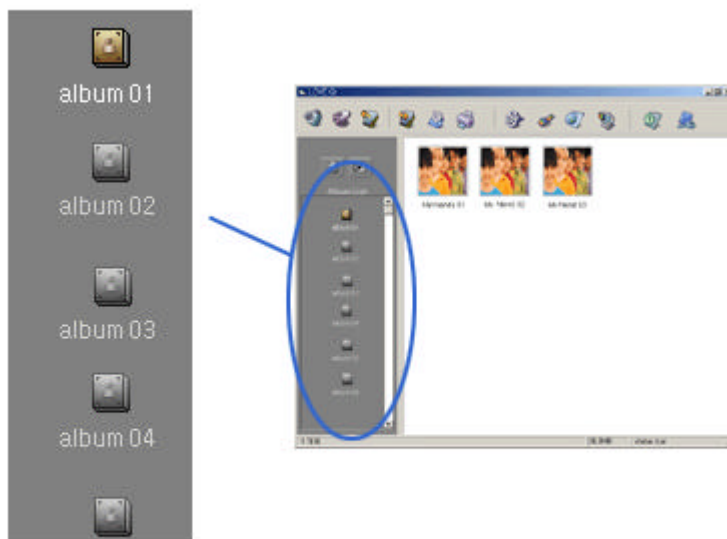


LoveQ Album Manager program will enlist all the albums that are saved. If you click an album's title you can rename it and the list of pictures that are contained in that album will be enlisted in thumbnail format.

* New Album

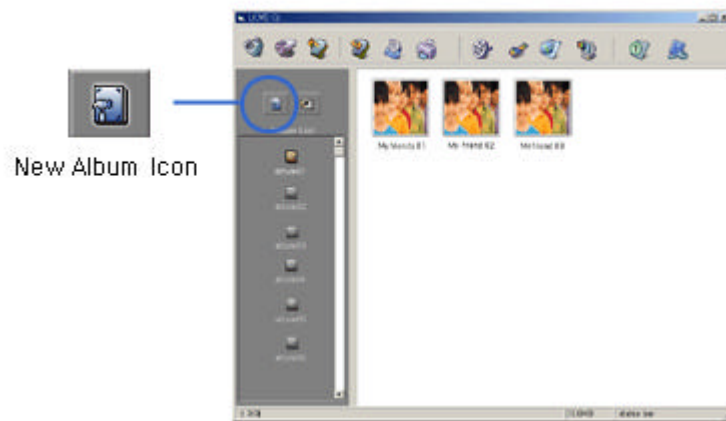

It is used to create new albums. If you put a name a new album is created.

* Delete album

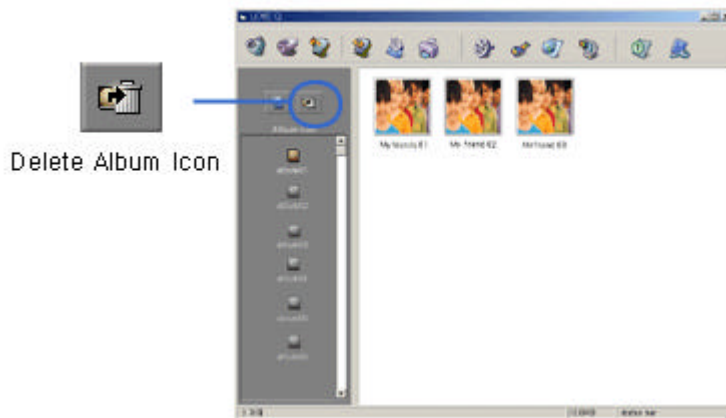

Removing albums are done with regard to the currently existing albums and it will ask you whether it is ok to remove

it that will allow you to delete the album completely

* Thumbnail List in Album



If you select an album, it will show you all of its multimedia files whether it's an image or a movie. All the files are shown in thumbnail formats and when you double click an image, it will move to detailed view mode. From the list you can either use your mouse ([CTRL] + Click) or use "select all" ([CTRL]+A) in order to select all the files and to copy ([Ctrl]+C) them or paste ([CTRL]+V) them.


Download	Download selected files from your camera.
Memory Clear	Remove all the pictures saved in your camera.
Select/ Release All	Select or release all the pictures that are saved in your camera.
Camcorder function	Make an AVI file movie out of selected pictures to save it in your album.

* PC Camera Mode



When LOVEQ WebCam mode is selected, you can take pictures and record motions just like a Web camera. With picture takes and motion records, you can save them into thumbnail formats and you can edit them with editing utilities. Option contains 160x120, 320x240 and 640x480 mode save option, mirror effect option and detailed edit option.

*** Local HDD mode**

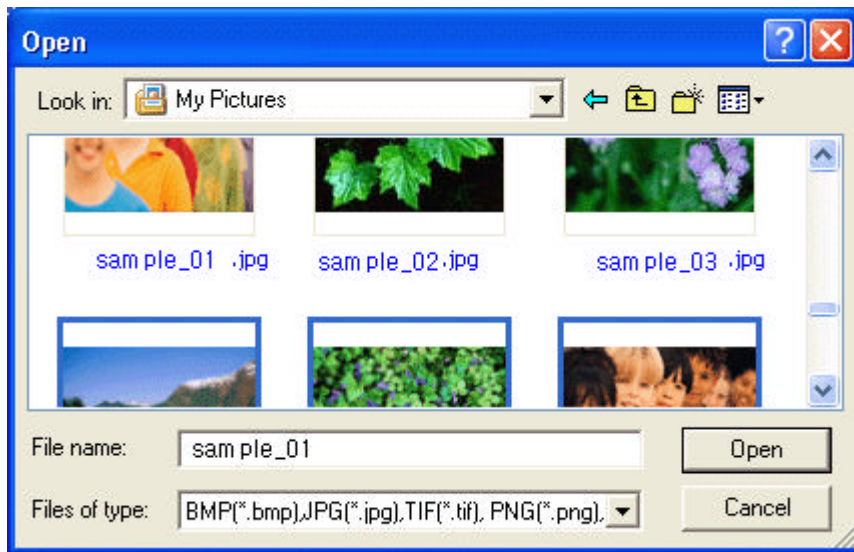

You can load image files that are saved in your diskette, hard drive or CD-ROM.


This program accepts such image/video files.

Jpg/ bmp/png/avi/ mpeg/ mpg

*** e-mail**


You can send selected Video/image files through e-mail. (Note: For mail server address no matter what sort of server you use (whether it's modem or ADSL) ask your network supervisor.)

*** Print**

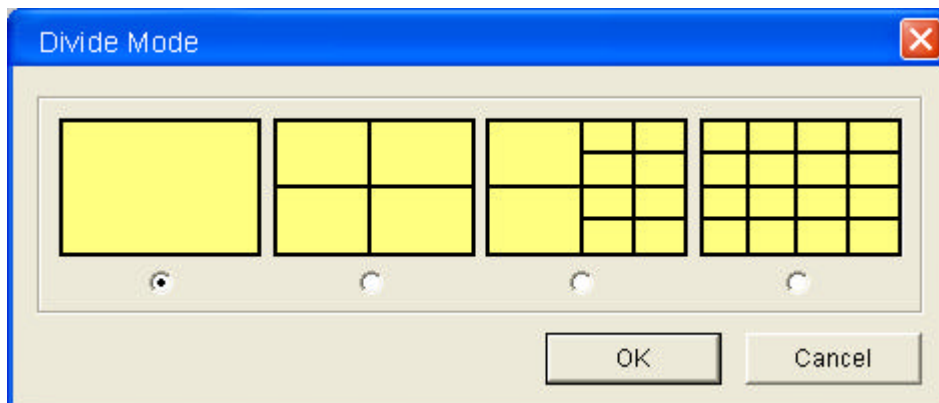

Print mode will print out selected picture/video clip. Printing effect is as follows: original/divided into 2pics/4pics/10pics/16pics. You can choose the appropriate effect for your work before printing.

* Save As

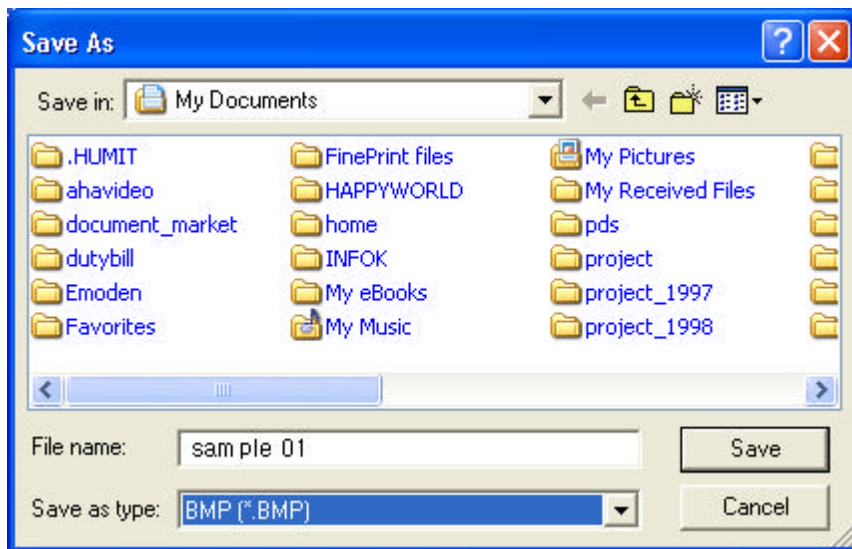

This is basically used when changing the file format and saving it into other local hard drives or network drives. File formats are defined in "Load" section above.

* Creating AVI

With more than 2 picture clips selected, this function will create an AVI video. When you have pictures that are taken continuously this will give you a digital camcorder effect.

* Slide




From the selected image clips or the whole album if none are selected, this program

provides you with a slide view mode.

From options you can enjoy different effects.

* Home page

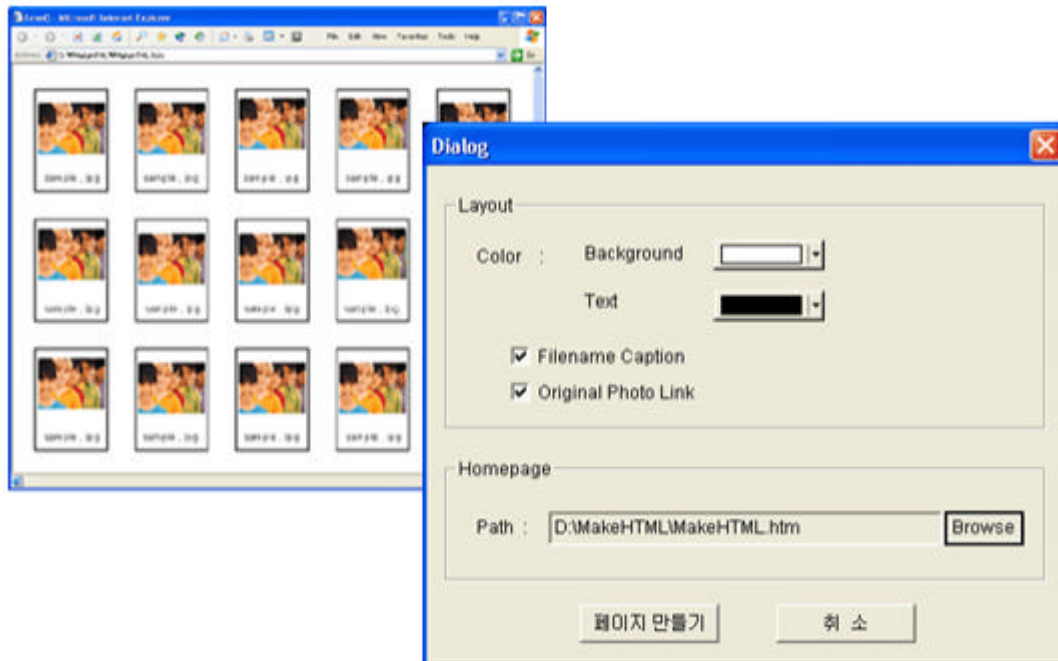

From selected image clips or the whole album if none are selected, this program

provides you with homepage creating function.

You can enjoy different options and a copy of the homepage will be created in a

folder and you can simply send it to your homepage.

Ask your personal ISP about how to send it to your homepage.


* Wall paper

This changes selected pictures into windows wallpaper.

* Help

You can see a manual concerning this product.

* Option

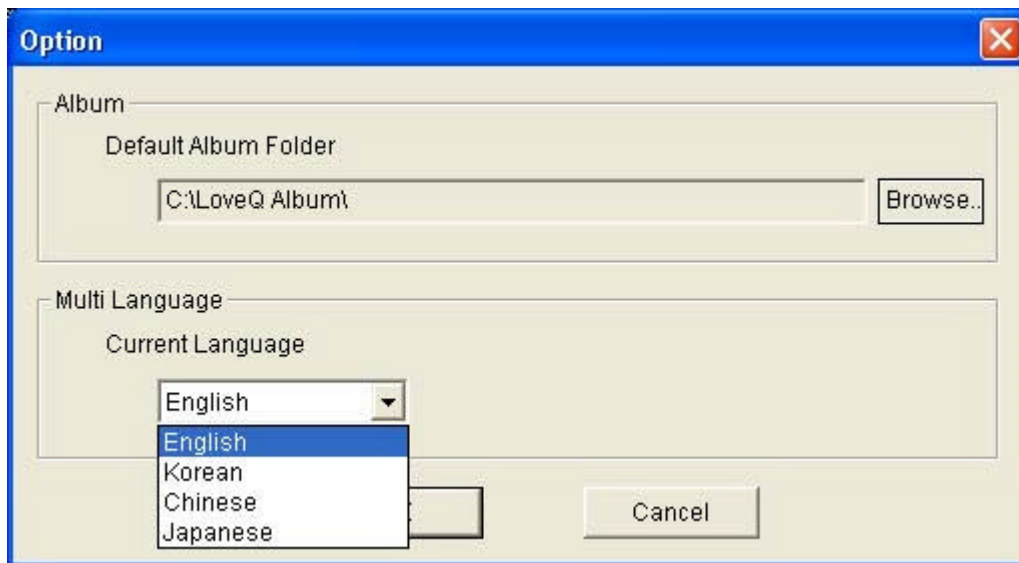


In option you change your default album folder and language.

If you want to change the language, just click on the language you want and click "OK".

Except for the icons on top of the main album (English), all the others will be switched to the language of your choice

Image editing

* Image Editor

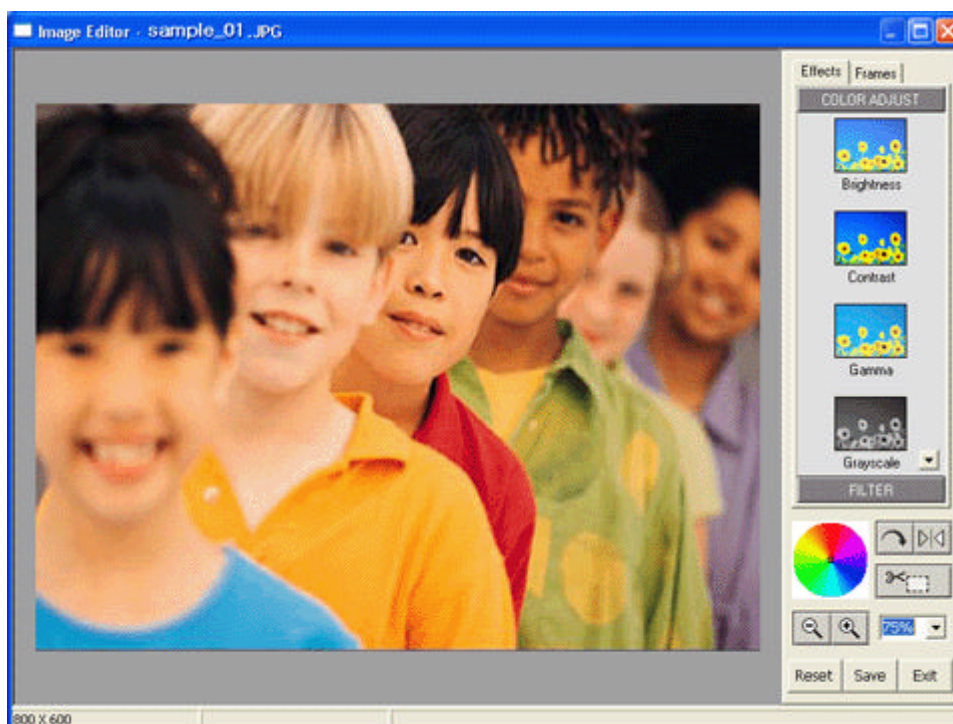

Picture editing

From detailed view (Edit) you can enjoy different editing possibilities around a clip such as color effect/filter effect or color change/rotation effect.

Function	ICON	Description
Color Effect		Enjoy many effects such as Brightness/Grayscale.
Filter Effect		Enjoy many filter effects such as auto picture amelioration/emboss effect.
Frame		You can combine a picture with another already made template.
Color Bar		Using the color bar you can change the tone of your picture.
Rotation/Mirror Effect		You can rotate by 90 degrees and enjoy mirror effect.
Cut		You can cut the section you want by dragging and double clicking.
ZoomIn/ZoomOut		You can zoom in and out as you wish.

Movie viewer

* How to see a video

From video file's property you can see the video and functions such as Play, Stop, Forward, Rewind are available. Normally it will show you using the default player.



Quick Guide

1. How to install software

- 1) Insert the program CD and install the program before rebooting your computer.
During this process, do not connect LOVEQ first.
- 2) After rebooting, connect LOVEQ and it will search for LOVEQ driver and install it.
If you have used other cameras using the USB port, the USB driver might crush.
this case remove the previous driver first and install LOVEQ program and connect LOVEQ.

2. How to save to picture album

- 1) Select Mode in LOVEQ.
- 2) Take pictures of your choice with LOVEQ.
- 3) Connect LOVEQ to your PC with USB cable.
- 4) Run LOVEQ ALBUM MANAGER.
- 5) Click "Camera" icon and chose the picture of your choice out of the list.
- 6) Click "DOWNLOAD" button and the picture will be saved to your album automatically.

3. How to edit pictures

- 1) Run LOVEQ ALBUM MANAGER.
- 2) Double click the picture of your choice and the IMAGE EDITOR starts the editing mode.
- 3) Edit the picture as you wish.

4. How to record AVI

- 1) Select LOVEQ into Hi or LOW mode.
- 2) Select AVI mode in LOVEQ.
- 3) Picture is being taken while you press the "Shutter" button.
 - HI : FULL
 - LOW : Save 150 pictures separately.
- 4) Connect LOVEQ with the PC using USB cable.
- 5) Run LOVEQ ALBUM MANAGER.
- 6) Double click "Camera" icon and select AVI file you wish to save.
- 7) Click "DOWNLOAD" and the AVI file will be automatically saved into your album.

5.How to record a camcorder

- 1) Connect LOVEQ with PC using a USB cable.
- 2) Run LOVEQ ALBUM MANAGER.
- 3)Click "WebCam" icon and check out the real time video shown on the window.
- 4)Select your resolution by clicking "RESOLUTION".

This is when you chose your resolution according to your computer's ability.

Below PENTIUM II	Under160×120
About PENTIUM	Under320×240
Over PENTIUM	Under640×480

- 5)Click "RECORD A VIDEO" button to start real time recording.

6)Click "RECORD STOP" button to stop the real time recording and save it to the current album.

6. How to send video e-mail

1)Run LOVEQ ALBUM MANAGER.

2)Create a LOVEQ AVI file or record in Camcorder mode to make a video file.

3)Click once on the video created and double click "send e-mail" in order to send it.

4)Fill in recipient/Cc:/title/text and click "send" and it will be sent to the appropriate person.