

EXHIBIT 5

User Manual

Lentek International

FCC Part 15 Application
For
Certification
(Low Power Transmitter)

**Pet Chime (Portable Wireless Electronic Pet Doorbell)
Models: PP10**

FCC ID: PD4PP10

Intertek Testing Services

User Manual

Attached is a preliminary copy of the Instruction Manual. The following information will be included in the next revision of the manual:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Sentrol, Inc. could void the user's authority to operate the equipment.

This manual will be provided to the end-user with each unit sold/leased in the United States.

IMPORTANT NOTICE


Dear Customer,
Thank you and congratulations on your purchase of this ingenious device, LENTEK™. We back our products with a two (2) year limited warranty. Your satisfaction is very important to us. Visit our website at www.lentek.com and view our website at www.petchime.com for the latest in our products, such as our new PetControl pet control system, and PetChime and PetPaw™ nearby activate your chime, you can set your own ringing code by disconnecting a wire in both the remote control and the chime. The PET PAW™ has a RED and GREEN wire in the battery case. Likewise, the chime has RED and GREEN wire in selection recess. To set your own ringing code, simply cut either the RED wire on both units or the GREEN wire on both units.

WARNING: If you cut one RED and one GREEN or all FOUR (4) wires, you will disable the whole unit.

PET CHIME™

PORTABLE WIRELESS ELECTRONIC PET DOORBELL

Instruction guide

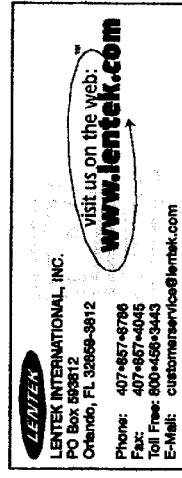

Visit us on the web:
www.lentek.com

Visit us on the web:
www.petchime.com

PP-10

INSTR-10-000

© 2000 Lentek International. All rights reserved.
All specifications are subject to change without notice.
Dimensions are approximate.

CE


Visit us on the web:
www.petpaw.com

Visit us on the web:
www.petpaw.com

LENTEK™ Lentek has your Solution...The PORTABLE, WIRELESS.

CONTENTS:

The PET CHIME™ consists of the following 2 units:

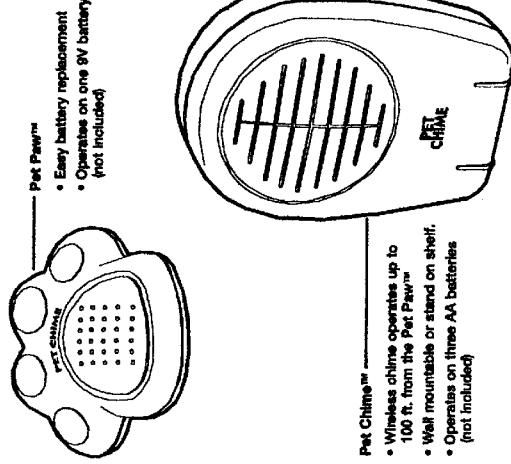

TRAINING INSTRUCTIONS:

Training your pet to use the PET CHIME™:

The pet chime is easy to teach your pet to use. First allow your dog to get used to the sounding of the chime. Place the PAW next to the door that you will be training your animal to go out. With the PAW on the floor, place your hand on the device showing your pet how the chime works. Next place the PAW to sound the chime and open the front door, taking out a treat so to entice your pet to retrieve it. Once your dog has gone outside, catch him back in. Repeat the procedure several times. Always placing your hand onto the paw so that the chime rings before opening the door.

Once your dog is accustomed to the activity place their paw on the chime starting. Do you want to go out? Do you want to go out? Assist the dog in activating the chime rewarding him when he does. Repeat the activity assisting the dog to ring the chime and then opening the door until the dog is comfortable with stopping on the paw on its own.


The Pet Touch™ technology will allow any size dog to easily activate the chime. The activity must be repeated so that your pet will know that when they want to go out they must use PET CHIME™.

Each pet's behavior varies. It is important to make sure that the activity is repeated and done by every member of the family. The adaptation of your pet using the PET CHIME™ is dependent on your training.

INSTALLATION AND OPERATION INSTRUCTIONS:


PET PAW™:

1. To remove battery compartment cover, pinch near clasp to release.
2. Insert one 6V battery.
3. Reattach compartment cover.

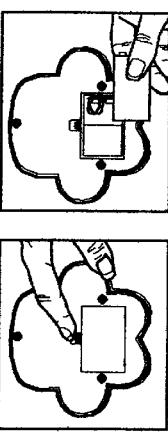

PET CHIME™:

1. To open the battery compartment cover, press the dots, then push and slide upwards.
2. Insert three AA batteries, following the + and - diagram in the cavity for correct placement.

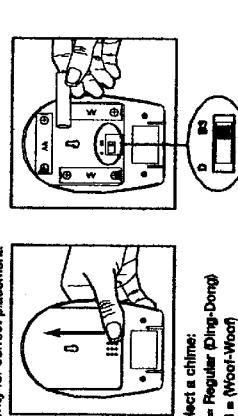

3. Select a chime:
 - D = Regular Ding-Dong
 - B3 = (Woof-Woof)
4. Reattach compartment cover.