



YICK SHUN ELECTRONIC  
TOYS MFY. LTD.

FCC ID: J7IYS215

JOB #: 88ZH1

Exhibit #: 3

FOR HELMET WALKIE TALKIE (YS 215)

~~YS 201(F)~~

### WALKIE TALKIE FEATURES

- USES 4 PCS. UM-3, UE 1.5V, SIZE "AA" BATTERIES
- ON/OFF SWITCH
- LED POWER INDICATOR
- FLEXIBLE ANTENNA

### HOW TO OPERATE

1. To put batteries into one pair of walkie talkie, open battery compartment (fig.4) with a screw driver by turning the opener 45 degrees to the right direction and snap in 2 pcs. UM-3, UE 1.5V size "AA" battery to each walkie talkie. Replace the cover firmly with a screw driver by turning the opener back 45 degrees to the left direction.
2. Put the walkie talkie headset on your head.
3. To operate the walkie talkie, switch the power ON/OFF (fig.3) to "ON". The LED Lamp ON indicator (Fig.6) will then light up.
4. Talking through the mic (fig.5) and listening through the speaker (fig. 2) can now be executed simultaneously.
5. To turn off the unit, switch the Power On/Off (fig. 3) to "OFF"

### CAUTION:

- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries
- Replacement of batteries must be done by an adult.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries
- Only batteries of the same or equivalent type as recommended are to be used

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modification could void the user's authority to operate the equipment.

Note: picture is not for YS 215.

