

 
BASIC OPERATION (CONTINUED)

CHARACTER MAP CHART


Key	1 press	2 press	3 press	4 press	5 press	6 press	7 press	8 press
1	blank	&	'	()	*	.	1
2	A	B	C	2	A	B	C	2
3	D	E	F	3	D	E	F	3
4	G	H	I	4	G	H	I	4
5	J	K	L	5	J	K	L	5
6	M	N	O	6	M	N	O	6
7	P	Q	R	7	P	Q	R	7
8	T	U	V	8	T	U	V	8
9	W	X	Y	9	W	X	Y	9
0	Space	0	Null	0	Null	Space	0	Null

SAVING CALLER ID INFORMATION TO THE MEMORY

The memory can save the information directly from the caller ID.

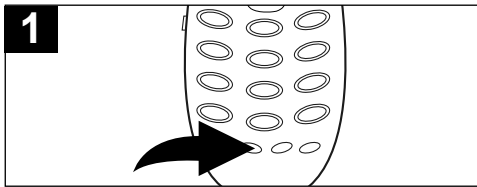

 
Scroll through the calls to select a number as previously described on page 21. Press the MEMO button.

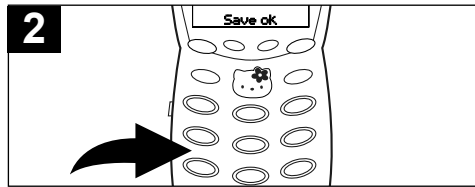


Enter two digits (01-20) using the key buttons to assign the desired memory location to store the data. One second after completing this step, "Save ok" will appear in the display.

DIALING A NUMBER FROM THE MEMORY

 To select and dial a number from the memory, follow the steps below:

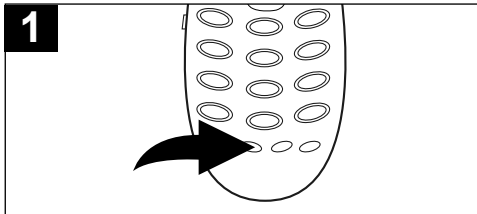

 Press the MEMO button while in the Standby mode.

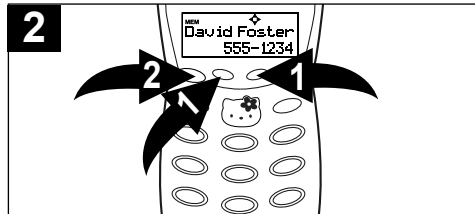


Press the key buttons to enter the memory location or the REVIEW/ VOLUME ▲/▼ buttons ❶ to locate the number you would like to call, then press the CID button ❷. The phone number will automatically be dialed.


BASIC OPERATION (CONTINUED)

DELETING A NUMBER FROM THE MEMORY

 Delete a number from the memory as follows:

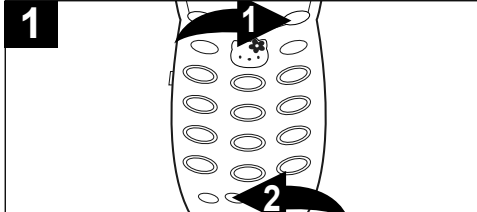

 
Press the PROG button ❶ while in the Standby mode, followed by the MEMO button ❷.

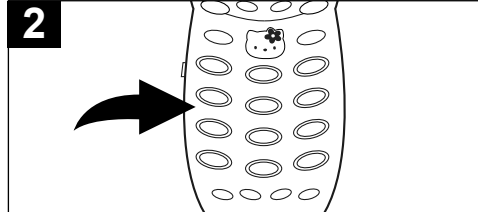


Enter the two digits (01-20) of the memory location you want to delete. One second after completing this step, "Deleted" will appear in the display for three seconds and a confirmation tone will be heard.

PREFERRED CALLS (VIP)

 
This function allows you to recognize an incoming caller from the ringing sound by assigning a priority VIP ring to the designated number from the memory as follows:

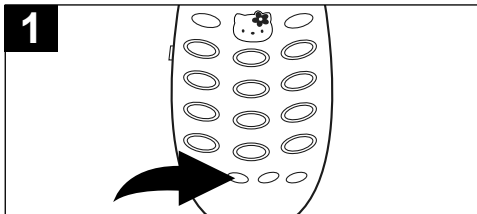

 Press the MEMO button while in the Standby mode.

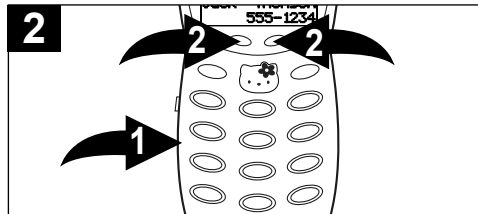

 Press the key buttons ❶ to enter the memory location or the REVIEW/VOLUME ▲/▼ buttons ❷ to locate the number you would like to assign a priority VIP ringer to.

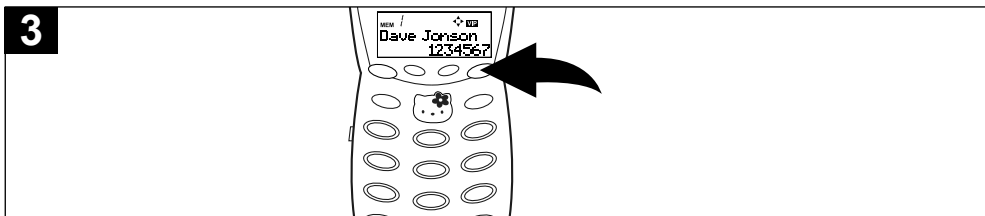

When finished, press the PROG button. The VIP indicator in the display will light and the handset will beep. 25 seconds after pressing the PROG button, the display will clear, a beep will sound and the unit will return to the Standby mode.

TROUBLESHOOTING GUIDE

SYMPTOM	SOLUTION
No dial tone.	<ul style="list-style-type: none"> Make sure the telephone line cord is connected properly to the modular wall jack.
No power on the handset.	<ul style="list-style-type: none"> Make sure the battery pack is properly connected inside the handset. The handset may need recharging; recharge handset.
Handset does not charge.	<ul style="list-style-type: none"> Make sure the charging contacts on both the base and handset are in contact during charging. The charging contacts may be dirty; clean with alcohol-moistened cloth. The battery may need to be replaced.
Range is limited.	<ul style="list-style-type: none"> Move the base so it is centrally located in your residence and make sure the base is not located near an appliance.
Call received flutters or fades.	<ul style="list-style-type: none"> The handset may need recharging; recharge handset.
Cannot hear ringer.	<ul style="list-style-type: none"> Make sure the telephone line cord is connected properly to the modular wall jack. Make sure RINGER ON/OFF switch is set to the ON position.
Caller ID information does not appear.	<ul style="list-style-type: none"> You must subscribe to Caller ID service. You must let the phone ring twice before answering.
Time does not automatically set.	<ul style="list-style-type: none"> If you subscribe to Caller ID service, the time and date will automatically set during the first call.

If there was a power failure or if the unit was unplugged, replace the handset to the base for two to five seconds to reset the system.

CARE AND MAINTENANCE

1. Clean your phone with a damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid operating your unit under direct sunlight or in hot, humid or dusty places.
3. Keep your unit away from heating appliances.



Emerson

AUTHORIZED SERVICE

TO FIND THE LOCATION AND
PHONE NUMBER OF YOUR
NEAREST AUTHORIZED
SERVICE CENTER...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE
PLEASE CALL:
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:
Emerson Radio Corp.
Consumer Affairs Dept.
1901 Diplomat Drive
Farmers Branch, TX 75234

LIMITED WARRANTY

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of one year from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.
1901 Diplomat Drive
Farmers Branch, TX 75234

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU898N



EMERSON
PART NO.: 21-2041
209-01

Printed in China



CORDLESS TELEPHONE WITH CALLER ID AND 20 MEMORY DIALING

***OWNER'S MANUAL
HK250***