

Tune up Procedure

All frequency and power adjustments are set at the factory and there are no field adjustments for this product.

In digital mode frequency is locked to the Base Station and controlled by VCTCXO adjustments to offset any possible error.