




The function of each icon is as follows:

- A. Mailbox: Use this icon to see the receive mail, sent mail, and send mail and to listen the attached voice and to see image file.
- B. Write: Use this icon to write new mail.
- C. Address list: Use this icon such as see address list, modification, and new address list input, etc.
- D. Send: This icon that sends to select the mail in the send mailbox.
- E. Receive: Use this icon to receive the mail on PAVIC mail server separately.

### 1. Read

Designate the read icon to the front top menu, and appear the following screen.

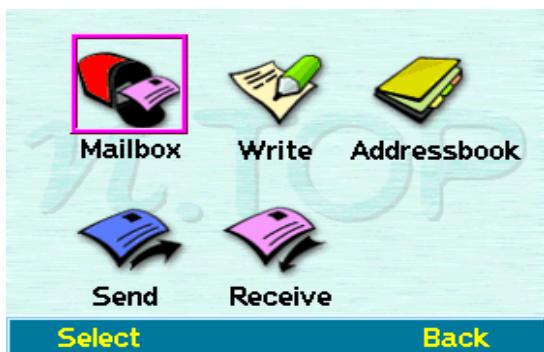

Select the read icon, and appear the following screen.



Select the read icon and appear the three of mailbox on the upper as above.

Each mailbox can be designated with left/right cursor key.

The function of each mailbox is as follows.

**Receive mailbox:** Use this icon to read or delete the message of receive mail.

**Send mailbox:** Use this icon to read or delete the message of send mail.

**Sent mailbox:** Use this icon to read or delete the message of sent mail

First, when selecting the receive mailbox...



The subject of transmitted mail as above appears on the screen.  
You can designate the mail that you want with up/down cursor key.

Press the delete button, and you can delete the selected mail.  
Designating the subject of mail , when selecting the read...



The content of received mail as above appears on the screen.

If you press the select button moving to send person or receive person, you can add E-mail address in address list.

If attached images or voices are existed, file name is appeared in photo voice column. If pressing the select button, you can see the image and listen the voice.

In case of long sentence, you can see it using up/down cursor key while scrolling. Press the reply button, and reply to the present sent person.

But, you cannot reply in case that the E-mail address of sent person is not written properly in received mail.

Press the forward button, and you can forward the present mail content to other person.


Forwarding the subject and text only, you can send them together in case of receiving the mail from the same PAVIC with attached image and voice.

Press the Esc button, and return to the previous mailbox menu.


Send mailbox and sent mailbox are progressed by as same method.

## 2. Write

Designate the write icon, and appear the following screen.

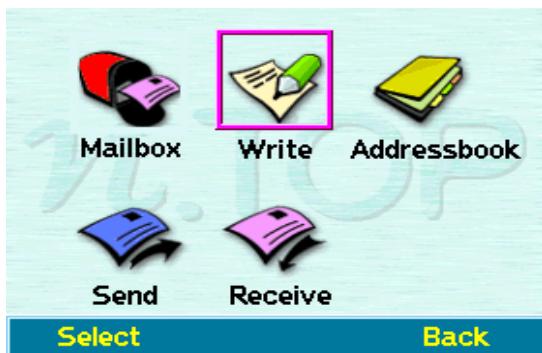


Select the write icon, and appear the following screen.

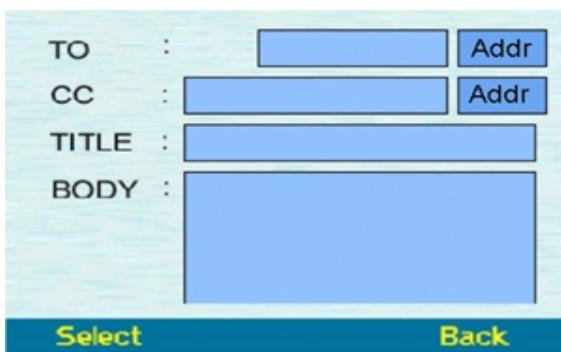

Here, left button is the select button and right button is the Esc button.

You can scroll the continued screen using up/down cursor key.  
Left and right is used to move cursor to up and down.

Selecting “addr” , move to the list of address book list.

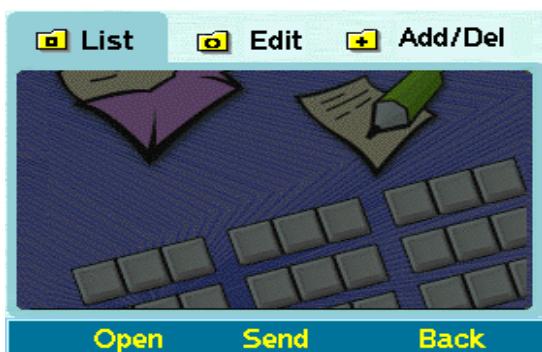

Select people's name, appear the screen of mail send to correspondent E-mail address after pressing the send button.

The next continued screen is as follows.

The screen is not divided into two-cut, but scrolled screen continuously.



The function of each icon is as follows.

- A. Image:** Use this icon to send image file for attaching with message to snap image. (Move to camera menu)
- B. Save image:** Use this icon to send image file for attaching to the existing saved file. (Move to album menu)
- C. Voice:** Use this icon to send the voice file for attaching with record right now. (Move to record file).
- D. Save voice:** Use this icon to send the voice file for attaching to the existing saved voice. (Move to recorder file list)
- E. Save:** Use this icon to save the written message for not sending right now but sending afterwards. (Move to send mailbox)
- F. Send:** Use this icon to send the written message right now. (Move to the access menu)

When cursor is located on input box such as subject and addressee, press the select button, and appear the following screen.



<When toggling input window>



When toggling input window: up/down/left/right cursor key is used to move cursor between sentence.

<When toggling keyboard>



When toggling keyboard: Up/down/left/right cursor key is used to change selectable keyboard.

Select keyboard of center, appear the characters of the three keys on the screen below .

### 3. Address list

Designate the address list icon to the front E-mail, and appear the following



screen.

Select the address list icon, and appear the following screen.




List on the upper, modification and add/delete can be designated using left/right key.

**List:** Show the list of address list

**Modification:** Show the list of address list and move to modification when selecting.

**Add/Delete:** add or delete the list of address list.

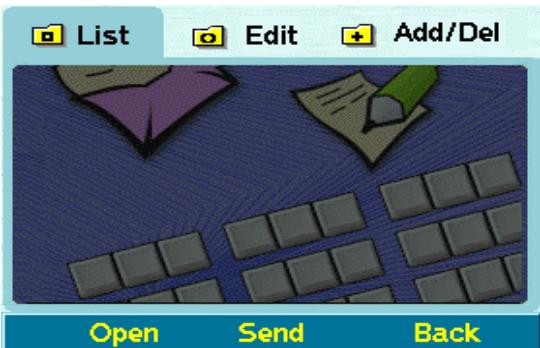


Select “List”, and appear the following screen.

Select “ List” using up/down cursor key and click “ see” .  
And the detail information of correspondent person is shown.

Select “ List” , and appear the screen of mail send to correspondent E-mail address after pressing the send button.  
Press “ Esc” , and return to the previous screen.

In case of selecting “ see”

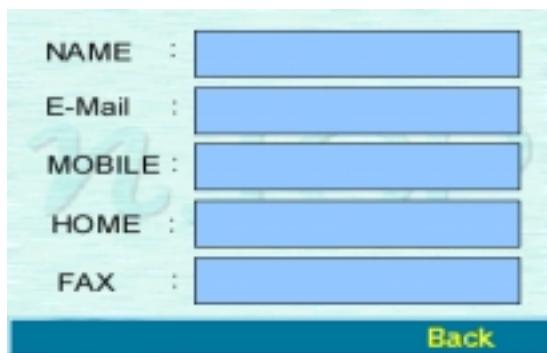

This displays in order:

1. Name
2. Mail address
3. Mobile phone
4. Telephone Number
5. Fax Number

When selecting the modification, appear the present inputted address list and

Enable you to select with up/down cursor key.

Left button on the screen below executes the function that modifies the selected address list.


Right button as the Esc button returns to the previous screen (E-mail screen).

In case of pressing the modify button, appears the screen as same as add screen.

After modifying to select items, press finish and allow update.



In case of pressing the modify button

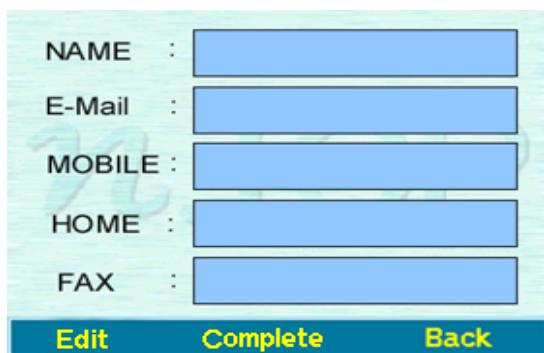

Press Edit after selecting input box, and allow input while opening the keyboard screen.

If pressing finish button, add the present inputted address to list.

It is the same to explain already in keyboard screen.

Press the cancel button, cancel the present input and return to the previous screen.

When selecting the add/delete, appear the list of present inputted address list as below and enable you to select using up/down cursor key. (Name order sorting)

If pressing left button on screen below, appear the add screen of new address list and enable you to add it.

(The add screen is the same to the delete screen.)


Center button executes the function that deletes the selected address list in list.

Right button as the Esc button returns to the previous screen.



#### 4. Send

Designate Send icon, the following screen appears.

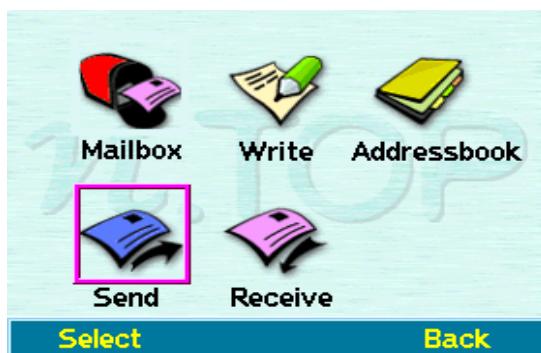

Select Send icon, the following screen appears.



When selecting Send icon, the send mailbox as above appears. Other mailbox



cannot be selected.

The mail subject of send mailbox as above appears on the screen. You can designate the mail using up/down cursor key.

Designate the mail subject of mail and select the select button.




The content of selected mail as above appears on the screen.

After checking the content during scrolling with up / down cursor key, press Send button, then the mail is sent.

When pressing Esc, return to the previous screen.

## 5. Receive

Designate Receive icon, the following screen appears.

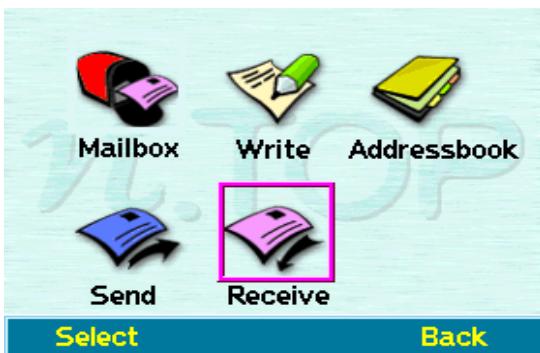


Select Receive icon, the following screen appears.



First, receive only the subject and size of mail.



After finishing to receive all, the following screen appears.

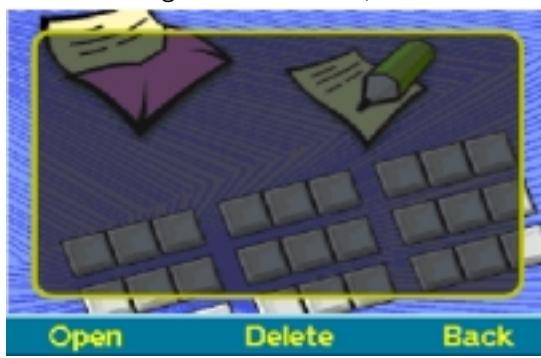


Select the mail that you want to receive with up/down cursor key and press left cursor key, then receive the mail.

When pressing center button, delete the relevant mail in mailbox of server.

When pressing right button, disconnect telephone and return to e-mail menu.



Select the mail that you want to receive, and receive the correspondent mail. And this mail is saved to the received mailbox.

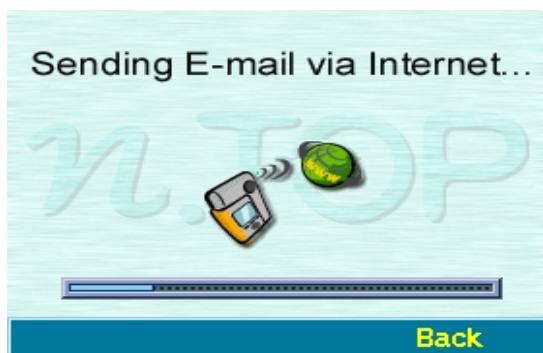

After finishing to receive all mail, the received mail appears on the screen.

## 2. Camera

Designate camera icon in PAVIC menu, the following screen appears.



Select camera icon, and first go into preview status.

Rotating the direction of camera, catch the view you want to take and control the focus so as to appear a clear picture on the screen.



When selecting the Take button, take a photograph.

Press the menu, and the upper icons appears.

When pressing one more the menu, the upper icon disappears.

You can control the status of photograph using icons.

Select each icon with left/right cursor key, and the setup value of designated icon is controlled with up/down cursor key.

The function of each icon is as follows:

**A. Decorating:** Use this icon to add the background scene in photo.

Select the icon and use up/down cursor key. You can add the background scene that you want. (This icon can be selected only that the background files for decorating is saved in memory. This icon cannot be selected in case of not having the background files in memory.)

When you see the background files for decorating in PC through PAVIC manager, these appear as RA files of extension under system folder.

**B. Brightness:** Control the brightness of photo. Select proper brightness using up/down cursor key.

**C. Light and shade:** Control light and shade as four types such as Auto, High, Normal, Low.

Most of all, there is no problem to set as AUTO (basic setting value).

Auto: Automatic control.

High: Make the difference of light and shade highly.

Normal: Make the difference of light and shade normally.

Low: Make the difference of light and shade lowly.

**D. The color tone:** Control the color tone as six types such as Off, Auto, Sun, Shade, FLRSCNT, Tungsten.

Most of all, there is no problem to set as AUTO (basic setting value).

Off: Do not control the color tone.

Auto: Automatic color control.

Sun: Use under the sun.

Shade: Use at shade place.

FLRSCENT: Use this function to take a photo under the fluorescent lamp.

Tungsten: Use this function to take a photo under the incandescent lamp.

**E. Size:** Set up the size of photo as three types such as Fine, Economy, Zoom X2. Most of all, you had better set as Fine (basic setting value).


Fine: Take a photo in VGA (640 x 480) size.

Economy: Take a photo in QVGA (320 x 240) size.  
Zoom x 2: Take a photo in a twice-enlarged photo, but the size is the same of the Economy.

In case of light and shade, the color tone and size, the present setup value is appeared on the lower right of screen.

You can control the brightness of photo by pressing volume up/down key under the preview status.

Select the capture button , the following screen appears.

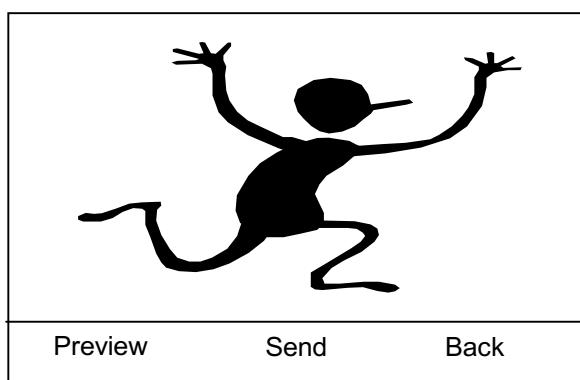


If pressing the preview button, return to the preview screen.

When pressing the send button, appear the screen of e-mail send image file for attaching with message to snap image.

### 3. Album



Select the icon, and the existing saved photos are displayed.

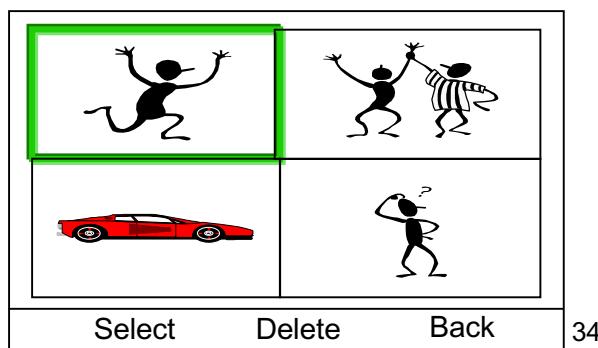


If you press the select button after designating the photo, you can see enlarged photo.

Press delete when you want to delete.

There is a square written “ whole delete” in the last photos.


If you press the select button after designating this square, you can simultaneously delete all photos.

Ex.) If you press the select button after designating the first photo, the following screen appears.

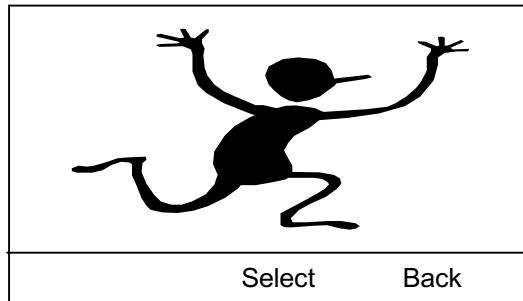

### **Caution**

While processing a taken photo (compressing or saving), the processing photo is displayed on the screen if you enter album menu. And appear the message “ photo processing” with sand watch icon in the above.

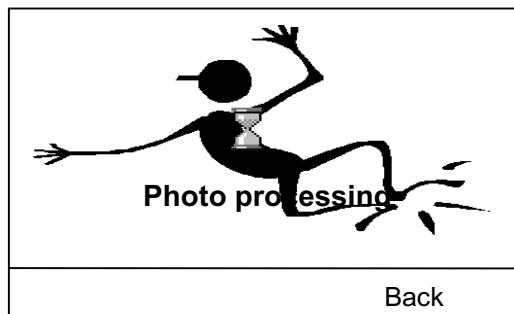


When the photo processing is finished, move to normal album menu automatically.

### **4. MP3**

Select this icon, and MP3 file list appears.



Total played time

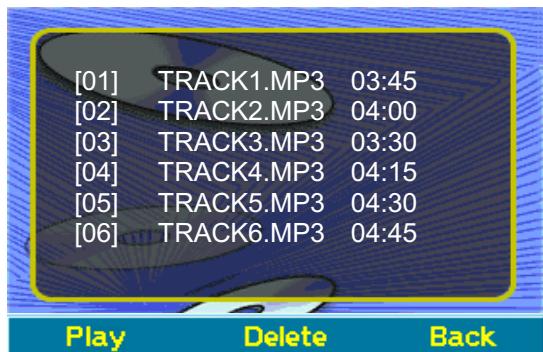

Press the play button on the file list screen, and the present selected file is played.



In case of pressing left/right cursor key more than 1sec on the play screen, execute rewind/forward. In case of less than 1sec, appear the previous file and the next file play.

If pressing menu button, appear the select-sign-box in one of three icons such as mode, trouble, base, etc. And you can control the correspondent icon and relevant value.

After selecting the icon with left-right cursor key, control the setup value of designated icon with up/down.

Press the menu button again, and select-sign-box disappears.

The function of each icon is as follows.

**Mode:** Control five kinds of mode.


- Normal (play up to file list end)
- Single repeat (repeat to play the present file)
- All repeat (repeat to play the whole file list)
- Random (play once the whole file list randomly)
- Scan (play the introduction of each file only 10 seconds in file list)

**Treble:** Control treble

**Bass:** Control bass

The setup values of mode, treble, and bass are appeared to the lower of the correspondent icon.

When pressing the delete button on file list screen, appears the delete screen of present selected file. Press the delete button again, and the file is deleted.

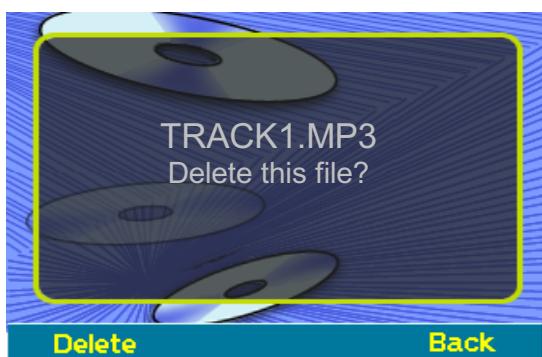

## 5. Recorder



Select “ recorder” icon, and appear the following screen.