

# Product Introduction

EF—6210C LCD FM transmitter, a high quality product that adopted advanced PLL technology, stable frequency, crisp sound, has 200 transmitting channel.

Unique streamline appearance, smart, user-friendly. When you travel outside or stay at home with it, beautiful music will always surround you, with royal enjoyment.

## Function Introduction

- 1、 Searching-channel Function, The button UP and DOWN, searching and fixing available transmitting channel between 88.1~107.9MHz;
- 2、 E-switch Function, with delayed function of starting or shutting after a second.
- 3、 Lighting-indication Function, the LED will shut off automatically after a few seconds to save energy.
- 4、 Alternative function: switchable automatically between battery and car power,(EF-6210 can only be powered by car charger)
- 5、 Memory Function, when restarting, the unit can memorize your last channel used before.

## Technical Parameter

- 1、 Working Conditions :  
Environment Temperature : -10~+60℃ ,

### 2、 Major technical Specs :

Working Voltage : 3V ;  
Working Current : 50mA±5mA ;  
Working Channel : 88.1~107.9MHz  
Receiving Distance : About 15 meters

## Installation Instruction and Caution

- 1、 Insert 2 AAA batteries, or connect the unit to the car charger power(3V), pay attention to the right direction of +•“-•pole. If you want to change the power from battery to car power, please shut off the unit`s power firstly.

- 2、 Please insert the audio connector directly to the audio output or earphone jack.
- 3、 Please take out the batteries if not using the unit for long time.
- 4、 Avoid high temperature, humidity and dust, and avoid using chemical solution to clean the unit, please clean it with soft-wet wipe.

#### Operation Instruction :

- 1、 Insert 2AAA batteries or connect to its DC jack with a 3V car adaptor from car power.
- 2、 Insert the audio connector into the audio output or earphone jack of MP3、 CD、 MD、 IPOD player.
- 3、 Press the power button 1 second to start it.
- 4、 Press the searching channel button“↑”or“↓”to search your favorite channel. If you keep on pressing the button, the channel will skip fast.
- 5、 “88.1 When the channel indicates “88.1 MHz”, if you press the button “↓”,it will skip to“107.9MHz”.but the channel will not be stable untill a few seconds, and vice versa.
- 6、 When you fix a channel, turn on your MP3、 CD、 MD、 IPOD player, and then tune your radio channel to match the channel of the unit, you will hear the music played from your player.
- 7、 If you hear noisy or unclear sound from radio, please switch the channel to another one, which had better is not occupied by the local station.

1. CAUTION - RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTION

2. Use only with non-rechargeable AAA-type carbon-zinc or alkaline batteries.
3. After replacing the non-rechargeable batteries, make sure reinstalled the cover of battery compartment.

(15.21)

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

15.19 (a)(3)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.