

# INSPIRON 14


## Quick Start Guide

Translated Text Here  
Translated Text Here  
Translated Text Here  
Translated Text Here



### 1 Connect the power adapter and press the power button

Connect the power adapter and press the power button  
Connect the power adapter and press the power button  
Connect the power adapter and press the power button  
Connect the power adapter and press the power button

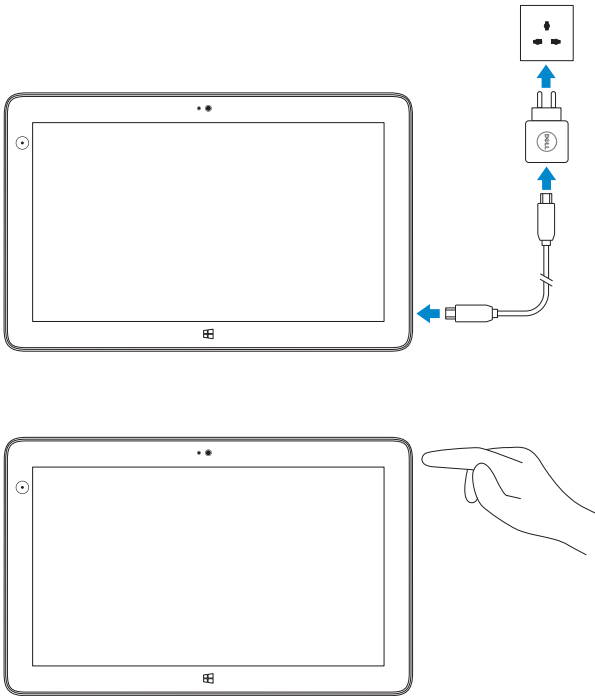

### 2 Finish Windows setup

Finish Windows setup | Finish Windows setup  
Finish Windows setup | Finish Windows setup



Enable security  
Enable security  
Enable security  
Enable security


### 3 Configure Wireless (optional)

Configure Wireless (optional) | Configure Wireless (optional)  
Configure Wireless (optional) | Configure Wireless (optional)



### 4 Connect to a network

Connect to a network | Connect to a network  
Connect to a network | Connect to a network

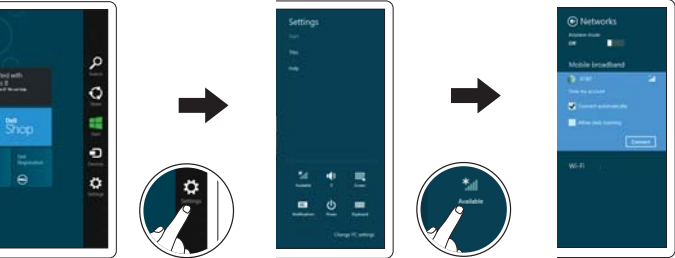

**Touch Settings** → **Wireless icon** → **Select your network, and touch Connect.**

Touch Settings → Wireless icon → Select your network, and touch Connect.

Touch Settings → Wireless icon → Select your network, and touch Connect.

Touch Settings → Wireless icon → Select your network, and touch Connect.

Touch Settings → Wireless icon → Select your network, and touch Connect.

**NOTE: You may have to activate your network service before connecting.**

NOTE: You may have to activate your network service before connecting.


NOTE: You may have to activate your network service before connecting.

NOTE: You may have to activate your network service before connecting.

NOTE: You may have to activate your network service before connecting.

### 5 Explore resources

Explore resources | Explore resources  
Explore resources | Explore resources

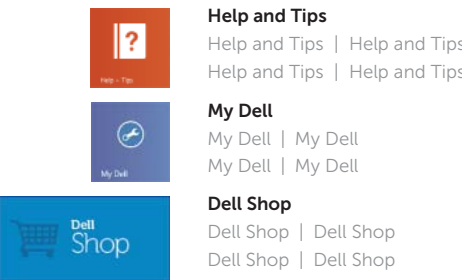

Product support

Product support | Product support  
Product support | Product support

Contact Dell

Contact Dell | Contact Dell  
Contact Dell | Contact Dell

Regulatory and safety

Regulatory and safety | Regulatory and safety  
Regulatory and safety | Regulatory and safety

Computer model

Computer model | Computer model  
Computer model | Computer model

Regulatory model and type

Regulatory model and type  
Regulatory model and type  
Regulatory model and type  
Regulatory model and type

Información para NOM, o Norma Oficial Mexicana

La información que se proporciona a continuación se mostrará en los dispositivos que se describen en este documento, en conformidad con los requisitos de la Norma Oficial Mexicana (NOM):

Importador:

Dell México S.A. de C.V.  
Paseo de la Reforma 2620 - Piso 11.º  
Col. Lomas Altas  
11950 México, D.F.

Número de modelo reglamentario:

T07G

Voltaje de entrada:

100 VAC~240 VAC

Corriente de entrada (máxima):

1,00 A ~ 1,30 A

Frecuencia de entrada:

50 Hz~60 Hz

Corriente de salida:

1,2 A / 1,54 A

Voltaje de salida

19,5 VDC

© 2013 Dell Inc.


© 2013 Microsoft Corporation.



Printed in China.  
2013-08


Features

Features | Features | Features | Features

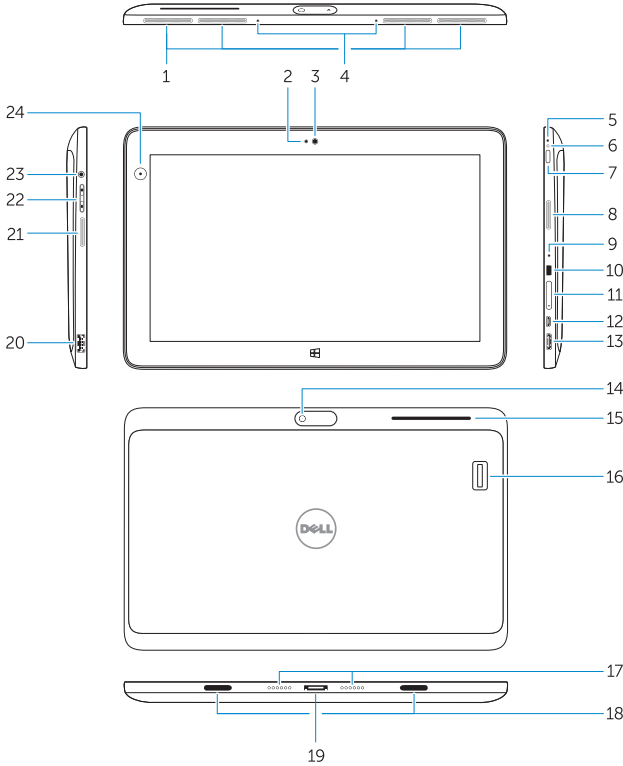

Stylus (optional)

Stylus (optional) | Stylus (optional) | Stylus (optional) | Stylus (optional)

 

1. speakers
2. camera LED
3. front camera
4. microphones
5. microphone
6. power LED
7. power button
8. right speaker
9. microphone
10. Noble security lock slot
11. memory card reader
12. micro USB power connector
13. mini HDMI connector

1. speakers
2. camera LED
3. front camera
4. microphones
5. microphone
6. power LED
7. power button
8. right speaker
9. microphone
10. Noble security lock slot
11. memory card reader
12. micro USB power connector
13. mini HDMI connector

14. rear camera
15. security card reader (optional)
16. finger print reader (optional)
17. dock pins
18. docking guide slot
19. docking connector
20. USB 3.0 connector
21. left speaker
22. volume button
23. audio connector
24. Ambient Light Sensor
25. Pen Tip (replaceable)
26. Programmable buttons

14. rear camera
15. security card reader (optional)
16. finger print reader (optional)
17. dock pins
18. docking guide slot
19. docking connector
20. USB 3.0 connector
21. left speaker
22. volume button
23. audio connector
24. Ambient Light Sensor
25. Pen Tip (replaceable)
26. Programmable buttons

1. speakers
2. camera LED
3. front camera
4. microphones
5. microphone
6. power LED
7. power button
8. right speaker
9. microphone
10. Noble security lock slot
11. memory card reader
12. micro USB power connector
13. mini HDMI connector

1. speakers
2. camera LED
3. front camera
4. microphones
5. microphone
6. power LED
7. power button
8. right speaker
9. microphone
10. Noble security lock slot
11. memory card reader
12. micro USB power connector
13. mini HDMI connector

14. rear camera
15. security card reader (optional)
16. finger print reader (optional)
17. dock pins
18. docking guide slot
19. docking connector
20. USB 3.0 connector
21. left speaker
22. volume button
23. audio connector
24. Ambient Light Sensor
25. Pen Tip (replaceable)
26. Programmable buttons

14. rear camera
15. security card reader (optional)
16. finger print reader (optional)
17. dock pins
18. docking guide slot
19. docking connector
20. USB 3.0 connector
21. left speaker
22. volume button
23. audio connector
24. Ambient Light Sensor
25. Pen Tip (replaceable)
26. Programmable buttons

1. speakers
2. camera LED
3. front camera
4. microphones
5. microphone
6. power LED
7. power button
8. right speaker
9. microphone
10. Noble security lock slot
11. memory card reader
12. micro USB power connector
13. mini HDMI connector

-  **NOTE:** It is recommended that you immediately backup the operating system image using the USB device through Dell Backup and Recovery (DBAR) application.
-  **NOTE:** It is recommended that you immediately backup the operating system image using the USB device through Dell Backup and Recovery (DBAR) application.
-  **NOTE:** It is recommended that you immediately backup the operating system image using the USB device through Dell Backup and Recovery (DBAR) application.
-  **NOTE:** It is recommended that you immediately backup the operating system

14. rear camera
15. security card reader (optional)
16. finger print reader (optional)
17. dock pins
18. docking guide slot
19. docking connector
20. USB 3.0 connector
21. left speaker
22. volume button
23. audio connector
24. Ambient Light Sensor
25. Pen Tip (replaceable)
26. Programmable buttons

-  **NOTE:** It is recommended that you immediately backup the operating system image using the USB device through Dell Backup and Recovery (DBAR) application.