

2. Scroll to the desired number and press **View** and then **Save**.

The follow steps are same as **Add Number** function.

3. Check Memory

It shows how many names and phone numbers can still be stored and are currently stored in the Phone Book.

1. Press **Menu**.
2. Scroll to **Check Memory**, the 3rd item under **Organizer**.
3. Press **Select**.

4. Clear Memory

If you choose the Clear Memory, all phone numbers that are stored are lost.

1. Press **Menu**.
2. Scroll to **Clear Memory**, the 4th item under **Organizer**.
3. Press **Select** and Enter the Password.

5. Scheduler

The Scheduler enables you to keep track of your appointments and meetings and set an alarm to remind you of various events. Events scheduled for future dates will automatically appear on your **Today's Schedule** on that day. You can enter up to 80 items on your Scheduler.

The **Scheduler** has the following options: **Schedule**, **Reserved Call**, **Anniversary** and **Memo**.

- **Schedule**

Enter a schedule you need to do and set an alarm to notify you of the schedule.

- **Reserved Call**

You can reserve a call you need to make and set an alarm to notify you of it.

- **Anniversary**

You can memorize an anniversary and set an alarm to notify you of it.

- **Memo**

You can make a brief note.

5.1 Viewing the Calendar and Adding a Schedule

1. Press **Menu**. Scroll to **Scheduler** and press **Select** or press digit key **5** from Organizer.
2. **Today's Schedule** displays and press **Calendar**.
3. Select an appropriate date and press **Add** to create a new schedule.
 - ▶ Press **2** for jump to a year ago.
 - ▶ Press **8** for jump to a year ahead.
 - ▶ Press **4** for jump to a month ago.
 - ▶ Press **6** for jump to a month ahead.
 - ▶ Press **5** for today.
4. Enter the time and press **PM** to toggle between **AM** and **PM**.
5. Choose "**Weekly**", "**Monthly**" or "**No**" in **Rpt** for the alarm.
6. Go to **Info** and set an alarm to notify you of your schedule by using toggle. Enter the time into "**00:00 Before**" format.
7. Enter the item you need to schedule into "**Input Contents**" format and press **OK**.

5.1.1 To View, Edit or Erase Schedules

1. Press **Menu**. Scroll to **Scheduler** and press **Select** or press digit key **5** from Organizer.
2. To edit a schedule for today there are two ways:
 - ▶▶ Select a schedule from **Today's Schedule** display and press **View**.
 - If you have more than one item, highlight the schedule and press **View**.
 - ▶▶ Go to Schedule Display through **Calendar** (See above 5.1 Viewing the Calendar).
 - If you have more than one item, highlight the schedule and press **View**.
3. You can edit or erase the schedule by pressing **Delete** or **Edit** key.

5.2 To Add a Reserved Call

1. Press **Menu**. Scroll to **Scheduler** and press **Select** or press digit key **5** from Organizer.
2. Press **Calendar** from **Today's Schedule** display.
3. Select an appropriate date and move to **Reserved Call** display from **Schedule** as scrolling by **Left / Right** arrow keys.
4. Press **Add** to create a new **Reserved Call**.
5. Enter the time and press **PM** to toggle between **AM** and **PM**.
6. Enter the phone number you need to make a call into "**Input Phone No.**" format.
7. Enter the item you need to make a note into "**Input Contents**" format and press **OK**.

5.2.1 To View, Edit or Erase Reserved Calls

1. Press **Menu**. Scroll to **Scheduler** and press **Select** or press digit key **5** from Organizer.

2. To edit a Reserved Call for today there are two ways:
 - ▶▶ Select a Reserved Call from **Today's Schedule** display and press **View**.If you have more than one item, highlight the Reserved Call and press **View**.
 - ▶▶ Go to **Reserved Call** through Calendar (See "5.2 To Add a Reserved a Call").If you have more than one item, highlight the schedule and press **View**.
3. You can edit or erase the schedule by pressing **Delete** or **Edit** key.

5.3 To Add an Anniversary

1. Press Menu. Scroll to Scheduler and press Select or press digit key 5 from Organizer.
2. Press **Calendar** from **Today's Schedule** display.
3. Select an appropriate date and move to **Anniversary** display from **Schedule** as scrolling by Left / Right arrow keys.
4. Press **Add** to create a new Anniversary.
5. Go to **Info** by pressing Down arrow key to set an alarm and enter the time.
6. Your Alarm options are: **Today [AM] 00Hour**, and **No Alarm**.
 - * Press PM to toggle between AM and PM.
7. Enter the item you need to make a note into "**Input Contents**" format and press **OK**

5.3.1. To View, Edit or Erase Anniversary items

1. Press Menu. Scroll to **Scheduler** and press **Select** or press digit key **5** from Organizer.
2. To edit an Anniversary item for today there are two ways:
 - ▶▶ Select an Anniversary from **Today's Schedule** display and press **View**.If you have more than one item, highlight the Anniversary and press **View**.
 - ▶▶ Go to **Anniversary** through Calendar (See "5.3 To Add an Anniversary").If you have more than one item, highlight the Anniversary and press **View**.
3. You can edit or erase the Anniversary by pressing **Delete** or **Edit** key.

5.4 To Add a Memo

1. Press Menu. Scroll to Scheduler and press Select or press digit key 5 from Organizer.
2. Press **Calendar** from **Today's Schedule** display.
3. Select an appropriate date and move to **Memo** display from **Schedule** as scrolling by Left / Right arrow keys.
4. Press **Add** to create a new Memo.
5. Enter your memo and press **OK** to save.

5.4.1. To View, Edit or Erase Memos

1. Press **Menu**. Scroll to **Scheduler** and press **Select** or press digit key **5** from **Organizer**.
2. To edit a Memo for today there are two ways:
 - ▶ Select a Memo from **Today's Schedule** display and press **View**.
If you have more than one item, highlight the Memo and press **View**.
 - ▶ Go to **Memo** through **Calendar** (See "5.4 To Add a Memo").
If you have more than one item, highlight the Memo and press **View**.
3. You can edit or erase the Memo by pressing **Delete** or **Edit** key.

6. Find Schedule

The search function allows you to find an item by **Schedule**, **Reserved Call**, **Anniversary**, **Memo** and **All** by using Left/Right arrow keys. You can also edit or delete an item when a selected item is viewed.

1. Press **Menu**. Scroll to **Find Schedule** and press **Select** or press digit key **6** from **Organizer**.
2. Press the Left / Right arrow keys corresponding to your option, your choices are **Schedule**, **Reserved Call**, **Anniversary**, **Memo** and **All**.
3. Press **Find** to get the Result.
 - ▶ Press **All** to view all existing items
4. To edit or delete the item:
 - ▶ If you have more than one item, highlight the item and press **View**To Exit (return to the Search display screen):
 - ▶ Press **OK**.

7. Del Schedule

Del Schedule shows you the number of the old schedules. You can erase all previous items scheduled by selecting each item.

1. Press **Menu**. Scroll to **Del Schedule** and press **Select** or press digit key **7** from **Organizer**.
2. Your phone displays the number of all previous items by **Schedule**, **Reserved Call**, **Anniversary** and **Memo**.
3. Highlight and select an item to be deleted by using the **Select** (Soft left) and Up / Down arrow keys.
4. Press **Delete** to erase the selected item.

8. Phone Number Display

This function lets you check your own phone number.

1. Press **Menu**. Scroll to **Own Number** and press **Select** or press digit key **8** on the Organizer display.
2. Your phone number is displayed.
3. Press **OK** to Exit (return to the Organizer display screen).

9. SW Version

SW Version displays the current SW Version of your phone.

1. Press **Menu**. Scroll to **SW Version** and press **Select** or press digit key **9** on the Organizer display.
2. Press **OK** return to the previous screen.

MESSAGES (Managing Messaging)

Message Types

There are two types of messaging functions available on your CWH 100 Phone. You can receive numeric pages (Text Messages) and voice mail (Voice Messages).

▶ Voicemail captures calls automatically when you can't answer your phone or it is turned off.

Incoming Messages

Your phone receives incoming messages in both Standby and Talk modes. When you are on a call and receives a message, your phone sounds a tone.

Receiving a Message in Standby Mode

When your phone receives a message in Standby mode, the ringer sounds, and the screen displays **Read Msg / Voice Msg**. After viewing the message, if you press OK, you can save or delete the message.

The message indicator ( / ) displays and remains on the screen until you listen to the new voicemail message, or read the new text message.

Receiving a Message while on a Call

If you receive a new message while on a voice call, a tone sounds and **Read Msg / Voice Msg** screen displays. You can easily review the new message while on the call by just pressing OK. You can save or delete the message. Your call will not be disconnected while you review the message.

1. Reviewing Text Messages

To review a stored (or old) text message from Standby Mode:

1. Press **Menu**. Go to **Messages** by pressing the Right arrow key and select **Text MSG**.
2. **Inbox Msg** screen displays a list of messages.
3. Use the Up / Down arrow keys to scroll the list of messages.
4. Scroll to a message and press **Select** to review the message.
You can review the sender's name, Callback No., time / date and the message.
5. Press **OK** and scroll to **Save** or **Delete** according to your need and press **OK**.
6. It will return to the **Inbox Msg** display screen. Press **C** to return to the previous screen.

2. Retrieving Voice Messages

You can review your messages directly from your CWH 100 Phone.

1. From Standby mode, press **Menu**. Go to **Messages** by pressing the Right arrow key and select **Voice MSG**.
2. **Read Msg** screen displays.
3. Press **Talk** and enter your passcode when your voicemail box answers.
4. Follow the voicemail system prompts.

3. Sending Text Messages

A. Sending a New Text Message

To enter characters by tapping the keypad, select the English Mode. Press corresponding number key (2-9) until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase.

You will notice that when tapping the following keys, the characters appear in the following order.

1	@ : /
2	A B C a b c
3	D E F d e f

1. Press the **Menu** key. Go to **Messages**.
2. Scroll to **Send MSG** and press **Select**.
3. **Send MSG** screen displays, and scroll to **New Message** and press **Select**.
4. Enter the receiver's phone number and press **OK**.
5. Select a text input mode. Your current text entry mode is **English**. To change the input mode, press the **Mode** key. There are three text entry modes: **English**, **Number** and **Symbol**.

6. Enter your message. When entering text, use the Right arrow key to insert a space.
7. Press **OK**.
8. **Save Message** screen displays and select **Save** to store the message for later use or select **Cancel** and press **OK**.
9. **Msg Priority** screen displays. Scroll to one of the options and press **OK**. The available sending options are **Ordinary**, **Express** and **Super express**.

B. Sending a Stored Message

B-1. Sending a Preset Message

Your CWH 100 phone has ten standard messages stored, to be re-used whenever you want.

1. Press the **Menu** key. Go to **Messages**.
2. Scroll to **Send MSG** and press **Select**.
3. **Send MSG** screen displays, and scroll to **Preset Msg** and press **Select**.
4. Scroll to the stored message you wish to send and press **Select**.
5. Now you can edit your message. When you are finished, press **OK**.
6. **Save Message** screen displays and select **Save** to store the message for later use or select **Cancel** and press **OK**.
7. Enter the receiver's phone number and press **OK**.
8. **Msg Priority** screen displays. Scroll to one of the options and press **OK**. The available sending options are **Ordinary**, **Express** and **Super express**.

B-2. Sending an Inbox Msg.

1. Press the **Menu** key. Go to **Messages**.
2. Scroll to **Send MSG** and press **Select**.
3. **Send MSG** screen displays, and scroll to **Inbox Msg** and press **Select**.
4. Scroll to the message you wish to send and press **Select**.
5. Now you can edit your message. When you are finished, press **OK**.
6. **Save Message** screen displays and select **Save** to store the message for later use or select **Cancel**, and press **OK**.
7. Enter the receiver's phone number and press **OK**.

B-3. Sending an Outbox Msg.

1. Press the **Menu** key. Go to **Messages**.
2. Scroll to **Send MSG** and press **Select**.
3. **Send MSG** screen displays, and scroll to **Outbox Msg** and press **Select**.
4. Scroll to the message you wish to send and press **Select**.

5. Now you can edit your message. When you are finished, press **OK**.
6. **Save Message** screen displays and select **Save** to store the message for later use or select **Cancel**, and press **OK**.
7. Enter the receiver's phone number and press **OK**.

4. Erasing Messages

You can erase all incoming messages or outgoing messages stored at a time.

1. Press the **Menu** key. Go to **Messages**.
2. Scroll to **Delete MSG** and press **Select**.
3. Scroll to the message box you want to erase: your options are **Inbox Msg** and **Outbox Msg**.
5. Press **Select**.
6. A confirmation displays. Scroll to **Erase** to delete it or to cancel your action, press **OK** with **Cancel** highlighted.
7. Your phone returns to the previous Delete display screen.

5. Message Setting

There are several ways your CWH 100 phone alerts you of new messages.

5.1 Alert Beep

You can choose whether to hear a beep just once, once every two minutes or nothing (Sound Off) when you receive a text or voice messages.

To set the Alert Beep

1. Press **Menu**. Go to **Messages** and scroll to **MSG Setting** and press **Select**.
2. Alert Beep is highlighted and press **Select**.
3. Select **Every 2 Min**, **Sound Off** or **1 time**.

5.2 Validity

You can choose the default validity period of all the incoming and outgoing messages stored. Your options are 1 week, 1 month, Unlimited and 1 day.

To set the Validity

1. Press **Menu**. Go to **Messages** and scroll to **MSG Setting** and press **Select**.
2. Scroll to **Validity** and press the **Select** key.
3. Select **Unlimited**, **1 day**, **1 week** or **1 month**.

CALL INFO (Call History)

1. Call List

The Call List is a type of telephone number log or a memory that stores information (time, date, phone number and name) about the last 30 incoming and outgoing calls.

Call lists are continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

You can call any of the stored numbers. All the calls are stored together in a chronological order. Duplicate calls only appear once on the list.

You can also find a phone number you noted during a call in the Call List (see “During a call on page xx).

Viewing a Number from the Call List

1. Press **Menu**. Go to **Call Info** and scroll to **Call List**.
2. Press **Select** and scroll to the number (or the name if the phone number is in your Phone Book) that you want to call.
3. When the number is highlighted, press **View**
4. The name and phone number display. To review information available on that call (time, date and duration of the call), press the **Time Info** key.
5. Press **OK** to return to the previous screen.

Calling a Number from the Call List

1. Press **Menu**. Go to **Call Info** and scroll to **Call List**.
2. Press **Select** and scroll to the number that you want to call.
3. Press the **Talk** key to make a call.

Saving a Phone Number from the Call List

1. Press **Menu**. Go to **Call Info** and scroll to **Call List**.
2. Press **Select** and scroll to the number that you want to store.
3. When the number is highlighted, press **View**
4. Press **Save** and follow the prompts to complete storing the number into your Phone Book.

2. Time Info

Call Time Information shows you the duration of a call in minutes and seconds. Your phone retains these 4 lists of Call Time:

▶ Last Call, All Calls, Dialed Calls and Answered Calls

1. Press **Menu**. Go to **Call Info** and scroll to **Time Info**.
2. Press **Select**
3. As you scrolling through **Last Call, All Calls, Dialed Calls and Answered Calls**, you can check:
 - ▶ how long your last call was
 - ▶ the total time and the number of all calls
 - ▶ the total time and the number of all outgoing calls
 - ▶ the total time and the number of all answering calls
4. When the number is highlighted, press **View**
5. Press **Delete** to erase **All Calls** or **Dialed Calls** as you scroll or press **OK** to return to the previous screen.

3. Clear Calls

Erasing Call Lists

You can easily erase all outgoing and incoming call lists at once.

1. Press **Menu**. Go to **Call Info** and scroll to **Clear Calls**.
2. Press **Select** and enter your pass code.
3. A Confirmation of **Clear Call List** displays. Scroll to **Yes** to clear all numbers and press **OK** or when **No** is highlighted, press **OK** to cancel the operation and return to the previous screen.

SOUND (Ringer Options)

Your CWH 100 Phone provides a variety of ringer options in the Sound menu. These options allow you to customize your ringer type and ringer volume settings so that you can easily recognize when a certain type of call is coming in. This means that you can set different ring signal for the 4 groups: **Company, Family, Friend and Other Call**.

You can choose the type of ring signal from a list of different sounds and melodies.

1. Company Call

You can assign a ring signal to a phone number stored as Company Group in your Phone Book.

1. **Menu** → ► → ► → ► → Press **Select**.
2. Press the Up / Down arrow keys to scan six ring types and 14 melodies. Each tone sounds as you scan the options.
3. When the desired ring type sounds, press **OK** to save the setting.

2. Family Call

You can set a ring signal for a phone number stored as Family Group in your Phone Book.

1. **Menu** → ► → ► → ► → Scroll to Family Call and press **Select**.
2. Press the Up / Down arrow keys to scan six ring types and 14 melodies. Each tone sounds as you scan the options.
3. When the desired ring type sounds, press **OK** to save the setting.

3. Friend Call

You can set a ring signal for a phone number stored as Friend Group in your Phone Book.

1. **Menu** → ► → ► → ► → Scroll to Friend Call and press **Select**.
2. Press the Up / Down arrow keys to scan six ring types and 14 melodies. Each tone sounds as you scan the options.
3. When the desired ring type sounds, press **OK** to save the setting.

4. Other Call

You can set a ring signal for a phone number stored as Other Group in your Phone Book.

1. **Menu** → ► → ► → ► → Scroll to Other Call and press **Select**.
2. Press the Up / Down arrow keys to scan six ring types and 14 melodies. Each tone sounds as you scan the options.
3. When the desired ring type sounds, press **OK** to save the setting.

5. Ringer Volume Setting

You can set the volume in six steps according to your requirements and preferences. You can also turn the ring signal off or choose a ring signal that rises in steps from the softest volume to the loudest.

1. **Menu** → ► → ► → ► → **5** or scroll to **Ring Volume** and press **Select**.
2. The ring signal volume appears in the display.
3. Use Upper volume key on the side of the phone to increase the volume, Lower volume key to decrease it.

The phone rings once with the actual setting as you increase or decrease the volume.

4. Press **OK** to save the setting.

6. Vibrating Unit (Ring Type)

You can set the phone's vibrating unit to Off (**Ring**), On (**Vib**) or Vibrating and Ring at the same time (**Vib+Ring**).

1. **Menu** → **▶** → **▶** → **▶** → **▶** → **6** or scroll to **Ring Type** and press **Select**.
2. Select **Ring**, **Vib** or **Vib+Ring** and press **OK** to save the setting.

7. Key Beep

You can choose whether to hear a long beep or short beep when you press the keys. When the Key Sounds are activated, a key sound is heard every time a key is pressed.

1. **Menu** → **▶** → **▶** → **▶** → **▶** → **7** or scroll to **Key Beep** and press **Select**.
2. Select **Short** or **Long** and press **OK** to save the setting.

8. Call Volume

To change the call volume:

- ▶ During a call (see "Changing Call Volume" from During a call on page)
- ▶ In Standby mode

1. **Menu** → **▶** → **▶** → **▶** → **▶** → **8** or scroll to **Call Volume** and press **Select**.
2. Use the volume keys on the side of the phone to increase or decrease the volume.
3. Press **OK** to save the setting.

9. Connect Tone

The Connect Tone is used to let you know by sounding a tone whether a call is connected or not.

1. **Menu** → **▶** → **▶** → **▶** → **▶** → **9** or scroll to **Connect Tone** and press **Select**.
2. Select **Enable** or **Disable** and press **OK** to save the setting.

SETTINGS

1. LED Display

LED Display lets you know the signal status whether you're in or outside of a service area by blinking Red or Green light.

Out of service area: Red & Green light on.

Low battery: Red light on.

In a service area: Green light on.

1. **Menu** → ► → ► → ► → ► → ► → **1** or scroll to **LED Display** and press **Select**.
2. Select **Enable** or **Disable** and press **OK** to save the setting.

2. Minute Minder (Time Remind)

If you turn on the **Time Remind**, you hear a beep once every 50 seconds during a call.

1. **Menu** → ► → ► → ► → ► → ► → **2** or scroll to **Time Remind** and press **Select**.
2. Select **Off** or **1 Minute** and press **OK** to save the setting.

3. Time (Display Time)

You can set the time format your phone displays in standby mode.

1. **Menu** → ► → ► → ► → ► → ► → **3** or scroll to **Display Time** and press **Select**.
2. Scroll to the time format you want. Your options are **Digital**, **Picture 1**, **Picture 2**, **Picture 3** and **Analog**.
3. Press **OK** to save the setting.

4. Backlight Control

You have several options for setting how the backlight operates.

1. **Menu** → ► → ► → ► → ► → ► → **4** or scroll to **Backlight** and press **Select**.
2. Press the arrow key to scroll through the options: **Automatic**, **Always**, **10 Seconds** and **Off**.
3. Press **OK** to save the setting.

5. Edit Banner

Your CWH 100 phone comes with a greeting that reads "CWH 100". You can personalize this greeting display with anything you want up to 14 characters.

1. **Menu** → ► → ► → ► → ► → ► → **5** or scroll to **Edit Banner** and press **Select**.
2. Your current LCD banner displays.
3. Press **Edit** and enter you own greeting and press **OK** to save the setting.
4. You can also set the position of your banner, the colors of characters and banner's background by using the arrow keys. Your options are:
 - ▶ **Pose**: Center, Right and Left
 - ▶ **Char**: Black, Dark Gray, Light Gary and White
 - ▶ **Back**: Black, Dark Gray, Light Gary and White

6. Contrast Control

The display contrast of your phone can be easily changed.

To change the setting or view the current setting:

1. **Menu** → ► → ► → ► → ► → ► → **6** or scroll to **Contrast** and press **Select**.
2. Press the side volume keys or Up / Down arrow keys until the desired option displays.
3. Press **OK** to save the setting.

7. Caller ID

Caller ID lets you know who's calling by displaying the number of the person calling when your phone rings. If the caller's name and number are already stored in your Phone Book, the corresponding name appears with the number.

1. **Menu** → ► → ► → ► → ► → ► → **7** or scroll to **Caller ID** and press **Select**.
2. Select **On** or **Off**.
3. Press **OK** to save the setting.

8. Display Language

Your CWH 100 Phone can display all menus and messages in either Chinese or English. The first time you turn on the phone, you may want to change the language in the display. The default language is Chinese.

To change the display language to English

1. **Menu** → ► → ► → ► → ► → ► → **8**
2. Scroll to English and press the Right Soft key.

9. Initializing

Initializing the phone returns all setup options to the factory default settings. All of your preferred settings will be erased by initializing your phone.

1. **Menu** → ► → ► → ► → ► → ► → **9**
2. Enter your pass code (the default code is 0000).
3. A confirmation of initializing displays. Scroll to **Yes** and press **OK** to reset the phone or press **OK** when **No** is highlighted to cancel the operation.
4. The phone restores the default settings and then returns to Standby mode.

SECURITY

The phone lock protects the phone against unauthorized use if it is stolen. It is not activated when you buy the phone. You can change the default code (password) **0000** to any four-digit personalized code.

1. Lock

When your phone is locked, you can only receive incoming calls or make emergency calls to 112 or other E-Call numbers (see “4. E-Call Edit” of Security on page).

You can lock the phone manually during use, or set the phone to lock automatically when it is turned on.

To lock your phone:

1. **Menu** → ◀ → ▶ → ▶ → 1 or press **Select**.
2. Enter your password.
3. Press the arrow keys to select an option:

Unlock: The phone remains unlocked.

Lock: The phone locks immediately and stays locked until the password is entered.

Power Up: The phone locks automatically the next time your phone is powered on and stays locked until the password is entered.

4. Press **OK** to save the setting.

To unlock your phone:

1. Press **Unlock**, the Right Soft key.
2. Enter your password.

* Using One-touch locking/unlocking your phone: Press and hold the # key.

2. Changing the Pass Code

You can enter a personal password and later change the password as often as you like.

To change the password:

1. **Menu** → ◀ → ▶ → ▶ → 2 or scroll to **Change Code** and press **Select**.
2. Enter your password.
3. Enter a new, four-digit password by pressing the digit keys and press **OK**.
4. Enter the new password again and press **OK** to save the new password.

3. Call Barring

You can restrict use of the phone (two types of outgoing calls) according to your preferences.

1. **Menu** → ◀ → ▶ → ▶ → 3 or scroll to **Call Barring** and press **Select**.
2. Enter your password.
3. Scroll to the option you want and press

You have three options:

All Calls can be barred all outgoing calls.

Int'l Calls can be barred all outgoing international calls.

Disable cancels all Call Barring.

4. Confirm your selection by pressing **OK**.

4. E-Call Edit

Your CWH 100 Phone provides the option of storing three E-Call numbers. All three E-Call number can be dialed at any time even when your phone is locked.

To store E-Call numbers:

1. **Menu** → **◀** → **▶** → **▶** → **▶** → **4** or scroll to **E-Call Edit** and press **Select**.
2. Enter your pass code.
3. Scroll to an **Empty** location and press **Edit**.
4. Enter the E-Call number by pressing the digit keys and press **Save** to store the number.
5. Press **OK** to return to the previous screen.

To dial an E-Call Number in Lock mode:

1. Press **E-Call**, the Left Soft Key.
2. **Emergency Call** screen displays.
3. Scroll to a number you want to call and press **Select** to make a call.

EXTRAS

1. Alarm Clock

The phone has an alarm clock inside of it with three separate alarms. Each alarm can be set to go off one time or to go off daily at a time that you have programmed.

When the alarm time is reached, the phone sounds an alert and flashes the text *Alarm Time!* Stop the alarm signal by pressing **OK**, the Right Soft key. The alarm signal will sound for 60 seconds if you do not turn it off.

To set the alarm:

1. **Menu** → **▶** → **▶** → **▶** → **1** or select **Alarm Clock**.
2. Choose <1 Time> or <Everyday> for the alarm by scrolling the Left / Right arrow keys.
3. Press the Down arrow key to set the time for the alarm. Enter the time and use the Left Soft key to select **PM** or **AM**.
4. Press **Save** to store the alarm setting.

* Note: When your phone is in vibrating mode, the alarm signal is muted and the phone vibrates

and flashed the text *Alarm Time!*

To turn the alarm function off:

1. **Menu** → ◀ → ▶ → 1 or select **Alarm Clock**.
2. Choose <Off> by pressing the Left / Right arrow keys.
3. Press **Save** to turn the alarm function off.

2. Calculator

The phone's in-built calculator can add, subtract, divide and multiply.

To perform a calculation:

1. **Menu** → ◀ → ▶ → 2 or scroll to **Calculator** and press **Select**.
2. Press digit keys to enter the first number in your calculation. Numbers can be up to 7 digits long.
 - ▶▶ Press * to enter a decimal point.
 - ▶▶ Press # to change the sign of a number to a negative (-).
3. Press the arrow keys to set the operator for your calculation. Press **Calc** to get the answer.
4. To clear the display for a new calculation, press **Reset**.

3. World Clock

World clock tells you what time it is in twenty-seven different time zones around the world along with one or more major cities, states, regions or counties in a time zone:

To check the time in another city or country:

1. **Menu** → ◀ → ▶ → 3 or scroll to **World Clock** and press **Select**.
2. Use the arrow keys to find the current time and Press digit keys to enter the first number in your calculation. Numbers can be up to 7 digits long.
3. Press the arrow keys to set the operator for your calculation. Press **Calc** to get the answer.
4. To clear the display for a new calculation, press **Reset**.

- Beijing, Manila, Taipei, Singapore,
- Hong Kong
- Seoul, Tokyo
- Sydney
- Anchorage
- Los Angeles
- Denver
- Dallas, Chicago
- New York
- Rio de Janeiro
- London
- Paris, Amsterdam, Rome, Berlin, Vienna

- Athens, Helsinki
- Moscow
- Bangkok, Hanoi

4. Games

The phone offers you the following games to play: **Puzzle, Tetris.**

1. **Menu** → ◀ → ▶ → 4 or scroll to **Calculator** and press **Select**.
2. Scroll to the game you want to play and press **OK** to start the game.

5. Answering Mode

Use your phone's answer mode when you are not available to answer an incoming call.

The options are **Auto Answer, Wait Mode** and **Disable** (see "Auto Answer and Wait Mode" of Hot Keys on page xx).

1. **Menu** → ◀ → ▶ → 7 or scroll to **Answering Mode** and press **Select**.
2. Scroll to the option you want to set and press **OK** to save the setting.

6. Voice Recording

You can record your own personal greeting or review the phone's General Greeting recorded to answer automatically an incoming call.

To record you own personal greeting to be played in Auto Answer / Wait Mode:

1. **Menu** → ◀ → ▶ → 8 or scroll to **Voice Recording** and press **Select**.
2. Scroll to **Auto Answer / Wait Mode** and press **Owner**.
3. Press **Rec**, the Left arrow key to record your personal greeting.
4. The message "Recording" displays, along with the 20-second timer.
5. Press **Save** to store your own personal greeting or **Cancel** to cancel recording.
6. Press **Play** to review the greeting you recorded.
7. Press **OK** to save the setting.

To review the phone's General Greeting in Auto Answer / Wait Mode:

1. **Menu** → ◀ → ▶ → 8 or scroll to **Voice Recording** and press **Select**.
2. Scroll to **Auto Answer / Wait Mode** and press **Owner**.
3. Press the Right arrow key to play the general greeting.
4. The message "Playing" displays and you will hear the recorded general greeting.
5. Press **OK** to return to the previous screen.

7. Play Voice

With this function you can review two separate voice memos you recorded and voice messages callers left.

1. **Menu** → ◀ → ▶ → 9 or scroll to **Play Voice** and press **Select**.
2. Scroll to the voice memo or voice message you want to replay.
3. Press **Play** to listen to it. (Press **Erase** and follow the prompts to erase it)
4. Press **End** to return to the previous screen.

Parts List

A Standard Battery

A Battery Charger (Travel Charger)

User's Manual

A Wrist Strap or Hands-Free Neck Loop

* Note: Leather Carry case is not offered.