 


VECTOR 20

HANDS FREE HEADSET DUPLEX WALKIE TALKIES WITH X-TENDED RANGE

 
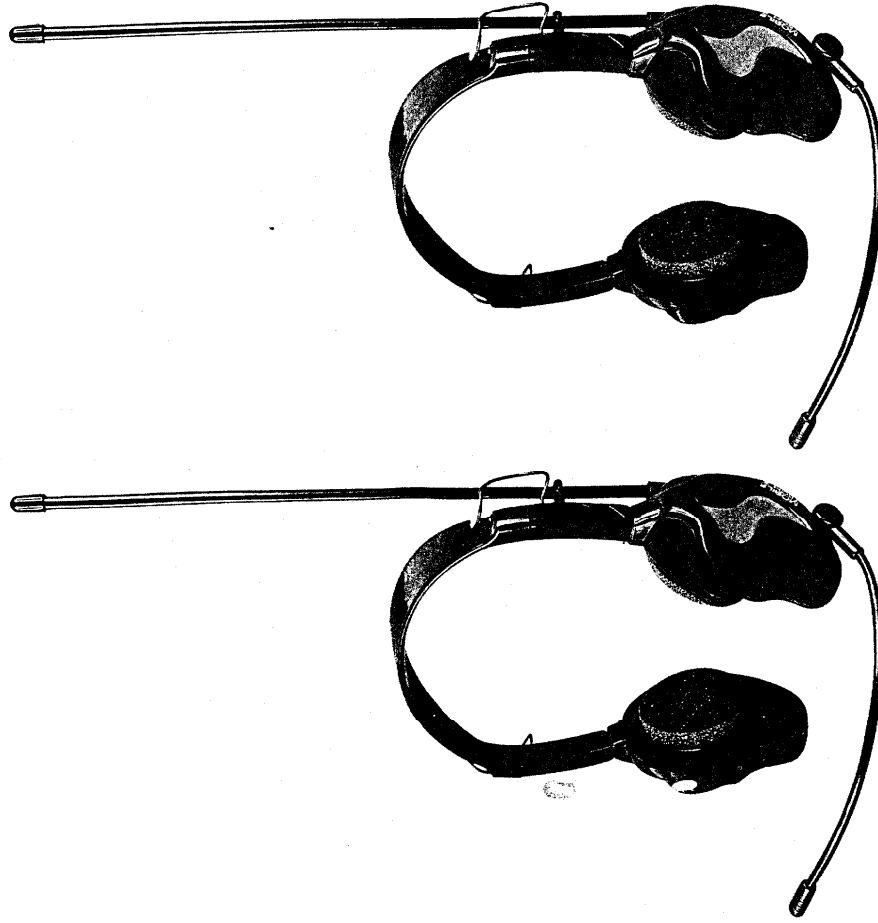 


MODEL:NO.1161181

OWNER'S MANUAL
ANOTHER QUALITY PRODUCT BY ALARON

OPERATION

1. OPEN THE BATTERY DOOR USING A COIN AND INSERT ONE "9V" BATTERY (NOT INCLUDED) AS INDICATED IN FIG.2.
2. SELECT "LO" OR "HI" VOLUME BY USING THE SELECTOR SWITCH LOCATED AT THE SIDE OF YOUR WALKIE TALKIES.
3. ADJUST THE HEADBAND AND BOOM MIC AS INDICATED IN FIG. 3.
4. WHEN TRANSMITTING, SPEAK CLEARLY IN A NORMAL VOICE.
5. IN THE EVENT OF INTERFERENCE CAUSED BY OTHER RADIO SIGNALS IN THE VICINITY, MOVE TO A DIFFERENT LOCATION.

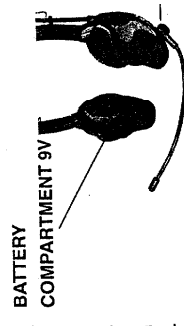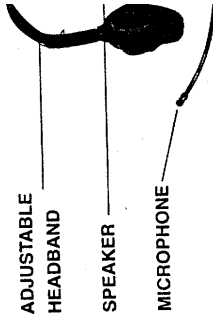

CAUTION

1. YOUR HEAD SET STYLE WALKIE TALKIES HAVE BEEN FULLY ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY. BE SURE NOT TO TOUCH INTERNAL COMPONENTS OTHER THAN REPLACING BATTERIES.
2. WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERIES.
3. AFTER USE, ALWAYS TURN THE SELECTOR SWITCH TO "OFF" POSITION.
4. KEEP YOUR HEAD SET STYLE WALKIE TALKIES IN A DRY AND PLACE.
5. PLEASE DO NOT USE EXCESSIVE FORCE ON THE BOOM MIC OR THE HEADBAND OF THIS HEADSET UNIT.



WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATION EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USERS' WARRANTY TO OPERATE THE EQUIPMENT.