

Functions and Operation of the Lowrey Remote Control

The Lowrey Remote Control unit is designed to be used in conjunction with the Lowrey SU series of organs. The hand-held unit allows remote operation of some of the organ functions. The basic functions are to turn the organ on and off, activate or deactivate the light show mode, and control the master volume. In addition, if a music or Karaoke disc is placed in the organ disc drive, this disk may be activated and controlled from the remote. In Karaoke mode, the lyric display and the melody note may also be turned on or off.

All the buttons on the Remote Control duplicate the functions of like-named buttons on the organ except for the channel selection buttons.

1. On / Off

This button turns the organ on and off. It is a toggle type action, the same as the switch on the organ. One push turns the organ on, and the next push turns the organ off.

2. Light Show

This button turns on the light show. The organ operates normally while the light show is running. Pressing this button again turns the light show off.

3. SET and Ch 1-5 buttons

These buttons set the remote operating channel. They need not be used unless there is a conflict between the remote and some other device. For example, it is possible in a town home or condominium that another Lowrey organ of the same model might be nearby. The organs leave the factory set to channel 0. If another organ or device operating on channel 0 is nearby, there may be interference between the two. In this case, the channel number may be changed. The channel number on the remote and on the organ must match. Instructions for changing the receive channel on the organ appear in the organ operation manual. To change the channel on the remote, use the following procedure:

- a. Press and hold the SET button until the indicator light starts blinking.
- b. Press the desired channel button. The light stops blinking and the channel is set.
- c. To select the default of channel 0, press the SET button again after step a.

4. Play / Pause

Pressing this button while the organ is on and a disc is present in the disc drive will start playback of the songs recorded on the disc. Once playback is started, pressing this button again will pause the playback.

5. Stop

Pressing this button will stop playback of the disk. The song number will be reset to the first song on the list.

6. << >> Buttons

These buttons advance the playback to the next song, or select the previous song.

7. Chain Loop

Pressing this button will activate the Chain Loop function, which will cause the first song on the disc to start again after the last song has played. This sequence will continue until the stop button is pressed, or the Chain Loop button is pressed again, in which case the playback will stop after the last song.

8. Lyric

If a disc with Karaoke information is being played, pressing this button will cause the lyrics to display on the Information Center screen on the organ, and also on a video monitor if a monitor is connected to the video out jack. Pressing this button again will turn off this feature.

9. Melody

When in the Karaoke mode, pressing this button will turn off any instrumental sounds programmed to play the melody. This allows the singer to sing the melody solo, rather than having it be doubled by the orchestration. Pressing this button again turns off this function.

10. Volume (up/down)

These buttons raise and lower the master volume.

NOTE: Two AA alkaline batteries power The Remote control. Be sure to follow polarity guide molded in battery compartment.

FCC Statements:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.