

Safety Precautions

- Do not subject the device to severe impact or drop it from heights.
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunlight.
- Avoid using the device near strong magnetic fields.
- Normal functioning of the product may be disturbed by ESD. If so, simply reset and restart the device. During file transmission, please handle with care and operate in a static-free environment.
- Keep the device away from water and other liquids. In the event that water or other liquids enter the device, power off the product immediately and clean the device.
- Do not use chemicals to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- Do not install this equipment in a confined space such as a book case or similar unit. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to environmental aspects of battery disposal.
- Use the apparatus in moderate climates.
- We are not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product. This will invalidate the warranty.
- If the device will not be used for an extended period of time, please charge the battery at least once per month to maintain battery life.
- Charge the battery if:
 - a) The battery level icon displays  (An empty battery)
 - b) The device powers off automatically when restarted.
 - c) There is no response when pressing keys with keys unlocked and battery full.
- Do not interrupt the connection when the device is being formatted or transferring files. Otherwise, data may be corrupted or lost.
- When the device is used as a portable HD, please use only per the instructions. Otherwise, permanent data loss could occur.
- Please use and install data using the attachments/accessories provided and only according to the manufacturer's instruction.
- Please refer to the information on the bottom of the device for electrical and safety information before installing data or operating the device.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
- There is danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.

- The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunlight, fire or the like.
- Please follow responsible procedures for battery disposal.
- If the power adaptor disconnected from the device, the device will remain operable as long as the battery has sufficient charge.

Listening Cautions

- This product respects the current regulations for limiting the output volume of consumer audio devices to a safe level. By listening to your device with headphones or earbuds at high volumes, you run the risk of permanent damage to your ears. Even if you get used to listening at high volumes and it seems normal to you, you still risk the possibility of damaging your hearing. Reduce the volume of your device to a reasonable level to avoid permanent hearing damage. If you hear ringing in your ears, reduce the volume or shut off your device. This device has been tested with the supplied earphones. In order to preserve your hearing, it is advised that you use only the following headphone models: the earphones supplied with your device, or any other headphones that respect the current regulations. Other types of headphones may produce higher volume levels. (At full power ,the prolonged listening of the walkman can damage the ear of the use)
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations created by obstructed hearing.
- Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. What sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting the volume of your device at a safe level BEFORE your hearing adapts.

To establish a safe volume level:

- a. Start your volume control at a low setting.
- b. Slowly increase the sound until you can hear it comfortably and clearly, and without distortion. Once you have established a comfortable sound level, leave it there.

This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.

Table of Content

Safety Precautions	1
Listening Cautions.....	2
Feature Summary	3
Accessories	4
Buttons & Ports	4
Charging Battery	5
Transferring Files from Computer	5
Turning On the Unit.....	6
Home Screen.....	6
Unlocking the Screen	6
Tips on touching screen	6
Accessing Internet.....	7
Reading E-Books	8
Playing Music.....	8
Playing Video.....	8
Viewing Photos	9
Using the Camcorder/Camera	9
Sending/Receiving E-mails.....	10
HDMI Output.....	11
Managing 3 rd Party Applications	11
Close Recent Applications	11
Managing Tasks	12
Specifications.....	12

Feature Summary

Wi-Fi Connectivity

With the latest Wi-Fi technology, this device can connect you to the Internet wherever you are.

9.7" Touch Screen

Touch or slide your finger on the screen, the screen responds instantly.

Third-party Application Support

With the built-in Android TM OS, you can install a large number of third-party

applications in this device.

Built-in Camera Lens

Equipped with the built-in camera lens, this unit can function as a webcam or video recorder.

Built-in G-sensor

The screen changes to landscape or portrait automatically when the device rotates.

Entertainment

 
You can enjoy music, movies, pictures and e-books with the device.

Accessories

- Main Unit
- USB cable
- User Manual
- Warranty card

Buttons & Ports





Remark:

1. **HDMI jack** – Connects to HD TV that supports HDMI connection.
2. **Micro USB** – Connects to PC via USB cable.
3. **DC-IN** – Connects to the provided AC adaptor for charging.
4. **Earphone** – connects to stereo earphones.
5. **Power** –Briefly press to lock or unlock the screen; press and hold to turn on/off the unit; press and hold down for ten seconds to reset the device.
6. **VOL+/-** – Increase/ decrease the volume.

Charging Battery

The device has a built-in rechargeable battery. No extra battery installation is required. Just charge the device when it indicates low battery.

To charge the battery, connect the device to any standard wall outlet via the DC-IN port using the power adaptor.

Note:

- a. **You are strongly recommended to charge the battery immediately when the device indicates the battery is lower than 15%!**
- b. **You can operate the device even when it is being charged. But for extended battery life, it is suggested NOT to use the device when it is charging.**
- c. **It is recommended to charge the battery before you use the device for the first time.**
- d. **For maximum performance, lithium-ion batteries need to be used often. If you don't use the device often, be sure to recharge the battery at least once per month.**
- e. **Be sure to use only the dedicated power adaptor provided with the unit for charging.**

Transferring Files from Computer

Before reading or playing files, you need to transfer media files from a computer to the device.

- (1) Connect the device to a computer with the supplied USB cable.
- (2) Tap “Turn on USB storage” to connect the device to computer.

- (3) Once connected, removable two disk drives will show on your computer. One represents the internal memory of the device, and the other represents the memory card inserted into the device. Now you can copy files from or to these disk drives just as you would on your hard drive.
- (4) As you complete file transfer, choose "Turn off USB storage" to disconnect the device.
- (5) Remove the device from the computer safely.**

The pre-installed applications and Android OS occupy a considerable part of capacity – nearly more than 1GB, it is normal that you see huge difference between available memory space and total capacity.

Turning On the Unit

To turn on the device, press and hold the **Power** button on the unit until you see the boot-up screen. It may take a few seconds to start up the system, please wait before you proceed.

To turn off the device, press and hold the **Power** button until you see the option "Power Off", tap on "Power Off" and then tap on "OK".

Tip: For the sake of power saving, this device may sleep with the screen display off when there is no touch action for a while (depending on the actual setting of Screen Timeout). You can briefly press the **Power** button to wake it up.

Home Screen

The Extended Home Screen

Slide your finger horizontally on the screen to go to the left or right panel of the extended Home Screen.

Changing the wallpaper

Hold your tap on the Home screen until a menu appear. Tap on "Wallpaper" and then choose a picture as the desktop wallpaper.

Unlocking the Screen

The screen will be locked after the device is idle for a few seconds. You need to unlock the screen by dragging the lock icon  rightwards before you continue to use the device.



Tips on touching screen

- **Click:** Briefly click on an item can open an application or page.
- **Drag:** When watching a video or listening to music, you can tap on the progress

bar to playback any designated section of the file. You can drag the cursor of the progress bar to any other elapsed time point of the file.

- **Slide finger:** In different browsers (File, Music, Video, Photo, etc.), you can hold your finger on the screen and then drag up and down to scroll the file list up and down.
- **Hold finger:** In some browsers (File, Music, Video, Photo, Web etc.), you may hold your finger on an item to display options.
- **Pinch finger:** You can zoom the page by pinching your finger.

Accessing Internet

This device features built-in Wi-Fi technology so that you can access the internet over Wi-Fi network.

Make WI-FI Connection

To use WiFi, first of all, you need to configure a Wi-Fi network. For such purpose, you need to stay in a Wi-Fi service zone. Whenever it is within the coverage of a WiFi network you have configured, the device will attempt to make a connection.

Before launching an Internet application such as the web browser, you first need to activate the Wi-Fi and configure a Wi-Fi network.

- (1) Tap  in the Home screen.
- (2) Slide the WIFI toggle switch to “ON” to turn on WIFI.

- (3) Your Tablet will scan automatically for available WiFi networks and display them in the right panel. The list of available networks shows all the wireless networks in range of your device. Choose a network from the list and then tap “Connect” to connect. Some network may be secured with password, enter the password before connecting. If the connection is successful, the message Connected to...(WiFi Network Name) will appear under the WIFI Setting.

Note:

- The available network list is constantly refreshed automatically.*
- When the Wi-Fi is enabled, the device will connect automatically to your configured networks when they are in range.*
- If the device detects a network that has never been configured, it will display a notification icon.*

Make 3G Connection

- (1) Connect your 3G DONGLE to the device via USB host cable.
- (2) Go to “Wireless & Network Settings”, and select “Mobile Network Settings”.
- (3) Select the options of “3G Stick” and “Data enabled”, then you will see the screen following display. Once the 3G icon appears at the bottom of the screen, it means that 3G network is available for accessing the Internet now.

Note: Not all wireless networks offer access to the Internet. Some Wi-Fi networks only link several computers together, without any Internet connection.

Using the Web Browser

- You can scroll the screen up and down by tapping on the page and dragging it up or down (be careful not to tap a link until you are ready!).
- To open a link, simply tap it.
- To go back to the previous page that you browsed, tap the Back icon .
- To display the available menu items, tap the Menu icon .
- To go back directly to the Home screen, tap the Home icon .

Reading E-Books

Transfer E-books from Computer

Before reading, you need to transfer or download e-books to the device. You can copy e-books from your computer's local drive to the device by USB connection (see the "Transferring files" section mentioned before).

Note: Make sure your e-books are in format of PDF, EPUB, TXT, FB2, RTF, CHM, DOC, EXCEL supported by the device.

Playing Music

Tap the Music icon to launch the music player.

Music Library

You should enter the music library once you start the music player. The Music Library shows your music files sorted by categories (Artist, Album, etc.) if your music files contain these song information tags. If some of your music files do not contain information tags, they will be classified as (Unknown) in the Music Library. When new music is copied to the device, the Music Library will be updated automatically.

- You can drag your finger up and down on the file list to scroll through it.
- Tap a song to play.

Playing Video

Tap the Video icon in the application page to launch the video player.

Navigate through Video Files

You should see the video list when you enter the video player.

- You can drag your finger up and down on the video list to scroll the video list up

and down.

- Tap a video to start playing.

Note: Some video files may not be played correctly with the device. Refer to the Technical Specifications and make sure the video resolution, encoding format or file type is supported.

Viewing Photos


Tap the Gallery icon in the application page to launch the Photo Gallery.

Viewing Photos

- (1) Photos should be listed in thumbnail. You can slide your finger on the screen left or right to browse photos.
- (2) Tap a photo thumbnail to view the photo in full screen.
- (3) To display the previous/next picture, slide your finger on the screen horizontally.
- (4) To zoom in or out the picture, pinch your finger on the picture.

Using the Camcorder/Camera

Tap the Camera in the application page to launch the Camera.

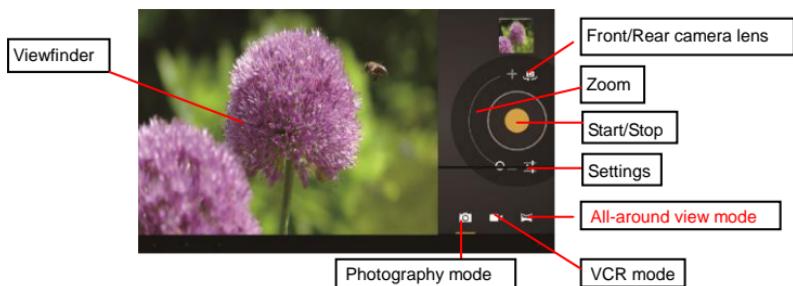

- To start making video clips, tap on the Start/Stop button  to start video recording.
- Tap on the Start/Stop button  again to stop video recording or photographing.
- The video clip / photo can be previewed in the Preview Window.
- To play the video clip that you have made, enter the Video Player, and then tap the video.
- To view the photo that you have taken, enter the Photo Viewer mode, and then tap

the photo.

Sending/Receiving E-mails

You can send or receive e-mails from the Internet at any time with this device. Make sure you have an Internet connection before using the email service.

Setup Email Account

First you need to setup an E-mail account for receiving or sending emails.

- (1) Start up the email application by tapping the **Email** application icon and you are prompted to setup an account.
- (2) Input your email address and login password. You can set the account as default by selecting the option "Send email from this account by default".
- (3) Tap "Manual Setup" to set the email server information.
- (4) Choose the server type from POP3, IMAP or Exchange for incoming emails. To know what type of your email server is, you can consult the service provider, network administrator or search for information in the Internet.
- (5) Input required information (server, port etc.). You can obtain the information from the service provider, network administrator or the Internet.
- (6) Choose the server type for outgoing emails, and input required server information.
- (7) Click "Next" to continue. Your tablet will check the server settings. When it prompts you that "Your account is set up, and email is on its way", your account is set up successfully.
- (8) Input your name and then tap on "Done" to finish.


Note: If you have more than one account, every time when you start up the email application, you enter the default email account.

View Emails

You should enter your mailbox when you start up the email application.

- In the mailbox, you can slide your finger up and down to scroll through the email list.
- Tap on an email to open it.
- Holding your tap on the email can display a menu. With the menu, you can open, reply, forward or delete the email.

HDMI Output

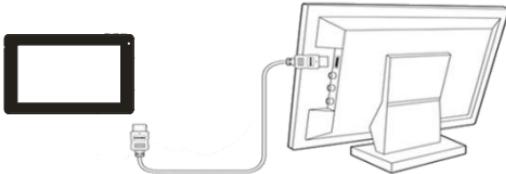

The device features a HDMI interface with which you can connect the device to digital televisions. HDMI connection can deliver high-definition audio and video quality.

To use the HDMI function on digital televisions,

- (1) Make sure the HDMI under Settings is turned on.
- (2) Turn on the digital television, and switch its Source mode to HDMI.
- (3) Connect the device to the digital television through HDMI cable.
- (4) Once the connection is made, the digital TV shows content synchronized with the device, and then you can enjoy the sharpest image quality on the wide screen of television.

Managing 3rd Party Applications

Install Applications

You can install applications manually following these steps:

- (1) Download the installation file directly from the built-in application library (e.g. SlideMe) or Internet. Make sure the file is in format of .apk which is supported by your Internet Tablet system.
- (2) Copy the installation file to your Internet Tablet by USB connection.
- (3) Turn on your Internet Tablet and locate the installation file with the Explorer.
- (4) Once the application is installed successfully, you can find it in the application tab.

Uninstall Applications

- (1) Tap the Settings shortcut in the Home Screen to display all system settings.
- (2) Select "Apps".
- (3) Tab on the application that you want to uninstall.
- (4) Tab on "Uninstall" to uninstall the application.

Note:

- You cannot uninstall the pre-installed applications.
- Some of the applications developed for Android mobile might not run properly in the Device. Please consult the respective software developer for further information.

Close Recent Applications

Your device can remember applications that you used recently. That's very useful

when you want to go back to a window you opened recently. Also, you can close these applications to enhance system performance.

- (1) Tap  to display applications that you used recently.
- (2) Hold your tap on the application that you want to stop, and then select "Remove from list".

Managing Tasks

Your Internet Tablet can handle multiple tasks at the same time. For example, you can view photos while listening to music. Multitasking is helpful but inefficient if too many tasks are running. In order to save system memory and enhance system performance, you can end some tasks that you don't use at the moment.

Specifications

Model No.	V99 quad core
Size	242x189x10mm
Weight	650g
OS/CPU/Memory	
OS	Google Android 4.1.1
Languages	Multi languages supported
CPU	RAM A7 Cortex-A31 1.5GHz (quad-core CPU,eight-core GPU)
RAM	2GB DDR3
ROM	16GB
Display	9.7inch Retina screen
Resolution	2048*1536 (4:3)
Touch screen	Capacitive touch screen,ten-touch
I/O Ports	1 * USB 2.0 HOST(support 3G、U disk,mouse,keyboard,RJ45)
	1 * TF card
	1 * 3.5mm stereo headphone
	1 * DC5V mains input
	1*HDMI
Speaker	2* 8Ω/0.5W
MIC	Internal MIC
WIFI	802.11b/g/n
External 3G	Yes

Functions/Features	
G-sensor	Support
Camera	2.0MP Front camera,5.0MP rear camera (Auto Focus)
Vedio Format	WMV,H.264,AVI,RMVB,FLV,DAT,MPEG,etc
Audio Format	MP3,WMA,OGG,FLAC,WAV,APE
Photo Format	JPG,BMP,PNG,GIF
E-book Format	PDF/TXT/CHM/DOC/EXCEL/EPUB/RTF/FB2
Battery	3.7V 8000mA/h
Battery life	6 hours Vedio playing
Charger	Input:AC100-240V.50-60HZ Output:DC5V 2.5A
Colors	White or Pink back hosuing (Metal), and White or Black TP
Software support	
Network	Browser -ChromeLite,Google Market,Email,Gmail,Google talk
Other functions	Calendar,Calculator,weather,clock,Recording
Map	Google Maps
Inout method	Can install the third party input method input method
Handwritten Function	Support
Entertainment	3D Gallery,Music,Youtube,video player ,

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*** RF warning for Portable device:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.