

Legal notices	3	Call options	34
Safety precautions	6	Direct call	34
Antenna care	8	Tone sequences (DTMF)	35
Phone operation	8	Contacts	36
Electronic devices	9	All contacts	36
Phone overview	12	Groups	37
Display symbols	14	Online status	37
Getting started	16	SIM	38
Inserting SIM Card/battery	16	Filter	38
RS MultiMediaCard™	17	General functions	39
Charging the battery	18	Call records	41
Switching on/off, PIN entry	19	Durat./charges	42
General instructions	20	Camera	43
Standby mode	20	SMS/MMS	46
Receiving signal	20	Writing an SMS	46
Digital Rights Mgmt. (DRM)	20	Writing an MMS	47
Main menu	21	Receiving/reading	49
Tabs	21	Draft	50
Menu controls	22	Outbox	50
Centre key	22	Sent	50
Standard functions	23	Msg. archive	50
Security	24	Templates	51
Text input	26	SMS settings	51
Calling	30	MMS settings	52
Ending a call	30	Text zoom	53
Setting the volume	30	Emoticons	53
Accepting a call	31	Save after send	53
Rejecting a call	31	E-mail	54
Handsfree	32	Writing/sending	54
Swapping between 2 calls	32	Receiving/reading	55
Conference	33	Draft	56

See also Index at the end of this User Guide

Outbox	56	Extras	97
Msg. archive	56	SIM services (optional)	97
Setting	56	My applications	97
WAP push	58	Calculator	97
Inst. messaging (IMSG)	59	Unit converter	98
Voice mailbox/Mailbox	64	Online status	99
CB services	65	Sound recorder	101
Internet	66	Stopwatch	102
Settings	69	Countdown	102
Profiles	69	Date calculator	103
Ringtones	70	My menu	103
Themes	71	Alarm clock	104
Display	72	Media player	105
Vibration	73	My stuff	108
Connectivity	73	Mobile Phone Manager	111
Shortcuts	77	Questions & Answers	114
Call settings	78	Care and maintenance	118
Phone settings	80	Customer Care	119
Clock	83	Product data	121
Security	84	SAR	122
Network	85	Accessories	123
Accessories	87	U.S. FDA	125
Organiser	89	FCC/Industry Canada Notice	131
Calendar	89	Intellectual property	132
Appointments	90	Ten Driving Safety Tips	133
Tasks	92	End user license agreement	135
Notes	92	Menu tree	139
Dictat.machine	93	Index	145
Time zones	94		
Remote synchronisation	95		

See also Index at the end of this User Guide

Legal notices

The mobile phone described in this guide is approved for use on the GSM and GPRS networks operating on the GSM 900, 1800 (DCS/PCN) and 1900 (PCS) bands. It is approved for use in the country where it was originally sold and may be approved for use in other countries.

© 2006 Siemens Communications Inc.
All rights reserved.

Siemens and the M81 model phone are trademarks or registered trademarks of Siemens and/or its affiliates in the United States and/or other countries.

T9® is a registered trademark of America Online, Inc. in the United States. Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S and other countries. The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

curacy, reliability or contents of this document. Siemens reserves the right to revise the user guide or withdraw it at any time without prior notice. Under no circumstances shall Siemens be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Disclaimer

The information contained in the User Guide is written for the M81 phone. Siemens reserves the right to make changes and improvements to the products and any of the features of the products described in this document without prior notice. The contents of the user guide are provided "AS IS". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the ac-

Export Information

The mobile phone may be subject to export regulation of the United States and other countries. Diversion contrary to law is prohibited. You must comply with all applicable export laws, restrictions and regulations of the United States foreign agencies or authorities, and may not export, or transfer for the purpose of re-export, the mobile phone or any part of the phone in violation of any applicable restrictions, laws or regulations, or without all necessary approvals.

Network Services

A number of features included in this guide are called Network Services. They are special services provided by wireless service providers. In order to use any of these Network Services, you must subscribe to these service(s) from your service provider and obtain instructions for their use. Some of these Network Services may not be available when roaming on a network other than your home network.

Standby and Talk Time Information

The mobile phone incorporates features that are new to the mobile phone world. These may include color displays and lighting, graphic games, music reproduction and browsing the Internet. The way you use the display and the features will affect the performance of the battery and how long it lasts between charge cycles. The quoted standby times and talk times show the minimum and maximum performance that can be expected from the battery under normal network conditions and with the default settings as set by the factory. However, playing games (particularly with the backlight continuously switched on) and listening to music will shorten the time available for standby and to make and receive telephone calls. Operation times also vary depending on network conditions, SIM settings, charging and battery condition, how you use your phone and other factors.

Memory

The mobile phone contains an internal memory device that stores the software required to operate the mobile phone, communicate with the GSM/GPRS network and provide the user interface.

Some features in the internal memory run additional devices and some additional games and utilities. The amount of memory available in the mobile phone is finite and may be insufficient to store large numbers of applications and files.

Warning!

Remember to back up your data and to do so frequently. Always back up all data and programs before sending the mobile phone in for repair.

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use.

Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or whilst driving.



Cellular phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 9 inches (20 cm) between phone and pacemaker. When using the cell phone hold it to the ear which is farthest from the pacemaker. For more information consult your doctor.



Small parts such as the SIM Card, dust cap, lens ring and lens cap as well as the RS MultiMediaCard can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



Tones, music and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function. Otherwise you risk serious permanent damage to your hearing.



Only use original batteries (100 % mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. For instance, the battery may explode.



Do not look at the LED (e.g. activated infrared port, flash LED) with optical magnifiers because of radiation.

This product complies with IEC/EN 60825-1 "Safety of Laser Products" for LED Class 1M products; such products are safe under reasonably foreseeable operating conditions.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.

The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



Do not use a handheld while driving.



Do not place the phone near to electromagnetic data carriers such as credit cards and floppy disks. Information stored on them could be lost.



You may only open the phone to replace the battery (100 % mercury-free) or SIM and RS MultiMediaCard. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



Permanent hearing loss may occur if you use ear- or headphones at high volume. You can adapt over time to a higher volume, which may sound normal but can be damaging to your hearing. Set your volume to a safe level. If you experience ringing in your ears, reduce the volume or discontinue use of your system.



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee! These safety instructions also apply to original accessories.

Product attributes are subject to changes in technology, design and availability. BenQ reserves the right to modify products without prior notice.

This cellular phone offers a range of functions, it can be used in positions other than the head, such as on the body. In this case, separation distance of **2.0 cm** is required. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

Bluetooth®

Your phone has a Bluetooth interface. This makes it possible to establish a wireless connection with your phone and a headset, a car kit or other Bluetooth-enabled devices.

In order to establish a secure link between the devices and to prevent a third party from having access to your phone, you should observe the following points:

- The initial connection between two devices, what is called "pairing", should take place in familiar surroundings.
- Both devices must be able to identify themselves one time by using a password/PIN. To ensure sufficient security, you should choose a 16-digit number combination for a password that would be difficult to guess (if a PIN has not been assigned).

- An automatic connection acceptance ("connection without confirmation") should only be used in exceptional cases.
- In general, only trustworthy devices should be linked in order to minimise security risks.
- You should restrict the "visibility" of your phone if possible. This will make it much more difficult for unknown devices to establish a connection with your phone. To do this, in the Bluetooth menu, set the option **Visib.to others** from **Always visible** to **Not visible** (page 75).
- The name of your phone is transmitted in a Bluetooth connection. The factory default is the "Bluetooth ID". The first time Bluetooth is activated, or later in the Bluetooth menu, you can change this name (**My BT name**, page 75).
- If Bluetooth is not needed, this function should be deactivated.

Before using Bluetooth accessories, or a mobile phone inside a vehicle, check the vehicle user guide for any limitations on the use of these products.

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by BenQ Corp. is under licence. Other trademarks and trade names are those of their respective owners.

Important

Read this information before using your wireless handheld phone.

As this mobile phone is equipped with a fixed (non-retractable) antenna, some paragraphs in the text below may not be applicable.

Antenna care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone operation

Normal position

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on efficient operation

For your phone to operate most efficiently:

- Extend your antenna fully (if applicable).
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Laws pertaining to the use of mobile phones while driving vary significantly from state to state and sometimes even from locality to locality within states. For example, some areas may allow persons to use their mobile phones only if they employ a hands-free device, and some areas may prohibit the use of cell phones entirely. Accordingly, BenQ recommends that persons check the laws for the areas in which they drive or will be driving. For areas where the use of mobile phones while driving is permitted, BenQ encourages persons to use their phones responsibly and to employ hands-free devices. Also, if using your phone while driving, please:

- Give full attention to driving – driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call, if driving conditions so require.

For vehicles equipped with air bags

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers' Association recommends that a minimum separation of six inches (6") be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers

- should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- should not carry the phone in a breast pocket;
- should use the ear opposite the pacemaker to minimize the potential for interference;
- should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider or your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturers of your devices to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Turn your phone OFF in any facility where posted notices so require.

Airplanes

FCC and Airline Regulations prohibit using your phone while in the air. Turn your phone OFF when requested by the airline.

Check and comply with the policy of your airline regarding the use of your phone while the airplane is on the ground.

Blasting areas


To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

Potentially explosive atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include: fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls (SOS)

Your wireless phone can be used to make emergency calls. You can make an emergency call from the main display screen. Enter the local emergency number such as 911 and then press the  key.

This phone, like any wireless phone, operates using radio signals, wireless and land-line networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should never rely solely on any wireless phone for essential communications (for example, medical emergencies). Remember – to make or receive any calls, the phone must be switched on and be used in a service area that has adequate signal strength. Emergency calls might not be possible on all wireless phone networks or when certain network services or phone features are in use. Check with local service providers regarding their network features.

Always make certain that your phone is properly charged before attempting any emergency calls. If you allow your battery to discharge, you will be unable to receive or make calls, including emergency calls. You must then wait a few minutes after the charging begins to place any emergency calls.

When making an emergency call, remember to give all of the necessary information as accurately as possible. Remember that your wireless phone might be the only means of communication at the scene of an accident, therefore you should not terminate the call until given permission to do so.

Batteries and Chargers

Only use original batteries (100% mercury-free) and charging devices. Use of non-original batteries and/or charging devices may cause explosion resulting in serious injury and/or property damage. Use original accessories in order to avoid possible injury and property damage and to ensure compliance with applicable laws and regulations. Improper use invalidates the warranty.

Battery safety precautions

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions. CONTAINS LITHIUM-ION OR NICKEL-METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE IN MUNICIPAL WASTE.

1. Only use the batteries specified for use with this mobile phone.
2. Do not use batteries of different sizes or from different manufacturers in this mobile phone.
3. Do not dispose of the battery in a fire; it may explode. Dispose of used batteries and phones in accordance with applicable laws and safety regulations. Do not expose battery to water. Check with local codes for special disposal instructions.
4. Do not open or mutilate the battery. Doing so may cause damage to the eyes or skin.
5. Exercise care in handling the battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conducting material may overheat and cause burns or fire.
6. Charge the battery provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the User's Guide. Do not attempt to charge the battery by any means other than those specified in the User's Guide.

Phone overview

① Softkeys

The current functions of these keys are shown as **text**/symbols (e.g.).

② Call key (green)

Dial displayed/highlighted phone numbers/names, accepts calls. In standby mode, show last phone numbers dialled.

③ On/Off/End key (red)

- Switched off: press to switch on.
- During a conversation or in an application: press **briefly** to end.
- In menus: return to standby mode.
- In standby mode:
Press and **hold** to switch off the phone;
press **briefly**: switch-off menu.

④ Media player key

Direct key for media player.

⑤ Internet key

Key for Internet access unless otherwise preconfigured.

⑥ Centre key



Press the centre key to open the main menu and to start an application or function (page 22).

⑦ Navigation keys

In standby mode:

- Open user profiles.
- Open contacts.
- Open inbox.
- Start the camera.

In lists, messages and menus:

- Scroll upwards/downwards.

During a conversation:

- Open contacts.



① **Integrated antenna**

② **Loudspeaker**

③ **+ / - Volume control**

④ **Display**

⑤ **Ringtone**

- Press and **hold** in standby mode: switch all acoustic signals on/off (except alarm clock).
- Press and **hold** during incoming call: switch off ringtone for this call only.

⑥ **Key lock**

Press and **hold** in standby mode: activate/deactivate key lock.

⑦ **Plug socket**

⑧ **Slot for RS MultiMediaCard**




① **Flash/torch**

Switch torch on/off: press 5 jkl

(change, see page 77).

② **Camera lens**

In order to shield the camera lens, please twist the cover to the right by 90° (protection against dirt/damage and splash water).

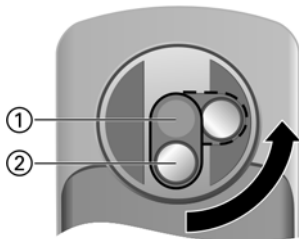

Display symbols

Display symbols (selection)	
	Signal strength
	Charging
	Battery charge level, e.g. 50 %
	Contacts
	Call records
	Internet/Service provider portal
	Games
	Organiser
	Messages
	Camera
	Extras
	Media player
	My stuff
	Alarm clock
	Settings
	All calls are diverted
	Ringer (beep) off

	Alarm set
	Keypad locked
T9Abc	Text input with T9
GP RS	Activated and available
iGPI IRSI	Registered
GP RS	Temporarily interrupted
	Browser offline
	Browser is being connected
	Browser online via GPRS
	No network (Internet)
	Bluetooth: Device not visible
	Bluetooth: Device visible
	Call accepted on Bluetooth device

Events (selection)

SMS memory full



MMS memory full



Phone memory full



No network access



Inbox



Memory assistant

Message symbols (selection)

Unread



Read



Draft



Sent



MMS not sent



MMS notification received

MMS with DRM contents
(page 20)

E-mail with attachment



Voice mail received

Camera symbols

Zoom factor



White balance



Flash activated

Getting started

Your phone's display is covered with a protective film. Remove this before using the phone.




In rare cases static discharge can cause temporary discoloration in the display. However, this will disappear within approx. 10 minutes.


Inserting SIM Card/ battery

The service provider supplies you with a SIM Card on which all the important data for your line is stored. If the SIM Card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

- Place the SIM Card in front of the slot with the contacts facing downwards. Then push the SIM Card fully into the holder using gentle pressure ①. Ensure that the cut-off corner is in the correct position.

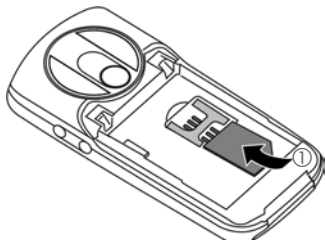


- Insert the battery sideways into the phone ②, then press it downwards ③ until it engages.

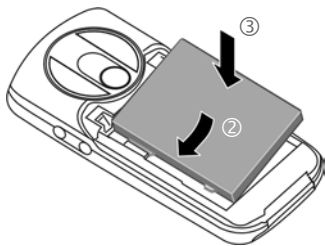


- To remove, press the retaining tab on the side of the battery, then lift the battery out.

- Place the battery cover on the phone slightly off centre ④ and then slide it until it clicks into place.

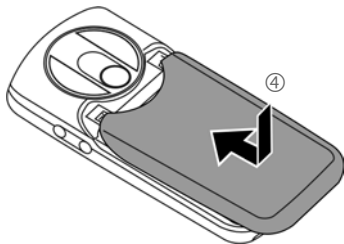

- To remove, press the battery cover ⑤, and slide it off the phone ⑥.

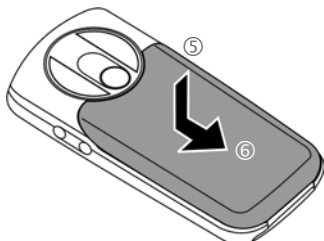


Additional information

Please switch off your phone before removing the battery!

1.8 and 3 volt SIM Cards are supported. Please contact your service provider if you have a different card.

RS MultiMediaCard™

- To insert, place the card in the card holder ①, ensuring the cut off corner is in the correct position. Push the card holder with the card into the phone until it clicks into place ②.

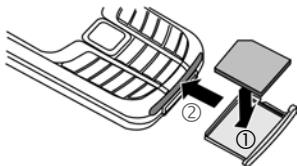


- Before removing the RS MultiMediaCard, call up the Eject card function in the options menu for My stuff. This saves data you have not yet saved and avoids losing data. Press the small button to remove ③ (e.g. with a pin). The card holder will pop out a little and you can remove it.



Charging the battery

Charging

The battery is not fully charged when delivered. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least **two hours** (for charging via USB, see page 88). Do not interrupt the charging procedure prematurely.

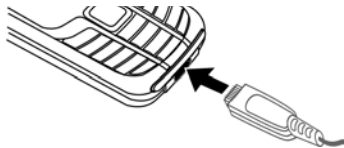

Display when charging is in progress.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to +40 °C (+41°F to +104°F). If the temperature rises/falls 5°C above/below this, i.e. drops to 32°F or rises to 113°F, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating time

The operating time depends upon the respective network conditions and conditions of use. Extreme temperatures considerably reduce the phone's stand-

by time. You should therefore avoid the leaving the phone in the sun or on a radiator (talktime, standby time see page 121).

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply unit included in delivery!

Display during operation

Charge level display during operation (empty–full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not terminate the charging process before completion**.

Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Switching on/off, PIN entry

Switching on/off



Press and **hold** the On/Off/End key.

Entering the PIN

The SIM Card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear in the display to ensure nobody can read your PIN. Correct with \leftarrow C .



Press the left softkey to confirm. Logging on to the network will take a few seconds.

Additional information

Changing the PIN page 24

Clearing SIM Card barring page 25

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the left softkey **SOS** you can make an emergency call on any network **without** a SIM Card and without entering a PIN (not available in all countries).

Switching your phone on for the first time

Time/date

Set the clock correctly once when getting started.



Confirm.



Start entry.



First enter the date (day/month/year), then the time (24 hours, including seconds).



Confirm. The time and date are updated.

Time zones



Select the city in the desired time zone.



Confirm.

General instructions

Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



Press the On/Off/End key to return to standby mode from any situation.

Receiving signal



Strong receiving signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Digital Rights Mgmt. (DRM)

Remember that your phone has Digital Rights Management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, number of times it can be used, etc. (page 81).

User guide

Symbols

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key (red)



Call key (green)



Softkeys



Displays a soft-key function.



Press the centre key, for example, to call up the menu.



Press the navigation key on the side marked with a triangle.



Function dependent on service provider. May require special registration.

Main menu

The applications are shown with symbols in the main menu:



Call up from standby mode using the centre key.



Select application with the navigation key.



Start application.


Main menu options

Options Open menu.

Search	List output of the menu. Entering letters will access a function directly.
Big letters	Select one of two font sizes.
Illumination	Set display light brighter/darker.
Eject card	Starts data backup before the RS MultiMediaCard is removed.
Help	Display a help text.

Tabs

The handy tabs offer you fast access to information and functions.

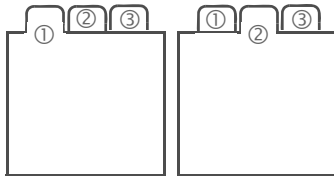

Navigation



Switch between the individual tabs.

If an input field is activated on a tab, it is only possible to navigate within the field using the navigation key.



To switch to the next tab, quit the input fields by scrolling up or down.

Menu controls

The steps needed to reach a function are shown in a **condensed form** in the user guide, e.g. to display record of missed calls in condensed form:



This comprises of the following steps:



Pressing the centre key opens the main menu in standby mode.



Select the record application.



Confirm with the centre key.



Select the **Calls missed** function.



Confirm with the centre key.

Centre key

The symbol in the centre of the lower line of the display shows the current function when the centre key is pressed.



Main menu



OK, confirm



Change



Calls



Edit



Insert



Options



Camera



Send



View



Save



Play



Record



Pause




Stop



Zoom

Standard functions

Functions which appear repeatedly in the options menu are listed here.

Options	Open menu.
Edit	Open the entry to edit.
View	Display entry.
Delete	Delete entry.
New entry	Create new entry.
Send...	Select transmission service and medium for sending.
Print	Printout on a suitable terminal via, Bluetooth or USB.
Reply/ Reply to all	The sender becomes the recipient, "Re:" is placed before the subject, and the received text is transferred into the new message.
Save	Store entry.
Save to 	Save recipient in Contacts.
Sort	Set sort criteria (alphabetical, type, time).
Rename	Rename selected entry.
Capacity	Display memory capacity.
Import	Device ready to receive data (vcard, vcal, vnotes) via Bluetooth.
Attributes	Display properties of the highlighted object.
Help	Display help text.

Printing via USB

This Mobile Printing Ready product is designed to provide easy printing from mobile phones. This product follows Mobile Imaging and Printing Consortium (MIPC) Implementation Guidelines for Home Printing with Mobile Terminals, Version 1.0, for PictBridge.

Connect the mobile phone to the printer with a USB data cable: First select **Print**, then **Via USB** and then connect the USB cable.

Mark mode

For some applications (e.g. deleting several SMS messages) you can highlight several entries on the tab in order to perform multiple functions at once.

- Options** Open menu.
- Mark text** Activate mark mode.



Select entry/entries.



Mark or unmark.

Additional highlighting functions:

- Options** Open menu.

Mark all	Mark all entries.
Unmark all	Unmark all marked entries.
Delete marked	All marked entries are deleted.

Security

The phone and SIM Card are protected against misuse by several security codes.

Keep these security codes in a safe place where you can access them again if required.

PIN codes

PIN	Protects your SIM Card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM Cards.
PUK PUK2	Key code. Used to unlock SIM Cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.



PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.



Edit.



Enter PIN.



Confirm entry.

Change PIN

You can change the PIN to any 4- to 8-digit number you find easier to remember.



Edit.



Enter **current** PIN.



Confirm.



Enter **new** PIN.



Repeat **new** PIN.



Change PIN2

Proceed as for **Change PIN**.

Chg. phonecode

(Change phone code)

You define the phone code (4 to 8-digit number) the first time you call up a phone-code protected function (e.g. **Direct call**, page 84). It is then valid for all phone-code protected functions. If the phone code is entered incorrectly three times, access to the phone code and the functions that use it is denied. If this happens please contact the Service Centre (page 119).

Clearing SIM Card barrings

If the PIN is entered incorrectly three times, the SIM Card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN use is deactivated (page 19) confirmation is required to switch on the phone.

This prevents the phone from being switched on accidentally, e. g. when carried in a pocket or whilst you are on an aircraft.



Press and **hold**.



Press. The phone switches on.



Press (or no further input) to stop switch-on procedure. The phone does not switch on.

Connection with PCs

You can connect your phone to a PC using Bluetooth or a data cable (accessory). The PC program MPM (Mobile Phone Manager) enables you to store data on your PC and, for example, synchronise the contacts with Outlook® and Lotus Notes™. You will find the Mobile Phone Manager on the CD-ROM supplied or you can download it from the Internet at:

www.BenQMobile.com/customer-care

Text input

Text input without T9

Press the number key repeatedly until the required character appears. After a brief interval the cursor will advance.

Example:



Press once **briefly** to write the letter **a**, twice to write **b**, etc.

Press and **hold** to write the number.

Ä, ä, 1-9

Umlauts and numbers are displayed after the relevant letters.



Press **briefly** to delete the letter before the cursor, press and **hold** to erase the whole word.



Move the cursor (forward/back).



Press **briefly**: swap between abc, Abc, T9abc, T9Abc, 123. Status shown in top line of the display.

Press and **hold**: all input variants are displayed.



Press **once/repeatedly**:

., ? ! ' " 0 + - () @ / : _

Press and **hold**: write 0.



Inserts a space. Press twice: line break.

Special characters



Press **briefly**. The symbols chart is displayed:

1)	¿	¡	_	;	.	,	?	!
+	-	"	'	:	*	/	()
¤	¥	\$	£	€	@	\	&	#
[]	{	}	%	~	<	=	>
	^	`	§	Γ	Δ	Θ	Λ	≡
Π	Σ	Φ	Ψ	Ω				

1) Line break



Scroll to a character.



Confirm.

Text input with T9

 
"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Writing with T9

The display changes as you proceed.

It is therefore best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:



Do not use special characters such as Ä. Use the standard characters instead, e.g. A; T9 will do the rest for you.

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, 6,636,162 and 6,646,573; Australian Pat. Nos. 727539, 746674 and 747901; Canadian Pat. Nos. 1,331,057, 2,302,595 and 2,227,904; Japan Pat. No. 3532780, 3492981; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK1010924; Republic of Singapore Pat. No. 51383, 66959 and 71979; European Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); Republic of Korea Pat. Nos. KR201211B1 and KR226206B1; People's Republic of China Pat. Application Nos. 98802801.8, 98809472.X and 96196739.0; Mexico Pat. No. 208141; Russian Federation Pat. No. 2206118; and additional patents are pending worldwide.

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be **highlighted**. Then press



The displayed word is replaced with a different word. If this word is also incorrect, press again.



Repeat until the correct word is displayed.

If the word you want is not in the dictionary, it can also be written without T9.

To add a word to the dictionary:

Spell Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press **Save** to add it automatically to the dictionary.

Correcting a word



Move left or right, word by word, until the required word is **highlighted**.



Scroll through the T9 word suggestions again.



Deletes the character to the left of the cursor **and** displays a new possible word!

Additional information

Within a "T9 word", individual letters may not be edited without first removing the T9 status. In most cases it is better to rewrite the complete word.



Set a full stop. The word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. **provider.s** = provider's.



Moving the cursor to the right ends the word.



Press **briefly**: swap between: **abc, Abc, T9abc, T9Abc, 123**. Status shown in top line of the display.

Press and **hold**: all input variants are displayed.



Press **briefly**: select special characters (page 26).

Text templates

Text modules can be stored in the phone for adding to your messages (SMS, MMS, e-mail).



→ → Templates
→ Text templates



Select.



The input field is opened.



Write text, select with **Options** or, if applicable, select input language, and copy or insert texts.



Save text module.

Using text templates

From text modules:



→ → Templates
→ Text templates



Select text template from the list.



Select **Create message**.



Select the type of message in which the text module is to be used.



Confirm. The text module is added.



Complete the message and send.

From an application (SMS, MMS, e-mail):



Write the text for the message in the application.



Open the text menu.

Insert text... Select, then **Template**.



Select text module from the list.



Confirm. The text module is added.

Calling

Dialling with number keys

The phone must be switched on (stand-by mode).



Enter number (always with area/international dialling code).

⏏ A **short** press clears the last digit, a **long** press clears the entire number.



Press the green Call key. The displayed phone number is dialled.

International dialling codes



Press and **hold** until a "+" is displayed.

Options

Open call menu.

Country

Press and select country.

Phone number memo

You can enter a phone number during the call. The person to whom you are speaking can hear these entries. When the connection has ended you can save or dial the phone number.

Saving caller number

You can save an unknown caller number in contacts (see **Settings**, page 39)

Ending a call



Press the red End key **briefly**. Press this key even if the person on the other end of the line has hung up first.

Setting the volume



Adjust the volume with the plus/minus side keys (only possible during a call).

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redialling

To redial the phone number **last** called:



Press the green Call key **twice**.

To redial other phone numbers that were dialled previously:



Press the green Call key **once**.



Pick out the phone number from the list, then press ...



... to dial.

If the number is busy

If the called number is busy or cannot be reached because of network problems, several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

Auto last number redial

Options Open call menu.

Auto dial The phone number is automatically dialed ten times at increasing time intervals.



Confirm. End with:



End key.

Or

Call back



Options Open call menu.

Call back Your phone rings when the busy number is free. Press the Call key to dial the number.



Confirm.

Reminder

Options Open call menu.

Reminder A beep reminds you to redial the displayed phone number after 15 minutes.

Accepting a call

The phone must be switched on. An incoming call will interrupt any other use of the phone.



Press the green Call key.

Or



Press the centre key.

A phone number transmitted by the network plus the corresponding name are displayed if they are stored in Contacts (page 38).

Rejecting a call

Reject Press.

Or



Press the red End key briefly.

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Handsfree

You can put the phone down during a call. You can then hear the caller via the loudspeaker.

Options Open call menu.

Handsfr. Activate/deactivate hands-free talking.



Confirm.

Warning!

Always switch off "handsfree talking" before holding the phone to your ear. Otherwise you will damage your hearing!

Swapping between 2 calls



Establishing a second connection

You can call another number during a call.

Options Open call menu.

Hold The current call is put on hold.



Confirm.



Enter new phone number **or** call up Contacts

or

open call records and select a phone number.

When the new connection is established:

Options Open call menu.

Swap Swap between calls.



Confirm.

Incoming calls during a call

You may need to register for this service with your service provider and set your phone accordingly. During a call, you may be advised that there is another call waiting. You will hear a special tone during the call (page 78). You have the following options:

- **Accept the waiting call in addition to the first**

Swap Accept the waiting call and place the current call on hold.

Always proceed as above to swap between the two calls.

- **Reject the waiting call**

Reject Press.

Or

Divert The waiting call is diverted, for example, to mailbox.

- **Accept the waiting call and end the current call**



End the current call (red key).



Accept the new call.

Ending calls



Press the red End key **briefly**.

After the **Return to held call?** display, you have the following choice:

Yes You accept the call on hold.

No You end the second call too.

Conference



You can call up to 5 conference participants one after the other and then link them together in a conference call. Some of the functions described may not be supported by your service provider or may have to be enabled specially.

A connection has already been established:

Options Open menu and select **Hold**. The current connection is maintained.



Select phone number from Contacts or enter it manually.

When the new connection is established ...

Options ... open the menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

Ending





All calls in the conference finish simultaneously when the red End key is pressed.

Call options

The following functions are only available during a call:

Options Open menu.

Hold	Hold current call.
Microphone on	If switched off, the person on the other end of the line cannot hear you (muting). Also: press  and hold .
Handsfree	Playback through the loudspeaker.
Conference	(p. 33)
Time/charge	Display talktime that has elapsed so far and (if set) cost incurred during the call.
Send DTMF	Enter tone sequences (numbers) for remote inquiries to an answering machine.
Main menu	Access to main menu.
Call transfer 	Connect the original call to a second call. For you, both calls are now ended.
Call status	List all held and active calls (e.g. participants in a conference).

Direct call

If this is active, only **one** number can be dialled.

Switching on



Confirm selection.



Enter phone code.

When first prompted you define and enter the phone code (4 - 8 digits). **Please do not forget this code (page 25)!**



Confirm selection.



Select phone number from Contacts or enter it manually.



Confirm.

Applying

Carol

To dial the phone number (e.g. "Carol") press and **hold** the right softkey.

Switching off



Press and **hold**.



Enter phone code.



Confirm entry.

Tone sequences (DTMF)

You can, for example, enter tone sequences (digits) for remote access to an answering machine **during** an existing connection. These entries are transmitted directly as DTMF codes (tone sequences).

Options Open menu.

Send DTMF

Select.



Enter phone number.



Confirm.

Using Contacts

Store phone numbers **and** tone sequences (DTMF tones) in **Contacts** in the same way as a normal entry.



Enter phone number.



Press until a "+" appears in the display (wait for the connection to be established).



Enter DTMF tones (digits).



If necessary, wait again for three seconds at a time for the receiver to process the entries correctly.



Enter a name.

Save

Save entry.

You may also store just the DTMF tones (digits) and then send them during the call.

Contacts



You can store up to 2500 entries in this phone directory, with several phone and fax numbers plus additional address details.

For fast access, the contacts and functions are sorted and offered on five tabs:

All contacts, Groups, Online status, SIM, Filter



Open Contacts (fast access in standby mode).



Switch between the individual tabs.

Communication



Select contact.



Call selected contact.

Or

Options

Open menu, then **Create message** to start a message dialogue.

All contacts

Display all entries stored in the phone or on the SIM Card in alphabetical order.

<New entry>



Confirm <New entry>. The tabs for creating the entry are displayed.



Switch between the individual tabs.

The following tabs are offered:

General sett.	First name, surname and important phone numbers. A ringtone, a picture or video with sound can be assigned to each contact.
Private	General address information and additional communication numbers such as fax and e-mail.
Business	Company information, address, communication numbers.
Person	Personal details such as date of birth, group membership and other notes.
Online status	Contact information for Instant Messaging (page 59).

In the respective tabs:



Select required input fields.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

At least one name or one company must be entered. Always enter phone number with dialling code.



Open options menu and select **Save**.

Viewing/editing entries



Select required entry.



Switch between the individual tabs.



Open current tab to edit.



Open options menu.

Groups

You are offered 10 different groups to enable you to arrange your contacts clearly. You can edit the names of groups as you wish.

Editing group attributes



Select group.



Open menu and select **Attributes**. You can make the following changes:

Name:, **Ringtone:**, **Picture:**

Adding a contact

Contacts which are stored in the phone directory may be added to a group via **All contacts** tab.



Select contact, open **Options** and select → **group** then a group.

A contact can only belong to one group.

Online status

Display all contacts for whom a Instant Messaging address (WV address) is entered.

Synchronisation

The MPM (Mobile Phone Manager, page 111) allows you to manage contacts using PCs.

SIM

Display all contacts stored on the SIM Card.

<New entry>



Confirm <New entry>, enter name and phone number, and select the storage location (SIM/protected SIM).

Viewing/editing entries



Select required entry.



Edit entry.

Editing menu

Options Open menu.

Add more fields Move SIM Card entry to the phone memory. Now all tabs are offered for further entries.

from contacts Copy entry/entries from the phone memory to the SIM Card (reduced information).

Change

Location: SIM/Protected SIM.

On special SIM Cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

Record number:

Select an unassigned number for the entry. It can be used to dial the phone number.

(For standard functions see page 23)

<Own numbers>

Store your own phone numbers.

<Service nos.>

There might be phone numbers saved that have been provided by your service provider. They may be used to call local or national information services or to use services offered by your service provider.

Filter

Those entries which match the selected filter criteria are displayed, e.g. those containing a picture.

Most used (default)

URL

Birthday

Pictures

Ringtones

E-mail

Phone memory

General functions

Options Different functions are offered depending on the tab and the current situation.

Filter	Only those entries which match the filter criteria are displayed.
Create message	Create a message for a selected contact (SMS, MMS, e-mail, Instant Message).
Search ID	Search for assigned Instant Message ID (only if Inst. messaging is activated (page 59)).
Internet	The URL assigned to the contact is visited via the WAP browser.
Open	Display phone numbers for information.
Search	Search for names, phone numbers, addresses and E-mail addresses.
→ group	Add entry to a group.
Take a picture, Record video, Record sound	Create picture, video and sound information for a contact from scratch or add from My stuff .
More	See below.

(For standard functions see page 23)

More

Location

Switch the storage location of entries between the phone memory and the SIM Card.

Synchronisation

You can synchronise your mobile with an organiser stored on the Internet (**Remote sync.**, page 95).

Capacity

Display memory capacity.

Settings

Default sort order:	First name or surname
Special numbers:	Display special phone numbers, yes/no
Default remind. time:	Period of time you want to be reminded ahead of a birthday entry.
Field setup	Setup for fields on a tab.
Entry Tab:	Tab that is to be shown first.
Save unknown No.:	Save unknown caller number in contacts (On/Off).
Default filter	Setup filter criteria (page 38).

As business card

Define a selected contact as a business card.

Business card

Establish a contact as your own business card to send to a different GSM phone.

Import

Set up readiness to receive via Bluetooth.

Add more fields

Move SIM Card entry to the phone memory. Now all tabs are offered for further entries.

Conference



Start a conference with up to five participants highlighted in advance. The contacts are dialled one after another.

Call records

A caller's phone number is displayed if

- the caller has switched off the **Hide ID** function and
- the network supports the "Caller Identity" function.

Alternatively, a caller's name is displayed if it is stored in **Contacts**.

Your phone stores the phone numbers of calls for convenient redialling.



Select record.



Open record.



Select phone number.



Dial phone number.

Or



Display information on the phone number.

Up to 500 entries are stored in the records:

Calls missed



The phone numbers of calls made to your phone but not answered are stored for callback purposes.



Symbol for missed call (in standby mode).

Press the softkey beneath the symbol to bring up the inbox.

Calls received

Accepted calls are listed.

Calls dialled

Access to the last numbers you have dialled.



Fast access in standby mode.

Delete records

The records are deleted.

Durat./charges

You can display the charges and duration during a call. You can set a unit limit for outgoing calls.



→ Durat./charges

Last call

All outg. calls

All incom.calls

Remaining units (Only displayed if supported by your service provider)



Select display.



Open area.

Options



Open menu.

Reset	Reset the currently selected setting.
Reset all	Reset all settings.
Charge settings	Call up the menu (see below).

Charge settings

Currency

Enter desired currency.

Personal rate

(PIN2 prompt)

Enter the currency used as well as the charge per unit and time.

Account limit

(PIN2 prompt)

Special SIM Cards allow you or the service provider to define a credit limit after which the phone is barred for outgoing calls.



Press.



Enter PIN2.

Account limit

Activate.



Enter number of units.

Options

Open menu, then select Save.

Auto display

Call duration and charges are displayed during and after a call if a personal rate is set.

 
Camera

A camera with flash is integrated in the phone. Take photos / record videos and

- use photos as wallpaper, a logo, screensaver or startup and shutdown animation
- assign a photo/video to a contact
- send photos/videos via MMS or e-mail.





Save photos and videos in **My stuff** (page 108) or on the **RS MultiMediaCard** (page 110).

Switching on



Switch between the **Take a picture** and **Record video** tabs.

The current (preview) image is displayed. You will see the following in the first line from left to right:

-  Zoom factor
-  Night mode
-  White balance
-  Flash active

The number of photos that can still be taken in the selected resolution is displayed in the preview image. This number varies considerably depending on the subject matter and how much storage space is required. You will also see

an indication of the selected resolution or, if video mode has been selected, there is an indication as to how much recording time has already been used and the maximum time still available.

Take a picture



Take a picture. A beep is heard as the photo is taken (this cannot be deactivated).



If necessary, set the zoom factor first.

The photo is saved with a name, the date and the time in the **Pictures** (page 110) folder in **My stuff**. To rename, see the camera options.

Image resolution

It is possible to set the quality of the image regardless of the preview image resolution. The best possible resolution is 1280 x 960 pixels.

To take individual wallpaper images you need to set **Wallpaper** as the image resolution in the options.

The resolution may decrease depending on the selected digital zoom.

Record video

The video mode resolution is the same as the preview image resolution.



Start video recording.

A red dot appears in the top right of the display while the video recording is being made.



End video recording.

The video is saved with a name, the date and the time in the **Videos** folder (page 110) in **My stuff**.

Video resolution

It is possible to set the quality of the image for a video regardless of the preview image resolution. The best possible resolution is 176 x 144 pixels.

Flash

For settings, see options menu.



This symbol appears in the display if the automatic mode is activated.

In the automatic mode the flash would be turned on depending on the lighting condition. This mode is recommended to save standby time. The flash performance depends on the outside temperature and the charge status of the battery. If the temperature is low and the battery needs charging the flash performance deteriorates.

Camera options

The following functions are available, depending on the current situation.

Options

Open menu.

Memory assist.

If there is insufficient memory available the memory assistant is started.

Pictures

Display list of photos.

Other videos

Display list of videos.

Microphone on

Switch microphone on or off.

Flash

Choose between:

Automatic, On, Off, Red eye reduct.

Settings

- Name for video/picture
- Resolution:
- Brightness:
- Colour mode:
- Night mode:
- Self-timer:
- Recording time: Set video recording time for short/long MMS
- Save to: **My stuff** (page 108) or **RS MultiMediaCard** (page 110).

Frame	Selection of various decorative frames. Only available if resolution is not too high.
Self-timer	Set camera to take photo after a determined period of time.
White balance	Choose between: Automatic, Indoor, Outdoor
(For standard functions see page 23)	

SMS/MMS

You can use your phone to send and receive text messages and MMS (Multimedia Messaging Service) messages.

Information about SMS

You can use your phone to transmit and receive very long messages (up to 760 characters). They are automatically composed of several "normal" SMS messages (note higher charges). Using special letters in some languages reduces the maximum possible length of an SMS. If you do not wish to use these letters, please change the input language in the options menu.

Information about MMS

The **Multimedia Messaging Service** enables you to send texts, pictures/videos and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may have to register for this separately.

Writing an SMS



 →  → Create new → SMS



Enter text.

You will find information on writing texts with and without T9 in the chapter "Text input" (page 26).



Enter phone number or  open menu, then select **Add from** , select recipient from Contacts. You can add more than one.



Start sending process.

Additional information


The following is displayed in the uppermost line: text input status, number of SMS messages required, number of characters still available for the current SMS.

If the length of the text exceeds 760 characters, the message is converted into an MMS.

SMS options

Different functions are offered for editing an SMS depending on the selected part of the message.

Options Open menu.

Save as templ.	Save MMS as a template.
Add recipient	Add recipient.
Add from 	Add a recipient from Contacts.
Remove recip.	Remove recipient.
Save as draft	Store the SMS as a draft.
Text edit menu	Input language, Mark text, Copy, Insert
Send options...	See page 51.
Insert text...	Template (page 29) Signature Opening senten. Contact details Bookmark
Emoticons	Insert small symbols (smileys), page 53
Add item...	When melodies, pictures, videos or animations are added the SMS is converted into an MMS (page 47). Remember that these may be protected (DRM, page 20).

Create item...	Take a picture/ Record video Start camera (page 43). Record sound Start sound recorder (page 101). SMS will be converted to MMS.
----------------	---

(For standard functions see page 23)

Writing an MMS



Layout

An MMS may comprise a series of pages. Each page may contain a text, a picture/video and a sound. Remember that pictures and sounds may be protected (DRM, page 20).

For functions related to this see **MMS options** page 48.

Contents



Enter text.

Open menu, then select **Add item/Create item**.

Text

You will find information on writing texts with and without T9 in the chapter "Text input", (page 26).

Pictures/Videos

Add pictures and videos from **My stuff** or take new ones with the camera.

Sound

Add melodies from **My stuff** or record new ones with the sound recorder.

Contacts



Add address data from Contacts.

Attachment

Add any files from **My stuff**.

Sending



Enter phone number or  open menu, then select **Add from** , select recipient from Contacts. You can add more than one.

If you want to insert a subject:

Open menu, then select **Add subject** and enter a brief description of the MMS.




Start sending process.

MMS options


Different functions are offered for editing an MMS depending on the selected part of the message.

Options Open menu.

Save as templ.	Save MMS as a template.
Add recipient	Add recipient.
Add from 	Add a recipient from Contacts.
Remove recip.	Remove recipient.
Add subject	Add subject field.
Add item...	Add contents.
Create item...	Take a picture/ Record video Start camera (page 43). Record sound Start sound recorder (page 101).
Preview MMS	Play entire MMS in the display.
Save as draft	Store the MMS as a draft.
Text edit menu	Input language Mark text Copy Insert
Send options...	See page 52.

Insert text...	Template (page 29) Signature Opening senten. Contact details Bookmark
Emoticons	Insert small symbols (smileys), page 53.
Page duration:	Adjust the time the page will be displayed.
Delete page	Delete currently edited page.
View pictures/ Play sound/ Play video	Play back selected videos, sounds or melodies.
Open attachm.	Play back attachment with the media player.
(For standard functions see page 23)	

Receiving/reading

A new incoming message is displayed  in standby mode.



Use the softkey underneath to open the **Inbox**.

Or



→  → **Inbox**



Select the required message.



Read the message or the notification about an MMS.

To receive a complete MMS later on:

Options Then select **Retrieve MMS**.

Inbox options

Different functions are offered depending on the situation.

Options Open menu.

View	Read the SMS/MMS or the notification about an MMS.
Reply/ Reply to all	<ul style="list-style-type: none"> • With new SMS. • With new MMS. • Quoted original: new SMS with the sender as recipient and the first 50 characters of the received message.
Forward	Forward message to another recipient. If wished, additional contents can be added to an MMS.

(For standard functions see page 23)

Additional information



Adjust volume.



Activate/deactivate sound.

For MMS only:



Scroll up/down within a page.



Jump to next page and return at end to first page.



Jump to the start of a page or to the previous page.

Read options

Different functions are offered depending on the situation.



Open menu.

Save picture/Save sound/Save video	Allows you to save selected pictures, videos or sounds on the phone.
Play	Play back MMS.
Pause	Pause playback of an MMS.
Select	Opens submenu for Call, Save to contact, etc. depending on the text selection.
Open item	The contents of the MMS are listed for playback with the media player or for saving.
Save item	The contents of the MMS are listed for saving in the relevant folder.
Open attachm.	Open an attachment.
Save attach.	Opens the relevant folder in My Stuff for saving.
To archive	Moves the selected message to the archive.

(For standard functions see page 23)

Draft



→ Draft → SMS/MMS

The list of drafts is displayed. Messages you have not yet finished can be saved as drafts.

Outbox



→ Outbox → SMS/MMS

The list of messages not sent is displayed. Failure may be caused by loss of network connection.

Sent



→ Sent → SMS/MMS

The list of messages sent is displayed.

Msg. archive



→ Msg. archive
→ SMS/MMS

Messages are saved in the archive. Select the list and read required message(s).

You can move important messages to the archive with **Options**, **To archive**.

Templates



→ Templates
→ MMS templates/Text templates

MMS templates

MMS templates are messages saved without an address. They can be sent as a whole or as part of a new MMS.



Select MMS template.



Prepare message and send.

Text templates

See page 29.

SMS settings



→ Settings → SMS
→ Select function.

Send options

Message centre	Enter the phone numbers for the service centre as provided by the service provider.
Default recipie.	Enter recipient's name as the default for all SMS messages.
Delivery report	Request delivery confirmation.
Validity period	Period in which the service centre is to try to deliver the message.

SMS via EGPRS

SMS messages are sent via GPRS.

Direct reply



If activated, the reply to your SMS message is handled via your service centre (for information, please contact your service provider).

Creation

Add signature

A "signature" is attached to each SMS. Choose between: **Never, Always, New messages**

Signature

Create signature.

Add open. sent.

An introductory sentence or salutation is placed at the beginning of each SMS. Choose between: **Never, Always, New messages**

Opening senten.

Create introductory sentence.

Message type

May be set by the service provider. Default: **Standard text: Normal SMS message.**

MMS settings



→ Settings → MMS

→ Select function.

Send options

Delivery report	Request delivery confirmation.
Read report	Request confirmation that the message has been read.
Validity period	Period in which the service centre is to try to deliver the message:
Delivery time	Set the time for delivery.
Hide number	Hide sender's phone number.

Creation

Creation mode	Free, Restricted, Warning
Max. msg. size	Unlimited, 95 kB, 295 kB
Page duration	Default lifespan of a page in seconds.
Add signature	A "signature" is attached to each MMS. Choose between: Never, Always, New messages
Signature	Create signature.

Add open. sent. An introductory sentence or salutation is placed at the beginning of each MMS. Choose between: **Never, Always, New messages**

Opening senten. Create introductory sentence.

Retrieval

Retrieval	Automatic: the whole MMS is saved. Restricted: only the notification is saved.
Re-triev.(roam.)	Receive when outside your home network.
Reject anon.	Reject anonymous messages.
Allow deliv.rep.	Permit delivery report.
Allow read rep.	Permit confirmation that the message has been read.
Allow advertise.	Permit receipt of advertising material.

Connect. sett.

Select the required MMS profile in which the connection attributes are specified (page 76). You can obtain the data you need for this from the service provider or at:

www.BenQMobile.com/customercare

Text zoom

You can select one of three specified text sizes for presenting a message.

Emoticons

Emoticons are small symbols (smileys) with which you can show your feelings in pictorial form.

You can set whether the emoticons are to be displayed as graphics or made up of special text characters.

Insert Emoticons into message with

Options, Emoticons.



Select symbol.



Insert at the cursor position.

Save after send

Configure whether messages are saved in the **Sent** list after sending.

E-mail

Your phone has an e-mail program (client). You can use it to create and receive e-mails.

Writing/sending



→ → Create new → E-mail



Enter text.

You will find information on writing texts with and without T9 in the chapter "Text input", (page 26).



Enter e-mail address or open menu, then select **Add from** , select recipient from Contacts. You can add more than one.

Add Subject

Options

Open menu, then select **Add subject** and enter a brief description of the e-mail.

Add additional address fields

Options

Open menu, then select **Add Cc** or **Add Bcc** and add additional recipients (see above).

Add attachments

Options

Open menu, then select **Attach item**. Select any file from your phone to add as an attachment.



Send e-mail.

Write/send options

Different functions are offered depending on the situation.



Open menu.

Text edit
menu

Input language
Mark text
Copy
Insert

Add recipient

Add a recipient.

Add from

Add a recipient from Contacts.

Attach item...

- **My stuff:** Open to make a selection. Remember that pictures and sounds may be protected (DRM, page 20).
- **Take a picture/ Record video:** Start camera.
- **Record sound** Start sound recorder.
- **Contacts:** Open to make a selection.

Add subject	Add subject line (max. 255 characters).
Add Cc	Add address(es) of copy recipient(s).
Add Bcc	Add address(es) of copy recipient(s) who are not visible to the other recipients.
Remove attach.	Remove attachment from e-mail.
Open attachm.	Open selected attachment.
Insert text...	<ul style="list-style-type: none"> Template (page 29) Signature Opening senten. Contact details Bookmark
Save as draft	Store the e-mail as a draft.
Emoticons	Insert small symbols (smileys), page 53.
Send options...	<ul style="list-style-type: none"> • Delivery report Request delivery confirmation. • Read report: Request confirmation that the message has been read. • Priority: Medium, High, Low
(For standard functions see page 23)	

Receiving/reading



Select the E-mail tab.

Before an e-mail can be read, it must be retrieved from the server.



Open menu, then select **Retrieve e-mail** or **Retrieve body**.



Select the required message.



Read message.

Inbox options



Open menu.

Reply/ Reply to all/ Forward	Send reply or forward e-mail.
Retrieve body	Retrieve the contents of downloaded e-mail headers.
Save attach.	Store e-mail attachments in My stuff (page 108).
Select	Open submenu Call , Save to contact , Open link , etc. depending on the text selection.
Save to	Store sender in Contacts.
To archive	Move e-mail to archive.
(For standard functions see page 23)	

Draft



The list of drafts is displayed.

Sent



The list of messages sent is displayed.

Outbox



The list of messages not sent is displayed. Failure may be caused by loss of network connection.

 
Msg. archive



Messages are saved in the archive. Select tab and read required message(s).

You can move important messages to the archive with **Options**, **To archive**.

Setting



General sett.

General settings for receiving and sending.

Download option	Download either complete e-mails or only the header to save download costs.
Size limit	Limit size for receiving an e-mail in KB.
Copy on server	Leave copy of e-mail on the server.
Delete option	Delete e-mail on phone only or also at the server.
Add signature	A "signature" is attached to each e-mail. Choose between: Never , Always , New messages
Signature	Create signature.

Connect. sett.

You can obtain the necessary data to set the server access and your e-mail parameters from your service provider or at:

www.BenQMobile.com/customerarcare

Change active profile



Press.



Select the new profile.



Activate.

Change profile settings



Select the fields to edit.

Connect. list	List of preferred accesses.
User name:	Your name.
E-mail address:	Your e-mail address, e.g.: name@domain.abc
User ID:	User ID for your e-mail account.
Password:	Password for your e-mail account.
POP3 server:	Enter Internet address if the server type is POP3 and SMTP.
POP3 port:	(Default: 110)
SMTP server:	Enter Internet address.
SMTP port:	(Default: 25)

SMTP authentic.: Set if separate authentication for SMTP server is required.

SMTP User ID: Separate User ID for SMTP authentication. Only if SMTP authentication is set.

SMTP password: A user password will be required if "Authentication" is set to **Yes**.


Options

Open, then select **Save**.

WAP push

WAP push messages are transmitted from special service centres. If, for example, you have requested configuration data from your service provider this will be transmitted via WAP push.

A new incoming message is displayed

 in standby mode.



Use the softkey underneath to open the **Inbox**.

Or



→  → WAP push



Select the required message.



Read the message or information about the transmitted data/programs and, if applicable, start a download.

Inbox options

Different functions are offered depending on the situation.

Options Open menu.

Execute	Execute program
Install	Start installation
Accept/Reject	Accept/reject message

(For standard functions see page 23)

Settings



→ Settings → WAP push

Options

Open menu, then select **Settings**.

Allow push Settings to receive WAP push messages:
Allow specific,
Allow none, Allow all
 If **Allow specific** has been set, the following lists may be edited.

Accept list All messages from senders included in this list are accepted (max. 20 entries possible).

Reject list All messages from senders included in this list are automatically deleted (max. 20 entries possible).

Unknown addr. Handling of messages from senders are neither in the Accept list nor the Reject list:
Reject, Delete

Inst. messaging (IMSG)



You can chat on your phone or PC with dialogue partners who are also registered for this service. Your partners are entered in contact lists for this and selected from them for a private or group dialogue. Similarly, you can be invited to a dialogue by other subscribers.

EGPRS must be switched on.

Start menu (offline)

If **Auto. login** is activated the main overview is displayed immediately.



→ Inst. messaging

Login Start to make a connection.

Account The access settings are normally preconfigured. If necessary, enter **User ID:** and **Password:** to activate access.

Please contact your service provider if you do not have access data.

Online status

Call up the Presence Manager to set your personal attributes (page 99).

Saved convers.

Access to permanently saved dialogues.

Conver. history

Read all dialogues from the last session offline (deleted next time you log in).

Settings

Settings for applications and servers.

Automatic login:

Select your preferred login procedure: e.g. manual or when the phone is switched on.

Timeout:

Set the timeout in minutes after which **Inst. messaging** is put in the background if no action is taken. The session continues and can be called up again via the menu.

Pop-up info:

Activate/deactivate popups for new messages or change the online status, for **Inst. messaging** only, if the application is visible.

Main overview (online)

After you have logged in successfully, depending on your service provider you will see up to 5 tabs as described below:

Conversations

IMSG contacts

IMSG groups

Info messages

Saved convers.

(IMSG = Instant Messaging)

Conversations

The following are shown in the list:

- Online contacts in ongoing conversation.
- Offline contacts with unread messages.
- Joined groups.

Starting a dialogue



Select an entry (individual contact or group) for a dialogue.



Start dialogue.

Dialogues that have taken place previously are displayed.

Navigation:



Scroll in the dialogue.



Switch between different dialogues.

Dialogue:



Write text.



Send text.


Of course you can also receive messages from contacts you do not know. This will be pointed out to you in the display, and you can either switch to the dialogue or block the contact.

Options

Options Open menu.

Different functions are offered depending on the selection and situation:

Contact details	Additional information about the contact.
Group details	Additional information about the group.
Online status	Set your personal attributes (page 99).
Add member	Add a new member.
Search memb.	Look for member.
Invite	Invitation to the contacts in your own group to join the dialogue.

Delete member	Delete contact from the list of members.
IMSG contact	Save contact in the current contact list on the server.
Settings	Settings for auto login.
Block contact	No more messages are received from the contact and the contact receives no status information from you.
Message to ID	Enter ID manually.
Log out	<p>The session is ended and the start menu displayed.</p> <p>Only the display is ended with Exit or the  end key.</p> <p>The session continues in the background. New messages are stored in the Inbox. To continue the dialogue, open the application again via the main menu.</p>
(For standard functions see page 23)	

IMSG contacts

Display the contact list last used and, if applicable, entries from **Contacts** with Instant Message ID.



Select an entry in a contact list for a dialogue.



Start dialogue.

At the end the offline contacts are displayed, visually separated and in alphabetical order.

IMSG contacts options

Options Open menu.

Different functions are offered depending on the selection and situation:

Add contact	<p>User ID: Enter a unique user (login) name.</p> <p>Display name: Enter your own nickname for the contact.</p>
Search contact	Look for the contact in the contact lists.
Block contact	No more messages are received from the contact and the contact receives no status information from you.
Delete contact	Delete contact from the list.

Contact lists	Display your personal contact lists. Create new contact list: Select New entry and assign an ID and a name.
Block list	Display the list of rejected contacts.
For further functions see page 60.	

IMSG groups

Display all groups created by you or in which you are yourself a member.

Hold dialogue as for IMSG contacts.

IMSG groups options

Options Open menu.

Different functions are offered depending on the selection and situation:

Invite	Invite the contacts in your own group for Inst. Message.
Add member	Add new group member.
Search memb.	Search for group member.
Delete member	Delete contact from the group member list.

Add group	Add new group.
Search group	Search for group on the server (also groups no longer managed in the list).
Create group	Group ID: Enter an unique group name. Name: Name of group. Topic: Topic of group. Searchable: Other people can look for the group. Welcome note: Enter own greeting. Type: Restricted or open.
Delete group	Delete group.
Screen name	My name for group dialogue.
For further functions see page 60.	

Info messages

Display messages such as invitations to a group, server messages or other system messages.



Display selected message.

Or



Reply to invitation/requests.

To reject, open **Options** menu and select **Deny**.

Saved convers.

 
Display permanently saved dialogues.



Display selected dialogue.

Saved dialogues can be renamed or deleted via the **Options** menu.

Voice mailbox/Mailbox



Most service providers provide a mailbox in which a caller can leave voice mail for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and if **Call waiting**, page 78 is not activated).

If the voice mail service is not part of your service provider's standard package, you will need to register for it, and possibly set it manually. The following sequence may vary from service provider to service provider.

 
Settings



The service provider supplies you with two phone numbers:

Save mailbox number

Call this phone number to listen to the voice messages left for you.



Select phone number from **Contacts** or enter/ change it manually.

OK

Confirm.

Save call divert number

Calls are diverted to this phone number.



Select condition, e.g. **Unanswered**.



Confirm change, then select **Set**.



Enter phone number.

Options

Open, then select **Save**.

Listen



One of the following symbols will appear when you receive a new voice message:



Symbol plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and **hold** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.

CB services



Some service providers offer information services (info channels, Cell Broadcast). If reception is activated, you will receive messages on the activated topics in your **Topic list**.

CB messages are displayed in standby mode; longer messages are scrolled automatically.

Receive CB



Activate/deactivate CB service. If the CB service is activated, standby time for the phone will be reduced.

Read new CB



All new messages are displayed in chronological order.

Topic list

Add up to 10 topics to your personal list from the topics index.

Requirements: **Use topic index** is activated and the service provider supports the function.



Activate/deactivate topic.



Display message on current topic if any received.

Displays



Topic activated/deactivated.



New messages received on the topic.



Messages already read.

New topic Add to topic list.

- If the topic index is available, select a topic from it and confirm.
- Create a new topic. Enter topic name and channel number. Open **Options** menu and select **Save**.

Auto display



Choose to display:
no messages, all messages,
or only all new messages.

Use topic index



Activate/deactivate use of the topic index.

CB languages

Receive Cell Broadcast messages in just one language, in several, or in all languages.

Internet



→ Select function.

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can visit

wap.BenQ-Siemens.com ("Downloads") where you can download or update games, applications, sounds, graphics and more for your phone. Internet access may require registration with the service provider.

Access to the service provider

Direct call-up of the browser with the URL from your service provider.

Downl. assist.

Offers you support when downloading.

Enter URL

On inputting a URL the browser is started and the entered page displayed.

Bookmarks

Display URL/call up page

List bookmarks

Display list of bookmarks stored in the phone.



Select bookmark.



Call up URL.

Saving

Bookmark site

The current page is saved in the phone as a bookmark.

Bookmark options

Options

Open menu.

Here you will find functions for changing and managing bookmarks and their folders. This includes editing individual entries with the corresponding URLs as well as deleting and moving them to other folders.

Internet

Calling the function opens the browser with the preset option.

Browser menu

Options Open menu.

Homepage	Call up the preset homepage of the current profile.
Bookmarks	<ul style="list-style-type: none"> • List bookmarks Display list of bookmarks stored in the phone. • Bookmark site The current page is saved as a bookmark.
Go to...	Enter URL to dial an Internet address directly.
Reload	Reload current page.
Show URL	Display the URL of the page currently loaded for sending via SMS/MMS/e-mail.
History	Display most recently visited Internet sites.
Disconnect	Disconnect from the Internet.
File	Save the object on the current page or the complete page; display saved pages.
Setup	Set or reset browser.
Exit browser	Close the browser (page 68).

End connection



Press to end the connection and close the browser.

Navigation in the browser



- Select a link.
- Settings, status on/off.







- Go back a level.



- One input field/link forward/back.
- Scroll one line.

Display symbols in the browser (selection)

	Connect		No network
	GPRS online		Network

Enter special characters



Select important special characters.

Browser settings



→ Internet

Options

Open menu.

Setup

Select.

Browser	Set start option as well as handling of pictures and sounds plus send options.
----------------	--

Protocol parameters	Set protocol parameters, push messages and abort time as well as handling of cookies.
----------------------------	---

Security	Set encryption.
-----------------	-----------------

Context	Reset session; delete cache, history and cookies.
----------------	---

Connection settings

Handling depends on the service provider (see page 76).

Your Internet browser is licensed by:

**OPENWAVE™**

History

Display most recently visited Internet sites.

Stored pages

Display list of pages stored in the phone.

Settings

Profiles



Several settings can be stored in a phone profile so that the phone can be adapted, for example, to the surrounding level of noise.

- Six profiles are provided with default settings. These can be changed, however:

General

Vibration

Meeting

Outdoor

Car Kit

Headset

- You can name two personal profiles (<Name>).

Switching on



Select default profile or personal profile.



Activate the profile.

Changing profile settings

Edit a default profile or create a new personal profile:



Select profile.



Open menu.



Change sett.

Select.

The list of available functions is displayed.

When you have finished setting a function, you return to the profile menu where you can change a further setting.

Additional information

- To call up the list in standby mode:
 -  profile list is displayed.
 - The active profile is identified with .

Profile options



Open menu.

Activate Activate selected profile.

Change sett. Change profile settings.

Copy from Copy settings from another profile.

Rename Change personal profile (except default profiles).

Car Kit

If an original Car Kit is used, the profile is switched on automatically when the phone is connected to the Car Kit (see Accessories, page 123).

Headset

The profile is only switched on automatically if an original headset is used (also see Accessories, page 123).

Ringtones

 →  → Ringtones
→ Select function.

Volume

Set the volume for all tones.



Set the volume.



Confirm setting.

You can also make individual settings for the following functions:

- Calls
- Messages
- Organiser
- Alarm clock
- Inst. messaging
- Games
- Shutdown
- Startup
- **Sound recorder** (record your own ring-tones, page 101)

Different options are available depending on the function:

Melodies



Select a ringtone from **My stuff**.

Ringer setting

- Ring** Play back the ringtone or melody at the set volume.
- Ascend** Set ringtone to a rising volume.
- Beep** Reduce ringtone to a short beep.
- Off** Deactivate all tones for the function concerned.

Themes



Load a completely new visual presentation onto your phone. Various media settings are reorganised on a theme basis at the press of a key, e. g.

- Animations
- Sounds
- Colour skins
- Wallpaper

Theme files are compressed to save memory space. On activation, Theme packages are extracted and registered automatically. Animations, Sounds and Pictures are placed in **My stuff** in their corresponding folders.

Additional information

Existing display and ringtone settings could be overwritten.

Activating a new theme



Select theme.



Activate; if required, view **Preview**.

Display



→ Display
→ Select function.

Wallpaper

Set wallpaper graphic for the display.

Logo

Choose picture to be displayed instead of the provider logo.

Screensaver

After a set time, the screensaver shows a picture in the display. An incoming call and/or pressing any key will end the function except if the code security with the telephone code is activated.

Preview

Display the screensaver.

Style:

Choose between: **Standard**, **Digital clock**, **Analogue clock**, **Picture**, **Energy saving**, **Off**.

Picture:

Select image in **My stuff**.

Timeout:

Set period after which the screensaver starts.

Code protection:

The phone code is requested to close the screensaver.

Note

The **Digital clock/Animation** screensavers reduce your phone's standby time.

Startup anim.

Select animation to be shown when the phone is switched on.

Shutdown anim.

Select animation to be shown when phone is switched off.

Welcome text

Enter greeting to be displayed instead of animation when phone is switched on.

Big letters

You can choose between two font sizes for the display.

Illumination

Set display light brighter/darker. The darker the setting the longer the standby time.



Press the navigation key repeatedly at the top/bottom to adjust up or down.

Vibration



To avoid the disturbance caused by a ringtone, you can activate vibration as an alternative. The vibration can be switched on in addition to the ringtone (in a noisy environment, for example). This function is deactivated when the battery is being charged and accessories are connected (except the headset).

Vibration



Activate/deactivate vibration.

Play demo

The types of vibration offered are demonstrated.

Assigning types of vibration

Each of the following applications can be assigned their own type of vibration:

Calls, Messages, Alarm, Inst. messaging

Connectivity



EGPRS (EDGE)



Activate/deactivate EGPRS.

EGPRS is a method for transmitting data in the mobile network faster than with GPRS. Use EGPRS and if the network has sufficient capacity, you can be connected to the Internet permanently. Only the actual transmission time is charged by the network operator. Some service providers do not yet support this service.

Shown in the display:

GP
RS

Activated and available.

!GP!
!RS!

Registered.

GP
RS

Temporarily interrupted.

EGPRS info

Display information on connection status.

Bluetooth® (BT)

Bluetooth is a short-range radio connection by means of which a headset or Car Kit, for example, can be connected without the need for wires. Using the **Send...** function in the options menu for the application concerned you can also use this route to send data.

With SAP (SIM Access Profile) a car phone GSM module can, for example, use the access data from the SIM Card on your phone. There is no need to swap the SIM Card. It is possible that SAP might not be supported by your service provider.

Each Bluetooth device has its own specific address and can be given a self-explanatory name as an option. Password protection ensures the security of a Bluetooth connection, as does including the BT partner in a list as a "trusted" device.

To establish a Bluetooth connection between your phone and other Bluetooth devices you must activate Bluetooth.



Activate/deactivate
Bluetooth.

If Bluetooth is activated, standby time for the phone will be reduced.

Shown in the display in standby mode



Device not visible.



Device visible to others.



Call accepted on Bluetooth
device.

Bluetooth sett.



Bluetooth activation.

Search

The search can be global or just for certain BT devices specified in the options menu.



Open selection.

Specify which BT devices are to be searched for:

All All BT devices

Audio E.g. headset, Car Kit

Phone Other BT phones

PC Personal computer with BT connection



Start search.

The number and name of the most recently found BT device are displayed.



The search is ended and the first 10 devices found are shown in a list.

Retry Start new search.



Scroll to the required entry.



Dial the device and start the procedure for acceptance as a "trusted" device in the list of known devices. To do this, enter the password for the other device. If the list is full it is not possible to add another device.

Device list

- **Known devices**

To make selection easier, frequent BT partners can be recorded in the known device list. If entries are "trusted", no password query is made.

- **Last connected**

List of most recently and/or still connected devices.

- **Reject list**

Attempts to make connections to devices in this list are rejected.

- **Last srch.result**

List of the last devices found.

List options

Different functions are offered depending on the list.

Options

Open menu.

Search/Retry	Search for BT devices or repeat search.
Use as audio	If not possible automatically, specify device as an "audio" device.
Increase prio.	Move entry up the list so that, for example, a specific audio device is used first.
Decrease prio.	Move entry down the list.
To reject list	Move entry to the reject list.
To known list	Move entry to the list of known devices.

(For standard functions see page 23)

My BT info

The phone is given a name (max. 20 characters) – this is the name the partner sees. If no name is given, the phone uses the non-changeable device address.

Information about the BT hardware cannot be modified.

Visib.to others

Make settings to specify how your phone should "act" when in contact with other BT devices. This means that if "visible" is set, the device address or the BT name of your phone is shown to other BT devices if they request this in order to receive or send data.

- **Not visible**

Your phone is not "visible" to other BT devices. Known devices such as the Bluetooth Headset / Car Kit continue operating.

- **Auto mode**

Your phone is "visible" to other BT devices for five minutes. You will then be asked if "visibility" should continue.

- **Always visible**

Your phone is always "visible" to other BT devices. These devices can create a connection to your phone and be added to the known device list if necessary.

BT audiostream

When a Bluetooth headset is used, all audio signals are transmitted to this exclusively.

Online settings

Default setting and activation of the connection profiles for data transmission.

The phone default setting varies from service provider to service provider:

- The settings have already been implemented by the service provider. You can start immediately.
- Access profiles have already been created by your service provider. Then select profile and activate.

- The access profiles must be configured manually. In this case, you can obtain the necessary data from the service provider or visit: www.BenQMobile.com/customercare

Selecting profile



Select the profile.



Confirm selection.

Fax/data

Send voice/fax

Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

Receive fax

Your service provider has given you a number for telephoning and a fax number.

The call is signalled by a special ringtone and the type of call is displayed. Now start the communication program in your PC to receive the fax.

Shortcuts



Soft keys

You can assign one function to the right softkey.

Editing



Select key.



Call up the edit function.



Scroll to new assignment in the list.



Confirm.

Additional information

The service provider may have already assigned functions to all the keys (e.g. access to "SIM services" or direct call-up of the Internet portal). It may not be possible to modify this key assignment.

Apply

The "Internet" is just used as an example here.

Internet Press and **hold**; the application is started.

Navigation keys

The navigation key can be assigned a function for three directions (only effective in standby mode). The downwards movement is assigned to opening contacts and cannot be modified.



Select the desired direction.



Call up the edit function.



Choose application from the list.



Confirm selection.

Number keys

Number keys 2 to 9 can be used as speed dialling numbers for fast access to functions.

Number key 1 is reserved for the mailbox phone number (page 64).

Show functions

Show the functions set for the number keys.

Assigning numbers or functions



Select the key.



Call up the edit function.



Choose application from the list.



Confirm selection.

Apply

Start a stored application (e.g. **Internet**).

In standby mode:



Press **briefly**.

The assignment of the number key 3 is displayed above the right softkey e.g.:

Internet

Press and **hold**.

Or simply



press and **hold**.

Call settings



→ **Call settings**

→ Select function.

Hide ID



When you make a call, your phone number can be displayed on the recipient's display (depending on the service providers).

To suppress this display, you can enable the "Hide ID" mode for all subsequent calls or just for the next call. You may need to register separately with your service provider for these functions.

Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

Divert

Select the condition under which calls should be diverted to your mailbox or another phone number. To set diversion:



Select condition, e.g. **Unanswered**.



Confirm change, then select **Set**.



Enter phone number.

Options

Open, then select **Save**.

All calls

All calls are diverted.



Symbol in top line of display in standby mode.

Unanswered



Includes the conditions **Not reachable**, **No reply**, **Busy**, see below.

Not reachable

Divert occurs if phone is switched off or is out of range.

No reply

A call is only diverted after a delay that is determined by the network. The period can be set to a maximum of 30 seconds in 5-second intervals.

Busy

Divert occurs if a call is in progress. If **Call waiting** is activated, you will hear the call waiting tone during a call.

Receiving fax



Fax calls are diverted to a number with a fax connection.

Receiving data



Data calls are diverted to a phone number with a PC connection.

Status check

You can check the current divert status for all conditions. After a short pause, the current situation is transmitted by the network and displayed.

Clear all



All set diverts are cleared.

Additional information

Note that the divert is stored in the network and not in the phone (e.g. when the SIM Card is changed).

Reactivating divert

The last divert has been stored. Proceed as with "Set divert". The stored phone number is displayed. Confirm number.

Alert calls from



Only calls from phone numbers that are in Contacts or on the SIM Card or assigned to a group are signalled audibly. Other calls are only displayed.

Any key answer

Incoming calls can be accepted by pressing any key (except for).

Minute beep

During the call, you will hear a beep after each minute as a reminder of the time elapsed. The recipient does not hear this beep.

Phone settings




→ Phone settings
→ Select function.

Language

Set the language for the display text. When **Automatic** is set, the language of your service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your home service provider with the following input (in standby mode):

*#0000# 

Input language

Select the language for text input. Languages supported by T9 are marked with the T9 symbol.

User dictionary

T9 import

Load database for T9 support for the current language.

T9 export

Save database for T9 support for the current language to **My stuff**.

Key tones

Set the type of acoustic key acknowledgement.

Click, Tone, Silent

Info tones

Set service and alarm tones:

On/off Activate/deactivate tones.

Extended If switched on, a wider range of service tones is available, e.g.: end of menu, network connection interrupted.

Auto switch off

The phone switches off each day at the set time.

Activating

Set Select.



Enter time

Save

Save.

Switching off

Switch off Select.



Confirm.

File system

Format

(Phone-code protected)

The phone memory is formatted and **all** saved data such as ringtones, pictures, games, etc. is deleted. Formatting may take longer than 1 minute.

Format card

Format the RS MultiMediaCard.

Eject card

Remove the RS MultiMediaCard without loss of data while the phone is switched on.

Licence mgr.

The licensed data or applications can be displayed and managed (see also DRM, page 20).

Phone identity

Identity no.

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

About phone

Product name, production date, software version.

CC-Monitor


The call centre monitor shows information for customer service purposes.

Device check

A self-test and individual tests are offered. If you select **Self-test**, all individual tests are carried out.

Software version

Display the software version for your phone in standby mode:

Press * # 0 6 #, then press .

Memory assist.

The memory assistant will help you if there is insufficient phone memory. If required it can also be started automatically from applications.

After their capacities have been checked, all files and folders are displayed along with their size and may be viewed/opened and, if necessary, deleted.

Device mgr.

With the device manager you can download and install software/firmware. **Services Over Air** (S.O.A.) enables you to update the software of your phone.

The phone default setting varies from service provider to service provider:

- The settings have already been implemented by the service provider. You can start immediately.
- The access profiles must be configured manually. If necessary, contact your service provider. You will also find the current settings for the service provider on the Internet at www.BenQMobile.com/customer-care

Active account: Software

Start Establish a connection to the server.

After the data has been transferred:

OK Confirm and switch off the phone.

Switch on the phone then ...

Yes The software will be updated. This procedure can take up to 15 minutes. During this time all other applications on your phone will be locked. Emergency calls are also not possible.

Afterwards your phone will restart automatically. Now call up the **Device mgr.** again

Start A connection to the server will be established.

Finally the successful update will be confirmed on the display.

Change profile

Show settings.



Select the profile **Software Update** with the navigation key.



Check the default settings and if necessary enter your service provider's access settings.

Options

Open the options menu.

Save

Save the profile.


Last session

The data for the last connection is displayed.

Master reset

The phone is reset to the default values (factory setting). This does not affect SIM Card and network settings or data saved during Instant Messaging.

Alternatively, in standby mode enter:

*#9999# 

Clock



-  → Clock
→ Select function.

Time/date

The clock must be set to the right time once at start-up.



Start editing.



First enter the date (day/month/year), then the time (hours/minutes/seconds).

Additional information



Display the calendar to select the date.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Time zones

The time zone can be selected in the world map or a city list:

World map



Select the desired time zone.

City list



Select a city in the selected time zone.

Or

Options

Open menu and select Search city.

Time format

Select 24h or 12h.

Date format

Select the display format for the date.

Start of week

Select the weekday on which the monthly and weekly view on the left starts.

Buddhist year



Switch to the Buddhist year (not on all phone models).

Show clock

Activate/deactivate time display in standby mode.

Auto time



Time and time zone are set automatically. The time zone is detected automatically.

Security



→ Security
→ Select function.

Auto key lock

The keypad is locked automatically if no key has been pressed for a specific (pre-determinable) time. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.



Select **Set**.



Enter time in minutes and seconds after which the keypad lock is to be activated.

Additional information

The keypad can also be locked and unlocked directly in standby mode.

In each case:



Press and **hold**.

Direct call

(Phone-code protected)

Only **one** phone number can be dialled (page 34).

Only



(PIN2 or phone-code protected)

Dialling options are restricted to SIM-protected phone numbers. If only area codes are entered, relevant phone numbers can be added to these manually before dialling.

If the SIM Card does not support PIN2 input, all phone numbers on the SIM Card can be protected with the phone code.

This SIM only



(PIN2 or phone-code protected)

The phone can be connected to a SIM Card once the phone code is entered. Unless the phone code is known the phone will not operate with a **different** SIM Card.

If the phone is to be used with a different SIM Card, enter the phone code when requested.

Certificates

Display certificates for secure data connections.

PIN codes

For description, see page 24:

PIN control, **Change PIN**, **Change PIN2**, **Chg. phonecode**

Barrings



Barring restricts the use of your SIM Card (this is not supported by all service providers). You need a 4-digit network password for network barring which your service provider will give you. You may need to be registered separately for each barring.

Outgo. access

All outgoing calls except emergency numbers are barred.

Outgoing intl.

(Outgoing international)

Only national calls can be made.

Out.int.x.home

(International outgoing without home country)

International calls are not permitted. However you can make calls to your home country when abroad.

All incom.calls

The phone is barred for all incoming calls (forwarding all calls to mailbox provides a similar effect).

When roaming

You do not receive calls when you are outside your home network. This means that no charges are incurred for incoming calls.

Status check

Status check for network barrings.

Clear all

All barrings are deleted. A password which the service provider will give you is necessary for this function.

Network



→ Network

→ Select function.

Line



This function is only displayed if it is supported by the service provider. **Two separate** phone numbers must be registered on the phone.

Select line



Change the connection.



Display the current line.

Protected

(Phone-code protected)

You may limit usage to one phone number.

Additional information

Special settings may be made for each phone number (e.g. ringtones, call diversion, etc.). To do this, first switch to the required phone number.

Network info

The list of GSM networks currently available is displayed.



Indicates forbidden service providers (depending on SIM Card).

Choose network

Network search takes place again if, for example, you **leave** your home network or want to register on a **different** network. The search can take place in **Manual** (see **Network info**) or **Automatic** mode (see also **Pref. network**).

Pref. network

Enter your preferred service providers here in order of preference for when you leave your home network (e.g. if there are differences in price).

The current service provider is displayed.



Show list of preferred networks.

<Empty> Select.



Confirm change, then select a new service provider from the list.

Record service provider again (last entry in the list):

Furth.network

Select, enter the provider data and save it.

Additional information

If you are outside your home network, your phone automatically dials another GSM network.

If the signal strength of the preferred network is inadequate when you switch on the phone, the phone may register in a different network. This can change when the telephone is next switched on or if another network is selected manually.

Band selection



Select the GSM band supported by your service provider.

Fast search

When this function is active, network reconnection is speeded up (standby time is reduced).

User group



Depending on your service provider, you can create groups with this service. These have access, for example, to internal (company) information, or special tariffs apply to them. The details can be clarified with your service provider.

Active

Activate/deactivate function. "User group" must be deactivated for normal phone use.

Select group

You can select or add groups other than preferred groups (see below). Code numbers for the groups are obtained from your service provider.

Outgo. access

In addition to network control for a user group, it is possible to set whether outgoing calls outside the group are permitted. If the function is deactivated, only calls within the group are permitted.

Pref. group

If activated, calls may only be made within this standard user group (depending on the network configuration).

Accessories



→ Accessories

→ Select function.

Car Kit

Only in combination with an original wired handsfree Car Kit (see Accessories). The Car Kit profile is activated automatically when the phone is connected to the Car Kit.

Edit profile

See page 70.

Auto answer

(Factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

Auto switch off

(Factory default: 2 hours)

The phone is powered by the car's power supply. You can adjust the time between switching off the ignition and the time at which the phone switches off automatically.

Automatic settings

- Permanent illumination: activated.
- Auto key lock: deactivated.
- Charging the phone battery.
- Automatic activation of the Car Kit profile when the phone is connected to the Car Kit.

Headset

Only in conjunction with an original headset (see Accessories). If an original headset is used the profile is automatically activated when the headset is plugged in.

Edit profile

See page 70.

Auto answer

(Factory default: off)

Calls are accepted automatically after a few seconds a wired headset (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Automatic setting

Accept call with Call key or Call acceptance key, even when the auto key lock is activated.

USB

If the phone is connected with the data cable to a PC, the battery can also be charged in this way (only with original accessories, page 123).

Organiser

Calendar



You can enter appointments in the calendar. Time and date must be set for the calendar to work correctly.

The calendar offers you three views:

Monthly view

Special appointments are highlighted in colour.



Press **briefly** to go forward/back a week.

Press and **hold** to go forward/back a month.



Press **briefly** to go forward/back a day.



Open daily view.

Weekly view

Appointments are shown as a colour bar on the vertical hour division. Conflicting appointments are highlighted in colour.



Press **briefly** to go forward/back a day.

Press and **hold** to go forward/back a week.



Forward/backward by the hour through the day.



Open daily view.

Daily view

Description of appointment.



One day forward/back.



Scroll by the hour or to next/last entry.



Display current entry.

Settings

Options Open menu, then select **Settings**.

Start of day:

Time when the working day begins.

Start of week:

Weekday on which the monthly and weekly view on the left starts.

Set weekend

Set the days for the weekend.

Show birthdays:

Yes/No

Appointments



→ Appointments

Appointments are displayed in chronological order in a list.

Enter new appointment

<New entry>

Select.

Category:



Memo

Text input for description.



Voice reminder

Create a voice memo.
Shown with alarm.



Call

Enter phone number to be displayed with the alarm.



Meeting

Text input for description.



Holiday

Enter start and end date.



Birthday

Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see **Standard** at the end of the list.

Description:

Description of nature of appointment.

Phone number:

Enter a phone number or select one from Contacts.

Voice reminder:

Enter a voice recording, see **Dictat.machine**, page 93.

Location:

Location of appointment.

Whole day:

Day-long appointment: yes/no.

Start date:

Date when appointment begins.

Start time:

Time when appointment starts.

End date:

Date when appointment ends.

End time:

Time when appointment ends.

Additional information



Insert date from calendar.

Alarm:

On/off or Vibration.



Enter the period of time **before** the appointment and select the time unit:

Minutes, Hours, days

Reoccurrence:

Select a timeframe for repeating the appointment:

No, Daily, Weekly, Monthly, Yearly

Enter a parameter for repeating:

Forever, Until, Occurrences (number)

If **Weekly** is selected, certain weekdays can be highlighted.

All fields/Reduced fields

In the list, select those fields which are to be offered for future entries.

Options Open menu.

Save Save appointment.

Information on the alarm

When the set date and time are reached there is an audio and a visual alarm.

Alarm type **Birthday**:

You can send special birthday greetings by SMS, MMS, e-mail or a call via

Options. The alarm sounds one day before the birthday.

Use **Pause** to set the alarm to repeat.

Additional information

Display above set alarms:



Alarm clock



Appointment

An alarm sounds even when the phone is switched off. The phone does not go to standby mode. To deactivate it press any key.

Tasks



A task is displayed like an appointment in the agenda for the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed.

The entries are made in the same way as **Appointments** (see "Appointments").

Then:

Status:

Select **Done** or **Outstanding**.

Priority:

Select 5 levels from **Lowest** to **Highest**.

Date in use:

If activated with **Yes**, the following time input option is offered.

Due date:/Due time:

Enter the date and time by which the task is to be completed.

Alarm:

As for **Appointments**.

Save Save task.

Notes



Write and manage brief text notes. Protect confidential information with the phone code (do not save any important data or the PIN for credit cards etc. here).

Entering a new note

<New entry>

Write a normal note.

<Confidential>

Write a protected note (phone code).



Enter text. The first line is displayed later as a "title" in the notes list.



Save.

Organiser options

Depending on the application used (Calendar, Appointments, Tasks, Notes) and the current situation, different functions are offered.

Options Open menu.

Delete until	Delete all entries prior to a certain date.
Delete done	Delete all completed tasks.
Activate/ Deactivate	Switch alarm on/off.
Done	Set task to completed/in progress.

(For standard functions see page 23)

Dictat.machine



→ Dictat.machine

Use the dictating machine to record short voice memos.

- Use your phone as a dictating machine when on the move.
- Record a memo as a reminder or as a note for others.
- Add a voice memo to an appointment in the calendar.
- Record a call.

Warning!

The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential.

You may only use this feature if the other party to the conversation agrees.

New recording

<Record new>

Select. The remaining time available, as well as the recording time, are shown in the display.



A brief beep sounds when the recording starts. Now dictate the text.



Switch between pause/record.

Stop

End recording.

Recording is saved with a time stamp. Rename with **Options**.

Playback (via Media player)



Select the desired recording.



Switch between playback/pause.



Press and **hold** for fast forward and rewind.

Dictating machine options

Options

Open menu.

Play

Play back current recording.

Loudspeaker

Playback through the built-in loudspeaker.

Settings

Set recording quality: Low, Medium, High

(For standard functions see page 23)

Time zones



→ Time zones

The time zone can be selected in the world map or a city list:

World map



Select the desired time zone.

City list



Select a city in the selected time zone.

Or

Options

Open menu and select Search city.



Set time zone.

Remote synchronisation



You can use this function to synchronise the personal data on your phone (contacts, notes, calendar entries) with a remote server. The external data can, for example, be saved on a company computer.

A request to synchronise data can also be received via **WAP push** (page 58). The user, however, must agree to the start.

Settings and functions



Select the desired function.



Display.

Active account

Two profiles can be set for synchronisation.



Display menu for changing.



Select profile.



List of profiles is displayed, select a profile.



Activate the profile.

Set profile:



Display menu for changing.

Connect. list	Select connection/proxy.
Address:	Enter the URL that points to remote server.
Port:	Enter port number, e.g. 80.
User name:	Enter login name.
Password:	Enter password (shown as a series of asterisks).
Server ID:	Default ID/Enter server address (for WAP push messages).

Last sync:

Tab view of:

Contacts, Appointments, Tasks, Notes

Display date, time and sync type of the last synchronisation.

Date range



Limit the time for the synchronisation of appointments in days/weeks. Only appointments within the date range will be synchronised.

Contacts, Appointments, Tasks, Notes

Mark application(s) whose data is to be synchronised. You can set the synchronisation mode for each application separately.

Synchronisation modes

You can choose between six modes for each application. The mode will influence the amount of data transferred and the result.

Off: The data of this application will not be synchronised.

Fast sync: Only the modifications made after the last sync will be exchanged between server and mobile.

Sync all: All data for the selected application will be transferred from server to mobile and also from mobile to server. Server and mobile will contain the same data afterwards.

Update server: Data modified on the mobile will be transferred to the server.

Update mobile: Data modified on the server will be transferred to the mobile.

Backup: All data from the mobile will be transferred to the server.

Warning! All server data will be deleted before backup!

Restore: All data from the server will be transferred to the mobile.

Warning! All mobile data will be deleted before restore!

Synchronisation

Before synchronisation you must select a profile (**Active account**) and the sync mode for the database(s). Confidential notes are not transferred.

Sync

Synchronisation with the selected server is started.

When synchronisation has been carried out successfully, the actions that have been performed are displayed on several tabs.

Extras

SIM services (optional)



Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM Card.

If you have such a SIM Card, the SIM services will appear in the main menu under "Extras" or directly above the soft-key (on the left).



Symbol for SIM services.

Where there are several applications, these are displayed in a SIM services menu. With the SIM services menu, your phone is ready to support future additions to your service provider's user package. For further information, please contact your service provider.

My applications

To help you organise the applications you download from the Internet you can use the **My applications** folder in **My stuff**.

For further information, see page 110.

Calculator



The calculator is offered in a basic version and with an advanced range of functions.

The input line is in the middle of the display with two calculation lines above it.

Beneath it is the matrix with the calculation functions.



Enter digit(s).



Navigate to functions in the matrix.



Accept function.



Enter digit(s).



Apply function. The result is calculated and displayed immediately.

Basic functions

+, -, *, / Basic calculation types

= Result

1/x Reversion

% Convert to percentage

. Decimal point

± Sign change "+" / "-"

AC New calculation**Extended functions:****Options** Open menu, then select
Extended mode. \sqrt{x} Square root x^2 Square

e Exponent

MS Save displayed number

MR Call up saved number

M+ Insert number from memory

Calculator options**Options** Open menu.**Convert** Call up the current
result in the unit
converter.**Clear all** Delete all units.**Memory save,
Memory recall,
Memory clear** Save or recall result;
delete memory.**Extended mode/
Basic mode** Switch calculator
functionality.

(For standard functions see page 23)

Unit converter

→ Unit converter

You can convert various measurement units in the decimal system into other measurement units.

Velocity

Mass

Time

Area

Power

Currency

Energy

Pressure

Volume

Length

Temperature

Example for Velocity units:

Type	Units
Velocity	Kilometres/h, Metres/sec, Miles/h, Miles/sec, Knots, Mach

Converting the units/currencySelect the source
unit/currency.

Switch to the input field.

Enter the quantity to be con-
verted.

Switch to the selection field.



Select the target measurement, unit or currency. The result is displayed.

You can use both input fields alternately.

Special key functions:



Set the decimal point.



Change the preceding sign.

Currency

When you call up the function for the first time, you must enter currencies in to which the conversions are to be made.



Enter the name of the currency (e.g. euros).

Options Open menu and save the entry with **Save**.

Now enter the names and exchange rates of up to three additional currencies for conversion.

Options Open menu.

Sign change	Change the preceding sign.
Memory save, Memory recall	Save or recall result.
Edit rate	Change the exchange rate for the base currency.
Add currency	Enter new currency and exchange rate.
Set as base	Use current currency as base currency.

Calculator

Start calculator.

(For standard functions see page 23)

Online status



The application can be called up from various other applications, such as **Inst. messaging** or **Contacts**.

In **Online status** you can set such attributes as **Availability** or **Mood**. These are visible to people who have subscribed to your **Online status**. You can also edit your status lists for the respective service here.

Depending on the service provider and available services, five tabs are offered.

Online status

Options Select **Privacy**. Depending on the choice between **Public**, **Private** or **Hidden** the following attributes can be seen by all subscribers, only by members of the **Private list** or by no-one.

For Instant message:



Choose between **Available**, **Busy**, **Not available**

Indicate whether you can be reached in the respective service.

My alias: Enter your personal nickname.

My text: Enter your personal information text (access to saved texts via **Options**).

My logo: Select your personal logo (start via **Options** **My stuff** or **Camera**).

My mood: Indicate your personal mood.

IMSG lists

(Instant Messaging lists)

Access to the following lists:

Pending reqes.

Display the current requests for your personal attributes.

Watcher list

Display who is watching your attributes.

Private list

Display subscribers who can see all attributes set to **Private**.

IMSG block list

Display all subscribers who can see no attributes and are blocked for **Inst. messaging**.

Info messages

List the messages sent by the service provider.

Settings

The dependence of **Online status** settings on those of the current profile (page 69) can be activated/deactivated.



Sound recorder



Use the sound recorder to record noises and tones for use as ringtones. The sound recorder is usually started from other applications/functions such as assigning a ringtone.

New recording

<Record new>

Select.

The remaining time available, as well as the recording time, are shown in the display.



A brief beep sounds when the recording starts.



Switch between pause/record.

Stop

The recording is ended and saved with a time stamp in **My stuff/Sounds**.

Start the recording from **Sound recorder**:



Play back.
Rename the recording via **Options**.

Start the recording from another application:



Back to application.

Playback



Select the desired recording.



Switch between playback/pause.



Press and **hold** for fast forward and rewind.

Options

Open menu.

Play	Play back current recording.
Set as...	Set the recording as a ringtone.
→ contact	Assign recorded sounds to a contact.
Settings	Set recording quality: Low, Medium, High
(For standard functions see page 23)	

Stopwatch

 


The stopwatch can work with lap times and intermediate times.

With **Lap timing**, each time a time is taken the stopwatch returns to zero.

With **Split timing**, the clock continues to run and the respective intermediate time is stored (max. 99).

Display, also in standby mode.



Lap / **Split** Store the current intermediate/lap time.

Stopwatch options

Options Open menu.

Start Start the stopwatch.

Next Continue to take an intermediate time.

Reset Reset to zero.

Stopwatch list Display saved entries.

 
**Lap timing/
Split timing** Switch mode.

(For standard functions see page 23)



Countdown



A set time elapses. The last 4 seconds are indicated by a beep. At the end a special beep sounds. Display, also in standby mode.




or

  


Standard timings

 It is possible to call up or set five timings with different countdown times.



Change Open input field.

 


Save Save entries.

Additional information

For **Stopwatch** and **Countdown**:

Stop ends the function prematurely.

Exit or  end only the display, **not** the function.

Date calculator

Calculate the period between two specified dates.



From: enter date, then **Until:** enter date.



Start calculation.



Edit output units.



Select previous/next value.

My menu

Create your own menu with frequently used functions, phone numbers or Internet pages.

The list of 20 entries is preset. You can, however, change it as you wish.

Using



Select the required entry.



Confirm.

Or



If the selected entry is a phone number, you can also call it with the Call key.

Change menu

You can replace each entry (1–10) with another entry from the selection list.



Select the required entry.



The function list is opened for selection.



Select the **new** entry from the list.



Confirm. The entry is saved.

If **Phonebook** is selected, the phone number must also be selected; if **Internet** is selected, the bookmark must also be selected.

Conver. history


Read all dialogues from the last session offline (deleted next time you log in).

Alarm clock



The alarm sounds at the set time even when the ringtones or the phone are switched off. The alarm clock is activated automatically after a change is made.

Off Press to end the alarm.

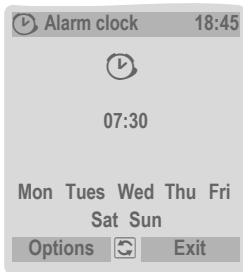

Set the time for the alarm call (hh:mm).

Or



Activate/deactivate the alarm clock.

Setting the days for an alarm

Options Open the menu and select **Set days**.



Switch between the days of the week.



Mark or unmark the days for an alarm.

Save Save the alarm call time.

Alarm clock options

Options Open menu.

Alarm on	Activate the alarm clock.
Set time	Set the alarm call time.
Set days	Set the days for an alarm.
Set melody	Set ringtone.
Clock	Set time (page 83).
Auto snooze	If user does not react: snooze only or deactivate alarm.

(For standard functions see page 23)

Additional information



Screen display in standby mode:
alarm clock activated.

Use **Snooze** or press any number key to set the current alarm to repeat.

Media player

Starting from an application

When you are viewing a picture/video or listening to a melody, the application starts a media playback.

Direct number for the media player



Press

or



For fast access, all the media files on your phone are offered on four tabs:

Music, Playlist, Pictures, Videos



Select tab.



Select file.



Start playback.

Media library

All music, playlist, video and image files contained on the phone and the RS MultiMediaCard are automatically added to the media library. If you would like a rebuild of the media library, however, press **Options** → **Refresh**.

After the media player starts the following tabs are displayed:

Music

All AAC, AAC+, AAC++, eAAC+ and MP3 files are displayed.

All files stored in the phone are automatically shown in a list in the Music tab. This list can be arranged according to the meta data (ID3 tags) by album, artist, genre or title.

Playlist

All playlists (file format: .m3u) are displayed.

Pictures

All supported picture formats are displayed.

Videos

All supported video formats are displayed.

Music/Videos

Functions for playing back songs or videos.



Play or pause, depending on the situation.



Fast forward/rewind while key is pressed.



Load next/previous media file.



Video: Switch to full screen mode and back again.

Music: Switch between file list and music animation.



Set the volume with the plus/minus sidekeys.



Switch to mute.

Stop

End playback.

For further services, see **Options**, page 107.

Playlist

Several pieces of music are compiled in a playlist (*.m3u).

Options

Open menu, select **New** and then **Playlist**.

Edit playlist options

Options

Open menu.

Add track Add a piece of music.

Remove track Remove a piece of music.

Move track Move piece of music up/down with the navigation key.

Centre key functions:



Play, play back.



Pause.



Stop.

Playlists in "*.m3u" format created on a PC can be transferred together with the songs into the sounds directory in **My stuff** using the Mobile Phone Manager (see page 25 and page 111). When the songs are located in the same directory, the playlist can be played back without any modification.

Pictures

Zoom functions for a displayed picture.



Zoom function if the displayed picture has a higher resolution than the display. The two soft-keys (+/-) enlarge/reduce the picture.



The enlarged picture detail is moved using the navigation key.



Centre picture.

For further services, see **Options** page 107.

Media player options

Options Open menu.

Different functions are offered depending on the starting situation and the object.

Play/Pause	Play back the current media file or pause.
Open	Select the media source such as My stuff , Bookmarks or URL .
New	Select an application to create a new object or a new playlist for music.
Zoom	Activate/deactivate zoom mode.
Set as...	Set picture as Wallpaper , Logo , for example, and sounds, for Incoming call , for example.
→ contact	Assign a picture or melody to a contact.
Edit playlist	Edit a playlist (page 106).
Play mode	<ul style="list-style-type: none"> • Individual piece of music • Repeat (piece of music/playlist) • All pieces of music • Introduction; the first 5 seconds of each piece of music is played.
Slideshow	Automatic run-through in full screen mode. Change individual picture with navigation key.

Edit	Access to picture editing (application must be loaded).
To background	Put Media player into the background.
Full screen	Full screen display of a picture/video.

(For standard functions see page 23)

Incoming call

An incoming call pauses the playback and puts the media player into the background. After the call has ended the playback continues automatically.

Playback in the background

You can put the media player in the background in order to work with other applications. Playback, e.g. of songs, continues.



Press key repeatedly to switch between foreground and background operation.

My stuff

To organise your files, you can use the file system like a PC file manager. There are separate folders for the various data types in **My stuff**.



The list of the folders and files is displayed (on two tabs if an RS MultiMediaCard is used).



Select file or folder.



Open folder and select file or link.

Depending on the selection, the file with the associated application is opened or the download started.

Download

Melodies, pictures, games and other applications are offered on the Internet. Once downloaded, you can access these via the phone. Most applications include instructions. The appropriate folders contain the download function to download new pictures and sounds, for example.

Remember that pictures and sounds may be protected (DRM, page 20).

Some applications and games are already pre-installed on your phone.

Downloading can, if necessary, take place in two stages:

Description file only



The description file is loaded for information purposes only. The application/game itself must be loaded separately.

or complete download



The application/game is completely loaded.

My stuff options

Different functions are offered depending on the starting situation and the object.

Options Open menu.

New folder	Create a new folder and name it.
Attributes	Display information on file or folder selected.
Move/Copy	Select file(s) or folder, then select destination folder and insert with <input checked="" type="checkbox"/> .
Format card	Format RS MultiMedia-Card.
Eject card	Remove the RS MultiMediaCard without loss of data.
Licence mgr.	Handling of DRM rights.
(For standard functions see page 23)	

Additional information

You can use the browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet.

BenQ Mobile excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The buyer bears the sole risk for loss, damage or faults to the phone or application as well as all damage and implications arising from the application. For technical reasons, such applications or the retrospective release for certain functions may be lost if the phone is exchanged/re-delivered or repaired. In such cases, the buyer is required to download or release the application again. Please ensure that your phone has Digital Rights Management (DRM) so that downloaded applications are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. BenQ Mobile does not warrant, guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge. We recommend that you carry out a backup from time to time of the applications on your PC using the "Mobile Phone Manager" (MPM, page 111). You will find this on the supplied CD-ROM. You can download the relevant latest version of the MPM from the Internet at:

www.BenQ-Siemens.com/m81

Directory structure

Separate folders have already been created for different data types in **My stuff**. These folders cannot be changed.

Folder	Description	Format
Sounds	Sounds, ringtones	mp3
		aac
		aac+
		aac++
		eaac+
		m3u
		mid
		amr
		wav
		Pictures
bmx		
jpg		
jpeg		
png		
Videos	Videos	3gp
Themes	Loaded theme (zipped)	sdt
	Theme configuration (unzipped)	stc
Games	Java archive	jar
	Download info	jad
Applications	Applications, such as Photo Editor or Download Assistant	*

Folder	Description	Format
Miscellaneous	Text modules	tmo
	Internet pages	html wml

Depending on the service provider, the structure, content and range of functions in **My stuff** may vary.

RS MultiMediaCard™

The RS MultiMediaCard extends the memory capacity of your phone by up to a gigabyte. This permits you to store a large number of pictures, videos or sounds, for example. You can also use the memory card as a removable medium.



Open
RS MultiMediaCard tab

The list of the folders and files is displayed. The folders and files are treated as in **My stuff**. If a file is opened whose application is in the phone the file is copied to there.

Additional information

RS MultiMediaCard™ is a trademark of the MultiMediaCard Association.

Changing the **RS MultiMediaCard** (see page 17)

Mobile Phone Manager

The MPM (Mobile Phone Manager) enables you to use extended phone functions from your PC. The phone and PC communicate via a data cable (see Accessories, page 123) or Bluetooth.



You can download the latest version of the MPM software from the Internet at: www.BenQ-Siemens.com/m81

Organiser



You can use the organiser to manage the contacts and appointments you have stored in your phone and synchronise them between your phone, Outlook® and Lotus Notes™. You can use all Call Control functions from the organiser.

Call Control

You can dial straight from the Organiser at the click of a mouse. It also makes establishing and managing conference calls extremely easy – the parties to the call are displayed on-screen in a virtual conference room, allowing you to swap effortlessly between the conference call and a private call and to call and add new subscribers at the click of a mouse.

SMS and EMS management



Write EMS and SMS messages from the convenience of your PC. Use all the options your PC offers you and use your sounds and pictures to create SMS and EMS messages. You can read, forward, print, delete and archive your messages.

Backup and restore



With the back-up function, you can regularly make a back-up copy of your phone data on the PC. If you ever lose the data on your phone, or replace the phone, you can quickly re-instate all data with the restore function. Please observe any possible restrictions for DRM-protected data.

Bookmark Management



Use your PC to browse on the Internet and define your preferred Internet sites. Save the Internet addresses as bookmarks on your phone so that you can quickly call them up at a later time when you are on the move.

Phone explorer



You can access the data in your phone quickly and easily with the Phone Explorer. The phone is simply integrated in the data structure of your PC and handled exactly as if it was another folder in your PC.

Mobile Modem Assistant



The Mobile Modem Assistant quickly and easily establishes an Internet connection via your mobile phone enabling you to use your PC at home or when travelling to surf the Internet.

Picture and photo processing



Picture/photo processing offers you the opportunity to conveniently create, edit and manage pictures and photos. Filters and effects are offered to help you create colourful, attractive graphics. The user-friendly interface makes child's play of

transferring pictures/photos from or to the mobile phone, and of changing the graphic settings.

Media Pool



Media Pool offers you a convenient option for managing ringtones, music, playlists and videos. You can store your music files in your phone automatically converting them into a suitable format.

Plug & Sync



Plug & Sync carries out your routine tasks for you as you wish. With "Music > phone" you can always copy your latest tracks and playlists automatically to your phone. With "Photos > PC" you can transfer your newly taken photos to your PC.

SmartSync



With SmartSync you can always synchronise your data with Outlook®, OutlookExpress® or Lotus Notes™ as soon as the phone is connected to a PC. New and changed contacts are synchronised in just the same way as messages and appointments.

Notifier

If your phone is connected to a PC you will always be notified on the PC screen, if required, about incoming calls or messages – even when the phone is switched to mute.

Questions & Answers


If you have any questions about using your phone, visit us anytime at www.BenQMobile.com/customer-care. For additional help, we have listed below some frequently asked questions and answers.

Configuration service

To help you set up your mobile phone for the data service WAP, MMS, e-mail and Internet, you can use a configuration service. This service is used to have the necessary settings for your mobile phone sent to you by SMS. We recommend that you contact your network provider who will send you the configuration messages.


As an alternative you can also use the "Setting Configurator" at www.BenQMobile.com/customer-care. We will then send you the configuration messages. Please follow the instructions contained in those messages.

Problem	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least 2 seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty. See also below under "Charging error".	Clean contacts.
Standby time is too short.	Frequent use of organiser and games.	Restrict use if applicable.
	Fast search activated.	Deactivate fast search (page 86).
	Display illumination switched on.	Switch off display illumination (page 72).
	Unintentional keystrokes (illumination!).	Switch on Auto key lock (page 84).

Problem	Possible causes	Possible solution
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery.
	Temperature out of range: 5 °C to 45 °C (41 °F to 113 °F).	Make sure the ambient temperature is right, wait for a while, then recharge.
	Contact problem	Check power supply and connection to the phone. Check battery contacts and telephone connection socket, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket, check mains voltage.
	Wrong charger. Battery faulty.	Only use original accessories. Replace battery.
SIM error.	SIM Card not inserted correctly.	Check that the SIM Card is inserted correctly (page 16).
	Dirty SIM Card contacts. SIM Card with wrong voltage.	Clean SIM Card with a dry cloth. Use 1,8V and 3V SIM Cards only.
	SIM Card damaged (e.g. broken).	Carry out a visual check. Have service provider change the SIM Card.
No network connection.	Weak signal.	Move higher, to a window or an open space.
	Outside the GSM range.	Check service provider's coverage area.
	Invalid SIM Card.	Complain to the service provider.
	New network not authorised.	Try manual selection or select a different network (page 86).
	Network call barring is set. Network overloaded.	Check network barrings (page 86). Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic. Switching phone off and on again can speed this up.
Calls not possible.	Second line set.	Set line 1  (page 85).
	New SIM Card inserted.	Check for new barrings.
	Charge limit reached.	Reset limit with PIN2 (page 42).
	Credit used up.	Load credit.
Some calls not possible.	Call restrictions are in place.	Barrings can be set by service provider. Check barrings (page 85).
Impossible to make entries in contacts.	Contacts list is full.	Delete entries (see Standard functions, page 23).

Problem	Possible causes	Possible solution
Voice message not functioning.	Call divert to mailbox not set.	Set call divert to mailbox (page 64).
☐! flashes.	SMS memory is full.	Delete SMS messages (see Standard functions, page 23) or archive them (page 50).
☒! flashes.	MMS memory is full.	Delete MMS messages (see standard functions, page 23).
☐! flashes.	Phone memory full.	Delete messages, pictures, videos, games or applications.
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Capacity problems with, for example, Games & More, ringtones, pictures, videos, SMS archive.	Phone memory full.	Delete files in the relevant areas. You can use the memory assistant to delete specific files (page 81).
No Internet access, downloading not possible.	Profile not activated, profile settings wrong/incomplete.	Activate or set browser profile. If necessary consult your service provider.
Message cannot be sent.	Service provider does not support this service.	Check with your service provider.
	Phone number for service centre not set or incorrectly set.	Set service centre (page 52).
	SIM Card contract does not support this service.	Contact your service provider.
	Service centre too busy.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures are not displayed on the destination phone.	Destination phone does not support the EMS standard.	
No Internet access possible.	Incorrect browser profile set, or wrong or incomplete settings.	Check browser settings; contact your service provider if necessary.
PIN error/ PIN2 error	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM Card according to the instructions. If the PUK (MASTER PIN) has been lost, contact your service provider.

Problem	Possible causes	Possible solution
Phone code error.	Three wrong entries.	Contact Service Centre (page 119).
Service provider code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or deleted by the service provider via the SIM card.	Check with your service provider.
No fax possible.	Wrong settings in the PC.	Check settings.
	No authorisation for this service.	Contact your service provider.
Charge meter does not work.	Charge pulse is not being transmitted.	Contact your service provider.
Damage		
Severe shock.	Remove battery and SIM and re-insert them. Do not dismantle the phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Stand mobile upright in an air current. Do not dismantle the phone!	

Reset settings to the factory default, page 82: ✱ # 9 9 9 9 # 

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone become wet, disconnect it immediately from the power supply to avoid electric shock. Do not place your phone (even to dry it) on/in a source of heat such as a microwave oven, oven or radiator. The phone may become overheated and possibly explode.
- Do not use or store the phone in dusty, dirty areas. Its moving parts may be damaged and the casing may become deformed and discoloured.
- Do not store your phone in hot environments (e.g. on a vehicle's dashboard in the summer). High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold environments. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts is not working properly, obtain fast and reliable help at our service centres.

Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only original batteries.

Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Just remember that the appearance of brighter or darker dots generally does not mean that a fault has occurred.


Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

www.BenQMobile.com/customer-care

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#), the software version (to display, press *#06#, then ) and if available, your Service customer number.

You will also find the most frequently asked questions and answers in the section entitled "Questions & Answers" in this user guide on page 114.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina.....	0 81 02 22 66 24
Australia	13 00 55 76 68
Austria	05 17 05 17
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina.....	0 33 27 66 49
Brunei	02 43 08 01

Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
Chile	8 00 53 06 62
China	40 08 88 56 56
Colombia	01 80 07 00 66 24
Croatia	0 16 10 53 81
Czech Republic.....	2 33 03 27 27
Denmark.....	35 25 65 29
Dubai	0 43 96 64 33
Ecuador	18 00 10 10 00
Egypt.....	0 23 33 41 11
Estonia	56 64 54 00
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany.....	0 18 05 33 32 26
Greece	80 11 11 11 16
Hong Kong	28 61 11 18
Hungary.....	06 14 71 24 44
Iceland	5 20 30 00
India.....	22 24 98 70 00 Extn: 70 40
Indonesia.....	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 45 27 90 36
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 70 07 07 00
Luxembourg	40 66 61 56 40
Macedonia.....	0 23 13 18 48
Malaysia	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13
Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands.....	0 90 03 33 31 00
New Zealand	08 00 27 43 63
Nigeria	0 14 50 05 00
Norway	22 57 77 46
Oman	79 10 12

Pakistan	02 15 66 22 00
Paraguay	8 00 10 20 04
Peru	0 80 05 24 00
Philippines	0 27 57 11 18
Poland	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	04 32 20 10
Romania	02 12 09 99 66
Russia	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 07 00 80
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain	9 02 11 50 61
Sweden	08 57 92 90 49
Switzerland	08 48 84 08 45
Taiwan	02 23 96 10 06
Thailand	0 29 53 50 00
Tunisia	71 86 19 02
Turkey	0 21 64 59 98 98
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 66 03 86
United Kingdom	0 87 05 33 44 11
Uruguay	00 04 05 46 62
USA	1 88 87 77 02 11
Venezuela	0 80 01 00 56 66
Vietnam	84 89 20 24 64
Zimbabwe	04 36 94 24

Product data

Declaration of conformity

Hereby, BenQ Mobile, declares that this M81 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The relevant declaration of conformity (DoC) has been signed. Please call the company hotline if you require a copy of the original or visit:

www.BenQMobile.com/conformity

CE 0168

Technical data

GSM class:	4 (2 watt)
Frequency range:	880–960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710–1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850–1,990 MHz
Weight:	96 g (3.39 oz)
Size:	105.3 × 47.5 × 18.4 mm (4.15 x 1.87 x 0.72 inch) (84 ccm)
Li-Ion battery:	820 mAh
Operating temperature:	–10 °C to 55 °C (14°F to 131°F)
SIM Card:	1.8 V and 3.0 V
RS MultiMediaCard:	max. 1 GB

Phone ID

You will need the following information if you lose your phone or SIM Card:
the number of the SIM Card (on the card):

.....

15-digit serial number of the phone
(under the battery):

.....

the customer service number of the service provider:

.....

Lost phone

If you lose your phone or SIM Card, contact your service provider immediately to prevent misuse.

Operating time

Talktime: up to 300 minutes
Standby time: up to 300 hours

The operating time depends upon the respective network conditions and conditions of use. Extreme temperatures considerably reduce the standby time. You should therefore avoid leaving the phone exposed to the sun or on a radiator.

The following applications reduce the stand-by time and can be deactivated if required:

- CB services (page 65)
- Screensaver (page 72)
- Illumination (page 72)
- EGPRS (page 73)
- Bluetooth (page 73)
- Fast search (page 86)
- Flash (page 44), torch (page 13)

SAR

INFORMATION ON RF EXPOSURE /
SPECIFIC ABSORPTION RATE (SAR)

THIS MODEL MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES

Your cellular phone is a radio transmitter and receiver. It is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (FCC, USA) and by Health Canada. These requirements include safety margins designed to assure the protection of all persons, regardless of age and health. They use a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit is 1.6 W/kg averaged over one gram of tissue.

The highest SAR value for this device when tested at the ear was **0.5 W/kg**. In positions other than the head, such as on the body, a separation distance of **2.0 cm** is required. The highest SAR value in this case was **0.24 W/kg**.

Information about this device model can be found at

<http://www.fcc.gov/oet/fccid>

by searching the equipment authorization system using **FCC ID: PWX-M81**.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

Additional Information can be found on the websites of the World Health Organization

(**<http://www.who.int/emf>**),

the Cellular Telecommunications Industry Association (CTIA) web-site at **www.phonefacts.net**,

the Canadian Wireless Telecommunications Association (CWTA) website

www.cwta.ca

or BenQ Mobile

(**www.BenQMobile.com**).

Accessories

Products can be obtained in specialist shops or you can visit the Mobile Store online: www.BenQMobile.com/shop

Fashion & Carry

Carrying Cases

Belt Case FCL-600

Tour Case FCT-650

Energy

Li-Ion battery EBA-760 (820 mAh)

Spare battery

Travel Charger

Travel Charger EU ETC-100

Travel Charger UK ETC-110

Travel charger with an extended input voltage range of 100–240 V.

Car Charger Plus ECC-100

Charger for the cigarette lighter socket in the car. It is possible to make phone calls during charging.

Desk Top Stand EDS-100

Desk top stand charger for the phone.

Handsfree Portable

Headset Basic HHS-100

Headset HHS-110

Headset with PTT key (push to talk) to accept and end calls.

Headset Purestyle HHS-120

High quality headset with detachable earphones and key to make/end phone calls.

Headset Stereo HHS-150

Stereo headset with key for enjoying music and making phone calls.

Headset Bluetooth®

HHB-700 with EU mains adapter

HHB-710 with UK mains adapter

Elegant, small Bluetooth® headset that is very comfortable to wear.

HHB-100

Easy to wear Bluetooth headset.

Headset Bluetooth® Clip

HHB-130 with EU power supply unit

HHB-131 with UK power supply unit

Stylish Bluetooth headset to clip at your clothing.

Headset Bluetooth® Comfort

HHB-160 with EU power supply unit

HHB-161 with UK power supply unit

Elegant Bluetooth headset to wear behind the ear.

Headset Bluetooth® Stereo

HHB-180 with EU power supply unit

HHB-181 with UK power supply unit

Stereo Bluetooth® headset for high quality and convenient handsfree talking and listening to music.

Headset Bluetooth® Stereo HHB-750

Stereo Bluetooth® headset with integrated display for high quality and convenient handsfree talking and listening to music.

Office

Data Cable DCA-100

For connecting the phone to the serial RS232 port of the PC.

Data Cable USB DCA-140

For connecting the phone to the USB port of the PC. With charging function.

SyncStation DSC-100

Table support for the phone to facilitate simultaneous data exchange and telephone charging. Includes a desktop stand and a USB data cable.

Multitainment

Mobile Music Set Bluetooth® IMS-100

The portable Mobile Music Set Bluetooth allows you to listen to music on your mobile phone via the active loudspeaker anywhere you go and with excellent sound quality in a wireless way.

Music Cable IMH-100

Cable to connect the Mobile Phone to the Hi-fi System.

Car Solutions

Mobile Holder HMH-100

Holds the mobile phone securely in the vehicle. Ideal for use with headset or Car Kit Portable (universal input).

Car Kit Portable HKP-100

The portable handsfree car kit can easily be moved from one car to another. Simply plug into the cigarette lighter socket, connect and talk.

Car Kit Bluetooth® Easy HKW-100

High-tech Bluetooth handsfree car kit with no cable connection to the mobile phone. Installation is easy - simply plug into the cigarette lighter socket.

Car Kit Bluetooth® Portable HKW-700

High-tech Bluetooth handsfree car kit with an external display and with no cable connection to the mobile phone. Installation is easy - simply plug into the cigarette lighter socket.

Car Kit Bluetooth® SIM HKW-720

Innovative Bluetooth® handsfree kit with an external display for making in-car calls safely, conveniently, and with low power consumption.



U.S. FDA

The U.S. Food and Drug Administration's (FDA) Center for Devices and Radiological Health Consumer Update on Mobile Phones

FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known – and what remains unknown – about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

Why the concern?

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been

done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate adverse health effects associated with the use of mobile phones.

What kinds of phones are in question?

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna – the primary source of the RF – and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

How much evidence is there that hand-held mobile phones might be harmful?

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing

scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously – up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

1. In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic

neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the National Cancer Institute is expected to bear on the accuracy and repeatability of these results.¹

2. Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except

for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus follow-up research is necessary.²

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This

was the only change noted among more than 20 variables compared.³

- In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used. Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.⁴

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

What is known about cases of human cancer that have been reported in users of hand-held mobile phones?

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S. population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of

mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

What is FDA's role concerning the safety of mobile phones?

Under the law, FDA does not review the safety of radiation emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair,

replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- Support needed research into possible biological effects of RF of the type emitted by mobile phones;
 - Design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
 - Cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health.
- At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:
- National Institute for Occupational Safety and Health
 - Environmental Protection Agency
 - Federal Communications Commission
 - Occupational Health and Safety Administration
 - National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

In the absence of conclusive information about any possible risk, what can concerned individuals do?

If there is a risk from these products – and at this point we do not know that there is – it is probably very small. But if people are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle,
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package, or
- a headset with a remote antenna to a mobile phone carried at the waist.

Where can I find additional information?

For additional information, see the following websites:

- Federal Communications Commission (FCC) RF Safety Program (select “Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters”):
www.fcc.gov/oet/rfsafety
- World Health Organization (WHO) International Commission on Non-Ionizing Radiation Protection (select Qs & As):
www.who.int/emf
- United Kingdom, National Radiological Protection Board:
www.nrpb.org.uk
- Cellular Telecommunications Industry Association (CTIA):
www.wow-com.com
- U.S. Food and Drug Administration (FDA) Center for devices and Radiological Health:
www.fda.gov/cdhr/consumer/

¹ Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.

² Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, DC; and personal communication, unpublished results.

³ Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A.

Effect of a 915- MHz simulated mobile phone signal on cognitive function in man. *Int. J. Radiat. Biol.*, April 8, 1999.

⁴ Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors; a case-control study. *Int. J. Oncol*, 15: 113-116, 1999.

FCC/Industry Canada Notice

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, please contact your local service facility.

Statement required by 15.19 and RSS210

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and that positions the handset a minimum of 2.0 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 2.0 cm from your body when the phone is switched on.

Intellectual property

Intellectual Property Restrictions

All Intellectual Property, as defined below, which is owned by or otherwise the property of BenQ Mobile GmbH & Co. OHG ("BenQ Mobile"), its affiliates, partners or suppliers, relating to the Phone, including but not limited to accessories, parts or software relating thereto (the "Phone System"), is proprietary under federal laws, state laws and International treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) disassemble, decompile, reverse engineer, prepare derivative works from, modify or make any other effort to create source code from the software. No title to ownership in the Intellectual Property is transferred to you through purchase or possession of the Phone or its components. All applicable rights of the Intellectual Property shall remain with BenQ Mobile, its affiliates, partners or suppliers.

BenQ Mobile will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or

devices not furnished by BenQ Mobile, nor will BenQ Mobile have any liability for the use of ancillary equipment or software not furnished by BenQ Mobile which is attached to or used in connection with the Product, The foregoing states the entire liability of BenQ Mobile with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for BenQ Mobile certain exclusive rights for copyrighted BenQ Mobile software, such as the exclusive rights to reproduce and distribute copies of such BenQ Mobile software. BenQ Mobile software may be used only in the Product in which the software was originally embodied when purchased, and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such BenQ Mobile software or exercise of rights in such BenQ Mobile software is permitted. No license is granted by implication, estoppel or otherwise under BenQ Mobile patent rights or copyrights.



Ten Driving Safety Tips

Your BenQ wireless phone gives you the power to communicate by voice – almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

Get to know your phone and its features such as speed dial and redial.

Carefully read your instruction manual and learn to take advantage of valuable features most phones offer including, automatic redial and memory dial – most phones can store up to 99 numbers in memory dial. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.

When available, use a hands-free device.

A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your phone or a speaker

phone accessory, take advantage of these devices if they are available to you.

Position your phone within easy reach.

Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voicemail answer it for you.

Suspend conversations during hazardous driving conditions or situations.

Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

Do not take notes or look up phone numbers while driving.

If you are reading an address book or business card while driving a car, or writing a “to do” list, then you are not watching where you are going. It’s common sense. Don’t get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

Dial sensibly and assess the traffic.

If possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip, or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, fol-

low this simple tip – dial only a few numbers, check the road and your mirrors, then continue.

Do not engage in stressful or emotional conversations that may be distracting.

Stressful or emotional conversations and driving do not mix – they are distracting and even dangerous when you are behind the wheel. Make people you are talking with aware you are driving and if necessary, suspend phone conversations that have the potential to divert your attention from the road.

Use your phone to call for help.

Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away. Dial 9-1-1 in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it is a free call on your wireless phone.

Use your phone to help others in emergencies.

Your wireless phone provides you a perfect opportunity to be a “good Samaritan” in your community. If you see an auto accident, crime in progress or other serious emergencies where lives are in danger, call 9-1-1, as you would want others to do for you.

Call roadside assistance or a special wireless non-emergency assistance number when necessary.

Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call to 9-1-1. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless numbers.

“The wireless industry reminds you to use your phone safely when driving.”

For more information, please call 1 (888) 901-SAFE, or visit our Web site at: www.wow-com.com

Provided by the Cellular Telecommunications Industry Association (CTIA)

End user license agreement

This Software License Agreement ("Agreement") is between You and BenQ Mobile GmbH & Co. OHG, Germany and/or one of its affiliates ("Licensor"). The Agreement authorizes You to use the Software specified in Clause 1 below, which may be included on Your phone, stored on a CD-ROM, sent to You by electronic mail, downloaded from Licensor's Web pages or servers or from other sources under the terms and conditions set forth below. This is an agreement on end user rights and not an agreement for sale. Licensor continues to own the copy of the Software and any other copy that You are authorized to make pursuant to this Agreement. Read this Agreement carefully before installing, downloading or using the Software. Further, by installing, downloading and/or using the Software, You agree to the terms and conditions of this Agreement.

1. Software.

As used in this Agreement, the term "Software" means, collectively:

- (i) all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided;
- (ii) related Licensor or third party software;
- (iii) digital images, stock photographs, clip art or other artistic works ("Stock Files");

- (iv) related explanatory written materials ("Documentation");
- (v) fonts;
- (vi) upgrades, modified versions, updates, additions and copies of the Software, if any, licensed to You by Licensor (collectively "Updates") and
- (vii) any other possible documentation related thereto.

2. End user rights and use.

Licensor grants to You a non-exclusive, non-transferable end user right to install the Software or use the Software installed on the phone. The Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

3. Limitations on end user rights.

- (a) You may not copy, distribute, or make derivative works of the Software.
- (b) You may not use, modify, translate, reproduce or transfer the right to use the Software or copy the Software except as expressly provided in this Agreement.
- (c) You may not resell, sublicense, rent, lease or lend the Software; except You may permanently transfer all of Your rights as set forth in the Agreement only as part of a permanent sale or transfer of the phone, provided the recipient agrees to the terms of this Agreement.

(d) You may not reverse engineer, reverse compile, disassemble or otherwise attempt to discover the source code of the Software (except to the extent that this restriction is expressly prohibited by law) or create derivative works based on the Software.

(e) You shall not display, modify, reproduce or distribute any of the Stock Files included with the Software.

(f) You shall not display, modify, reproduce or distribute any of the pre-loaded content included with the software unless permitted as stated in the User Guide or in the prompts in the Software. In the event that You are allowed to display, modify, reproduce or distribute certain parts of the pre-loaded content, You shall review the "Readme" files associated with the pre-loaded content (contained on the CD) to ascertain what rights You have with respect to such materials. Pre-loaded content may not be used in the production of libelous, defamatory, fraudulent, infringing, lewd, obscene or pornographic material or in any otherwise illegal manner. You agree that You shall only use the pre-loaded content in a manner that complies with all applicable laws, including, but not limited to, applicable restrictions concerning copyright and other intellectual property rights. You may not register or claim any rights in the pre-loaded content or derivative works there of.

(g) You agree that You shall only use the Software in a manner that complies with all applicable laws in the jurisdiction in which You use the Software, including, but not limited to, applicable restrictions concerning copyright and other intellectual property rights.

4. Copyright.

Licensor and/or its software suppliers and their respective affiliates own the Software and all rights, including without limitation including proprietary rights therein, are protected by international treaty provisions and other applicable national laws of the country in which it is being used. The structure, organization and code of the Software are the valuable trade secrets and confidential information.

5. Multiple copies/updates.

If the Software supports multiple platforms or languages, if You receive the Software on multiple media, or if You otherwise receive multiple copies of the Software, the number of phones on which all versions of the Software are installed shall be one phone. If the Software is an Update to a previous version of the Software, You must possess a valid end user right to such previous version in order to use the Update and You may use the previous version for ninety (90) days after You receive the Update in order to assist You in the transition to the Update. After such time You no longer have a right to use the previous

version, except for the sole purpose of enabling You to install the Update.

6. Commencement & termination.

This Agreement is effective from the first date You use or install the Software. Your end user rights automatically and immediately terminate without notice from Licensor if You fail to comply with any provision of this Agreement. In such event, You must immediately delete, destroy or return at Your own cost and expense, and without entitlement to any refund of the purchase price, the phone and the Software, and all related material to Licensor.

7. Except as expressly provided

in the limited warranty for the phone, you acknowledge the Software is provided "as is" without warranty of any kind express or implied. To the maximum extent permitted by applicable law neither Licensor, Licensor's Software suppliers or their respective affiliates, nor the copyright holders make any representations or warranties, express or implied, including but not limited to the warranties of merchantability or fitness for a particular purpose or that the Software will not infringe any third party patents, copyrights, trademarks or other rights. There is no warranty by Licensor or by any other party that the functions contained in the Software will meet your requirements or that the operation of the Software will be uninterrupted or error free.

8. Not fault tolerant.

The Software may contain technology that is not fault tolerant and is not designed, manufactured, or intended for use in environments or applications in which the failure of the licensed Software could lead directly to death, personal injury, or severe physical or environmental damage or financial loss.

9. Limitation of liability.

To the maximum extent permitted by applicable law, in no event shall Licensor or Licensor's Software suppliers or their respective affiliates and employees be liable for any lost profits, revenue, sales, data or costs of procurement of substitute goods or services, property damage, personal injury, interruption of business, loss of business information or for any special, direct, indirect, incidental, economic, cover, punitive, special or consequential damages, however caused and whether arising under contract, tort, negligence, or other theory of liability arising out of the use of or inability to use the Software, even if Licensor or its Software suppliers are advised of the possibility of such damages. Because some countries/states/jurisdictions do not allow the exclusion or limitation of liability, but may allow liability to be limited, in such cases, the liability of Licensor, its Software suppliers and their respective affiliates and employees shall be limited to, at Licensor's option, either (a) return of the price paid less a reasonable amount for usage, or (b) repair or replacement of the Software that does not

meet the limited warranty provided with the phone and which is returned in accordance with the requirements of the limited warranty.

Nothing contained in this Agreement shall prejudice the statutory rights of any party dealing as a consumer. Nothing contained in this Agreement limits Licensor's liability to You in the event of death or personal injury resulting from Licensor's negligence if law prohibits such a limitation. Licensor is acting on behalf of its software suppliers and their respective employees and affiliates for the purpose of disclaiming, excluding and/or restricting obligations, warranties and liability as provided in this clause 9, but in no other respects and for no other purpose.

10. Technical support.

Licensor has no obligation to furnish You with technical support except as agreed in writing between You and Licensor in the Limited Warranty provided with the phone.

11. Export control.


The Software may be subject to export regulations of the United States and other countries. You agree that You shall comply with all applicable export laws, restrictions and regulations of the United States or foreign agencies or authorities, and shall not export, or transfer for the purpose of re-export, any Software, product or technical data received under this Agreement or any Software or product produced by use of such techni-

cal data, including processes and services, in violation of any applicable restrictions, laws or regulations, or without all necessary approvals.


12. Applicable law & general provisions.


This Agreement shall be governed by and construed in accordance with the laws of the State of California without regard to its conflicts of laws rules. This is the entire agreement between Licensor and You relating to the Software and it supersedes any prior representations, discussions, undertakings, end user agreements, communications or advertising relating to the Software.


Menu tree

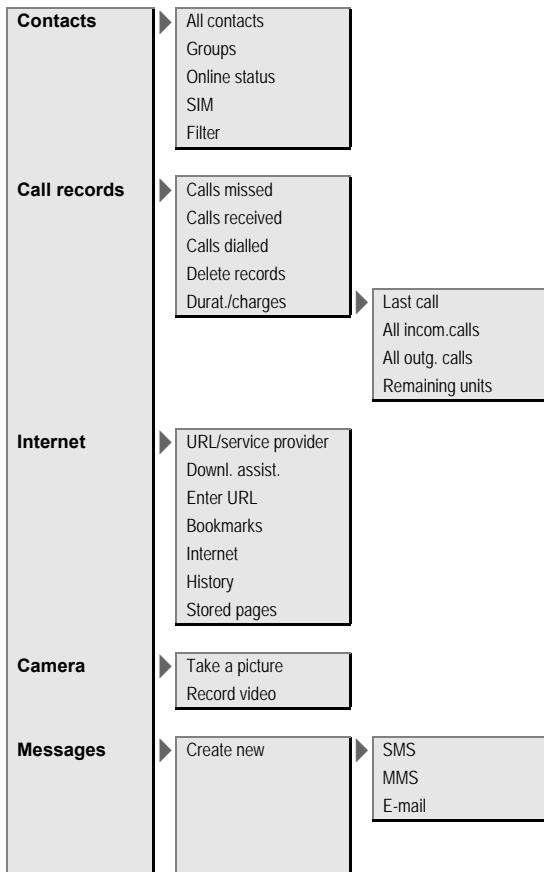


Messages	Inbox	SMS, MMS E-mail WAP push
	Draft	SMS, MMS E-mail
	Sent	SMS, MMS E-mail
	Outbox Inst. messaging Voice mailbox WAP push CB services	SMS, MMS E-mail
		Receive CB Read new CB Topic list Auto display Use topic index CB languages
	Msg. archive	SMS, MMS E-mail
	Templates	Text templates MMS templates

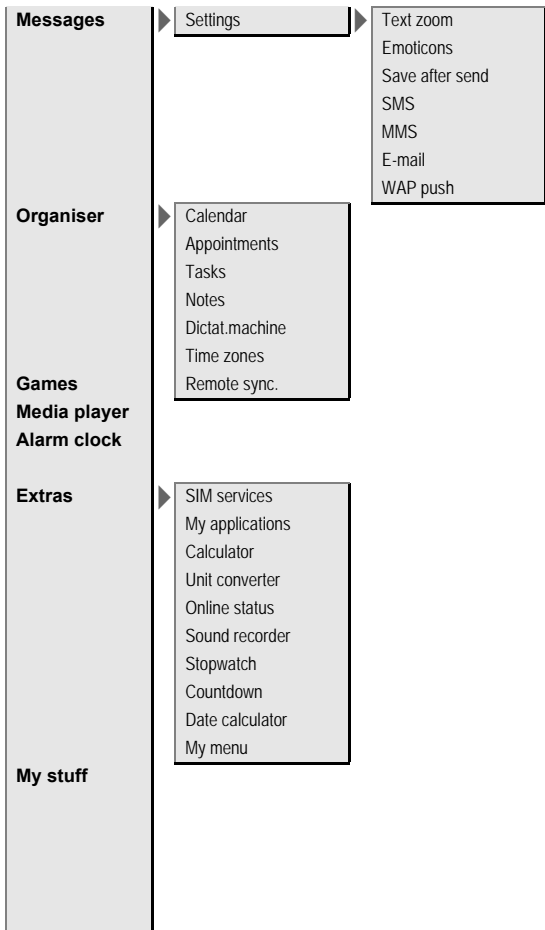

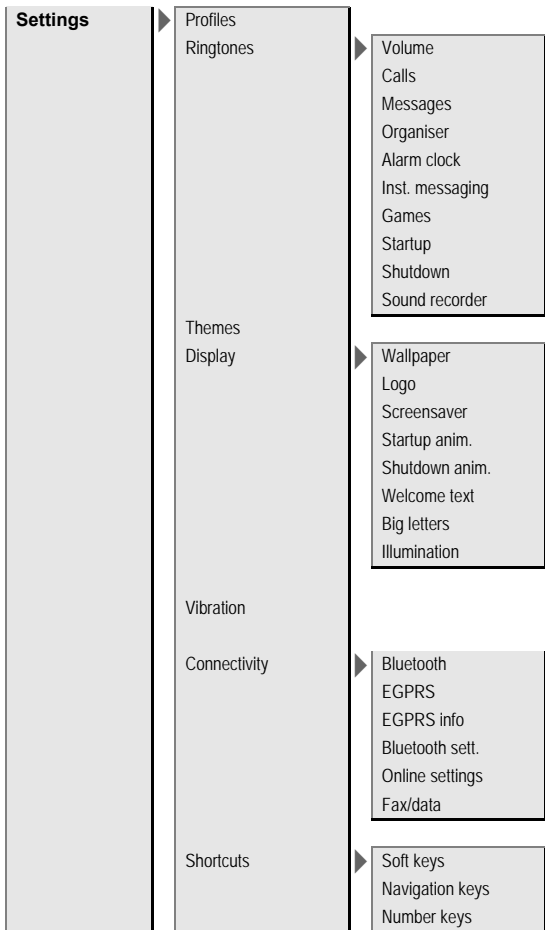

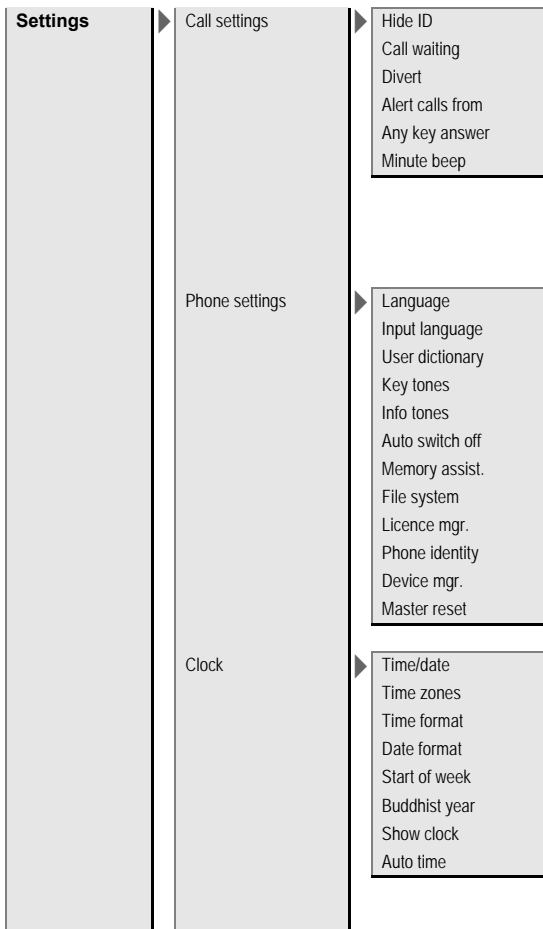

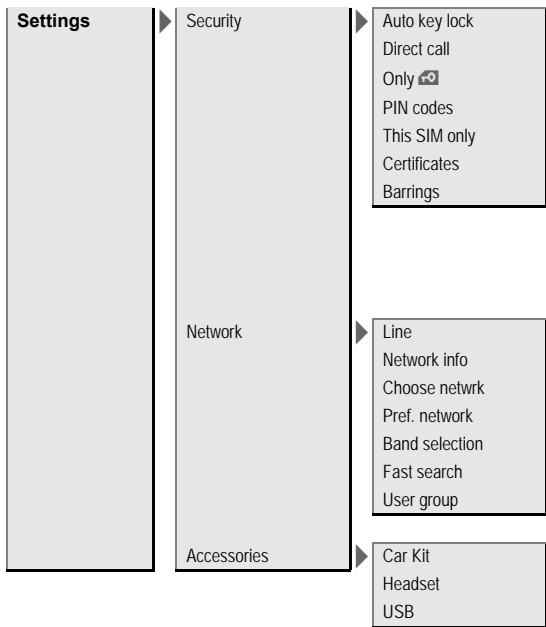

Index

A

Accept list	58
Accessories	87, 123
Alarm.....	91
Alarm clock	104
All calls (diversion)	79
All incoming (network barrings)	85
Any key to answer	79
Appointments	90
Auto display	
Clock	83
Time/charges	42
Auto key lock	84
Auto last number redial.....	31

B

Band selection	86
Battery	
Charging.....	18
Inserting.....	16
Operating times.....	18, 121
Quality declaration.....	118
Big letters	72
Bluetooth	73
Bookmarks (WAP).....	66, 67
Browser	67
Buddhist year	83

C

Calculator	97
Calendar.....	89
Call	
Accepting/ending	31
Blocked	85
Charges	42
Conference	33
Diverting.....	78
Ending.....	30
Menu.....	34
Putting on hold.....	32
Rejecting.....	31
Toggling (swapping).....	32
Call back.....	31
Call divert	78
Call screening.....	79
Call settings	78
Call transfer.....	34
Call waiting.....	32, 78


Calling	30
Calls received (call record)	41
Camera	43
Car Kit	
Accessories	124
Setting	87
Care of phone	118
CB services.....	65
Certificates.....	84
Charges.....	42
Charges/units	42
Charging the battery.....	18
Charging via USB	88
Clock.....	83
Codes.....	24
Conference.....	33
Connection profiles.....	76
Connectivity.....	73
Contacts	36
Converter	98
Countdown.....	102
Credit limit	42
Currency converter	99
Customer Care	119

D

Date format.....	83
Device manager	81
Dialling code	30
Dialling with number keys	30
Dictating machine	93
Digital Rights Management	20
Display	
Illumination	72
Language.....	80
Symbols.....	14
Wallpaper	72
Divert.....	78
Driving safety	133
DTMF tones (tone sequences).....	35
Duration/charges	42

E

Earpiece volume.....	30
EGPRS	73
E-mail	
Settings.....	56
Writing.....	54

- Emergency number 19
 End user license agreement..... 135
 Extras..... 97
- F**
- Factory settings 82
 Fast access..... 77
 Fast network search..... 86
 Formatting (phone memory)..... 80
 Forwarding (call)..... 34
 Frequency range 86
- H**
- Handsfree talking 32
 Headset
 Accessories 123
 Setting 88
 Hide ID 78
- I**
- Identity number (IMEI) 81
 IMEI number 81
 Inbox 49, 58
 Info tones..... 80
 Information services (CB)..... 65
 Inst. Message (IMSG) 59
 International dialling code 30
 Internet 67
- K**
- Key tones..... 80
- L**
- Language, display text/text input 80
 Last number redial..... 30
 Legal notices 3
 Licence Manager..... 81
 Limit (duration/charges) 42
 Logo 72
 Loss of phone, SIM Card 121
- M**
- Mailbox 64
 Maintenance of phone 118
 Media player..... 105
 Memory assistant..... 81
 Menu tree..... 139
- Message
 CB 65
 E-mail..... 54
 MMS..... 46
 SMS 46
 Microphone on/off 34
 Minute beep..... 79
 Missed calls (call record) 41
 Mobile Phone Manager 111
 MultiMediaCard..... 110
 Music playback 105
 Muting (microphone) 34
 My menu..... 103
 My stuff..... 108
- N**
- Network
 Barring 85
 Connection..... 85
 Settings..... 86
 Notes..... 92
 Number busy..... 31
 Numbers dialled (call record) 41
- O**
- One number only..... 34
 Only  84
 Operating times (battery) 18, 121
 Organiser 89
- P**
- PC connection..... 25
 Personal greeting 72
 Phone code 24
 Phone data 121
 Phone ID (IMEI) 81
 Phone number memo 30
 Phone number transmission on/off..... 78
 Phone settings 80
 Photo 43
 PictBridge 23
 PIN
 Changing 24
 Control..... 24
 Entering 19
 Error..... 116
 Use..... 24

PIN Codes.....	24	Standby mode.....	20
PIN2	24	Standby time.....	121
Preferred network.....	86	Start up animation.....	72
Preventing accidental activation	25	Stopwatch	102
Product data	121	Stor.Internet p.....	68
Profiles	69	Switching microphone on/off.....	44
Provider logo.....	72	Switching off the phone	
PUK, PUK2	24	Automatic.....	80
Putting a call on hold	32, 34	Manual.....	19
Q		Switching on (phone).....	19
Questions & Answers.....	114	Symbols	14
R		Synchronisation	95
Receiving signal	20	T	
Record video.....	44	T9 text input.....	27
Records.....	41	Take a picture.....	43
Reject list.....	58	Tasks.....	92
Reminder	31	Technical data	121
Remote synchronisation.....	95	Text input	
Ringtones	70	With T9.....	27
S		Without T9.....	26
S.O.A.	81	Text module	29
Safety precautions.....	6	Themes	71
Screensaver	72	This SIM only.....	84
Second phone number.....	85	Time zones.....	19, 83, 94
Security.....	24, 84	Toggling (calls)	32
Service centre (SMS)	51	Tone sequence (DTMF)	35
Service tones.....	80	U	
Services Over Air (S.O.A.).....	81	Uppercase and lowercase letters (T9).....	26
Setting time/date.....	83	User group	87
Settings.....	69	V	
Short message (SMS).....	46	Vibration.....	73
Shortcuts.....	77	Video playback.....	105
Shown in the display	14	Video recording.....	44
Shut down animation.....	72	Voice mailbox	64
SIM Card		Volume	
Clearing barrings.....	25	Earpiece volume	30
Inserting.....	20	Profiles	69
Problems.....	115	Ringtone	70
SIM services (optional)	97	W	
SMS		Wallpaper (display).....	72
Lists	50	WAP	66
T9 input	27	WAP push.....	58
Software version.....	81	Welcome text	72
SOS	10, 19		
Sound recorder	101		
Special characters.....	26		
Standard functions	23		