

**Preface**

Thank you for buying "Xperia™ XZ" (simply called the "product" from here on). Before using the product, read "Basic Manual" (this manual) to ensure safe use and handling.

**Packaged items**

Before your start using the product, make sure that you have all the following packaged with the product.

- Xperia™ XZ (including warranty)
- Sony Mobile TV antenna cable 02 (02SOHSA)

- 取扱説明書 (Instruction Manual) (Japanese)
- Xperia™ XZのご利用にあたっての注意事項 (Cautions on using Xperia™ XZ) (Japanese)
- 設定ガイド (Setting Guide) (Japanese)

The following items are not included in the package.

- microSD memory card
- AC adapter
- Earphones
- Desktop holder
- microUSB cable

**Information**

- Purchase a specified charger (sold separately).
- The battery is built into the product.
- Illustrations used in this manual are just images for explanations. They may be different from actual ones.

**Basic Manual**

**About Operating Instructions**

**Basic Manual (this manual)**

Handles only basic operations for main features. For detailed descriptions on various functions, refer to the "Basic Manual" (Japanese) app installed on the product or "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage. <http://www.au.kddi.com/support/mobile/guide/manual/>

**"Basic Manual" (Japanese) app**

The product allows you to use the "Basic Manual" (Japanese) app on the product to confirm detailed operational procedures. Certain functions can be directly activated from the app screens on which their operations are described.

**From the Home screen, [設定]▶[お客さまサポート (Customer support)]▶[Basic Manual] (Japanese)**

- When you activate for the first time, follow the onscreen instructions to download and install app.

**For Those Requiring an English Instruction Manual**

You can download the English version of the instruction manual from the au homepage (available in approximately one month after the product is released).

**Download URL:**

<http://www.au.kddi.com/english/support/manual/>



**5 Press the tray all the way and check there is no gap between the main unit and the cover**

**Removing au Nano IC Card 04**

- Put your fingernail into the groove to pull out the cover of microSD memory card/au Nano IC Card 04 slot
- Pull out the tray from the main unit to remove
- Remove au Nano IC Card 04 out of the tray, insert the tray into the main unit and then press it straight. Pay attention to the direction of pushing the tray.
- Press the tray all the way and check there is no gap between the main unit and the cover

**Information**

- Note the following points, otherwise handling the au Nano IC Card 04 may cause malfunction or damage.
  - Do not touch the IC (metal) part of the au Nano IC Card 04.
  - Insert in the correct direction.
  - Do not use force to attach or remove.
- Do not lose the au Nano IC Card 04 after it has been removed.
- Do not insert au Nano IC Card 04 with conversion adapter attached. Doing so may cause a fault.

**4 Insert the tray with the card into the main unit and then press it straight**

Pay attention to the direction of inserting tray.

**Attaching/Removing microSD memory card**

Before attaching/removing the microSD memory card, make sure to turn off the product.



**Force-quitting**

**1 Press and hold [Volume Up] and the upper part of the volume key at the same time for approximately eight seconds, and release your fingers after the product vibrates three times consecutively**

**Setting Screen lock**

When the screen lock is set, the backlight turns off to avoid the keys and touch panel from false operations. When the specified time elapses, the product's screen backlight turns off automatically and screen lock is activated.

**1 While the screen is displayed, [Power]**

**Unlocking screen**

The lock screen appears when turning the power on or the screen backlight on by pressing [Power].

**1 On the lock screen, swipe (flick) the screen up or left**

**Information**

- On the lock screen, swipe (flick) \* ↓ \* or \* [Camera] \* to activate "Voice Seach" app or "Camera" app, respectively.

**Basic Operation**

**Key icons**

The followings are the main functions of [Back], [Home], [Recent Apps] keys located at the bottom of the screen.



**Attaching microSD memory card**

- Pull out the cover of microSD memory card/au Nano IC Card 04 slot while hooking the groove with your fingernail
- Pull out the tray from the main unit to remove
- Set microSD memory card into the tray with the terminal facing up. Set a microSD memory card into the tray not to come off.

**4 Insert the tray with the cards into the main unit and press it straight**

Pay attention to the direction of inserting the tray.

**5 Press the tray all the way and check there is no gap between the main unit and the cover**

**Information**

- Insert a microSD memory card in the appropriate direction. Inserting a microSD memory card forcefully into the slot

[Back]	Return to the previous screen. Close a dialog box, menu, or the Notifications panel.
[Home]	Display the Home screen. Long-touch to activate "Google" app.
[Recent Apps]	Display recently used apps on a list and activate or end them from the list.

**Using the touch panel**

The display of the product is a touch panel operated by touching it with your finger.

**Tap/Double-tap**

Tap: Gently touch a screen and then immediately release your finger. Double tap: Touch the same position twice.

**Long-touch**

Keep touching an item with your finger.

**Slide**

While your finger is gently touching the screen, trace it to the desired direction to move over.

**Swipe (flick)**

Operate the screen by quickly moving (flicking) your finger up/down or left/right.

**Pinch**

Touch the screen with two fingers and widen (pinch-out) or narrow (pinch-in) the fingers' distance.

**Regarding notations used in this document**

- In this manual, screens and operations for the product with au Nano IC Card 04 attached are described.
- In this manual, keys (key icons) are represented by simplified illustrations such as [Back], [Home], [Recent Apps], [Camera].
- Operations of tapping menu items/icons/buttons on the screen etc. are indicated as [(name of the item etc.)].
- Screen illustrations shown in this manual may look different from the actual screens. In some cases, minor details or a part of a screen may be omitted.
- In this manual, "microSD™ memory card", "microSDHC™ memory card" and "microSDXC™ memory card" are abbreviated as "microSD memory card" or "microSD".
- All of the indicated amounts exclude tax unless otherwise specified.
- "The Company" as appears in the manual refers to the following companies:  
Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY  
Manufactured by: Sony Mobile Communications Inc.



**Removing microSD memory card**

- Pull out the cover of microSD memory card/au Nano IC Card 04 slot cover while hooking the groove with your finger
- Pull out the tray from the main unit to remove
- Remove the microSD memory card out of the tray, insert the tray into the main unit and then press it straight. Pay attention to the direction of inserting the tray.
- Press the tray all the way and check there is no gap between the main unit and the cover

**Charging**


When you purchase your product, the internal battery is not fully charged. Charge the battery before use.

**Information**

- When the charging starts with the product powered on, the start sound for charging sounds and Notification LED lights according to the battery level. To check the battery level, see the status bar in the top of the Home screen. Alternatively, from the Home screen, [設定]▶[Settings]▶[About phone]▶[Status] and see "Battery level".
- When you start charging with the product powered off, the power turns on even though operation is not available. Follow the instructions of each airline or medical facility for the use of mobile phones on their premises.

**Drag**

Keep touching an item or icon, trace it to the desired direction to move.

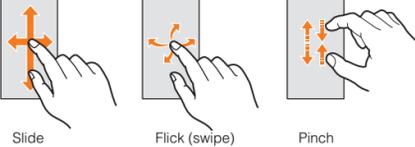


**Setting app permission**

- When accessing the functions or information for the first time, an access permission request appears. If it appears, confirm the content and tap "DENY" or "ALLOW".
- For some apps/functions, description for permission may appear. Or several confirmation screens or different permissions may appear. Confirm each content and follow the onscreen instructions.
- If you denied the permission, the app/function may not be activated or use of the function may be restricted.
- In this manual, descriptions for such access permissions may be omitted.

**Getting Ready**

**Names and functions of parts**

- Headset connection terminal
- Second microphone\*1: Reduces noise to make easy to listen
- Notification LED
- NFC/Osaifu-Keitai position for holding over\*2
- Front camera
- Earpiece/Speaker
- Proximity/Light sensor: Switches touch panel on and off to prevent from erroneous operation during a call/Auto-control for display brightness
- Display (Touch panel)
- Speaker
- Microphone
- USB Type-C connection terminal
- Power key/Screen lock key/Fingerprint sensor
- Volume key/Zoom key
- Camera key
- Camera lens

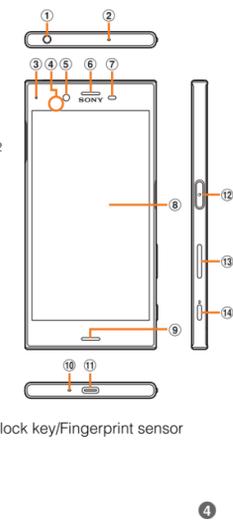

- It may take longer to complete for charging with a PC or while using the camera function.

**Charging with the AC Adapter**

Charging with Common AC Adapter 05 (sold separately) is explained.

- Insert the microUSB plug of Common AC Adapter 05 (sold separately), with the engraved side (▲) facing up, straight into the microUSB connection terminal of the product
- Insert the power plug of Common AC Adapter 05 (sold separately) into an outlet. The start sound for charging sounds and Notification LED lights on the product.

**3 When charging is complete, remove the microUSB plug of Common AC Adapter 05 (sold separately) from the product**

**4 Remove the power plug of Common AC Adapter 05 (sold separately) from the outlet**

**Home screen**

Home screen consists of multiple screens. Tap [Home] to return to the Home screen any time.

- Google Search
- Widgets
- Shortcuts (Apps)
- Home screen position: Indicates which screen of the several Home screens you are in. Slide or flick left or right to move to the adjacent screen.
- Wallpapers
- Folders (Google, 基本機能 (Basic functions))
- Apps key: If a confirmation screen related to data collection for the purpose of providing the app recommendations appears when it is tapped, tap "I AGREE" or "NOT NOW".




**Adding to Home screen/Editing Home screen**

You can change wallpaper or theme of the Home screen or add shortcuts of bookmarks etc., widgets on the Home screen.

**1 Long-touch an area of the Home screen where no icons are displayed**

- RGB-C-IR sensor
- Flash/Photo light
- GPS/Built-in antenna\*3
- Laser AF sensor
- Wi-Fi®/Bluetooth® antenna part\*3
- au Nano IC Card 04
- Back cover\*4
- Nameplate\*5
- Wi-Fi® antenna\*3
- Built-in antenna\*3
- microSD memory card/au Nano IC Card 04 slot

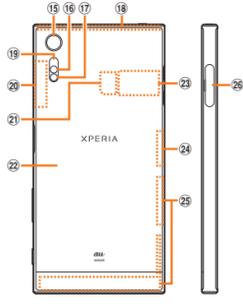

- \*1 Do not jab with a sharp object such as a needle. Doing so may cause a fault.
- \*2 ㇿ mark sticker is attached at the time of purchase. Remove the sticker when you use a commercially available protective film.
- \*3 The antenna is built in. Covering around the antenna by the hand may affect the quality of call/communication.
- \*4 Back cover is not removable. Removing so forcibly might cause damage or a fault. Also, battery is built into the main unit and not removable by customers.
- \*5 A sticker with CE mark, FCC ID, IMEI information, etc. printed is attached. Do not remove the sticker or nameplate.

**Charging with the DC Adapter**

You can charge from cigarette lighter socket in a car by using Common DC Adapter 03 (sold separately). For details, refer to instruction manual of Common DC Adapter 03 (sold separately).

**Charging with a PC**

The followings describe charging procedure by connecting the product to chargeable USB port on a PC using microUSB cable 01 (sold separately).

**1 Insert the microUSB plug of microUSB cable 01 (sold separately), with the engraved side (▲) facing up, straight into the microUSB connection terminal of the product**

**2 Insert the USB plug of microUSB cable 01 (sold separately) into the USB port of a PC**

The start sound for charging sounds and Notification LED lights on the product. When a screen for driver installation appears on the PC, wait for a while until the installation is complete. When a confirmation screen for software installation appears on the product, tap "SKIP" or "INSTALL". When "Use USB for" screen appears on the product, tap "CANCEL".


**3 When charging is complete, remove the microUSB plug of microUSB cable 01 (sold separately) from the product and close the microUSB connection terminal cover firmly**

**4 Remove the USB plug of microUSB cable 01 (sold separately) from the USB port of the PC**

2 Widgets		Add widgets, shortcuts of bookmarks etc.
Wallpapers	Album	Select an image from albums to set as a wallpaper. <ul style="list-style-type: none"> <li>To set image range, adjust cropping area by dragging, etc.</li> </ul>
	Live Wallpapers	Select a content from albums to set as a wallpaper.
	Photos	Select an image from photos to set as a wallpaper. <ul style="list-style-type: none"> <li>If nothing is displayed, tap [Camera] and then tap "Photos" again. When a screen related to access permission appears, follow the onscreen instructions.</li> </ul>
	(Xperia™'s Wallpaper)	Select an image to set as a wallpaper. <ul style="list-style-type: none"> <li>Images displayed to the right of "Photos"/"Live Wallpapers" are "Xperia™'s Wallpaper".</li> </ul>
Themes		Set the wallpapers etc. for the Home screen or the lock screen.
Settings		Set size of icons on the Home screen, switching screens, etc.


**CE mark and FCC ID**

**1 Open the au Nano IC Card 04 slot cover, and insert a fingernail into the hook at the edge of the label tray, then pull it out straight.**

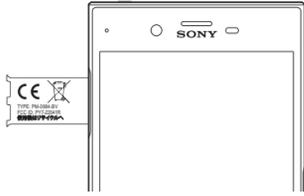

**au Nano IC Card 04**

Your phone number etc. is recorded in the au Nano IC Card 04. The product is compatible with au Nano IC Card 04.

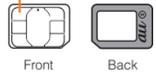

**Attaching/removing the au Nano IC Card 04**

Before attaching/removing the microSD memory card, make sure to turn off the product.

**Turning on (Initial settings)**

**Turning the power on**

- [Power] (over 1 sec): The product vibrates and after a while the lock screen appears. When "ようこそ (Welcome)" appears after the product is powered on, follow the onscreen instructions to set the initial settings.
- Swipe (flick) the screen up or left

**Turning the power off**

- [Power] (over 1 sec)
- [Power off]

- Information**
- Press [Power] (over 1 sec) ▶ Long-touch "Power off" ▶ [OK] to restart the product in safe mode (a function that enables to start the product in a status equivalent to the status at the time of purchase).

**Adding a folder**

**1 From the Home screen, long-touch an icon**

**2 Drag the icon onto another icon**

**Deleting shortcuts/widgets/folders**

- From the Home screen, long-touch an icon or a folder you want to delete
- Drag the icon or the folder to "Remove from Home screen" displayed at the top of the screen. To delete a folder, then tap "DELETE". It also deletes shortcuts etc. in the folder.

- Information**
- Long-touch a shortcut, widget, or folder icon to move.

**Using the Apps screen**

You can call up functions from the Apps screen. App icons installed to the product are also displayed.

- You may incur communication charges depending on the function.

**Starting an app**

- From the Home screen, [Recent Apps]: Slide or flick left or right to switch the Apps screen.
- Tap an app to use: Some apps are stored in a folder.

	Phone, Contacts		Play Store
	E-mail, SMS		Camera, Album
	Chrome		Maps
	Settings		Google, Voice Search
	Calendar		Basic Manual

### ■ Downloading apps

You can download and install apps or games, etc. by using Google Play.

- To use Google Play, you need to set a Google account. For details, refer to "Setting Guide".

### ■ Deleting (uninstalling) apps


Before deleting installed apps, back up contents related to the app that you want to save including data saved in the app.

- Some apps may not be deleted.

## Knowing the status of the product

### ■ Status bar

The status bar is located at the top of the product screen. On the left of the status bar, notification icons appear to inform missed calls, new mails, operations in progress, etc., and on the right, status icons appear to indicate the status of the product.

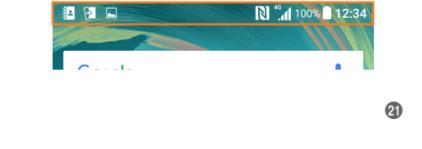

21

Symptom	What you should check
<b>■ (Out of service area) appears</b>	Is the product out of the service area or in an area where the signal is weak? <p>Is the built-in antenna covered with hand?</p> <p>Is au Nano IC Card 04 inserted?</p>
<b>Cannot charge the battery (Notification LED does not light, the battery icon does not change into charging one)</b>	Is the specified charging equipment (sold separately) attached properly?
<b>Cannot operate key/touch panel</b>	Is the power turned on? <p>Is "Screen lock" set?</p> <p>Turn off the power and then turn it on again.</p>
<b>Cannot operate touch panel as intended</b>	Are you operating with a fingernail or foreign object on the operating screen?
<b>Charging is not complete</b>	Is the temperature of the product raised or very low?
<b>A message such as "charge the battery" appears</b>	The battery is almost dead.

23

For inquiries, call: Customer Service Center

For general information, charges and operation information (toll free)

Business hours 9:00–20:00 (7 days a week)

From fixed-line phones: From au mobile phones:

**☎ 0077-7-111** | **157** without area code

PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR AFTER CALLING 157 ON YOUR au CELLPHONE.

For loss or theft (toll free)

Business hours : 24 hours live support

From fixed-line phones: From au mobile phones:

**☎ 0077-7-113** | **113** without area code

In case above numbers are not available (toll free)

**☎ 0120-977-033** (except Okinawa)

**☎ 0120-977-699** (Okinawa)


Keitai Guarantee Service Center

For loss, theft, damage (toll free)

Business hours 9:00–20:00 (7 days a week)

From fixed-line phones/au mobile phones,

**☎ 0120-925-919**

 

**やめまじょう、歩きスマホ。**

**キケン！水ぬれ充電**

Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by: Sony Mobile Communications Inc.

May 2016, 1st Edition

1303-0467.1

### ■ Examples of notification icon

	New Gmail message
	New PC mail message
	New E-mail (@ezweb.ne.jp) message
	New SMS/Receiving notification service message, New Receiving notification
"Calling" icon" data-bbox="148 75 158 85"/>	Talking"/"Calling"
	Missed call
	USB device connected
	Wi-Fi® open network available

\*1 Appears when switched to another screen such as the Home screen.

### ■ Main status icons

	Signal level (Level 4, Out of service area)
	4G (LTE/WiMAX 2+) data communication status*1 (Available, data transferring or downloading)
	Battery level (100%, Charging)
	Silent mode (Vibrate) is set
	Silent mode (Mute) is set
	Airplane mode is activated
	Wi-Fi® connected, Wi-Fi® communicating

\*1 Two types of network, "LTE" and "WiMAX 2+" can be used. "4G" appears on the screen for both networks.

The company determines which network is less busy depending on the condition of the line to connect.

### ■ Notification panel

If any notification icons are displayed, slide down the status bar to open the Notification panel. You can check details of notification icons or start corresponding apps.

### ◆Information

- To delete a notification, flick the notification left or right. Some notifications may not be deleted depending on the content.
- Alternatively, you can check notifications by swiping (flicking) down on the lock screen. Or set to hide or keep showing notifications on the lock screen.

### ■ Notification LED

Notification LED informs charging prompt, battery level while charging, missed calls, new mails, etc. by turning on or flashing.

Status	Description
<b>Red</b>	The battery is charging when the remaining battery level is 14% or lower.
<b>Orange</b>	The battery is charging when the remaining battery level is 15% - 89%.
<b>Green</b>	The battery is charging when the remaining battery level is 90% or higher.
<b>Flashing red</b>	The remaining battery level is 14% or lower.
<b>Flashing white</b>	Indicates missed call, new Gmail message, new SMS message.*1

\*1 Notification LED flashes while backlight is turned off.

## Updating Software

You can update the product to the most recent software for optimal performance and to get the latest enhancements.

- You are charged for data communications when connecting to the Internet from the product by using packet communication.
- You are recommended to back up your data before updating software.
- For details, visit **http://www.sonymobile.co.jp/support/** or refer to the "Basic Manual" (Japanese) app or "取扱説明書（詳細版）(Full instruction manual)" (Japanese) available on au homepage.

### ■ Downloading and updating software

Update files can be downloaded from the Internet web site into the product directly.

- Note that when Wi-Fi® communication becomes unstable, packet communication takes the place automatically, which may apply communication fees.

**1 From the Home screen, [☰]▶[Settings]▶[About phone]▶[Software update]**

**2 [🔄]▶[Refresh]**

After that, follow the onscreen instructions.

<b>1st time</b>	4,000 yen/ Longtime user benefit*1 2,000 yen
<b>2nd time</b>	7,000 yen/ Longtime user benefit*1 5,000 yen
<b>Conditions:</b> WEB割引 (Discount for web application) <sup>*2</sup> and 代用機なし割引 (Discount for nonuse of substitute) <sup>*3</sup> applied	
<b>1st time</b>	4,500 yen/ Longtime user benefit*1 2,500 yen
<b>2nd time</b>	7,500 yen/ Longtime user benefit*1 5,500 yen
<b>Conditions:</b> Only 代用機なし割引 (Discount for nonuse of substitute) <sup>*3</sup> applied	
<b>1st time</b>	4,500 yen/ Longtime user benefit*1 2,500 yen
<b>2nd time</b>	7,500 yen/ Longtime user benefit*1 5,500 yen

Conditions: WEB割引 (Discount for web application)<sup>\*2</sup> and 代用機なし割引 (Discount for nonuse of substitute)<sup>\*3</sup> applied

<b>1st time</b>	4,000 yen/ Longtime user benefit*1 2,000 yen
<b>2nd time</b>	7,000 yen/ Longtime user benefit*1 5,000 yen

Conditions: Only 代用機なし割引 (Discount for nonuse of substitute)<sup>\*3</sup> applied

<b>1st time</b>	4,500 yen/ Longtime user benefit*1 2,500 yen
<b>2nd time</b>	7,500 yen/ Longtime user benefit*1 5,500 yen

\* Charge amounts are all tax-excluded.

- \*1 This discount applies to customers who have used au for 3 years (25 months) or more, and all the lines within that customer's Family Discount. For customers using a data communication device or tablet, this discount applies to customers who are subscribed to a set discount (WIN Single Set Discount or Smartphone Set Discount) and have been under the contract of the line eligible for the set discount for 3 years or more.
- \*2 WEB割引 (Discount for web application): 500 yen reduction from the customer charge is applied for application of "Replacement mobile phone delivery service" via au homepage.
- \*3 代用機なし割引 (Discount for nonuse of substitute) is also applied together.

A substitute mobile phone is not rent for "WEB割引 (Discount for web application)", instead, "代用機なし割引 (Discount for nonuse of substitute)" is also applied together.

### ◆Information

- Flashing of Notification LED several times in red when pressing **[🔇]** with the power off indicates that the remaining battery is not sufficient.
- When you start charging with the product powered off, Notification LED turns in red. When the status of battery appears on the display, however, Notification LED lights in color that indicates the battery level.

### ■ Checking own phone number

**1 From the Home screen, [☰]▶[Settings]**

**2 [About phone]▶[Status]▶[SIM status]**

The phone number of the product is shown under "My phone number".

### ◆Information

- Alternatively, from the Home screen, [☰]▶[Contacts]▶[Myself] to check your phone number.

### ■ Setting the silent mode (Vibrate)

**1 Press the upper or lower part of the volume key**

**2 [🔇]**

The icon for the volume adjusting bar changes to  (white).

### ■ Setting the silent mode (Mute)

**1 Press the upper or lower part of the volume key**

**2 [🔇]▶Press the lower part of the volume key**

The icon on the volume adjusting bar turns to  (gray).

### ◆Information

- By tapping **[🔇]** on the volume adjusting bar, you can adjust volume of **[🔊]** (Media sound) or **[🔔]** (Alarm). However, setting of alarm volume in "Clock" app takes precedence.
- When the "silent mode" is set, sounds for shutter, shooting start/end sound when shooting videos, alarm, playback of video, or music, etc. are not muted.
- Raising the volume by pressing the upper part of the volume key in the silent mode, or adjusting volume of "Ring volume" of "Sound & notification" in the silent mode (Vibrate) cancels the silent mode.

### ■ Setting Airplane mode

When airplane mode is set, all wireless functions (phone, packet communication, Wi-Fi® function, Bluetooth® function, NFC Reader/Writer, P2P function) are turned off.

**1 From the Home screen, [☰] ▶[Settings]**

**2 [🚫] of "Airplane mode"**

## Entering characters

Use software keyboard to enter characters.

To display the software keyboard, tap a character input box on the character entry screen for adding contacts, creating a message, etc.

### ■ Switching software keyboards

With "International keyboard", you can use QWERTY keyboard to enter characters, Numeric keypad to enter numbers and symbols, and Symbol keypad for more symbols.

**1 Tap a character input box**

QWERTY keyboard appears.

### 2 Tap [🔍] to display Numeric keypad

For Symbol keypad, tap **[🔠]** on the Numeric keypad.

### ◆Information

- Tap **[🔍]** at the bottom of the screen to hide the software keyboard.
- Tap **[🔠]** to delete the character before the cursor.
- Switch between lower-case **[a]**, upper-case **[A]** and caps **[🔠]** on QWERTY keyboard.
- When using QWERTY keyboard, touch and hold a character to select a character variant.

# Support

## Introduction of related accessories

For details, refer to the instruction manual for each device.

- Sony Mobile TV antenna cable 02 (02SOHSA)**
- Sony Mobile Desktop Holder 01 (01SOPUA) (sold separately)**
- Common AC Adapter 05 (0501PWA) (sold separately)**
- Common DC Adapter 03 (0301PEA) (sold separately)**
- microUSB cable 01 (0301HVA) (sold separately)**
- microUSB cable 01 Navy (0301HBA) (sold separately)**
- microUSB cable 01 Green (0301HGA) (sold separately)**
- microUSB cable 01 Pink (0301HPA) (sold separately)**
- microUSB cable 01 Blue (0301HLA) (sold separately)**
- au Carrying Case G Black (0106FCA) (sold separately)**

<b>21</b>	<b>22</b>	<b>23</b>	<b>24</b>	<b>25</b>	<b>26</b>	<b>27</b>
-----------	-----------	-----------	-----------	-----------	-----------	-----------

<b>28</b>	<b>29</b>	<b>30</b>	<b>31</b>	<b>32</b>	<b>33</b>	<b>34</b>
-----------	-----------	-----------	-----------	-----------	-----------	-----------

- When an au mobile phone is handed over to you or someone else, the Keitai Guarantee Service Plus LTE membership is also handed over to the successor of the mobile phone.
- When you get a new au mobile phone by changing the model or purchasing an extra mobile phone, the "Keitai Guarantee Service Plus"/"Keitai Guarantee Service Plus LTE" membership for the old au mobile phone is automatically canceled.
- Service contents are subject to change WITHOUT notice.

### ■ au Nano IC Card 04

The au Nano IC Card 04 is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When a malfunction is suspected, or in case of theft or loss, contact an au shop or PiPiT.

### ■ After-sales service

If you are unsure about anything regarding after-sales service, contact the following service contact.

**Customer Service Center (for service canceling procedure in case of loss or theft)**

- You can apply for membership only at the time of purchasing your au mobile phone.
- Once you cancel the membership, you cannot reapply for it until you purchase an au mobile phone next time.
- Note that when changing the model or purchasing an extra mobile phone, this service only covers the most recently purchased au mobile phone.

**Keitai Guarantee Service Center (for loss, theft, damage)**

- From a land-line phone/From an au mobile phone, **☎ 0120-925-919** (toll free)
- Business hours 9:00 – 20:00 (7 days a week)

<b>Camera pixels</b>	Camera: Effective pixels Approx. 23 million pixels <p>Front camera: Effective pixels Approx. 13.2 million pixels</p>
<b>Continuous call time</b>	<b>In Japan</b> Approx. 1,330 min. <p><b>Overseas (GSM)</b> Approx. 630 min.</p>
<b>Continuous stand-by time</b>	<b>In Japan</b> Approx. 490 hours <p><b>Overseas (GSM)</b> Approx. 520 hours</p>
<b>Charging time</b>	Using Common AC Adapter 05 (sold separately): Approx. 150 min.
<b>Continuous Full Seg watching time</b>	Approx. 7 hours 10 min.
<b>Continuous 1Seg viewing time</b>	Approx. 8 hours 40 min.
<b>Continuous tethering time</b>	Approx. 440 min.
<b>Wi-Fi® tethering maximum connection number</b>	10

### ◆Information

For the latest information on accessories, visit the au homepage (**http://www.au.kddi.com/**) or contact the Customer Service Center.

- Accessories described above can be purchased from the au Online Shop. Some accessories may not be purchased due to the availability.
- http://aunlineshop.kddi.com/**

## Troubleshooting

Before you assume that the product is malfunctioning, check the following:

Symptom	What you should check
<b>Power is not turned on even though [🔇] is pressed</b>	Is the internal battery charged? <p>Is <b>[🔇]</b> pressed for over 1 second?</p>
<b>The power goes off</b>	Is the internal battery charged?
<b>The power turns off while activation screen is displayed</b>	Is the internal battery charged?
<b>The screen freezes and the power cannot be turned off</b>	Shut down forcibly by pressing and holding <b>[🔇]</b> and the upper part of the volume key at the same time for approximately eight seconds, and releasing your finger after it vibrates three times consecutively.

<b>28</b>	<b>29</b>	<b>30</b>	<b>31</b>	<b>32</b>	<b>33</b>	<b>34</b>
-----------	-----------	-----------	-----------	-----------	-----------	-----------

**Online Reception Desk (24 hours a day over the Internet)**

\* Reception only from PC or smartphone
https://cs.kddi.com/support/n\_login.html



- The App for the Internet acceptance, if "damage", "wet", "theft" and "loss" are eligible. In the case of spontaneous failure (not the cause damage, such as water wet, but does not power on, the screen does not function or other), it will be accepted by phone for interview is required.
- To apply for the Internet, you need the e-mail address.

### ■ au after-sales service information

**Replacement mobile phone delivery service**

Keitai Guarantee Service Plus LTE members		
Spontaneous failure 1st year	Free of charge	
Spontaneous failure 2nd year or later	See table of "Replacement mobile phone delivery service (Member) Customer charge" (Member) Customer charge"	
Partially damage, water soak, irreparable damage, theft or loss		

Non-Keitai Guarantee Service Plus LTE members		
Spontaneous failure 1st year	No recompense	
Spontaneous failure 2nd year or later		
Partially damage, water soak, irreparable damage, theft or loss		

<b>Bluetooth®</b>	<b>Communication type</b>	Compliant with Bluetooth® standard Ver.4.2
	<b>Output</b>	Compliant with Bluetooth® standard Power Class 1
	<b>Communication coverage distance</b> <sup>*1</sup>	Within 10 m with good visibility
	<b>Supported Bluetooth® profile</b> <sup>*2</sup>	HSP, HFP, PBAP <sup>*3</sup> , A2DP, AVRCP, SPP, OPP, HID, PAN, HOGP, MAP, DUN <sup>*4</sup> , GATT
	<b>Radio frequency band</b>	2.4 GHz band (2,400 MHz - 2,483.5 MHz)

\*1 Varies by obstruction between communication devices or radio wave reception status.

\*2 It is a specification according to purpose of use of Bluetooth® device and is defined by Bluetooth® standard.

\*3 Some contacts data may not be displayed correctly on the other party's device.

\*4 Only supported to a part of car navigation systems. For use, refer to the au homepage.

### ◆Information

- The continuous call time, continuous stand-by time, continuous Full Seg watching time, continuous 1Seg viewing time and continuous tethering time may drop to less than half depending on the battery charging status, usage environment such as temperature, reception condition at the location where the product is used, and the function settings.

40