

Be sure to read this manual before use

XPERIA SOGXX

Quick Start Guide

Packaged items

Before you start using the product, make sure that you have all these packaged items with the product.

Main unit



クイックスタートガイド (Quick Start Guide) (Japanese)

These items are not included in the package.

- microSD memory card
- Earphones
- AC adapter
- USB Type-C™ cable

Information

- Purchase a specified charger (sold separately).
- The battery is built into the product.
- Illustrations used in this manual are just images for explanations. They may be different from actual ones.

- Always update the software to the most recent one. For details on how to update the software, refer to “取扱説明書 詳細版 (Full instruction manual)” (Japanese).
- In this manual, “Xperia XX” is usually referred to as “the product” or “main unit”.
- In this manual, “Quick Start Guide” (this manual) and “取扱説明書 詳細版 (Full instruction manual)” (Japanese) are collectively referred to as “Instruction Manual”.
- In this manual, “microSD™ memory card (commercially available)”, “microSDHC™ memory card (commercially available)” and “microSDXC™ memory card (commercially available)” are abbreviated as “microSD memory card”.
- Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM and ® marks may be omitted in this manual.

When using the product

Before you start using the product, make sure to read the “Safety Precautions” to ensure correct use.

Before you assume that the product is malfunctioning, refer to “故障とお考えになる前に (Check here first)” in “取扱説明書 詳細版 (Full Instruction Manual)” (Japanese).

Communication is not possible even inside of the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication is sometimes not possible in poor signal reception areas. Communication is sometimes interrupted if you move into poor signal reception area during communication.

Since the product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated. (Though 5G/LTE/WiMAX 2+/GSM/LUMTS system has highly secure confidential communication features.)

- For connecting to the emergency call acceptance organization, only VoLTE (LTE network) can be used.
- Since the product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.

The IMEI information of your mobile phone is automatically sent to your carrier for maintenance and monitoring operational status of your mobile phone.

Before you start using the product overseas, check the relevant laws and regulations of the country/region you visit.

The Company is not liable for any damages or lost income arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional, mistaken, or incorrect use by the customer, or use under other unusual conditions outside the responsibility of the Company.


The Company is not liable for any incidental damages (change/disappearance of described content, loss of business income, disruption of business, etc.) arising from use of the product or inability to use the product.

The Company is not liable for any damages or lost income arising from failure to observe the described content of the “Instruction Manual”.

You cannot use information obtained from the measuring sensor or GPS equipped with the product for the purpose which requires high reliability, as the obtained information is just used for a guide. Note that the Company is not liable for any damage or lost income arising from the difference caused by measurement.

The Company is not liable for any damages or lost income arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.

Names and functions of parts

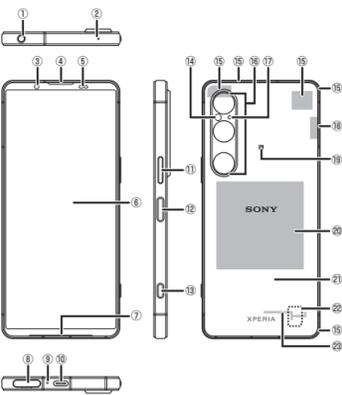

- Headset jack
- Second microphone^{1)*2}
- Front camera
- Earpiece/Speaker^{1)*2}
- Proximity/Light sensor²: Switches the touch panel on and off to prevent from erroneous operation during a call/Auto-control for display brightness.
- Display (Touch panel)
- Speaker^{1)*2}
- microSD memory card/SIM card slot
- Mouthpiece/Microphone^{1)*2}
- USB Type-C port
- Volume key/Zoom key

- Power key/Fingerprint sensor
- Shutter key
- Flash/Photo light
- 5G/4G antenna³
- Main camera
- Third microphone^{1)*2}
- 5G/4G antenna/Wi-Fi®/Bluetooth®/GPS antenna³
- Mark
- Wireless charging position
- Back cover⁴
- SIM card⁵
- Wi-Fi®/Bluetooth® antenna³

- Do not jab with a sharp object such as a needle. Doing so may cause a malfunction.
- Note that covering these parts with stickers or fingers, etc. may hinder product performance.
- The antenna is built into the main unit. Covering around the antenna by your hand may affect the quality of call/communication.
- The back cover is not removable. Removing forcibly might cause damage or a malfunction. Also, battery is built into the main unit and not removable by customers.
- For details on handling SIM card, refer to “取扱説明書 詳細版 (Full instruction manual)” (Japanese).

Safety Precautions (Observe Strictly)

Before using this product, thoroughly read these safety precautions for proper use.

These “Safety Precautions” describe instructions that should be observed to prevent damage to property or injury to the customer or others using the product.

The following symbols indicate the different levels of injury or damage that may result if the guidelines are not observed and the product is used improperly.

	Danger	This symbol indicates that “death or serious injury ¹ ” may directly and immediately result from improper use ¹ .
	Warning	This symbol indicates that “death or serious injury ¹ ” may result from improper use ¹ .
	Caution	This symbol indicates that “minor injury ² ” and/or property damage ³ may result from improper use ¹ .

¹ Serious injury: This refers to loss of sight, injury, burns (high- and low temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning etc., and injuries requiring hospital admission for treatment or long-term hospital attendance as an outpatient.

² Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.

³ Property damage: This refers to extended damage to buildings, furniture, livestock, pets, etc.

Explanation of graphic symbols

	Indicates an action that is not allowed.		Indicates that handling with wet hands is not allowed.
	Indicates that disassembly is not allowed.		Indicates compulsory actions in accordance with instructions.
	Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.		Indicates that the power plug must be disconnected from an outlet.

Precautions common to the main unit, internal battery, charging equipment, SIM card, peripheral devices

Danger Be sure to read the following hazards before use.

Do not use, store or leave the equipment in a location where it is subject to high temperature or accumulation of heat (e.g. by the fire, near a heater, under a kotatsu or bedding, in direct sunlight, in a car in the hot sun).

Doing so might cause fire, burns, injury, electric shock, etc.

Do not put the equipment in cooking appliances such as microwave ovens, IH cooking heaters, or high pressure containers such as pressure cookers. Do not place the equipment near such cooking appliances.

Doing so might cause fire, burns, injury, electric shock, etc.

Do not splash sand, soil or mud, or do not directly place the equipment on it. Also, do not touch the equipment with hands with sand etc. adhered.

Doing so might cause fire, burns, injury, electric shock, etc.

For waterproofness/dustproofness, refer to “Notes on waterproof and dustproof properties” (▶P.29).

Caution Be sure to read the following cautions before use.

When using the motion sensor, check the safety around you, hold the product firmly, and do not shake it unnecessarily.

Failure to do so might cause an accident such as injury.

If the display is damaged and when the internal substance etc. leaks out, do not allow it to contact your skin such as face and hands, clothes, etc.

Doing so might cause injury etc. on your eyes or skin. If the internal substance gets into your eyes, mouth, etc. or contacts your skin or clothes, immediately rinse with clean water.

In the case of getting into your eyes, mouth, etc., immediately consult a doctor after rinsing.

Do not discard the product together with other garbage.

Doing so might cause fire, burns, injury, etc. Also, it might cause environmental destruction. When the product is no longer used, dispose of it according to a recycling program of your local municipality.

If the substance leaks out from the internal battery, do not allow the fluid to contact with your skin of face, hands, clothes, etc.

Doing so might cause injury etc. on your eyes or skin. If the internal substance gets into your eyes, mouth, etc. or contacts your skin or clothes, immediately rinse with clean water.

In the case of getting into your eyes, mouth, etc., immediately consult a doctor after rinsing.

For using the product in a car, check with the automobile manufacturer or dealer for the effects by radio waves before using.

 
Depending on vehicle model, the radio waves from the product may affect the vehicle’s electronic equipment to malfunction. In that case, stop using the product immediately.

If any skin abnormality develops due to the use of the product, immediately stop using the product, and consult a doctor.

Depending on your physical constitution or health, itchiness, a rash, eczema, etc. might develop. See “Material list” (▶P.23) for materials used in each part of the product.

SIM card

Your phone number etc. is recorded in SIM card.




Attaching SIM card

Before attaching SIM card, make sure to turn off the product.


1 Remove the tray from the main unit

Put your fingertip (nail) into the groove of the microSD memory card/SIM card slot and draw the cover straight out.

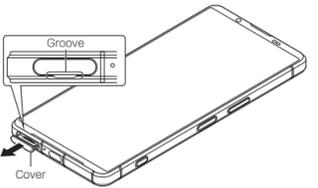


2 Set SIM card into the tray with the IC (metal) part facing up

Pay attention to the location of the notch. Surely set SIM card into the tray not to come off.

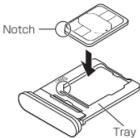

3 Keep the product horizontal and then push the tray in straight

Pay attention to the direction the tray is being pushed in. Firmly press where circled O, and check that there is no gap between the main unit and the microSD memory card/SIM card slot cover.

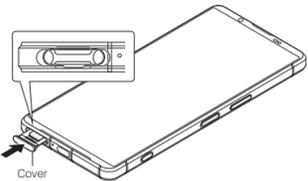

Turning the power on/off

Turning the power on

1 Press and hold Power key until the product vibrates

When the product is powered on, the lock screen appears.

When “ようこそ (Welcome)” appears after the product is powered on, follow the onscreen instructions to set the initial settings. Swiping (flicking) the screen up displays the Home screen.

Turning the power off

1 Press Power key and the upper part of the volume key at the same time

[Power off]

Information

- Restart the product in safe mode (start with almost default state), press Power key and the upper part of the volume key at the same time → Long-touch “Power off” → [OK].

Forcedly turning the power off

1 Press and hold Power key and the upper part of the volume key at the same time for 10 seconds or more, and release your fingers after the product vibrates three times consecutively

FCC ID

To view the regulatory compliance mark

- In the Home screen, slide the screen up → [Settings] → [About phone] → [Certificates] Regulatory compliance mark such as FCC ID is displayed on the screen.

Power off the product near electronic devices or equipment operating on high precision control or weak signals.

The radio waves from the product might interfere with the operation of electronic devices or equipment.

The following are some electronic devices or equipment that you should be careful of: Hearing aids, implantable cardiac pacemaker, implantable cardioverter defibrillator, other electronic medical equipment, and other automatically controlled devices or equipment. If you use an implantable cardiac pacemaker, implantable cardioverter defibrillator, or other electronic medical equipment, check with the medical electronic equipment manufacturer or vendor whether the operation can be affected by radio waves.

If charging does not finish after specified time, stop charging.

Failure to do so might cause fire, burns, injury, etc. due to overcharge etc.

Always turn off the product before you enter a place where flammable gas may be present, or a place where dusts are generated. Stop charging the product if you are charging it.

Ignition of flammable gas might cause explosion, fire, etc.

Follow the instructions of a gas station or other such location before using the product there.

Do not charge the product at a gas station, etc. Take care not to drop the product at a gas station, etc.; in particular, do not use the product while filling. Ignition of flammable gas might cause explosion, fire, etc.

If you notice anything unusual about the equipment such as an unusual odor, abnormal noise, smoke generation, overheating, discoloration or deformation during operation, charging or storage, perform the following measures carefully.

- Remove the power plug from an outlet
 - Turn off the power of the product
- Failure to do so might cause fire, burns, injury, electric shock, etc.

Caution Be sure to read the following cautions before use.

Do not use damaged product or peripheral devices.

Doing so might cause fire, burns, injury, etc.

Use the adapter only on the specified power supply and voltage.

When charging the battery overseas, use AC adapter that can be used overseas (sold separately).

Using the incorrect power supply and voltage might cause fire, burns, electric shock, etc.

AC adapter (sold separately): 100V AC (Connect to the AC outlet for internal household use)

AC adapter (sold separately) that can be used overseas: 100V AC to 240V AC (Connect to the AC outlet for internal household use)

Clean dust from the power plug.

Using it with dust adhered might cause fire, burns, electric shock, etc.

Firmly insert the specified charging equipment (sold separately) into an outlet.

Insecure inserting might cause fire, burns, electric shock, etc.

When you disconnect a power plug of the specified charging equipment (sold separately) from an outlet, do not apply excessive force to it such as pulling the cable. Instead, hold the adapter main unit to disconnect.

Pulling the cable of the specified charging equipment (sold separately) might damage the cable causing fire, burns, electric shock, etc.

If you wear electronic medical equipment such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator, consult a doctor for using the Wireless Charging Pad (sold separately) in advance.

The radio waves from the product might have harmful effects on the operation of the electronic medical equipment.

When plugging/unplugging the specified charging equipment (sold separately) into/from the product, plug/unplug it straight toward the product without applying excessive force such as pulling the cable.

Incorrect plugging/unplugging might cause fire, burns, injury, electric shock, etc.

If the charging terminal is deformed such as being bent, stop using immediately. Do not use it with the deformation restored.

Doing so might cause fire, burns, injury, etc. due to short-circuit of the charging terminal.

Do not place the product on an unstable or inclined platform. Be careful especially when vibrator is set.

The product might fall and cause injury etc.

Do not use or keep in a place that is very humid, dusty, or subject to high temperature.

Doing so might cause fire, burns, electric shock, etc.

For waterproofness/dustproofness, refer to “Notes on waterproof and dustproof properties” (▶P.29).

If children use the product, parents or guardians should give them proper instructions and do not allow them to use the product in the wrong way.

Use of the product in the wrong way might cause accidental ingestion, injury, electric shock, etc.

Keep the equipment out of the reach of babies or infants, and store it where pets cannot touch it.

In particular, be careful where small parts are stored, such as the microSD memory card/SIM card tray.

Failure to do so might cause accidental ingestion, injury, electric shock, etc.

Be careful about the temperature when using the product continuously or while charging because it might become warm.

Also, be careful not to keep touching it unintentionally in a pocket of clothes, when you fall asleep, etc.

The product or the specified charging equipment (sold separately) might become warm when using an app, a call, data communication, watching video, playing a game, etc. continuously or while charging. If you are directly in contact with warmed part continuously, it might cause a redness of skin, itch, rash, low-temperature burn, etc. depending on your physical condition.

Main unit

Danger Be sure to read the following hazards before use.

Do not throw the product into fire or apply heat.

Doing so might cause fire, burns, injury, etc.

Do not put excessive force such as sticking with a sharp object (nail etc.), hitting with a hard object (hammer etc.), or stepping on it.

Doing so might cause fire, burns, injury, etc.

14

15

16

17

18

19

20

