

Preparing the phone

Congratulations on your purchase of the Sony Ericsson R300a. For additional phone content, go to www.sonyericsson.com/fun. Register now to get free online storage and special offers at www.sonyericsson.com/myphone. For product support, go to www.sonyericsson.com/support.

Instruction symbols
The following instruction symbols appear in this User guide:

- Press the navigation key centre.
- Press the navigation key to the left.
- Press the navigation key to the right.
- Press the navigation key up.
- Press the navigation key down.


Note

Tip

Warning


Indicates that a service or function is network- or subscription-dependent. All menus or functions may not be available in your phone. Consult your network operator for more information.

To insert the SIM card and battery

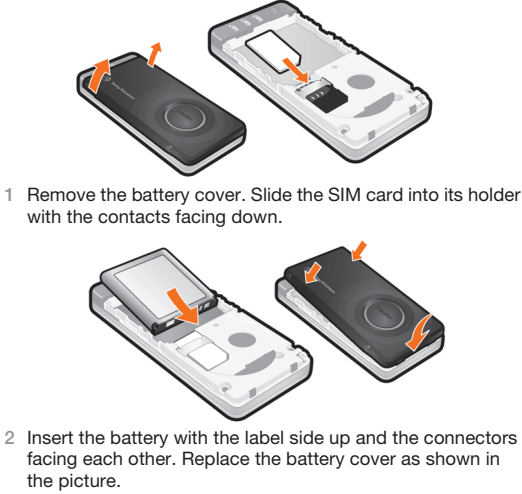

Do not force the battery cover into place. Place the battery cover carefully onto the phone and close it.

To charge the battery

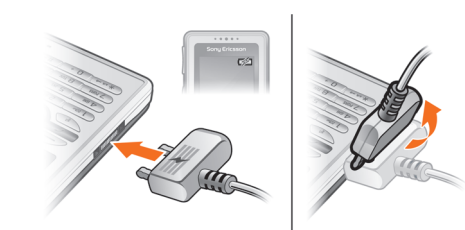

- The phone battery is partly charged when you buy it. Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to illuminate the screen.
- To remove the charger, tilt the plug upwards.

You can use the phone during charging. You can charge the battery for more or less than 2.5 hours. Interrupted charging will not damage the battery.

To turn on the phone

- Press and hold down **[Power]**.
- Enter your PIN if requested. To correct mistakes, press **[C]**.
- Select **OK**.
- Select a language.
- Enter the time and date and select **Save**.

To turn off the phone
• Press and hold down **[Power]**.

Standby

After you have turned on the phone and entered your PIN, the name of your operator appears on the screen. This is called standby. You can now make and receive calls.

SIM and PIN

SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

You can save contacts on the SIM card before removing it from your phone. Contacts may also be saved in the phone memory. See Contacts on page 15.

PIN code

You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 112 or 911. You can call an emergency number without entering a PIN.


If you enter the wrong PIN three times in a row, PIN blocked. To unblock, enter your PUK code provided by your network operator. appears. To unblock it, you need to enter your PUK (Personal Unblocking Key).

Phone overview



Menu overview

Network coverage

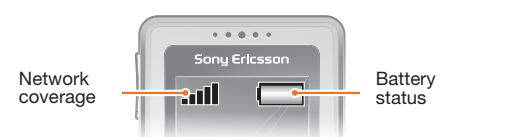

The network bars show the strength of the GSM network in your area. Try moving to another location if you have trouble calling and network coverage is poor. No network means you are not in range of a network.

- Four bars = Good network coverage
- Two bars = Average network coverage

Battery status

- Full battery icon = The phone battery is fully charged
- Empty battery icon = The phone battery is empty

 Organizer	File manager, Alarms, Calendar, Tasks, Notes, Timer, Stopwatch, Calculator			
 Internet				
 Entertainment	TrackID™, My games, Sound recorder			
 Camera				
 Messaging	Write new, Inbox, Call voicemail, Drafts, Outbox, Sent messages, Saved msgs, Templates, Settings			
 FM radio				
 Calls*				
 All	 Answered	 Dialled	 Missed	
 Contacts	New contact			
 Settings*				
 General	 Sounds & alerts	 Display	 Calls	 Connectivity

Some menus and icons in this document may vary depending on operator, network or subscription.

* You can use the navigation key to scroll between tabs in sub menus.

Some menus and icons in this document may vary depending on operator, network or subscription.
* You can use the navigation key to scroll between tabs in sub menus.

Screen icons

These icons may appear on the screen.

Icon	Description
Battery icon.	A completely green icon means the battery is fully charged
You have missed a call	
Divert calls is activated	
The phone is set to silent	
The keypad is locked	
You have received a new text message	
You have received a new picture message	
The handsfree is connected	
An alarm is activated	
Ongoing call	
The loudspeaker is on	
The radio is playing	
The Bluetooth function is activated	

Navigation

The main menus are shown as icons. Some submenus include tabs.

- To navigate the menus**
- From standby press **[Menu]** to select **Menu**.
 - Press **[Left]**, **[Right]**, **[Up]**, **[Down]** to move through the menus.

- To select actions on the screen**
- Press any of the selection keys, or **[Enter]**.

- To scroll between the tabs**
- Scroll to a tab by pressing **[Left]** or **[Right]**.

- To return to standby**
- Press **[Power]**.

- To lock the keypad**
- Press **[Lock]** and select **Lock**.

Calls to the international emergency number 112 can still be made, even when the keypad is locked.

- To unlock the keypad**
- Press **[Unlock]** and select **Unlock**.

- To set the phone to silent**
- Press and hold down **[Power]**.

- To delete items**
- Press **[Delete]** to delete items such as numbers, letters and pictures.

Shortcuts

You can use keypad shortcuts to go directly to a menu.

To use the navigation key shortcuts

- Press **[Menu]** to create messages.
- Press **[Camera]** to go to the camera.
- Press **[Radio]** to play the radio.
- Press **[Contacts]** to go to your contacts.

To use the shortcut key

- Press **[F1-F9]** to **Add**, **Delete**, **Move** or use shortcuts.

Calling

You must turn on the phone and be within range of a network.

To make a call

- From standby enter the area code and phone number.
- Press **[Call]**.

- To end a call**
- Press **[End]**.

- To answer a call**
- Press **[Call]**.

- To reject a call**
- Press **[Reject]**.

- To change the ear speaker volume during a call**
- On the left side of the phone, press the volume keys up or down.

- To mute the microphone during a call**
- Press and hold down **[Mute]**.
 - Press and hold down **[Mute]** again to resume.

- To turn off the ringtone when receiving a call**
- Press **[Ringtone Off]** without answering the call.

- To turn the loudspeaker on during a call**
- Select **SpkrOn**.

Do not hold the phone to your ear when using the loudspeaker. This could damage your hearing.

To make international calls

- From standby press and hold down **[+]** until a + sign appears on the screen.
- Enter the country code, area code (without the first zero) and phone number.
- Press **[Call]**.

- To view a missed call**
- When **Missed calls:** is displayed, select **Yes**. To call back, scroll to the number and press **[Call]**.

Call list

You can view information about recent calls.

- To view the call list**
- From standby press **[Call List]**.

- To call a number from the call list**
- When **Missed calls:** is displayed, select **Yes**. To call back, scroll to the name or number and press **[Call]**.
 - Scroll to the name or number and press **[Call]**.

To clear the call list

- From standby press **[Call List]**.
- Scroll to the **All** tab and select **Options** > **Delete all**.

Contacts

You can save contacts in the phone memory or on the SIM card. You can copy contacts from the phone memory to the SIM card or from the SIM card to the phone memory.

See Entering text on page 29.

To add a contact

- From standby select **[New Contact]**.
- Scroll to **New contact** and select **Add**.
- Select **Add** to enter the name and select **OK**.
- Scroll to **New number:** and select **Add**.
- Enter the number and select **OK**.
- Select a number option.
- Scroll between tabs and select the fields to add information.
- Select **Save**.

You can enter the + sign and country code with all phonebook numbers. They can then be used abroad or at home. See To make international calls on page 14.

To call a contact

- From standby press **[Call]**.
- Scroll to, or enter the first few letters of the contact.
- Press **[Call]**.

To edit a contact

- From standby select **[Edit Contact]**.
- Scroll to the contact and select **Options** > **Edit contact**.
- Scroll between the tabs, edit the information and select **Save**.

To delete a contact

- From standby select **[Delete Contact]**.
- Scroll to the contact and press **[Delete]**.

To copy all contacts to the SIM card

- From standby select **[Copy All]**.
- Scroll to **New contact** and select **Options** > **Advanced** > **Copy to SIM** > **Copy all**.

To view and edit your phone numbers

- From standby select **[Phone Numbers]**.
- Scroll to **New contact** and select **Options** > **Special numbers** > **My numbers**.
- Select an option.

Your phone has a radio and the handsfree works as an antenna.



To listen to the radio

- Connect the handsfree to the phone.
- From standby press **[Radio]**.

To turn the loudspeaker on

- When the radio is playing, select **Options** > **Turn on spkr**.

Do not use your phone as a radio in places where this is prohibited.

To switch to AM

- When the radio is playing, select **Options** > **Turn on AM**.

When you listen to AM radio, you must use the handsfree included in the phone kit.

To change the volume

- When the radio is playing, press the volume keys on the left side of the phone up or down.

Searching for channels

- To automatically search for channels**
- When the radio is playing, press **[Auto Search]**.

To manually search for channels

- When the radio is playing, press **[Left]** or **[Right]**.

To switch between preset channels

- When the radio is playing, press **[Left]** or **[Right]**.

Saving channels

You can save up to 20 preset channels.

To save a radio channel to the list of channels

- When you have found a radio channel, select **Options** > **Channels** > **Save**.
- Select **Insert**.

To select saved channels

- From standby press **[Radio]**.
- Select **Options** > **Channels** > **Channels**.
- Select a radio channel.

To save a radio channel to a radio preset key

- When you have found a radio channel, select **Options** > **Set radio key**.
- Select a radio key in the list > **Add**.
- Select **Add** to add the channel to the list of channels.

To select a radio channel saved to a radio preset key

- Press any of the radio preset keys **[1-9]**, **[0]** or **[*]**.

To use concert sound

- When the radio is playing, press **[Concert Sound]**.
- To deactivate **Concert sound** and switch to **Normal effect**, press **[Concert Sound]** again.

Use Concert sound for a better listening experience.

To use volume boost

- When the radio is playing, select **Options** > **Turn on spkr** and press **[Volume Boost]**.
- To deactivate **Volume boost** and switch to **Normal effect**, press **[Volume Boost]** again.

Use Volume boost in noisy environment to maximize the volume from the loudspeaker.

Adjust the volume cautiously when using Volume boost to avoid volume levels that could damage your hearing.

To record radio

- When the radio is playing, select **Options** > **Record radio** to start recording and select **Save** to stop and save the recording. The radio recording is saved in **Options** > **My radio recs**.

Select Options > Settings > Record quality and select between Normal quality or High quality.

This service is not available in all countries. Where available, you may only use this service for playback at a more convenient point in time.

To set the radio as alarm signal

- From standby select **Menu** > **Organizer** > **Alarms**.
- Scroll to an alarm and select **Edit**.
- Scroll to the **Radio** tab.
- Scroll to **Alarm signal:** > **Edit**.
- Select **Radio**. The latest used radio channel will be used as alarm signal.
- Select **Save**.

Keep the handsfree inserted when you select radio as alarm signal. The radio alarm signal will sound through the loudspeaker.

To exit the radio

- When the radio is playing, press **[Power]**.

To minimize the radio on the screen

- Select **Options** > **Minimize**.
- To restore the radio on the screen, from standby press **[Radio]**.

To turn off the radio when minimized

- From standby press **[Radio]** and press **[Power]**.

Messaging

Text messages (SMS)

You must have a service centre number, which is supplied by your service provider and saved on the SIM card. You may have to enter the number yourself.

To set service centre number

- From standby select **Menu** > **Messaging** > **Settings** > **Text message** > **Service centre**. The number is shown if it is saved on the SIM card.
- If there is no number shown, enter the service centre number, including the international "+" sign and country code.
- Select **Save**.

See Entering text on page 29.

To write and send a text message

- From standby press **[New Message]**.
- Select **Text message**. Enter the message and select **Cont**.
- Select a recipient (**Enter phone no.** or **Contacts look-up**) and select **Send**.

To view a received text message

- Text message received** appears. Select **Yes**.
- Scroll to the unread message and select **View**.

