

Prepare the phone


Congratulations on your purchase of the Sony Ericsson T280a. For additional phone content, go to www.sonyericsson.com/fun. Register now to get free online storage and special offers at www.sonyericsson.com/myphone. For product support, go to www.sonyericsson.com/support.

Instruction symbols
The following instruction symbols appear in this User guide:


- Use the navigation key to scroll and select.
- ⬆ Press the navigation key up.
- ⬇ Press the navigation key down.
- ⬅ Press the navigation key to the left.
- ➡ Press the navigation key to the right.

- ! Note
- 💡 Tip
- ⚠ Warning
- 📶 Indicates that a service or function is network- or subscription-dependent. All menus or functions may not be available in your phone. Consult your network operator for more information.

To insert the SIM card and battery

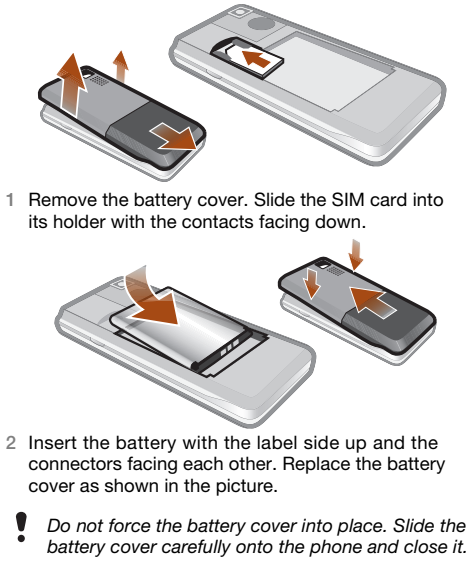

Charge the battery

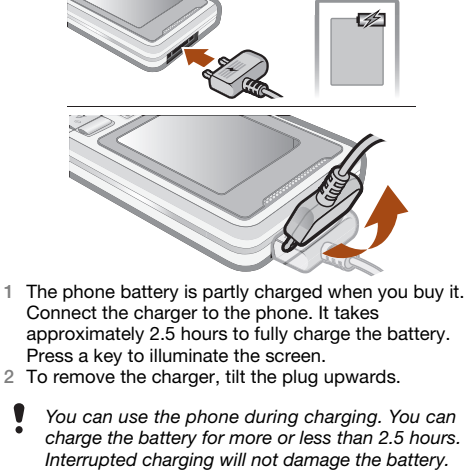

Turn the phone on

- 1 Press and hold down .
 - 2 Enter your PIN if requested. To correct mistakes, select **Delete**.
 - 3 Select **OK**.
 - 4 Select a language.
 - 5 Enter the time and date and select **Save**.
- To turn the phone off
- Press and hold down .

Standby
After you have turned the phone on and entered your PIN, the name of your operator appears on the screen. This is called standby. You can now make and receive calls.

SIM and PIN

SIM card
The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

💡 You can save contacts on the SIM card before removing it from your phone. Contacts may also be saved in the phone memory. See [Contacts](#) on page 17.

PIN code
You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 112 or 911. You can call an emergency number without entering a PIN.

! If you enter the wrong PIN three times in a row, **PIN blocked**. Enter **PUK** provided by your operator. appears. To unblock it, you need to enter your **PUK** (Personal Unblocking Key).

Menu overview


	Extras	Calendar, Timer, Stopwatch, Calculator, Games, My files
	Internet	Homepage, Bookmarks, Go to URL, View, Advanced
	FM Radio	
	Camera	Take pic., Camera pics, Slide show, Settings
	Messaging	Write new, Inbox, Call voicemail, Drafts, Sent messages, Saved msgs, Templates, Delete messages, Settings, Memory status
	Alarms	
	Calls	Call list, Time and cost, Call settings
	Contacts	View contacts, Find contact, Add contact, My number, Voicemail, Delete contacts, Speed dial, Copy contacts, Send contacts, Settings
	Settings	Sound & alerts, Wallpaper, Theme, Time and date, Language, Bluetooth, Select network, Internet settings, Advanced, Phone status

Some menus and icons in this document may vary depending on operator, network or subscription.

Phone overview



Network coverage

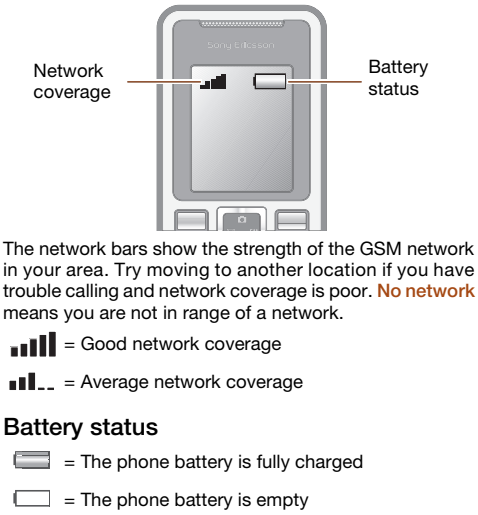

Screen icons

These icons may appear on the screen.

Icon	Description
	Battery icon. A completely green icon means that the battery is fully charged
	You have missed a call
	Divert calls is activated
	The phone is set to silent
	The keypad is locked
	You have received a text message
	You have received a picture message
	An alarm is activated
	Ongoing call
	The loudspeaker is on
	The FM radio is playing
	The Bluetooth function is activated

Shortcuts

From standby you can use the navigation keys to go directly to a function:

- Press to write a text or picture message.
- Press to go to the camera.
- Press **FM** to play the FM radio.
- Press to go to your contacts.

To navigate the menus

- 1 From standby select **Menu**.
- 2 Press , , , or and select a menu.

To go back one step in the menu

- Select **Back**.

To return to standby

- Press .

To lock the keypad

- Press and select **Lock keys**.

To unlock the keypad

- Press and select **Unlock**.

To set the phone to silent

- Press and hold down .

To call your voicemail service

- Press and hold down .

Calling

You must turn on the phone and be within range of a network.

To make a call

- 1 From standby enter the area code and phone number.
- 2 Press .

To end a call

- Press .

To answer a call

- Press .

To reject a call

- Press .

To turn off the ringtone when receiving a call

- Select **Silent** to turn off the ringtone without answering the call.

To turn the loudspeaker on during a call

- Select **Options** > **Turn on speaker**.

! Do not hold the phone to your ear when using the loudspeaker. This could damage your hearing.

To change the ear speaker volume during a call

- Press or .

Camera

Your phone has a digital camera to take pictures to save or send. Pictures taken with the camera are saved in **Menu** > **Camera** > **Camera pics**. The format is JPEG.

! Pictures downloaded using picture messages, Internet or Bluetooth are saved in **Extras** > **My files** > **My pictures**.

To start the camera and take a picture

- 1 From standby press . You can see the subject on the phone screen.
- 2 Select **Take pic.** to take the picture.
- 3 Select **Save** or **Delete**.

To delete a picture

- 1 From standby select **Menu** > **Camera** > **Camera pics**.
- 2 Scroll to a picture and select **View**.
- 3 Select **Options** > **Delete** > **Yes**.

To send a camera picture as picture message

- 1 From standby select **Menu** > **Camera** > **Camera pics**.
- 2 Scroll to a picture and select **View**.
- 3 Select **Options** > **Send message** > **Options** > **Send message** > **To..**.
- 4 Select **Enter phone no.** or **Email address**.
- 5 Select **OK** > **Options** > **Send message**.

💡 See To send an item using Bluetooth on page 31.

Messaging

Text messages (SMS)

You must have a service centre number, which is supplied by your service provider and saved on the SIM card. You may have to enter the number yourself. See [Troubleshooting](#) on page 36.

💡 See Entering text on page 23.

To write and send a text message

- 1 From standby press .
- 2 Select **Text message**. Write the message and select **Options** > **Send message**.
- 3 Select an option.
- 4 Select **Send**.

To view a received text message

- 1 **new message Read now?** appears. Select **View**.
- 2 Select the unread message.

To view messages saved in the inbox

- Select **Menu** > **Messaging** > **Inbox**.

To get delivery status of a sent message

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Delivery report**.
- 2 Select **On**. You will be notified when a message has been successfully delivered.

Picture messages (MMS)

Picture messages can contain text, sound and images. They are sent using MMS to a mobile phone. You need the correct Internet settings in your phone to use this function. See [Internet](#) on page 32.

To create a picture message

- 1 From standby press .
- 2 Select **Picture messages** > **Options** and select among the options to create the message.

To send a picture message

- 1 When the message is ready, select **Options** > **Send message** > **To..**.
- 2 Select **Enter phone no.** or **Email address**.
- 3 Select **OK** > **Options** > **Send message**.

! Sending and receiving phones must have subscriptions that support picture messaging.

You can save contacts in the phone memory or on the SIM card. You can copy contacts from the phone memory to the SIM card or from the SIM card to the phone memory.

💡 See Entering text on page 23.

To add a contact

- 1 From standby select **Contacts** > **Add contact**.
- 2 Select **Save on SIM** or **Save in phone**.
- 3 Enter the name and select **Options** > **OK**.
- 4 Scroll to the icon below the name.
- 5 Enter the number and select **OK**.
- 6 Select **Save contact**.

💡 You can enter the + sign and country code with all phonebook numbers. They can then be used abroad or at home. See To make international calls on page 13.

You can choose which contact information is shown as default. If **Phone contacts** is selected as default, your contacts show all the information saved in the phone. If you select **SIM contacts** as default, your contacts show names and numbers saved on the SIM card.

To select contacts view

- 1 From standby select **Menu** > **Contacts** > **Settings** > **View Contacts**.
- 2 Select an option.

To call a contact

- 1 From standby press .
- 2 Scroll to, or enter the first few letters of the contact.
- 3 Press .

To edit a contact

- 1 From standby press .
- 2 Select a contact.
- 3 Select **Options** > **Edit**.
- 4 Edit the information and select **Options** > **Save contact**.

To delete a contact

- 1 From standby press .
- 2 Select a contact.
- 3 Select **Options** > **Delete contact**.

To copy all contacts to the SIM card

- From standby select **Menu** > **Contacts** > **Copy contacts** > **Copy all to SIM**.

To view your own phone number

- From standby select **Menu** > **Contacts** > **My number**.

Contacts memory
The number of entries you can save in **Contacts** depends on the capacity of your SIM card.

To check the Contacts memory status

- From standby select **Menu** > **Contacts** > **Settings** > **Memory status**.

Speed dialling
Speed dialling lets you select nine contacts that you can dial quickly. The contacts can be saved in positions 2-9.

! Position 1 is set to voicemail number.

To add contacts to speed dial numbers

- 1 From standby select **Contacts** > **Speed dial**.
- 2 Select a position number.
- 3 Select a contact.

To speed dial

- From standby enter the position number and press .

FM radio

To listen to the FM radio

- 1 Connect the handsfree to the phone.
- 2 From standby press **FM**.

To control the radio

- Press or to search for FM radio channels.
- Press or to change the volume.

To save an FM radio channel

- Press and hold down - . The FM radio channel is saved in **Options** > **Channels**. You can save up to 20 preset channels.

To listen to a saved FM radio channel

- When the FM radio is on, press - .

To exit the FM radio

- Select **Back** or press .

To minimize the FM radio on the screen

- Select **Options** > **Minimize**.
- Press **FM** to restore the FM radio on the screen.

To turn the FM radio off when minimized

- Press **FM** and select **Back**.

To view FM radio options

- When you play the FM radio, select **Options**.

Calendar

To add an appointment in the Calendar

- 1 From standby select **Menu** > **Extras** > **Calendar**.
- 2 Scroll to a date and select **Options** > **Add a note**.
- 3 Enter your details and select **Options** > **OK**.
- 4 To confirm the date and time, select **OK**.
- 5 Select if you want a reminder signal:
 - **Reminder** – a reminder signal will sound in immediate connection with the note.
 - **Deactivate** – no reminder signal.

To edit or delete a note

- 1 From standby select **Menu** > **Extras** > **Calendar**.
- 2 Scroll to the day for the note and select **Options** > **View today**. If there is more than one note, scroll to the desired note.
- 3 Select **Options**.
- 4 Select to **Delete** or **Edit** the note.

More functions

Alarm

The alarm rings even if the phone is set to silent or turned off.

To set the alarm

- From standby select **Menu** > **Alarms**.
- Enter the time and select **Save**.
- Select an option.
 - If **Alarm** is selected, select an alarm signal.
 - If **Recurrent alarm** is selected, select what day or days the alarm is going to sound. Scroll to the check boxes and select **Mark** or **Unmark**, then select **Done** and select an alarm signal.

 *You need to keep a handsfree inserted when you select radio as an alarm signal. The radio will sound through the loudspeaker.*

To turn the alarm off

- When the alarm sounds, select **Snooze** or **Stop**.

To set the alarm signal

- From standby select **Menu** > **Settings** > **Sound & alerts** > **Alarm sound** and select an option.

Entering text

There are two methods you can use to enter text: multitap or T9™ text input.

To change text input methods

- When you write the message, press and hold down .

To enter text using multitap

- Press  –  until the desired character appears.
- Press  to add a space.
- Press  to enter full stops and commas.
- Press  to shift between upper case and lower case letters.
- Press  to enter the + sign.
- Press and hold down  –  to enter numbers.

To enter text using T9™ text input

- For example, if you want to write the word “Jane”, press , , , .
- If the word shown is the one you want, press  to accept and add a space. To accept a word without adding a space, press . If the word shown is not the one you want, press  or  repeatedly to view alternative words. To accept a word and add a space, press . To enter full stops and commas, press  and then  or  repeatedly.

To add items in a text message

- When you write the message, select **Options** > **Add item**.

To add symbols in a text message

- When you write the message, select **Options** > **Add symbol**.

To delete characters

- Select **Clear**.

To change writing language

- When you write the message, press and hold down .

Emergency calls

Your phone supports international emergency numbers, for example, 112 and 911. These numbers can normally be used to make emergency calls in any country, with or without the SIM card inserted, if a GSM network is within range.

To make an emergency call

- From standby enter 112 (the international emergency number) and press .

To view your local emergency numbers

- From standby select **Menu** > **Calls** > **Call settings** > **Emergency nos**.

Diverting calls

You can divert calls, for example, to an answering service.

To divert calls

- From standby select **Menu** > **Calls** > **Call settings** > **Divert all calls** and select an option.
- Select **Activate**.

To cancel a call divert

- From standby select **Menu** > **Calls** > **Call settings** > **Divert all calls** > **Deactivate all**.

Multiple calls

Call waiting

When call waiting is used, you hear a beep if you receive a second call.

To activate call waiting

- From standby select **Menu** > **Calls** > **Call settings** > **Call waiting** > **Activate**.

To answer a second call

- During the call, select **Answer**. Your ongoing call is put on hold.

To reject a second call

- During the call, select **Busy** and continue with the ongoing call.

To make a second call

- During the call, select **Options** > **Hold call** > **Options** > **Call contact**. Your ongoing call is put on hold.
- Select **View contacts**.
- Scroll to the contact and select **Options** > **Call**.

To switch between two calls

- During the call, select **Switch**.
- To join two calls**
- During the call, select **Options** > **Join calls**.

To end both calls

- Press  twice.

Call time and cost

To check the call time and the call cost

- From standby select **Menu** > **Calls** > **Time and cost**.

Voicemail

Callers can leave a voicemail message when you cannot answer. You can get your voicemail number from your network operator.

To enter your voicemail number

- From standby select **Menu** > **Calls** > **Call settings** > **Set up voicem**. > **OK**.
- Select **Voicemail no**, and enter the voicemail number that you get from your service provider.
- Select **Save**.

To call your voicemail service

- From standby press and hold down .

To check your voicemail number

- From standby select **Menu** > **Contacts** > **Voicemail**.

Ringtones and themes

Themes are used to change the appearance of the screen.

To select a ringtone

- From standby select **Menu** > **Settings** > **Sound & alerts** > **Ringtone** and select a ringtone.

To set the ring volume

- From standby select **Menu** > **Settings** > **Sound & alerts** > **Ring volume** and select an option.

To set the vibrating alert

- From standby select **Menu** > **Settings** > **Sound & alerts** > **Vibration** and select an option.

To select a key sound

- From standby select **Menu** > **Settings** > **Sound & alerts** > **Key sound** and select an option.

To select a theme

- From standby select **Menu** > **Settings** > **Theme** and select a theme.

To use a picture taken with the camera as wallpaper

- From standby select **Menu** > **Camera** > **Camera pics**.
- Scroll to a picture and select **View**.
- Select **Options** > **Set wallpaper**.

Time and date

To set the time

- From standby select **Menu** > **Settings** > **Time and date** > **Time** > **Set time**.
- Enter the time and select **Save**.

To set the time format

- From standby select **Menu** > **Settings** > **Time and date** > **Time** > **Time format** and select an option.

22

23

24

25

26

27

28

Locks

To set the date

- From standby select **Menu** > **Settings** > **Time and date** > **Date** > **Set date**.
- Enter the date and select **Save**.

To set the date format

- From standby select **Menu** > **Settings** > **Time and date** > **Date** > **Date format** and select an option.

Language

You can select the language for the phone menus.

To change the phone language

- From standby select **Menu** > **Settings** > **Language**.
- Select an option.

Bluetooth™ wireless technology

Bluetooth™ wireless technology makes wireless connection to other Bluetooth devices, for example, a Bluetooth headset possible. You can:

- connect to several devices at the same time.
- exchange items.

 *The recommended maximum distance between two Bluetooth devices is 10 metres (33 feet), with no solid objects in between.*

To turn the Bluetooth function on

- From standby select **Menu** > **Settings** > **Bluetooth** > **Turn on**.

 *Please check if local laws or regulations restrict the use of Bluetooth wireless technology. If it is not allowed, you must ensure that the Bluetooth function is turned off.*

To show or hide your phone

- From standby select **Menu** > **Settings** > **Bluetooth** > **Visibility** > **Show phone** or **Hide phone**.

 *If set to hide, other devices will not be able to identify your phone using Bluetooth wireless technology.*

To pair a device with your phone

- From standby select **Menu** > **Settings** > **Bluetooth** > **My devices** > **New device** to search for available devices.
- Select a device from the list. Enter a passcode, if required.

To pair your phone with a Bluetooth handsfree

- From standby select **Menu** > **Settings** > **Bluetooth** > **Handsfree**.
- Select **Yes** if you are adding a Bluetooth handsfree for the first time or select **Handsfree** > **My handsfree** > **New handsfree** if you are pairing with another Bluetooth handsfree. Make sure that your handsfree is ready to be paired.

To receive an item

- From standby select **Menu** > **Settings** > **Bluetooth** > **Visibility** > **Show phone**.
- When you receive an item follow the instructions that appear.

To send an item using Bluetooth

- From standby select, for example, **Menu** > **Camera** > **Camera pics**.
- Scroll to a picture and select **View**.
- Select **Options** > **Via Bluetooth**.

Internet

You need the correct Internet settings in your phone.

If settings are not in your phone, you can:

- Get them in a text message from the network operator.
- On a computer, go to www.sonyericsson.com/support and request a text message with the settings.

To select an Internet profile

- From standby select **Menu** > **Settings** > **Internet settings** > **Internet profile**. Select a profile.

To start browsing

- From standby select **Menu** > **Internet** and select an option:
 - Homepage** – go to the predefined homepage.
 - Bookmarks** – go directly to a saved Web page.
 - Go to URL** – go to predefined pages or bookmarks, enter a Web address or show previously visited pages.
 - View** – select full content or text only.
 - Advanced** – select options such as show pictures, allow cookies, clear cookies, clear cache and Internet status.

To stop browsing

- When you browse, press and hold down **Back**.

SIM card lock

The SIM card lock protects your subscription, but not your phone itself, from unauthorized use. If you change SIM cards, the phone still works with the new SIM card. Most SIM cards are locked at the time of purchase. If the SIM card lock is on, you have to enter a PIN (Personal Identity Number) every time you turn on your phone. If you enter your PIN incorrectly three times in a row, the SIM card is blocked. This is indicated by the message **PIN blocked**. **Enter PUK provided by your operator**. Your PIN and PUK are supplied by your network operator.

 *If the message **Wrong code. Attempts remaining:** appears when you edit your PIN, you entered the PIN or PIN2 incorrectly.*

To unblock your SIM card

- When **PIN blocked**. **Enter PUK provided by your operator**. is displayed, enter your PUK and select **OK**.
- Enter a new PIN and select **OK**.
- Re-enter the new PIN to confirm and select **OK**.

To turn the SIM card lock on

- From standby select **Menu** > **Settings** > **Advanced** > **Security** > **SIM lock** > **Protection** > **On**.
- Enter your PIN and select **OK**.

To edit your PIN

- From standby select **Menu** > **Settings** > **Advanced** > **Security** > **SIM lock** > **Change PIN**.
- Enter your PIN and select **OK**.
- Enter a new PIN and select **OK**.
- Re-enter the new PIN to confirm and select **OK**.

To edit your PIN2

- From standby select **Menu** > **Settings** > **Advanced** > **Security** > **SIM lock** > **Change PIN2**.
- Enter your PIN2 and select **OK**.
- Enter a new PIN2 and select **OK**.
- Re-enter the new PIN2 to confirm and select **OK**.

Phone lock

The phone lock protects the phone against unauthorized use if it is stolen and the SIM card is exchanged. You can change the phone lock code (which is 0000 by default) to any four-digit personal code.

To unlock the phone

- From standby select **Menu** > **Settings** > **Advanced** > **Security** > **Phone lock** > **Protection** > **Off**.
- Enter your phone lock code and select **OK**.

Troubleshooting

Some problems require that you call your service provider, but you can correct most problems yourself. Remove the SIM card before handing your phone in for repair.

Memory capacity and speed

If you have not restarted the phone for a while, you may experience problems with its memory capacity and speed. You can restart the phone to improve its capacity.

- Turn the phone off and remove the battery cover.
- Remove the phone battery and then put it back in place.
- Replace the battery cover and turn the phone on.

Master reset

If you experience problems with your phone such as screen flickering or freezing and navigation problems you should reset the phone.

- From standby select **Menu** > **Settings** > **Advanced** > **Master reset** and select an option.

 *Reset settings will reset all changes that you have made in your phone to default.*

Reset all will delete all user data such as contacts, messages, pictures and sounds in your phone.

The phone turns itself off

If your phone turns itself off when being transported, something in your pocket or bag has activated the on/off key. You need to turn the automatic keylock on.

- From standby select **Menu** > **Settings** > **Advanced** > **Auto keylock** > **On**.

I cannot turn the phone on, what should I do?

Try charging the phone until it has finished charging. Attach the charger (make sure the power icon on the charger is facing upwards) and charge the phone for 2.5 hours. The battery icon on the screen may not appear until the phone has charged for 30 minutes.

What is my phone lock code?

A phone lock protects your phone against unauthorized use. If a different SIM card is inserted in the phone, the phone lock code has to be entered. The default phone lock code is 0000.

I cannot send text messages (SMS)

Make sure you have a valid service centre number in your phone.

- From standby select **Menu** > **Messaging** > **Settings** > **Text message** > **Service centre**. The number is shown if it is saved on the SIM card.
- If there is no number shown, enter the service centre number, including the international “+” sign and country code.
- Select **OK**.

I cannot use Internet or MMS

Make sure you have a phone subscription that supports data transmission, and also the correct settings in your phone.

What do these error messages mean?

PIN blocked

You have entered the wrong PIN code three times. Your SIM is now locked. Unlock your SIM with your PUK code, which is provided together with your PIN code by your network operator.

- Enter your PUK code and select **OK**.
- Enter a new PIN and select **OK**.
- Re-enter the new PIN to confirm and select **OK**.

Insert SIM card

Your SIM card is not inserted correctly or may be damaged or dirty. Try one or more of the following:

- Remove the SIM card and insert it correctly.
- Clean the connectors on the SIM card and phone with a soft brush, a cloth or a cotton bud.
- Check if the SIM card is damaged.
- Contact your network operator to get a new SIM card.

Invalid SIM

This error message is shown in two cases:

- The phone only works with certain SIM cards. Insert the correct SIM card.
- You entered your personal unblocking key code (PUK) incorrectly 10 times in a row. Contact your operator.
- To unblock, see *SIM card lock* on page 33.

Codes do not match

You have entered your PIN or PIN2 incorrectly. Enter the correct PIN or PIN2 and select **OK**.

See Locks on page 33.

Phone locked

The phone is locked. To unlock the phone, enter your code (which is 0000 if you have not changed it) and select **OK**.

 *Go to www.sonyericsson.com/support for more information.*

www.sonyericsson.com

Sony Ericsson Mobile Communications AB

SE-221 88 Lund, Sweden



ENLZT1089707R1A

Printed in Country

36

37

38

39

40

41

Sony Ericsson

Important Information

Sony Ericsson Consumer Web Site

On www.sonyericsson.com/support there is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and Support

You have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support
- A global network of Call Centers
- An extensive network of Sony Ericsson service partners
- A warranty period. Learn more about the warranty conditions in this User guide.

On www.sonyericsson.com, you will find the latest support tools and information. For operator-specific services and features, please contact your network operator. You can also contact our Call Centers. If your country/region is not represented in the list below, please contact your local dealer. (Calls are charged according to national rates, including local taxes, unless the phone number is a toll-free number.) If your product needs service, please contact the dealer from whom it was purchased, or one of our service partners. For warranty claims, save proof of purchase.

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.

Recommendations for care and safe use of your products

- Handle with care and keep in a clean and dust-free place.
- Warning! May explode if disposed of in fire.
- Do not expose your product to liquid or moisture or excess humidity.
- Do not expose to extreme temperatures. Do not expose the battery to temperatures above +140°F (+40°C).
- Do not expose to flames or lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint or attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.
- Consult with authorized medical staff and the instructions of the medical device manufacturer before using your product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic devices or disable the radio transmitting functionality of the device where required or requested to do so.
- Do not use where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in your car.
- Caution: Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use your Bluetooth Headset in positions where it is uncomfortable or will be subject to pressure.

Children

Warning! Keep out of the reach of children. Do not allow children to play with phones or accessories. They could hurt themselves or others. Products may contain small parts that could become detached and create a choking hazard.

Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged. Use of charging devices that are not Sony Ericsson branded may impose increased safety risks.

Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. If you intend purposes only. Charge the battery in temperatures between 51°F (+5°C) and +113°F (+45°C). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks.

Personal medical devices

Phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 6 inches (15 cm) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

Driving

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with your vehicle manufacturer's representative to be sure that your phone or Bluetooth handsfree kit will not affect the electronic systems in your vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults". Sony Ericsson does not make any representation or warranty as to the accuracy of such location information. Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings.

Caution: Do not use GPS functionality in a manner which causes distraction from driving.

Información importante

Sitio Web Sony Ericsson Consumer

En la página www.sonyericsson.com/support se encuentra una sección de soporte donde la ayuda y los consejos están a sólo unos clics de distancia. Aquí, encontrará las últimas actualizaciones de software para computadora y consejos acerca de cómo utilizar el producto de forma más eficiente.

Servicio y soporte

Tiene acceso a una gama exclusiva de ventajas de servicio, tales como:

- Sitios Web globales y locales que brindan soporte
- Una red global de centros de servicios
- Una extensa red de socios de servicio de Sony Ericsson
- Un período de garantía. Conozca más acerca de las condiciones de la garantía en esta guía del usuario.

En www.sonyericsson.com, encontrará la información y las herramientas de soporte más recientes. Para conocer los servicios y las funciones específicos del operador, contactese con el operador de red. También se pueden portar los contactos con nuestros Call Centers. Si su país/región no aparece en la lista a continuación, contactese con su distribuidor local. (Las llamadas se cobran de acuerdo a las tarifas nacionales, incluidos impuestos locales, a menos que el número telefónico sea un número gratuito.) Si el producto requiere servicio, contactécese con el distribuidor donde lo compró o con uno de nuestros socios de servicio. Para hacer efectiva la garantía, guarde el comprobante de compra/el comprobante de compra.

Pautas para un uso seguro y eficaz

Siga estas normas. No hacerlo puede implicar posibles riesgos de salud o fallos del producto. Si tiene alguna duda relacionada con la función correcta, asegúrese de que el producto sea revisado por un socio de servicio certificado antes de cargarlo o usarlo.

Recommendaciones para el cuidado y el uso seguro de nuestros productos

- Manipule el producto con cuidado y guárdelo en un lugar limpio y sin polvo.
- Advertencia! La batería puede explotar si la arroja al fuego.
- No exponga el producto a líquidos o a exceso de humedad.
- No exponga a temperaturas extremas. No exponga la batería a temperaturas sobre +60°C (+140°F).
- No exponga a llamas o cigarrillos encendidos.
- No deje caer ni bote ni intente doblar el producto.
- No pinte ni intente desarmar o modificar el producto. Sólo personal autorizado por Sony Ericsson puede realizar reparaciones.
- Consulte a personal médico autorizado y las instrucciones del fabricante del dispositivo móvil antes de utilizar el producto cerca de marcapasos u otros dispositivos o equipos médicos.
- Descontinúe el uso de dispositivos electrónicos o desactive la función de transmisión de radio del dispositivo donde sea necesario o se le indique hacerlo.
- No use donde exista una atmósfera potencialmente explosiva.
- No coloque el producto ni instale equipos inalámbricos encima del área de un air bag de su automóvil.

Emergency calls

Calls cannot be guaranteed under all conditions. Never rely solely upon phones for essential communications. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

Antenna

Use of antenna devices not marketed by Sony Ericsson could damage your phone, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna with your hand as this affects call quality, power levels and can shorten talk and standby times.

Radio frequency (RF) exposure and Specific Absorption Rate (SAR)

When your phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value. Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone has been tested when positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure go to:

www.sonyericsson.com/health.

Malware

Malware (short for malicious software) is software that can harm your phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While your device does employ security measures to resist such efforts, Sony Ericsson does not warrant or represent that your device will be impervious to introduction of malware. You can however reduce the risk of malware by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to your phone from known, reliable sources.

Accessories

Use only Sony Ericsson branded original accessories and certified service partners.

Sony Ericsson does not test third-party accessories. Accessories may influence RF Exposure, radio performance, sound loudness, electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

- Precaución: Pantallas trizadas o quebradas pueden crear bordes afilados o astillas que pueden ser dañinas al tacto.
- Advertencia! Audífono Bluetooth en posiciones que no sean cómodas o donde esté sujeto a presión.

Niños

¡Advertencia! Manténgalo fuera del alcance de los niños. No permita que los niños jueguen con los teléfonos móviles o sus accesorios. Podrían lastimarse o lastimar a otras personas. Los productos pueden contener piezas pequeñas que podrían desprenderse y causar lesiones.

Fuente de alimentación (Cargador)

Conecte el cargador a fuentes de alimentación según se indica en el producto. No use en la intemperie ni en zonas húmedas. No modifique ni exponga el cable a daños o tensión. Desenchufe la unidad antes de limpiarla. Nunca altere el enchufe. Si no se ajusta a la toma de corriente, pídale que un electricista instale una toma adecuada. Cuando conecte la fuente de alimentación, se produce una pequeña pérdida de energía. Para evitarla, desconecte la fuente de alimentación cuando el producto esté totalmente cargado. El uso de dispositivos de carga que no son Sony Ericsson puede traducirse en un aumento de los riesgos de seguridad.

Batería

Las baterías nuevas o inactivas pueden tener una capacidad reducida en el corto plazo. Al ses del primer uso, cargue completamente la batería. Utilícela sólo para el propósito indicado. Cargue la batería cuando la temperatura esté entre +5°C (+41°F) y +45°C (+113°F). No se lleve la batería a la boca. No permita que los contactos de la batería toquen otro objeto de metal. Apague el producto antes de retirar la batería. El rendimiento depende de la temperatura, la intensidad de la señal, los patrones de uso, las funciones seleccionadas y las transmisiones de voz o datos. Sólo los socios de servicio de Sony Ericsson deben sacar y cambiar las baterías incorrectas. El uso de baterías que no son Sony Ericsson puede traducirse en un aumento de los riesgos de seguridad.

Dispositivos médicos personales

Los teléfonos móviles pueden afectar equipos médicos implantados. Mantenga una distancia mínima de 15 cm (6 pulgadas) entre el teléfono y el dispositivo para reducir el riesgo de interferencia. Use el teléfono en la oreja derecha. No lleve el teléfono en el bolsillo de la camisa. Apague el teléfono cuando sospeche que existe interferencia. Para todos los dispositivos médicos, consulte a un médico y al fabricante.

Conducción

Algunos fabricantes de vehículos prohíben el uso de teléfonos móviles en sus vehículos, a menos que un equipo manos libres con antena externa admita la instalación. Verifique con el representante del fabricante del vehículo para asegurarse de que el teléfono móvil o la unidad manos libres Bluetooth no afectará los sistemas electrónicos del vehículo. En todo momento, mantenga su atención en la conducción y respete las leyes y las normas locales que restringen el uso de dispositivos inalámbricos mientras conduce.

GPS/Funciones básicas de ubicación

Algunos productos ofrecen GPS/Funciones básicas de ubicación. La funcionalidad que proporciona la ubicación se provee "tal como está" y "con todas sus fallas". Sony Ericsson no otorga ningún tipo de garantía ni representación con respecto a la exactitud de dicha información de ubicación.

* Cobertura geográfica de la garantía

Si adquirió su producto en un país miembro de la Comunidad Económica Europea (CEE) o en Suiza o en la República de Turquía y dicho producto estaba destinado para la venta en la CEE o en Suiza o en Turquía, el Producto puede recibir mantenimiento preventivo o reparaciones o ajustes del software o hardware, fuerza mayor o daños por derrame de líquidos. Una batería recargable se puede cargar y descargar más de cien veces. Sin embargo, ésta se desgastará finalmente; esto no es un defecto y corresponde al uso y desgaste normal. Cuando el tiempo de conversación o el tiempo de espera se reducen en forma notoria, es momento de reemplazar la batería. Sony Ericsson le recomienda que utilice sólo baterías y cargadores aprobados por Sony Ericsson. Puede haber variaciones menores en el brillo y el color de la pantalla entre los dispositivos. Puede que la pantalla tenga pequeños puntos brillantes u oscuros. Estos puntos se denominan píxeles defectuosos y se producen cuando hay puntos individuales que no funcionan correctamente y no se pueden ajustar. Dos píxeles defectuosos se considera aceptable. Puede haber variaciones menores en la apariencia de la imagen en la cámara entre los teléfonos. Esto no es un hecho poco frecuente y no se considera como un móvato de cámara defectuosa.

4 Dado que el sistema celular en el cual operará el producto es proporcionado por una compañía portadora independiente de Sony Ericsson, Sony Ericsson no será responsable de la operación, disponibilidad, cobertura, servicios o alcance de dicho sistema.

5 Esta garantía no cubre fallos del producto causados por instalaciones, modificaciones, reparaciones o apertura del producto realizadas por personas no autorizadas por Sony Ericsson.

6 La garantía no cubre fallos del producto causados por el uso de accesorios u otros dispositivos periféricos que no sean originales de Sony Ericsson diseñados para su uso con el producto.

7 La alteración de cualquier uno de los sellos del producto anulará la garantía. 8 ESTE PRODUCTO NO DISPONE DE NINGUNA OTRA GARANTÍA EXPRESA. NI ESCRITA NI ORAL, EXCEPTO ESTA GARANTÍA LIMITADA POR ESCRITO. TODAS LAS GARANTÍAS IMPLÍCITAS, INCLUIDAS, ENTRE OTRAS, LAS GARANTÍAS IMPLÍCITAS DE FACILIDAD DE COMERCIALIZACIÓN O ADECUACIÓN A UN PROPOSITO PARTICULAR, ESTÁN LIMITADAS A LA DURACIÓN DE ESTA GARANTÍA LIMITADA. EN NINGUN CASO, SONY ERICSSON O SUS AGENTES SERÁN RESPONSABLES DE DAÑOS IMPREVISTOS O DERIVADOS DE NINGUNA NATURALEZA, INCLUIDOS, ENTRE OTROS, UTILIDADES NO PERCIBIDAS O PERDIDAS COMERCIALES, EN LA MEDIDA EN QUE ESTE LEGALMENTE PERMITIDO DENEGARLOS.

Algunos países o estados no permiten la exclusión o limitación de los daños imprevistos o derivados o la limitación de la duración de las garantías implícitas, por lo que es posible que las limitaciones o exclusiones anteriores no se apliquen en su caso. Esta garantía no afecta los derechos regulatorios del consumidor según la legislación aplicable en vigencia, ni los derechos del consumidor con respecto al distribuidor que surjan del contrato de compra y venta.

Diretrizes para um uso seguro e eficiente

Siga as orientações indicadas. O não-cumprimento dessas instruções pode constituir em um potencial risco para a saúde ou no mal-funcionamento do produto. Se você tiver dúvidas quanto ao funcionamento apropriado, leve-o a um parceiro certificado da rede de serviços para verificação antes de carregá-lo ou utilizá-lo.

Accessible Solutions/Special Needs

In the US, compatible Sony Ericsson phones may offer compatibility with TTY terminals (with use of necessary accessories). For more information call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or go to www.sonyericsson-snc.com.

Disposal of old electrical and electronic equipment

Electrical equipment and electronic equipment should not be incinerated as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product or calling a Sony Ericsson Call Center.

Disposing of the battery

Check local regulations or call a Sony Ericsson Call Center for information.

Memory Card

If your product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If your product is equipped with a memory card reader, check memory card compatibility before purchase or use.

The memory card is formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

WARNING:

- If your device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on Memory Card Use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, or turn off the power while formatting, reading or writing data, or when you use the memory card in locations subject to static electricity or high electrical field emissions.

Es posible que la información basada en la ubicación del dispositivo se interrumpa o presente errores y podría, además, depender de la disponibilidad del servicio de red. Tenga en cuenta que el uso de un audífono podría interrumpir o impedir, en ciertos entornos como en interiores de edificios o áreas cercanas a edificios, la comunicación. No use la funcionalidad GPS si es un distractor mientras conduce.

Llamadas de emergencia

No es posible garantizar las llamadas bajo todas las condiciones. Nunca dependa únicamente de teléfonos móviles para llamadas importantes. Es posible que las llamadas de emergencia no estén disponibles en todas las áreas o cuando determinados servicios de redes y/o funciones del teléfono estén en uso.

Antena

El uso de dispositivos con antena no comercializados por Sony Ericsson puede dañar el teléfono, reducir su rendimiento y producir niveles SAR superiores a los límites establecidos. No cubra la antena con la mano ya que esto afecta la calidad de la comunicación y el nivel de potencia y puede reducir los tiempos de conversación y espera.

Exposición a las señales de radiofrecuencia (RF) y Tasa específica de absorción (SAR)

Cuando el teléfono o el manos libres Bluetooth está encendido, emite bajas niveles de energía de radiofrecuencia. Se han desarrollado especificaciones internacionales de seguridad a través de evaluaciones periódicas y minuciosas de estudios científicos. Estas especificaciones establecen los niveles permitidos de exposición a ondas de radio. Las especificaciones incluyen un margen de seguridad destinado a garantizar la seguridad de todas las personas y representar las variaciones en las mediciones. La Tasa específica de absorción (SAR) se utiliza para medir la energía de radiofrecuencia que absorbe el cuerpo al utilizar un teléfono móvil. El valor de SAR que responde al nivel de exposición de las ondas de radio en un laboratorio, pero ya que el teléfono está diseñado para utilizar el mínimo de potencia necesario para acceder a la red elegida, el nivel real de SAR puede estar muy por debajo de dicho valor. No existe evidencia de diferencia en los niveles de seguridad cuando el valor de SAR es distinto.

Los productos con radiotransmisores vendidos en los EE. UU. deben estar certificados por la Federal Communications Commission (FCC). Cuando se usan en los EE. UU., las pruebas se realizarán con el teléfono en la oreja y cuando se lleve cerca del cuerpo. Para su uso cerca del cuerpo, este teléfono ha sido probado para su funcionamiento a una distancia mínima de 15 mm del cuerpo, sin que haya piezas metálicas cerca del teléfono o cuando se utiliza correctamente con el accesorio adecuado Sony Ericsson.

Para obtener más información acerca de SAR y la exposición a la radiofrecuencia, visite:

www.sonyericsson.com/health.

Malware

Malware (forma abreviada de "malicious software", en inglés) es un software que puede dañar el teléfono móvil u otros computadores. El malware o las aplicaciones perjudiciales pueden incluir virus, gusanos, spyware u otras programas no deseados. Si bien el dispositivo emplea medidas de seguridad para impedir dichos problemas, Sony Ericsson no garantiza ni declara que el dispositivo sea impenetrable por el ingreso de malware. Sin embargo, para reducir el riesgo de ataques de malware puede tener cuidado cuando descarga contenido o acepta aplicaciones, evitar abrir o responder mensajes de origen desconocido, utilizar servicios seguros para acceder a Internet y descargar en el teléfono solamente contenido de fuentes conocidas y confiables.

Recomendações para utilização segura de nossos produtos

- Manuseie-os com cuidado, mantendo-os em ambientes limpos e sem poeira.
- Aviso! Pode explodir se descartada no fogo.
- Não exponha o produto a líquidos ou a umidade excessiva.
- Não exponha a bateria a temperaturas extremas. Não exponha a bateria a temperaturas acima de +60°C (+140°F).
- Não exponha o produto a chamas ou derivados de tabaco acesos.
- Não derrube, jogue ou tente dobrar o produto.
- Não pinte ou tente desmontar ou modificar o produto. Somente profissionais autorizados pela Sony Ericsson devem prestar serviços.
- Consulte uma equipe médica autorizada e obtenha instruções do fabricante do dispositivo médico antes de usar o produto perto de marca-passos ou outros dispositivos ou equipamentos médicos.
- Interrompa a utilização de dispositivos eletrônicos ou desative a funcionalidade de transmissão por rádio do dispositivo onde for obrigatório ou solicitado.
- Não utilize em áreas que tenham uma atmosfera explosiva em potencial.
- Não coloque ou instale o dispositivo em áreas com gases inflamáveis, ar bem do seu carro.
- Cuidado: Displays rachados ou quebrados podem criar bordas afiadas ou lascas que podem machucar.
- Não use o Fone de ouvido Bluetooth em posições onde seja desconfortável ou sujeito a pressão.

Crianças

Aviso! Mantenha fora do alcance de crianças. Não permita que uma criança brinque com celulares ou com seus acessórios. Eles podem se machucar ou ferir outras pessoas. Os produtos podem conter pequenos componentes que podem ser desconectados e provocar riscos de asfixia.

Fonte de energia (Carregador)

Conecte o carregador somente às fontes de energia indicadas no produto. Não use ao ar livre ou em áreas úmidas. Não altere ou sujeite o cabo a danos, nem o estique. Desconecte a unidade antes de separá-la. Nunca altere o plugue. Se ele não se encaixar na tomada, chame um electricista qualificado para instalar uma tomada adequada. Quando a fonte estiver conectada, haverá uma pequena perda de energia. Para evitar essa perda, desconecte a fonte de energia quando o produto estiver totalmente carregado. A utilização de dispositivos de carregamento que não sejam da marca Sony Ericsson pode acarretar maiores riscos de segurança.

Baterias

Baterias novas ou ociosas podem ter su capacidade reduzida em curto prazo. Carregue totalmente a bateria antes da primeira utilização. Use a bateria somente para o propósito a que ela se destina. Carregue-a quando a temperatura estiver entre +5°C (+41°F) e +45°C (+113°F). Não permita que ninguém coloque a bateria na boca. Não deixe os contatos metálicos da bateria tocarem em outro objeto de metal. Desligue o produto antes de carregar a bateria. O onde exista uma atmosfera potencialmente explosiva, não use o produto. Não exponha a bateria a temperaturas extremas. Não exponha a bateria a temperaturas acima de +60°C (+140°F). Não exponha o produto a chamas ou derivados de tabaco acesos. Não derrube, jogue ou tente dobrar o produto. Somente profissionais autorizados pela Sony Ericsson devem remover ou substituir baterias internas. A utilização de baterias que não sejam da marca Sony Ericsson pode acarretar maiores riscos de segurança.

Protection of personal information

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Loudness warning!

Avoid volume levels that may be harmful to your hearing.

End User License Agreement

This wireless device, including without limitation any media delivered with the device, ("Device") contains software owned by Sony Ericsson Mobile Communications AB and its affiliated companies ("Sony Ericsson") and its third party suppliers and licensors ("Software"). As user of this Device, Sony Ericsson grants you a non-exclusive, non-transferable, non-assignable license to use the Software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device. You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules. You are granted this license for a term of the useful life of this Device. You can terminate this license by deleting all your rights to the Device on which you have received the Software or a third party in writing. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect. Sony Ericsson and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms. The validity, construction and performance of this license shall be governed by the laws of Sweden. The foregoing shall apply to the full extent permitted by, when applicable, statutory consumer rights.

Limited Warranty

Sony Ericsson Mobile Communications AB, Nya Vattentornet, SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your phone, original accessory delivered with your phone, and/or your mobile computing product (hereinafter referred to as "Product"). Sony Ericsson does not warrant the Product against defects in workmanship or materials. The Product is warranted for a period of 24 months from the date of purchase. If the Product was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit www.sonyericsson.com to get further information.

Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of one (1) year as from the original date of purchase of the Product.

Accesories

Use sólo accesorios originales de Sony Ericsson y socios de servicio certificados. Los accesorios no certificados pueden causar daños a su producto. Los accesorios pueden afectar la exposición a RF, la radio, el volumen del sonido, la seguridad eléctrica y otras áreas. Los accesorios y las piezas de terceros pueden suponer un riesgo a su salud o seguridad o una disminución del rendimiento.

Soluciones accesibles/Necesidades especiales

En EE. UU., los teléfonos Sony Ericsson compatibles pueden ofrecer compatibilidad con las terminales TTY (con los accesorios necesarios). Para obtener más información, llame al Sony Ericsson Special Needs Center al 877 878 1996 (TTY) o al 877 207 2056 (voz), o visite www.sonyericsson-snc.com.

Eliminación de equipos electrónicos antiguos

El equipamiento electrónico y las baterías no deben incluirse como desechos domésticos, pero deben dejarse en el punto de recolección correspondiente para que sean reciclados. Esto ayuda a evitar posibles consecuencias negativas para el medioambiente y la salud de las personas. Para conocer las normas locales, comuníquese con su municipalidad, el servicio de desechos domésticos, la tienda donde compró el producto o llame al Sony Ericsson Call Center.

Eliminación de la batería

Revise las disposiciones locales o llame al Sony Ericsson Call Center local para obtener información. No utilice nunca vertederos municipales.

Tarjeta de memoria

Si el producto incluye una tarjeta de memoria extraíble, normalmente es compatible con el teléfono que adquirió, pero puede que no sea compatible con otros dispositivos o con las capacidades de las tarjetas de memoria. Verifique la compatibilidad de otros dispositivos antes de comprarlos o usarlos. Si el producto está equipado con un lector de tarjeta de memoria, verifique la compatibilidad de la tarjeta de memoria antes de comprarla o usarla.

La tarjeta de memoria se formatea antes del despacho. Para volver a formatear la tarjeta de memoria, utilice un dispositivo compatible. No utilice el sistema operativo estándar cuando formatee la tarjeta de memoria en una PC. Para obtener detalles, consulte las instrucciones de funcionamiento del dispositivo o comuníquese con el servicio de reparación de Sony Ericsson.

ADVERTENCIA:

- Si el dispositivo requiere un adaptador para insertarlo en el teléfono o en otro dispositivo, no inserte la tarjeta directamente sin el adaptador que se requiere.

Precauciones en el uso de la tarjeta de memoria

- No exponga la tarjeta de memoria a la humedad.
- No toque las conexiones terminales con la mano ni con ningún objeto metálico.
- No golpee, doble ni deje caer la tarjeta de memoria.
- No intente desarmar ni modificar la tarjeta de memoria.
- No utilice ni guarde la tarjeta de memoria en lugares húmedos, corrosivos o excesivamente cálidos, como un automóvil cerrado en verano. No la exponga al sol ni tampoco la deje cerca de un calefactor, etc.

www.sonyericsson.com

Sony Ericsson

Sony Ericsson Mobile Communications AB

SE-221 88 Lund, Sweden



L27108949519R3A

Printed in Country

