

Tuning procedure for MT16U.

There are no field adjustable tuning options. The only adjustments are made at the factory for power output. When the unit is set for high power, adjust RV2 to obtain 3.5 Watts. When set for low power, adjust RV1 for 1-watt output power.