

REV.	SHEETS REV'D	DESCRIPTION	DRAWN BY	DATE	CHECKED BY	DATE
001	ALL	INITIAL RELEASE	SHUMAKER	07/7/19	WOLF	07/7/19
002	ALL	UPDATED OVERALL SIZE AND GRAPHICS	SHUMAKER	08/01/19	WOLF	08/01/19

OUTSIDE_FLATLAY

INSIDE_FLATLAY

Installation Guide

Let's Get You Up and Running

1x sensor

1x mounting bracket

2x drywall anchors

2x 3mm screws

2x 3M Command Strips

1x wrench

Sensor Connectivity

Connect the sensor to the Ethernet network using the Ethernet cable provided. For additional help with sensor installation, go to [sensor.arubanetworks.com/install](#)

Connectivity & Status Light

The sensor has two status lights: a green light for power and a red light for status. When the sensor is powered on, the green light will blink. When the sensor is ready to configure, the red light will blink. Please refer to the Troubleshooting section for more information.

Troubleshoot Sensor Status

When the sensor is ready to configure, the red light will blink. Please refer to the Troubleshooting section for more information.

Package Contents

1x sensor

1x mounting bracket

2x drywall anchors

2x 3mm screws

2x 3M Command Strips

1x wrench

Connectivity & Status Light

The sensor has two status lights: a green light for power and a red light for status. When the sensor is powered on, the green light will blink. When the sensor is ready to configure, the red light will blink. Please refer to the Troubleshooting section for more information.

Troubleshoot Sensor Status

When the sensor is ready to configure, the red light will blink. Please refer to the Troubleshooting section for more information.

Connecting Power

Power over Ethernet (PoE)

or

Location Checklist

Install the sensor in a location that meets the following criteria:

At a similar height to end-user devices - mounted on a wall or pillar at a height of 4-5ft (1.2-1.5m) - On an accessible surface

Further than 3ft (1.5m) from the nearest Wi-Fi access point, if using Wi-Fi connectivity

Indoors, within 32-104°F (0-40°C)

Away from direct sunlight

Away from contact with water

Away from significant electrical current

Away from metallic surfaces

Away from physical obstructions, including cabinets, doors, frames, and window blinds

Away from accidental damage from doors, moving furniture, equipment, and pets, etc.

Installing Your Sensor

Mount With Bracket

Use supplied screws and anchors to mount the bracket to the wall. The sensor must be mounted below 6.5ft (2m) in height. See [sensor.arubanetworks.com/install](#) for additional mounting instructions.

Security Screw

After securing the sensor to the mounting bracket, tighten the security screw. Always use the sensor with the mounting bracket attached, even if free standing on a desk. Always use tools and appropriate protective gear when drilling or putting hardware in the wall. Do not use metal fasteners for mounting the sensor on any surface.

Configuring Your Sensor

1. Wait for status lights to blink green.

2a. Configure your sensor at: [sensor.arubanetworks.com/start](#)

2b. If there is no connectivity, configure your sensor at: [sensor.arubanetworks.com/install](#)

Location Checklist

Install the sensor in a location that meets the following criteria:

At a similar height to end-user devices - mounted on a wall or pillar at a height of 4-5ft (1.2-1.5m) - On an accessible surface

Further than 3ft (1.5m) from the nearest Wi-Fi access point, if using Wi-Fi connectivity

Indoors, within 32-104°F (0-40°C)

Away from direct sunlight

Away from contact with water

Away from significant electrical current

Away from metallic surfaces

Away from physical obstructions, including cabinets, doors, frames, and window blinds

Away from accidental damage from doors, moving furniture, equipment, and pets, etc.

ARUBA: THREE SHIPS PACKAGING, USER GUIDE, ARTWORK

rev.002 08/01/19 sheet 1 of 1

bould design