

User Manual**BATTERY INSTALLATION / REPLACEMENT****Doll:**

1. Open the fastener back closure of the doll's outfit to access the battery box.
2. Use a screwdriver to open the battery door. Insert 4 x 1.5V AAA size Alkaline batteries.
3. Replace battery door and tighten the screw.
4. Slide the ON-OFF switch to ON position.
5. Put the battery box inside the doll and close the fastener.

Hand Held Unit:

1. Use a screwdriver to open the battery door. Insert 3 x 1.5V AAA size Alkaline batteries
2. Replace battery door and tighten the screw.
3. Slide the switch from "DEMO" to "PLAY" position
4. The LED lights up and it sounds.
5. Press the side button to listen Hayley's tips.

HOW TO PLAY

1. Your parent or your friend hides Hayley doll inside a cabinet or a recessed location. Do not hide it inside a metallic cabinet.
2. Once Hayley is hid, you are ready to find her by using your handheld unit.
3. Hayley will periodically send voice tips to you when you are seeking her. There is also visual indication on the panel to help you to find Hayley. If you are far away from Hayley, the outermost zone will light up. If you find the right way towards Hayley, the middle zone will light up. If you move closer to that the innermost zone lights up, you nearly find Hayley.
4. You can ask Hayley for tips by use of the side button. Once you press it, Hayley will send voice tips to you and update the location zone on the panel of handheld unit.
5. After play, remember to switch off the doll unit.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation.