

### Tune-up Information

RF power output and frequency are calibrated at the factory and cannot be adjusted by the user.

A hex value is set into the phone that determines the frequency and power.

In normal use the device works in a closed loop power and frequency system with the BTS monitoring and adjusting these values as required.