

The EUT and RF Connector



Connect to
the Receiver
ESI 26

The Entirety of the EUT



The RF test points


The Internal Antenna Port/Transmitter Antenna

The Internal Antenna Port/Receiver Antenna

The Entirety of the Connector



Connect to
the RF test
points

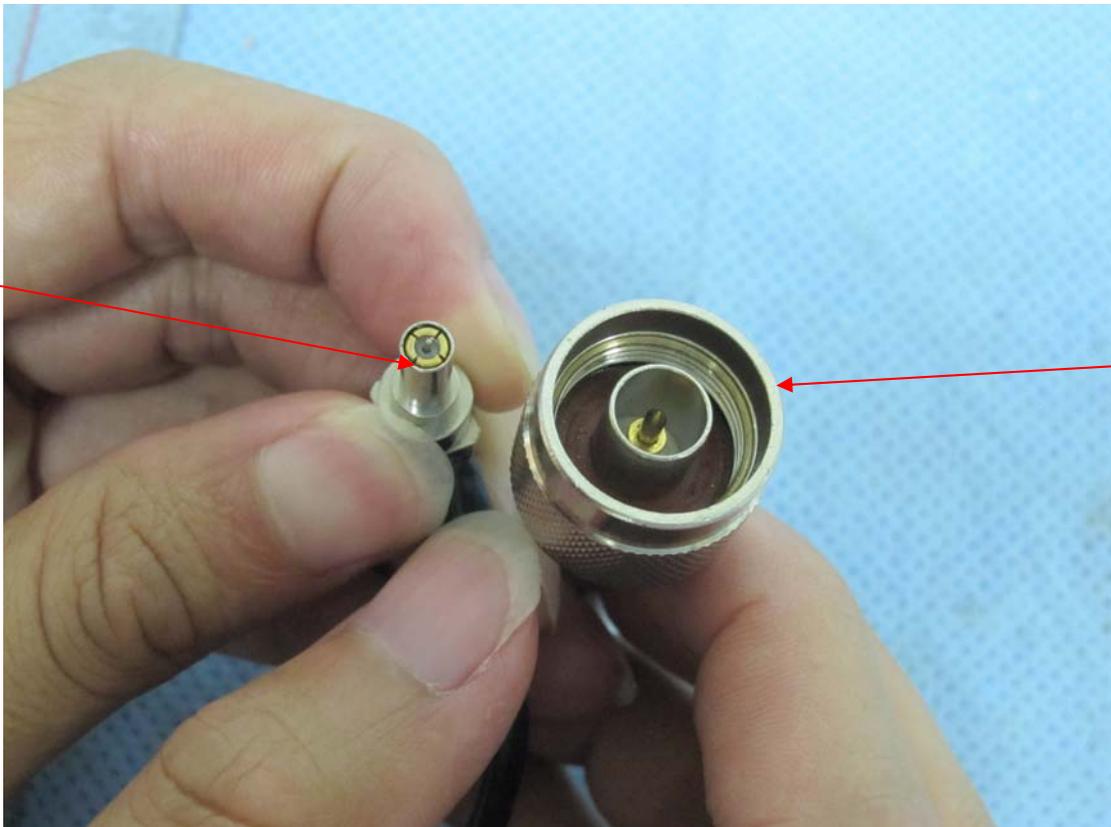

Connect to
the
Receiver
ESI 26