



1. **Photograph of the EUT**

EUT: WWAN module (Huawei / EM770U)

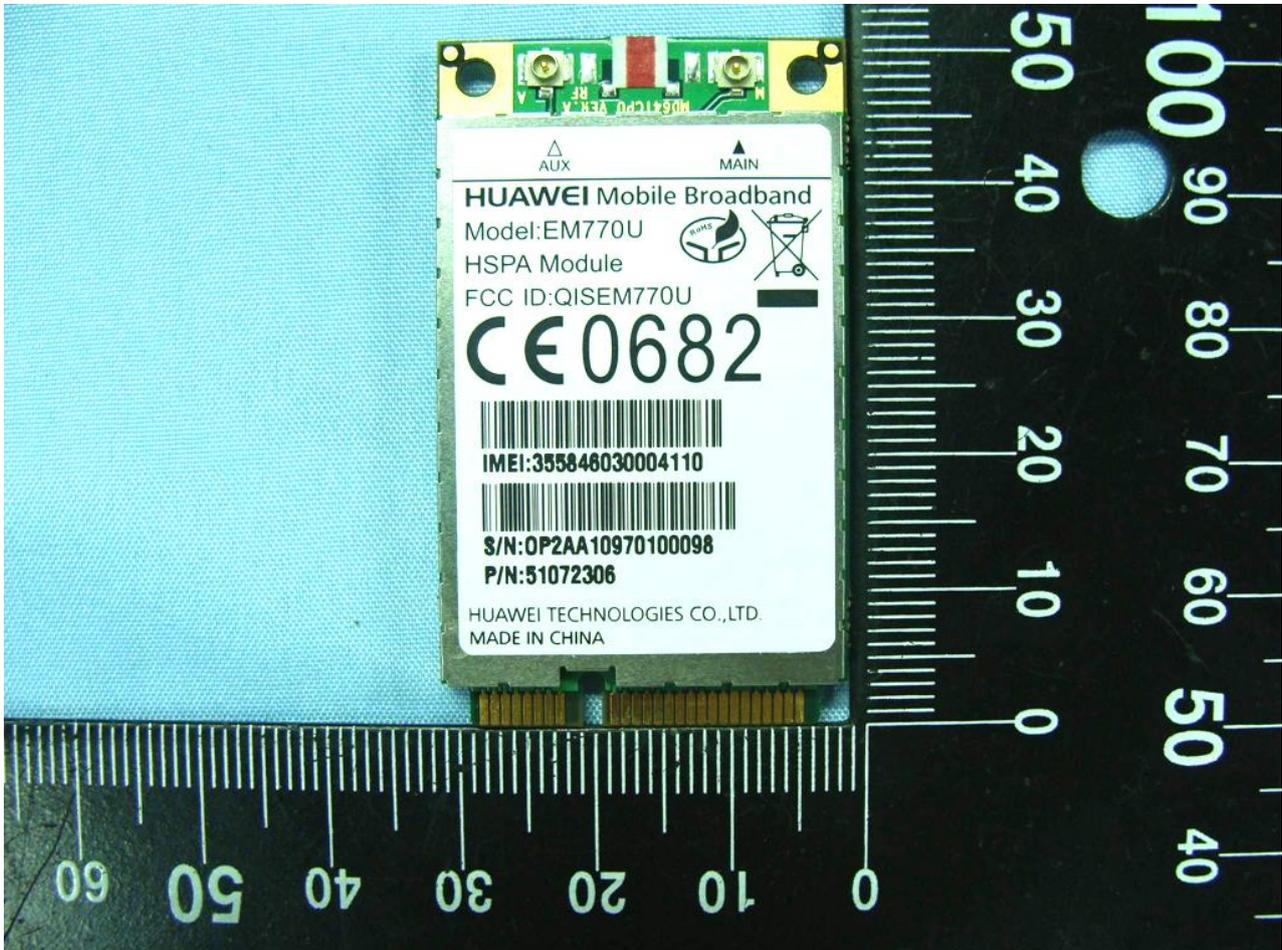

EUT: WWAN module (Huawei / EM770U)

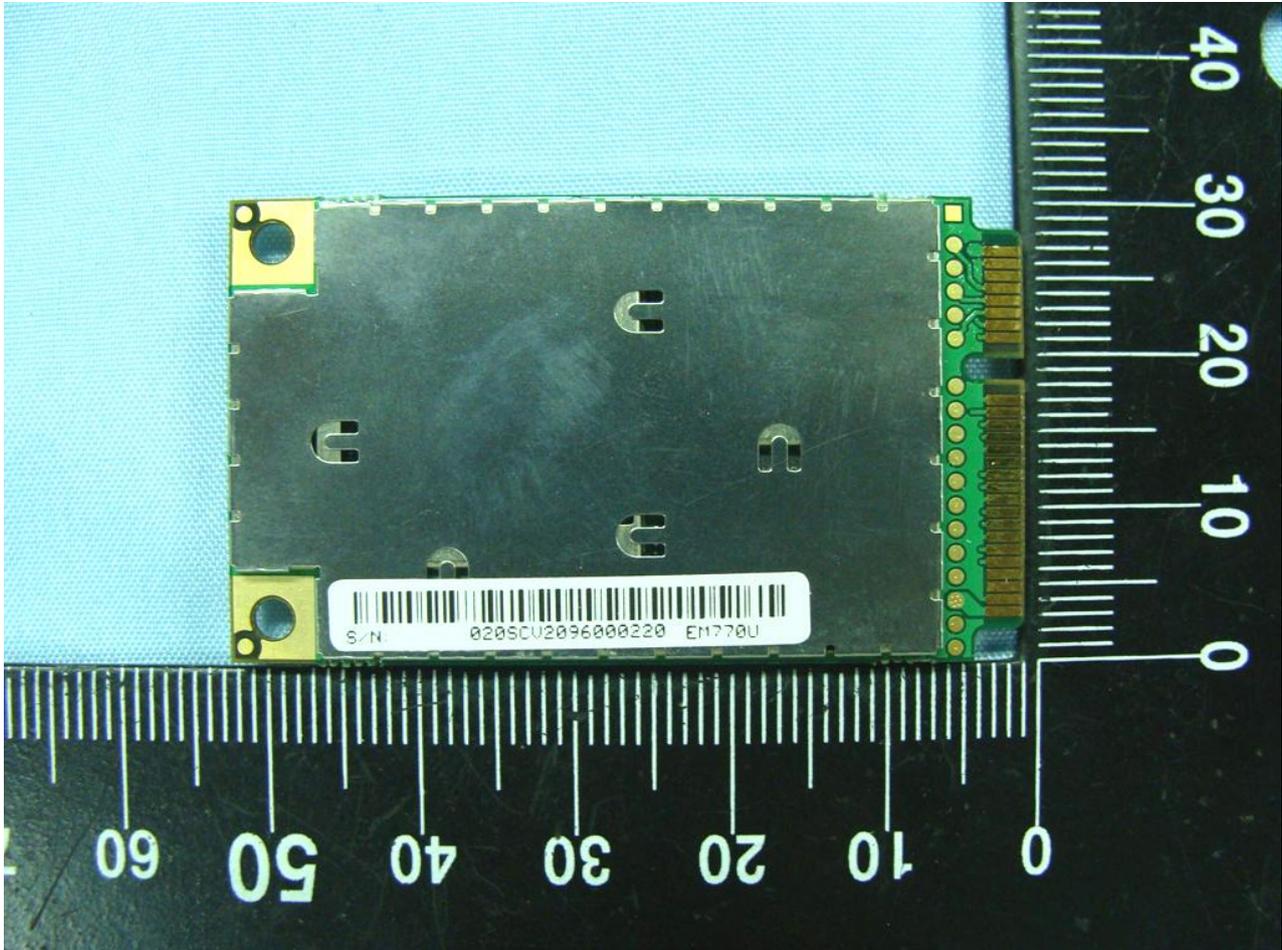


**2. External Photograph of the Host**

Host: Notebook Computer (DELL / P04T-P04T001)



Host: Notebook Computer (DELL / P04T-P04T001)

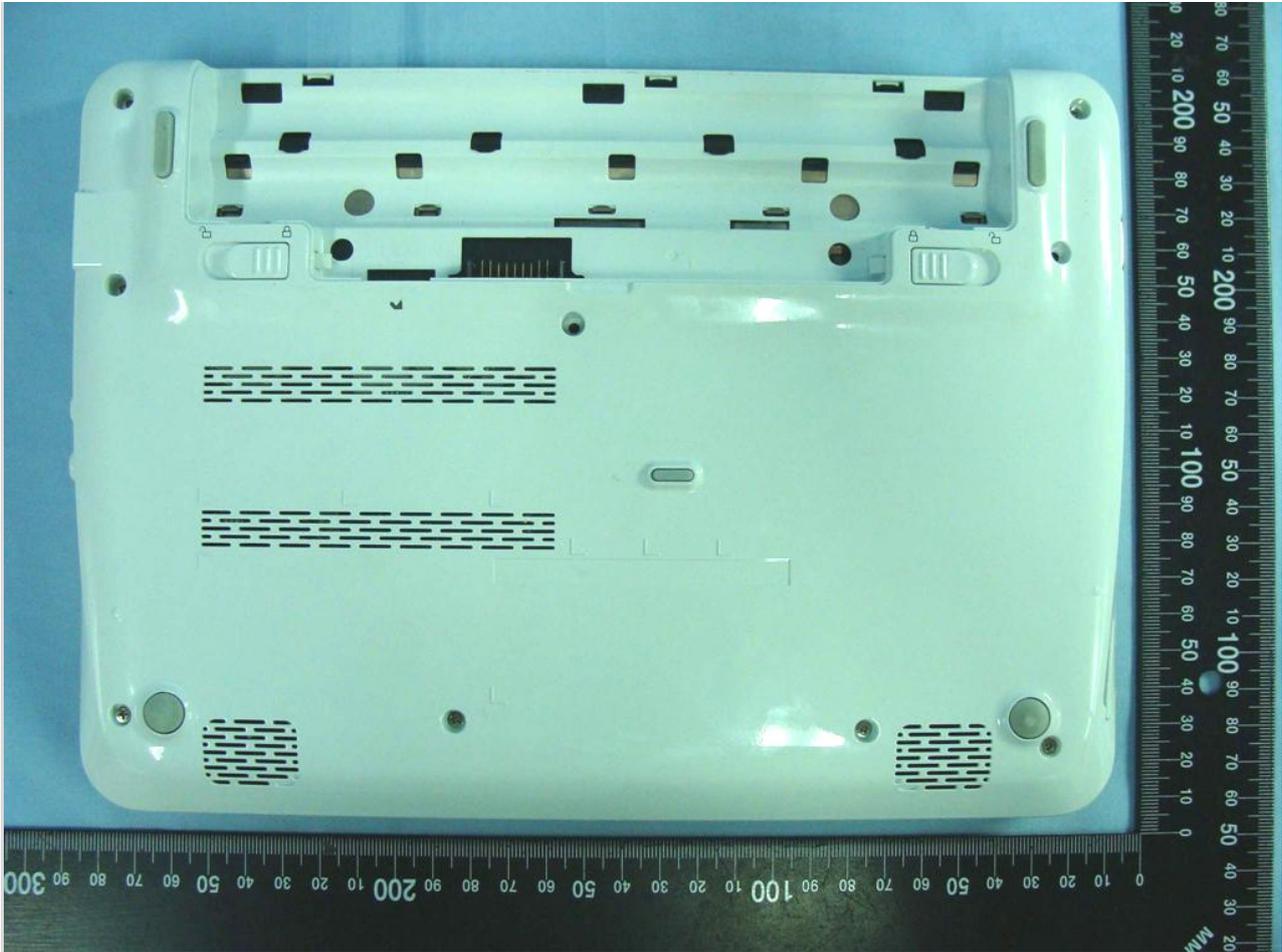



**Host: Notebook Computer (DELL / P04T-P04T001)**



Host: Notebook Computer (DELL / P04T-P04T001)



Host: Notebook Computer (DELL / P04T-P04T001)



Host: Notebook Computer (DELL / P04T-P04T001)






Host: Notebook Computer (DELL / P04T-P04T001)




Host: Notebook Computer (DELL / P04T-P04T001)

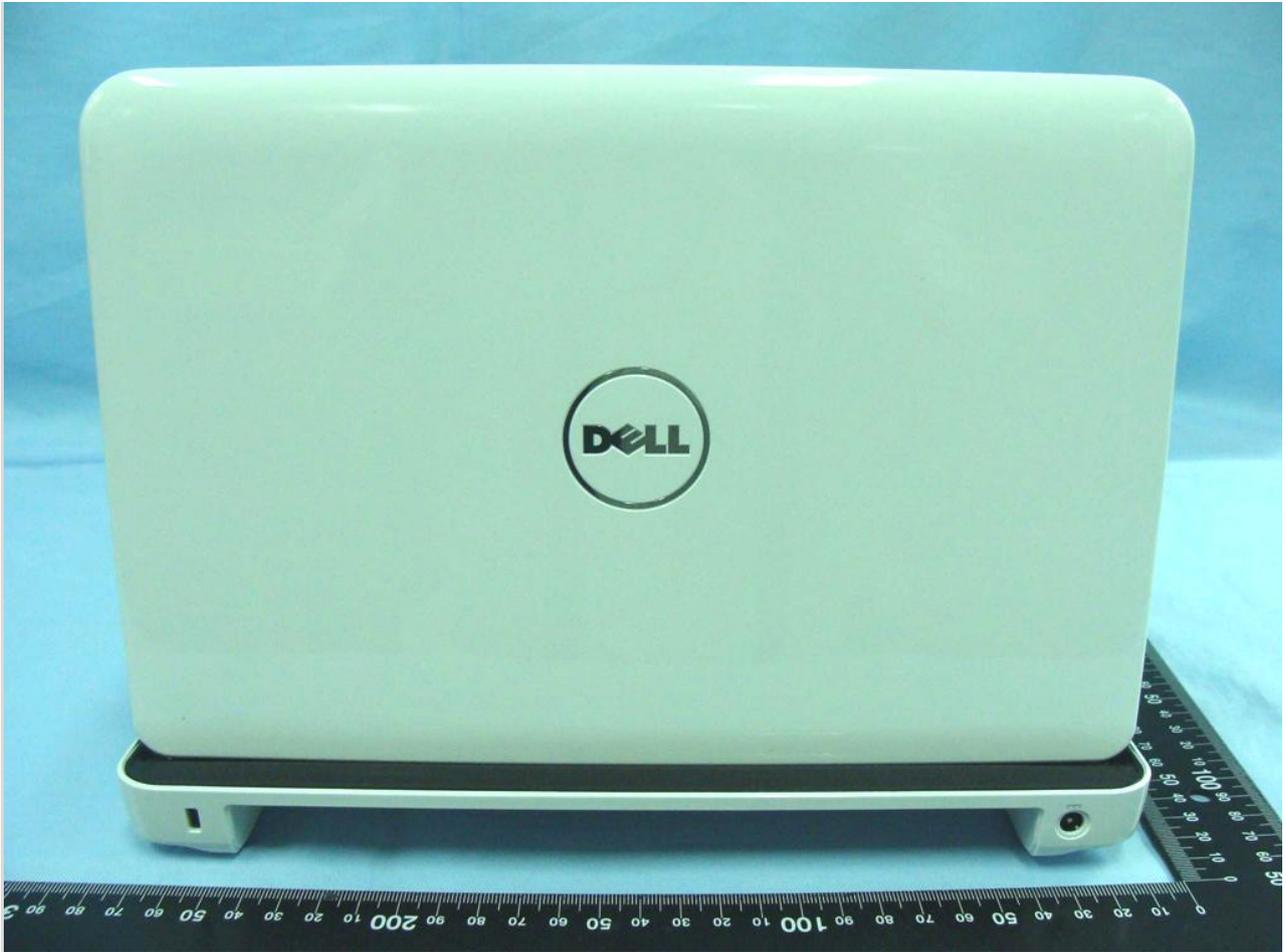

### 3. Internal Photograph of the Host

Host: Notebook Computer (DELL / P04T-P04T001)

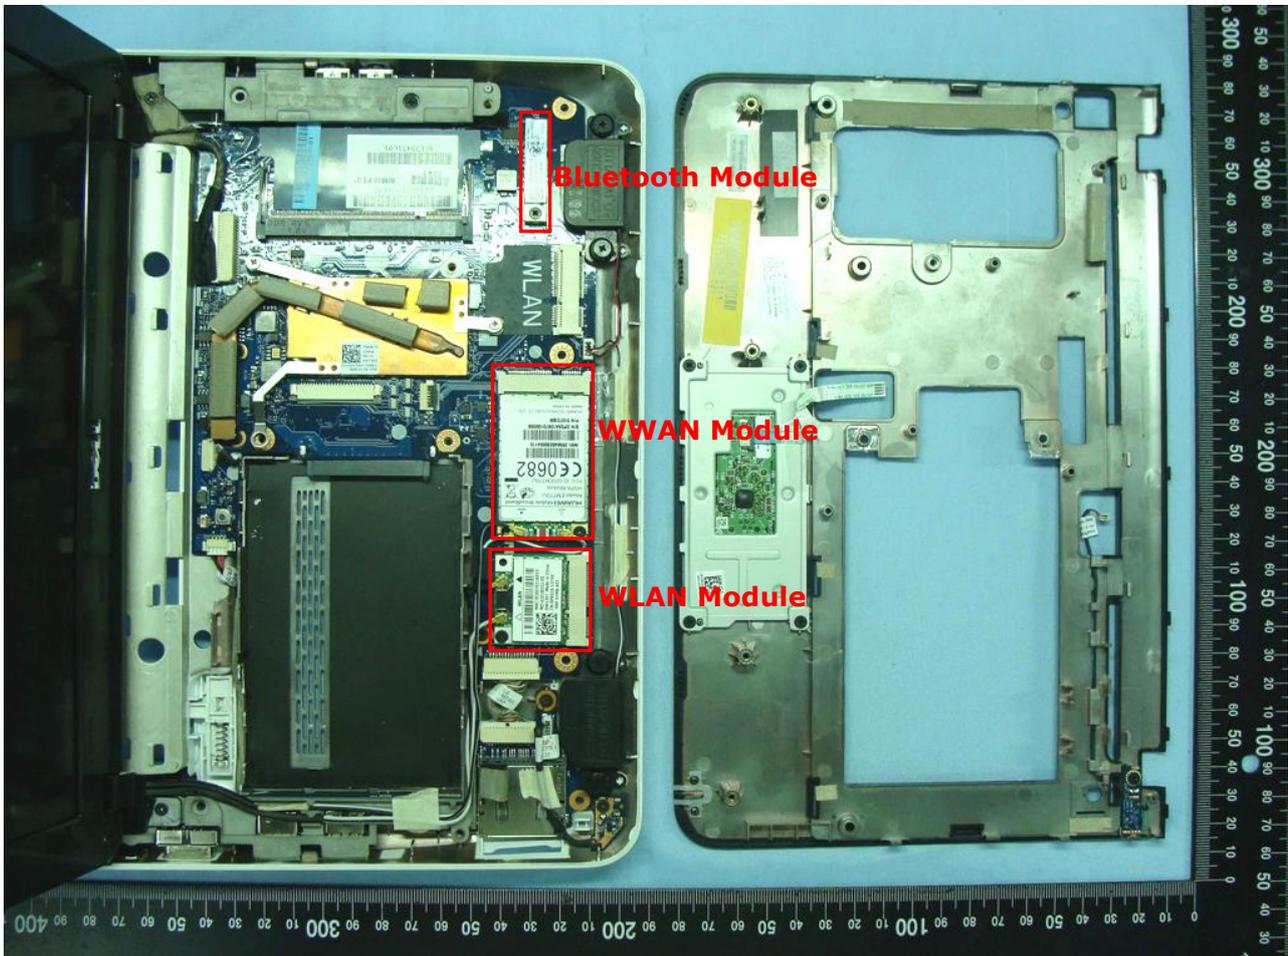


Host: Notebook Computer (DELL / P04T-P04T001)





Host: Notebook Computer (DELL / P04T-P04T001)

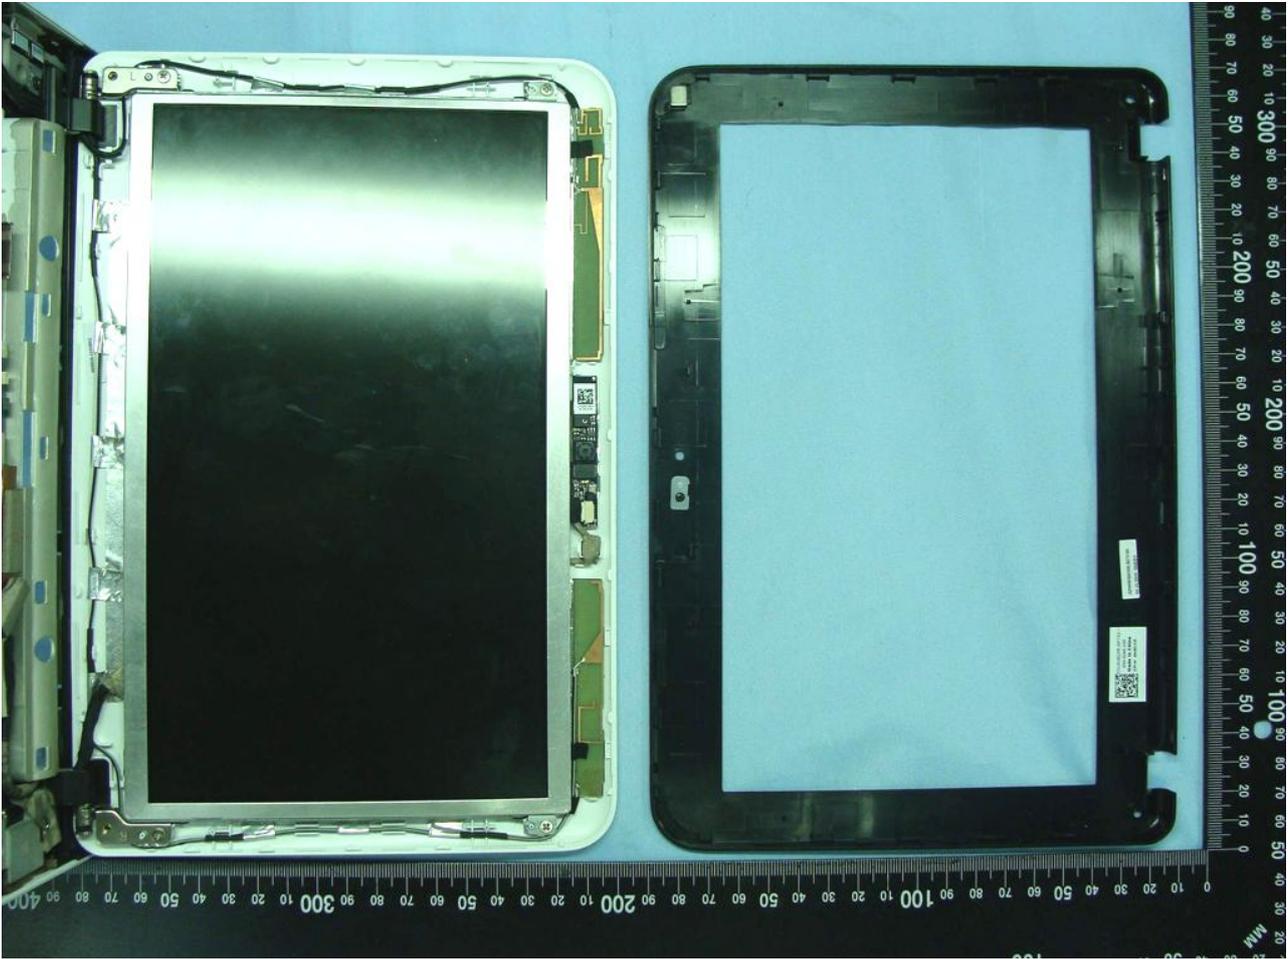




Host: Notebook Computer (DELL / P04T-P04T001)

**WWAN Main Antenna <Tx/Rx>**







Host: Notebook Computer (DELL / P04T-P04T001)

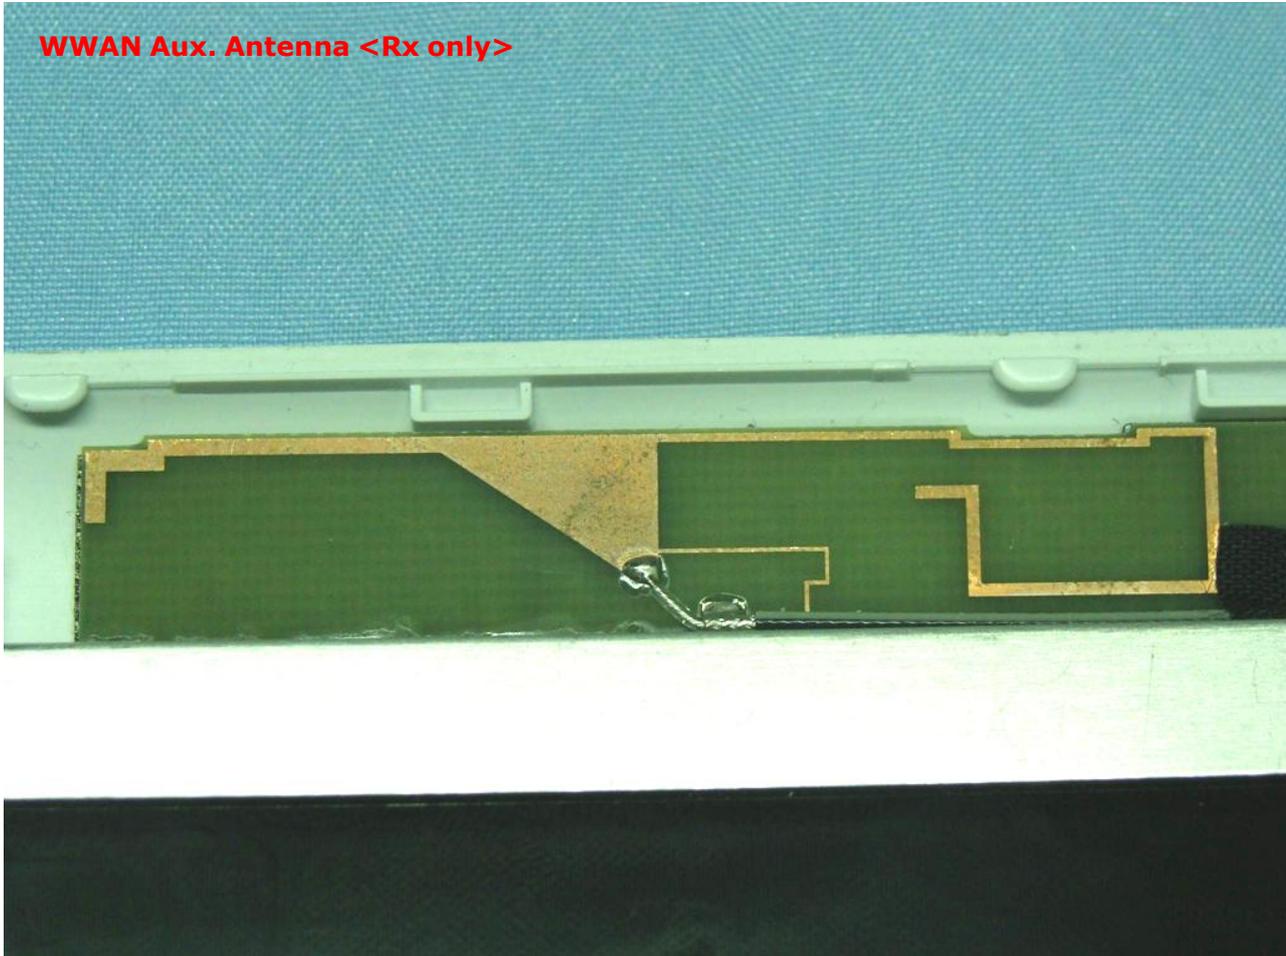


Host: Notebook Computer (DELL / P04T-P04T001)

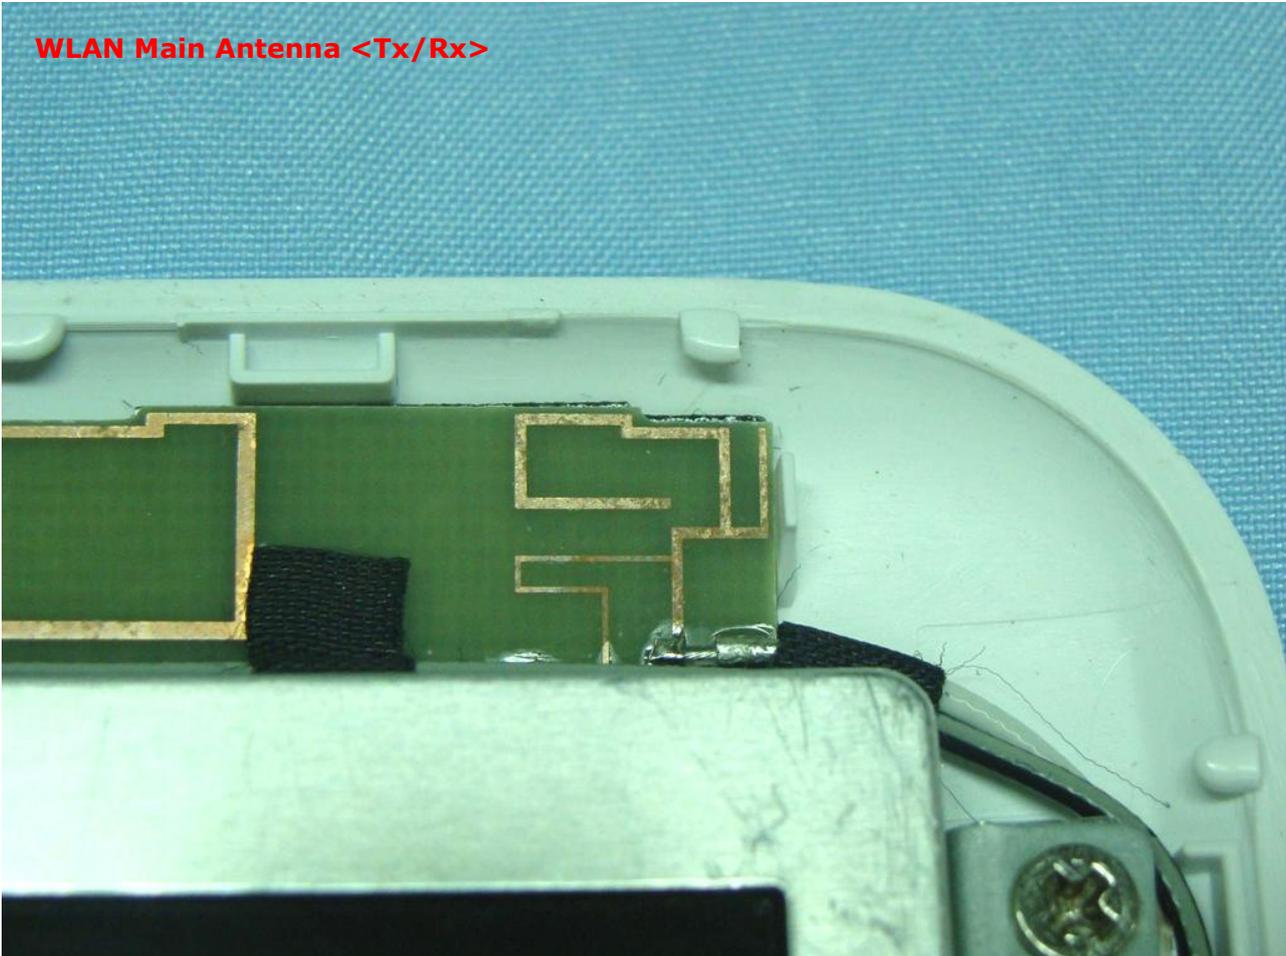**WLAN Main Antenna <Tx/Rx>**

Host: Notebook Computer (DELL / P04T-P04T001)

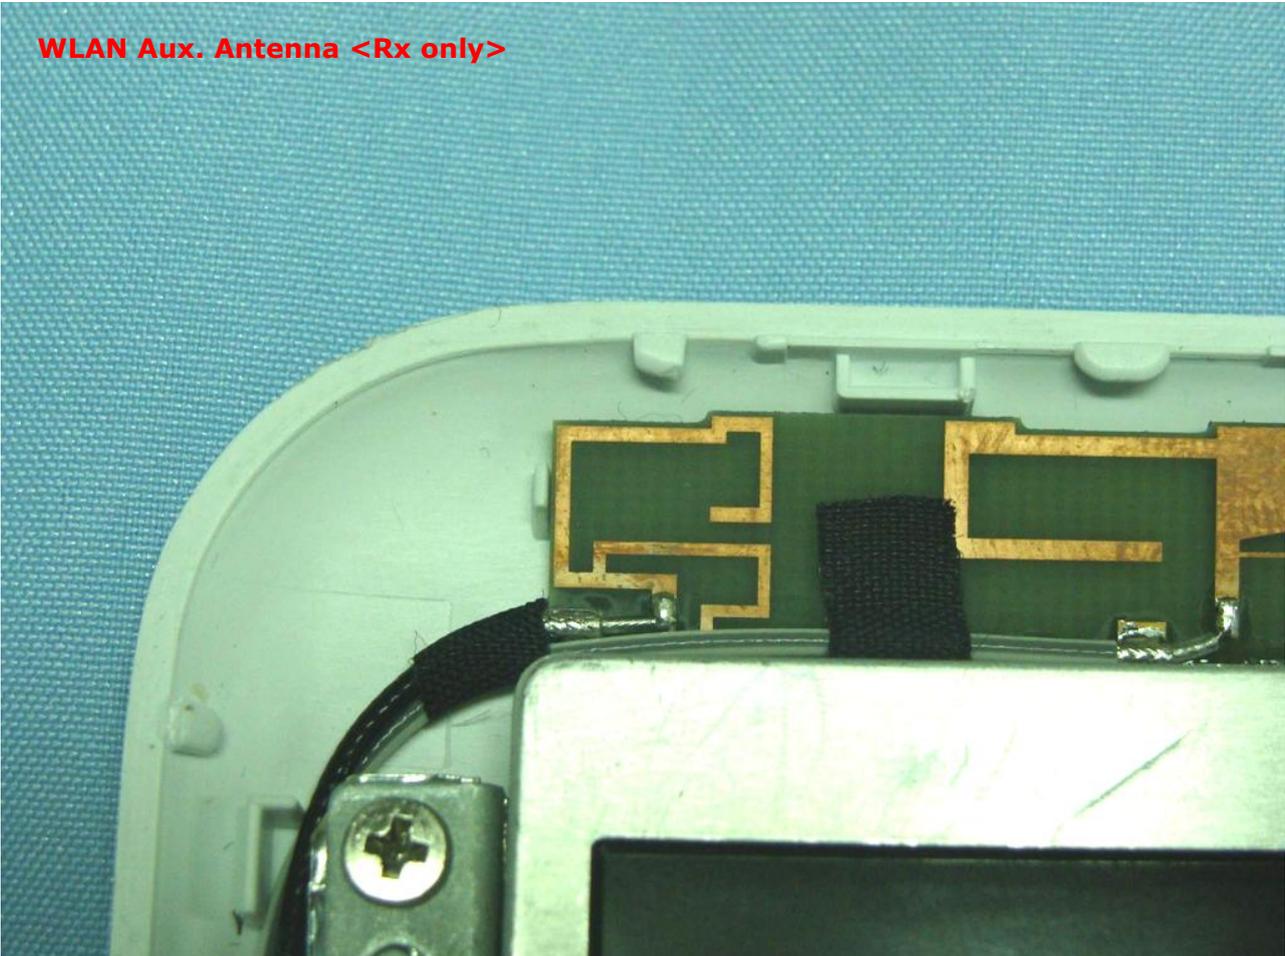**WLAN Aux. Antenna <Rx only>**

Host: Notebook Computer (DELL / P04T-P04T001)

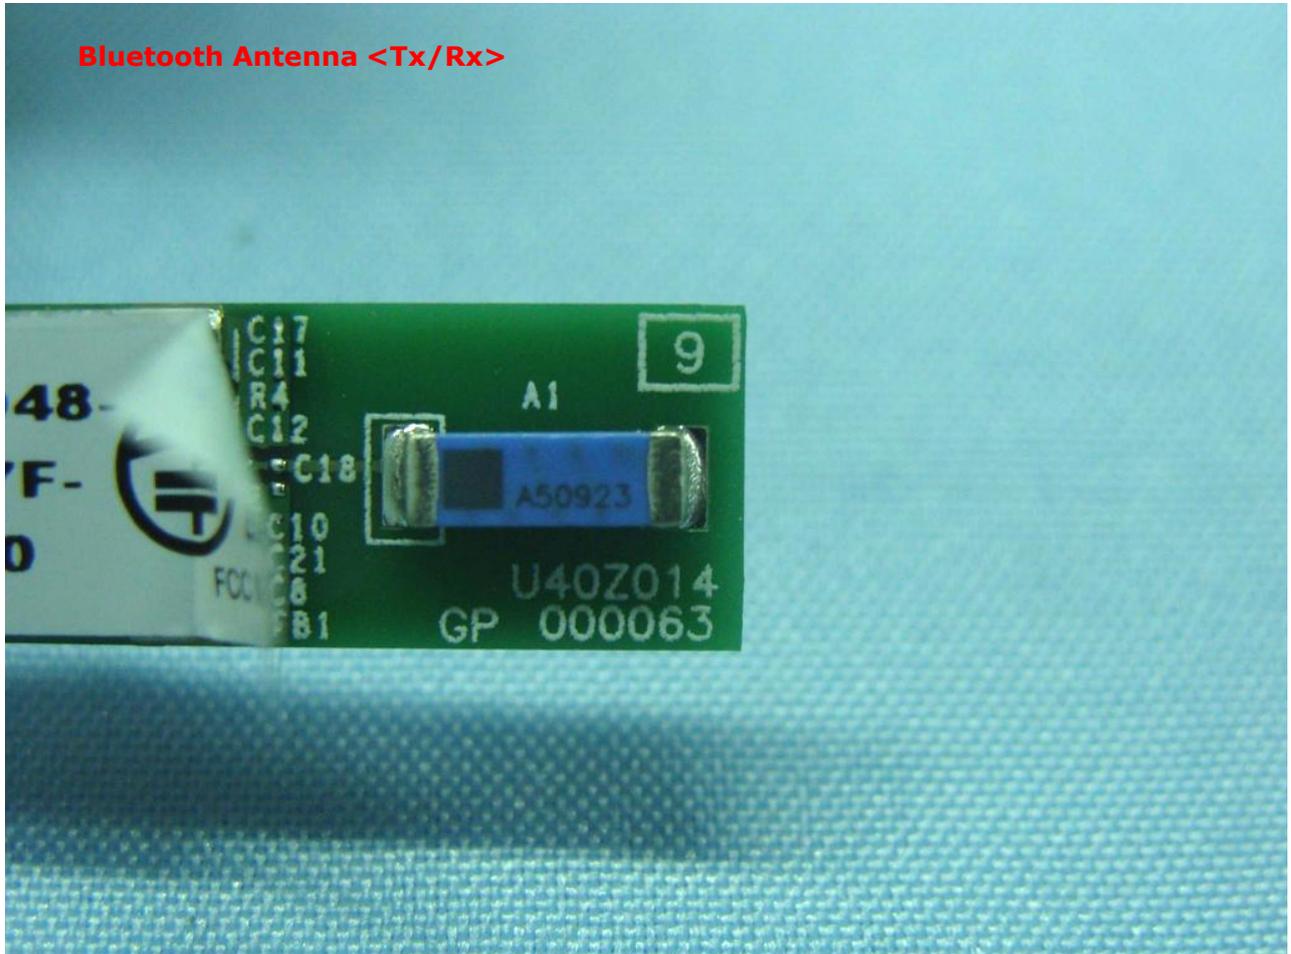


#### 4. Photograph of Accessory for the Host

Host: Notebook Computer (DELL / P04T-P04T001)





**Host: Notebook Computer (DELL / P04T-P04T001)**

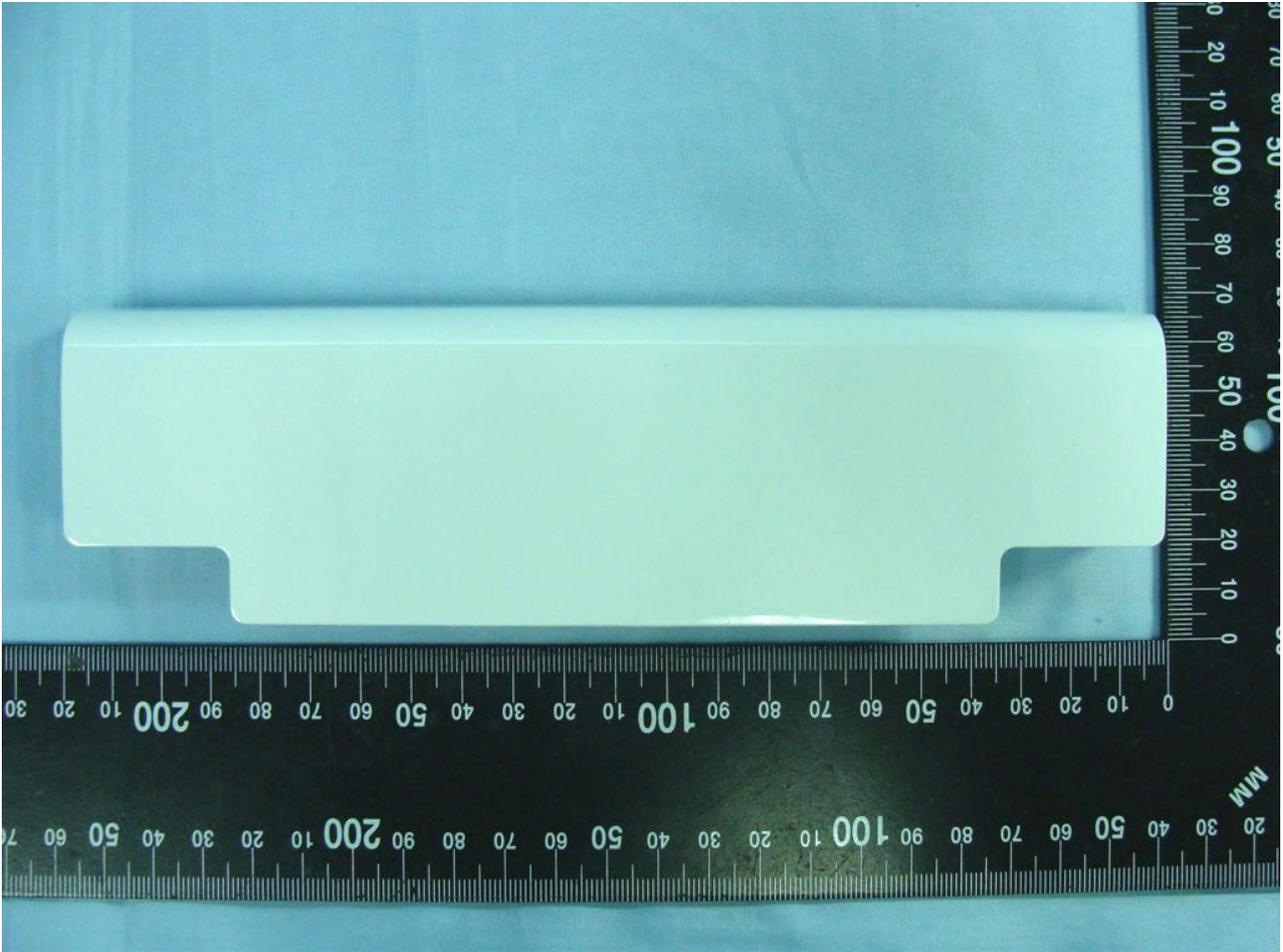

Host: Notebook Computer (DELL / P04T-P04T001)



Host: Notebook Computer (DELL / P04T-P04T001)





**Host: Notebook Computer (DELL / P04T-P04T001)**



Host: Notebook Computer (DELL / P04T-P04T001)



Host: Notebook Computer (DELL / P04T-P04T001)

