

Copyright © Huawei Technologies Co., Ltd. 2011. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



HUAWEI, HUAWEI, and



are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations


Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Appearance

Note:

The figures in this guide are provided for your reference only.

Front View

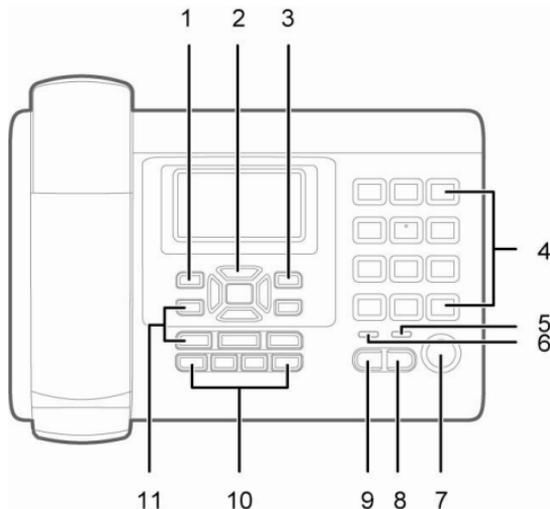

No.	Keys/Indicators	Description
1	Left function key	Select the option displayed in the lower left corner of the screen.
2	Navigation keys ▲ ◀ ok ▶ ▼	<ul style="list-style-type: none">• Access the main menu by pressing the OK key in standby mode.• Access a shortcut menu by pressing the corresponding navigation key in standby mode.• Adjust the volume by pressing the navigation keys during a call.
3	Right function key	Select the option displayed in the lower right corner of the screen.
4	Number and symbol keys	<ul style="list-style-type: none">• Enter numbers, letters, and symbols.• Number keys (2–9): Speed-dial a phone number by pressing and holding a key in standby mode.• # key: Switch between text input methods in editing mode.• * key: Display the symbol list in editing mode.
5	Speaker indicator	When the hands-free mode is activated, the speaker indicator is on.

No.	Keys/Indicators	Description
6	Power indicator	When the power adapter is connected, this indicator is on.
7	Call/Send key 	<ul style="list-style-type: none"> • Make or answer a call. • View the call log in standby mode.
8	Speaker key 	Activate the hands-free mode to dial a number already entered or answer an incoming call.
9	End key 	<ul style="list-style-type: none"> • End or cancel a call. • Power the phone on or off by pressing and holding the key. • Turn the backlight on or off in standby mode. • Return to the standby mode.
10	Speed dial keys	Speed-dial a defined phone number in standby mode.
11	Shortcut keys	Each shortcut key carries a specific function.


Screen Icons

Icon	Description	Icon	Description
	Signal strength		Battery level
	Alarm clock		Hands-free mode
	Call in progress		No network available
	Unread message		Unopened voicemail message
	Phone powered by the power adapter		Roaming

Installation

(Optional) Installing a UIM Card

Ensure that the phone is powered off and disconnected from the power adapter. When installing a User Identity Module (UIM) card, ensure that the golden contacts of the UIM card are facing downward and that the beveled edge of the UIM card is properly aligned with that of the UIM card slot. Then check that the UIM card is completely inserted.

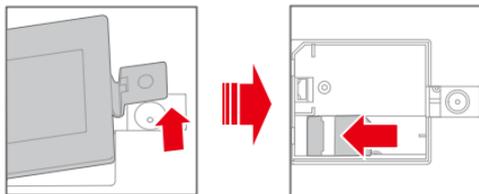


Note:

Do not frequently remove the UIM card when using the phone.

Installing the Battery


Before using the phone, install the battery properly. When installing the battery, ensure that the phone is powered off and is disconnected from the power adapter; ensure that the golden contacts of the battery mate securely with those in the battery slot.

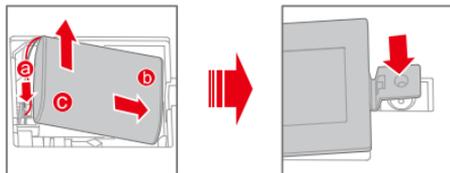

Note:

If the phone will not be used for a long time, remove the battery from the phone.

Charging the Battery

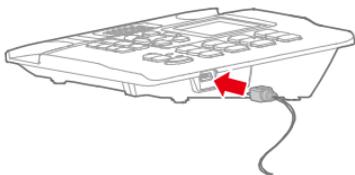

Note:

- When the phone is delivered, the battery power is lower. Therefore, charge the phone for a while and then power on the phone the first time you use it.
- When you use the phone, it is recommended that you connect the power adapter to the phone. When using the battery to power the phone, ensure that the battery power is sufficient.
- I/O connects can only support charging. It can't support USB with PC for data transfer.

Powering On the Phone

To power on the phone, press and hold the **End key** until the screen lights up.

Note:

Press and hold the **End key** to power off the phone.

Call Functions

Making a Call

1. In standby mode, press the number keys to enter a phone number.
2. Press the **Call key** to dial the number.
3. Press the **End key** to end the call or cancel the dialing.

Note:

- In standby mode, press the **Call key** to view the call log. Find the desired number in the call log, and then press the **Call key** dial the number.
- Find the desired number in the phonebook, and then press the **Call key** to dial the number.

Answering or Rejecting a Call

When there is an incoming call, press the **Call key** to answer the call; press the **End key** to reject the call.

Messages

Writing a Message

1. Select **Messages > Write Message**.
2. Write the message.
3. Press the **OK key**, and then add a recipient using one of the following methods:
 - Enter the recipient's phone number.
 - Add the recipient from the phonebook.
4. Press the **OK key** to send the message.

Reading a Message

The phone stores received messages in the inbox.

1. Select **Messages > Inbox**.
2. Press the Up or Down navigation key to scroll to a message in the list.
3. Press the **OK key** to open and read the message.
4. Press the **Left function key** to manage the message.

Text Input Methods

Switching Between Input Methods

In editing mode, press the **#** key to switch between input methods.

Note:

- In editing mode, press the **Right function key** to delete the character to the left of the cursor; press and hold the **Right function key** to delete all characters.
- In "ABC" and "abc" input modes, press the **0** key to enter a space.
- In any input mode, press the ***** key to display the symbol list.

Traditional English Input ("ABC" or "abc")

In "ABC" or "abc" text input mode, press the number keys to enter letters. Press a number key repeatedly until the desired character appears. If the next letter you want to enter is on the same key as the current one, wait until the current letter is entered, and then enter the next one.

Predictive English Input ("eZiEn ")

1. Press the keys labeled with the letters required to spell the desired word once according to the spelling sequence of the word.
As you enter letters, the phone attempts to predict the desired word and displays candidate words.
2. Press the Up or Down navigation key to scroll to the desired word.
3. Press the Left or Right navigation key to enter the word, or press the **0** key to enter the word followed by a space.

Number Input

In "123" input mode, enter a desired number by pressing the number key.

Settings

To configure and customize your phone settings, select **Menu > Settings**.

Phone Lock

To set the phone lock, select **Settings > Security > Phone Lock**. You can change the default phone lock code (**000000**) to a personalized password.

Keypad Lock

In standby mode, press and hold the **#** key to lock the keypad.

In standby mode, press the **Left function key** and then the ***** key to unlock the keypad.

(Optional) PIN and PUK

A Personal Identification Number (PIN) protects your UIM card from unauthorized use. A PIN Unlocking Key (PUK) is used to change a blocked PIN. If you enter an incorrect PIN a pre-defined number of consecutive times, your UIM card will be locked and the phone asks you to enter the PUK to unlock it. Both the PIN and the PUK are supplied with the SIM card. For details, contact your service provider.

FAQs

If problems occur during the use of the phone, refer to the following sections for a proper solution. If a problem persists, contact your phone vendor.

Phone Cannot Be Powered On

1. Remove the battery cover and check whether the battery is installed properly.
2. If the battery is properly installed, a possible cause for the problem is that the battery power is low. Charge the battery, and then try to power on the phone.

No Information Is Displayed on the Phone Screen

If the phone is not used for a long time and the battery runs out of power, the phone may not display any information when it is being charged. This is a normal phenomenon. The phone can be powered on after the battery is charged for a while.

Battery Cannot Be Charged

3. Check that the phone and the power adapter are connected properly.
4. Check that the power adapter and the power socket are connected properly.
5. Replace the power adapter or the battery with a new one of the same model.

Signal Strength Is Weak

1. Check that the UIM card is installed properly.
2. Place the phone at a location where strong signals can be received.

Call Volume is Too High or Too Low

During a call, press navigation keys to adjust the volume.

Safety Information

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Do not use your device if using your device is prohibited. Do not use the device when using your device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Some wireless devices may affect the performance of hearing aids or pacemakers. For any such problems, consult your service provider.
- If you are using an electronic medical device, consult the doctor or the device manufacturer to confirm whether radio waves affect the operation of this device.

Potentially Explosive Atmosphere

Do not use your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not use your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

- Observe local laws and regulations while using the device. To prevent accidents, do not use your wireless device while driving.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft and before boarding an aircraft. Using wireless devices in an aircraft may cause danger to

the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Place the device or accessories in well-ventilated, cool, and out-of-direct-sunlight place. Avoid enveloping the device, or covering towels and placing articles on the device. Place the device out of a box or case to avoid poor heat dissipation that results in the damage to the device.
- On a stormy day with thunder, do not use your device, to prevent any danger caused by lightning.
- Keep the ambient temperature between -10°C to $+45^{\circ}\text{C}$ for using the device.
- This device should be installed and operated with a minimum distance of 20 cm between the antenna and all persons.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

3

Charger

- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.

Cleaning and Maintenance

It is normal that your wireless device gets hot when you use or charge it. Before you clean or maintain the wireless device, stop all applications and disconnect the wireless device from your PC.

- Use your wireless device and accessories with care and in a clean environment. Keep the wireless device away from a fire or a lit cigarette.
- Protect your wireless device and accessories from water and vapor,

and keep them dry.

- Do not drop, throw, or bend your wireless device.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger.

Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.

- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

FCC Statement

15.19

NOTICE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21

NOTICE:

Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

15.105

NOTE: This equipment has been tested and found to comply with the

limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by adopting one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.