



HUAWEI G5760

GSM Mobile Phone

User Guide

Copyright © Huawei Technologies Co., Ltd. 2009. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



HUAWEI and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Table of Contents


1 Getting to Know Your Phone	1
Your Phone	1
Keys and Functions	2
Screen Icons.....	4
Using Shortcut Menu.....	4
2 Installing and Charging	5
Installing the SIM Card and the Battery.....	5
Removing the Battery and the SIM Card.....	6
Installing the microSD Card	6
Charging the Battery.....	7
3 Getting Started	7
Using the Stylus.....	7
Calibrating the Screen	8
Using the Function Menu	8
Phone Lock.....	9
PIN and PUK	9
Locking the Keypad	9
Entertainment.....	10
4 Call Function	10
Making a Call.....	10
Answering a Call.....	11
Dial healthily	11

5 Text Entry	12
Changing the Text Input Mode.....	12
Using Keys/Virtual Keyboard.....	12
Using Dtylus.....	14
6 Messaging	14
Writing and Sending a Text Message	14
Writing and Sending a Multimedia Message	15
7 Contacts	16
Creating a New Contact.....	16
Searching for a Contact	16
8 Multimedia	17
Audio Player.....	17
Video Player.....	18
Camera	20
FM Radio	21
Video Recorder.....	22
9 WAP	24
Network Settings	24
Connecting to the Network	25
10 Bluetooth.....	25
11 USB.....	26
12 Warnings and Precautions	26

1 Getting to Know Your Phone

Your Phone

The following figure shows the appearance of your phone and it is for your reference only.

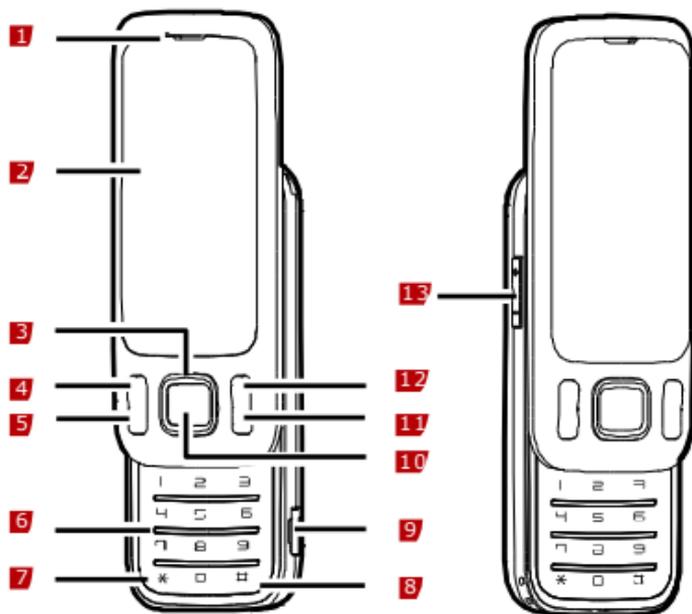

1 Earpiece

2 Screen

3 Navigation keys

4 Left soft key

5 Call/Answer key

8 # key

9 Charger/Headset/USB jack

10 Confirm key

11 Right soft key

12 End/Power key

6 Number keys

13 Volume key

7 * key



The headset is not delivered as an accessory in your packing box. It may be available as a giveaway or need to be purchased separately.

Keys and Functions

Press...	To...
	<ul style="list-style-type: none">• Make a call.• Answer an incoming call.• View call logs in standby mode.
	<ul style="list-style-type: none">• Power on or power off the phone (by pressing and holding the key for about 3s).• End a call or reject an incoming call.• Return to the standby mode.
 (Left)	<ul style="list-style-type: none">• Select the option displayed in the lower left corner of the screen.
 (Right)	<ul style="list-style-type: none">• Select the option displayed in the lower right corner of the screen.• Display Contacts list in standby mode.• Return to the previous menu.
	<ul style="list-style-type: none">• Display the main menu in standby mode.• Confirm a selection.

Press...	To...
	<ul style="list-style-type: none"> • Scroll through submenus on a menu screen or options on an option screen. • Access the functions assigned to the keys as shortcuts in standby mode.
	<ul style="list-style-type: none"> • Increase the volume () or decrease the volume () during a call.
 	<ul style="list-style-type: none"> • Enter numbers, letters, and characters. • Call the voice mail center in standby mode (by pressing and holding the 1 key for about 3s). • Speed-dial phone numbers in standby mode (by pressing and holding the 2–9 keys for about 3s), when Speed-dial is on. • Select a submenu item labeled with the corresponding number.
	<ul style="list-style-type: none"> • In standby mode, press the key once to enter *, twice to enter +, three times to enter P, and four times to enter W. • Display the symbol list in any text input mode.
	<ul style="list-style-type: none"> • Enter #. • Enable or disable the meeting mode in standby mode (by pressing and holding the key for about 3s). • Switch text input modes when editing texts.

Screen Icons

Icon	Indicates...
	Signal strength.
	GPRS signal.
	The Ring alert mode is activated.
	The Vib. only alert mode is activated.
	The Vib. and ring alert mode is activated.
	The Vib. then ring alert mode is activated.
	Missed call(s).
	Call forwarding is activated.
	Unread text message(s).
	Unread multimedia message(s).
	Bluetooth is activated.
	An alarm is activated.
	Battery power level.
	Keypad is locked.

Using Shortcut Menu


Tap	To...
	Enter the main menu.

Tap	To...
	Enter call logs.
	Enter messages.
	Enter contacts.
	<p>Open shortcuts.</p> <p>Tap one icon and hold 2s after that you can drag the icon to everywhere.</p> <p>(In shortcuts screen, when you tap icon, it will move function icon to Standby mode, you can also drag it back. But if you tap , the icon can't be dragged back. It will switch to contacts in shortcuts area when you slide left and right in standby mode.)</p>

2 Installing and Charging


Installing the SIM Card and the Battery

Ensure that the golden contact area on the SIM card is facing downward, and the beveled corner is properly aligned with the SIM card slot.

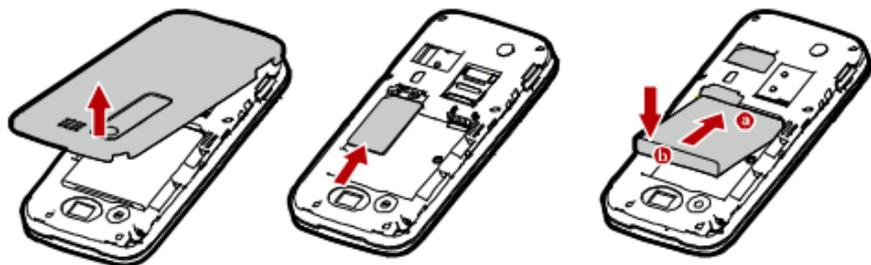


Removing the Battery and the SIM Card

Before removing the battery and the SIM card, ensure that your phone is powered off.

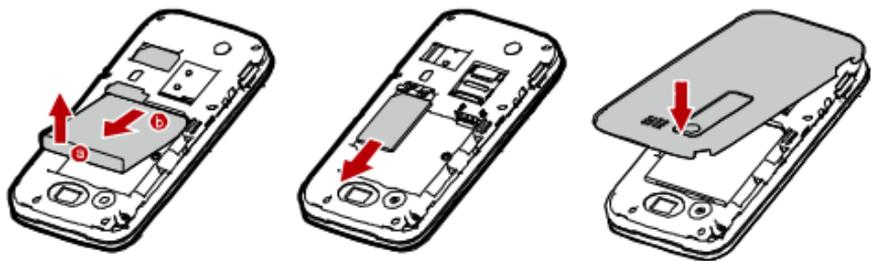

Installing the microSD Card

Ensure that inserting the memory card with the golden contact area facing up.

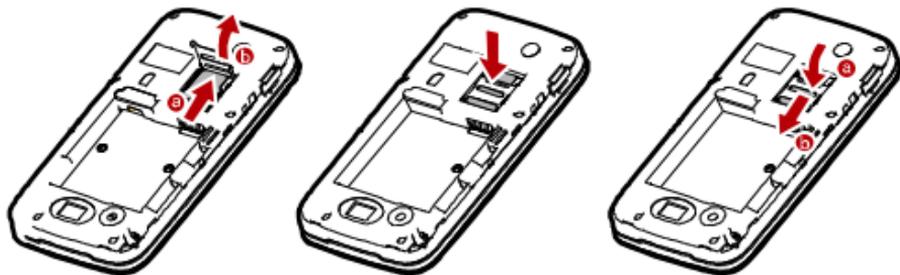

-  The microSD Card is not delivered as an accessory in your packing box. It need to be purchased separately.

Charging the Battery

1. Connect the charger to the charger interface on the side of the phone.
 2. Connect the charger to a power socket. The charging starts, with the charging icon displayed in an animated state.
-  When you start to charge a completely discharged battery, the charging icon may appear on the screen several minutes later.
3. Disconnect the charger from the power socket when the charging icon becomes static, indicating that the battery is fully charged.
 4. Disconnect the charger from the phone.

3 Getting Started

Using the Stylus

Your phone has a screen with tactility. You can use the stylus tip to touch the screen to select items or edit text.

- Tap: Use the stylus tip to touch the screen once to select an item or access a menu.

- Drag: Press the stylus tip onto the screen, and then move the stylus to scroll the menus or pages.

Calibrating the Screen

The touch of stylus tip on the screen can be responded accurately through screen calibration.

1. In standby mode, press  or , or tap ..
2. Select **Settings** > **Phone settings** > **Touch settings** > **Pen Calibration**.
3. Tap the cross marks that appear on the screen in sequence according to the prompts to finish adjusting the phone display.

Using the Function Menu

1. In standby mode, press  or , or tap .
2. Press  to select the desired function menu.
3. Press  or  to display the selected menu, or tap  function menu directly to enter.
4. Press  to select a submenu.
5. Press  or  to display the menu.
6. Press  or tap **Back** to return to the previous menu or exit the function menu.
7. To return to the standby mode, press  .

Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled. You can change the default phone lock code (1234) into any numeric string of four to eight digits.

Do remember your phone lock code. If you forget it, contact the service center.

PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) can unlock the blocked PIN. Both PIN and PUK are delivered with the SIM card. For details, contact your service provider.

If you enter wrong PINs for a specified number of times consecutively, the phone asks you to enter the PUK.

If you enter wrong PUKs for a specified number of times consecutively, the SIM card is invalidated permanently. Contact your service provider for a new one.

Locking the Keypad

To lock the keypad, close the slide, or press  and then .

To unlock the keypad, open the slide, or press  then .

If the **Auto keypad lock** function is enabled and the phone is idle for a preset period in standby mode, the keypad is locked automatically.



When the keypad is locked, you can press  to answer an incoming call.

Entertainment

- Camera: to shoot pictures or videos.
- Audio player: to play the audio files stored in the phone memory or on the microSD card.
- Video player: to play the video files stored in the phone memory or on the microSD card.
- FM Radio: to listen to the radio program.
- Games: to enjoy the funny games.
- Java: to download and install the java applications and games.
- Photo editor: to edit photos and tile image.
- Video recorder: to recorder videos.
- Schedule FM record: to record timing for your favorite channel.
- Melody compose: to edit ringtones.

4 Call Function

Making a Call

1. In standby mode, enter the phone number.
- To make an international call, press twice consecutively to enter the plus sign (+). Then enter the international long distance code, country code or region code, area code, and phone number in sequence.

- To call an extension, enter the phone number, press  three times consecutively to insert P, and then enter the extension number.
2. Press  or tap **Options > Call** to dial the number.
 3. Press  or tap **Options > End single call** to end the call.
-  During a call, press  to adjust the volume.

Answering a Call

When there is an incoming call, you can do as follows:

- Press  to answer it.
- Press  or tap **Options** and select **Answer** to answer it.
- Press  or tap **Reject** to reject it.

If the Cover answer function is enabled, you can open the slide to answer an incoming call.

If the **Any key** answer function is enabled, you can press any key except  and  to answer an incoming call.

Dial healthily

When you making a call, if **Dial healthily** is active the phone will vibrate as soon as the call connected or end.

1. In standby mode, press  or , or tap .
2. Select **Settings > General call settings > Dial healthily**.
3. Select **On/Off > On** to activate Dial healthily.

5 Text Entry

Changing the Text Input Mode

The indicator of the current text input mode is displayed in the upper left corner of the screen. You can press  to change the text input mode, also you can tap input method icon to change into other input mode.

-  • Press  (Clear) once to delete the letter on the left of the cursor. Press and hold  (**Clear**) for about 3s to clear all the letters.
- In any text input mode (except the "123" mode), press  to enter a space.

Using Keys/Virtual Keyboard

Predictive Input Mode

In predictive input mode, enter a word as follows:

1. Press or tap each key only once according to the spelling sequence of the desired word.
The phone displays the commonly used word according to the sequence of key presses.
2. Scroll to the desired word.
3. Press  or tap the word to enter it.



- Press  to display commonly used punctuations.
- After you enter a word or symbol, a space will be added automatically.

Multitap input mode

In Multitap input mode, you can press or tap a key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter on the key, and so on.



- Press  repeatedly to select and enter commonly used punctuations.
- Press  once to enter a space, twice to enter **0**.

Entering a Digit

- In "123" input mode, you can directly press a number key labeled with the desired digit.
- In predictive and multi-tap input mode, press the number key labeled with the desired digit repeatedly until the digit appears on the screen.

Entering a Symbol

1. Press  or tap  to display the symbol list.
2. Scroll to the desired symbol.
3. Press  or tap symbol to enter the symbol.

Using Dtylus

Tap  in screen to change to touch screen input method. You can use stylus to input any word. After input the word it will display some relevant words in input area. If the word display in content area is the word you want, you can go on inputting next word, else tap the right word in input area.

 Tap  to change to keyboard input method.

6 Messaging

Writing and Sending a Text Message

1. In standby mode, press  or , or tap .
2. Select **Messages** > **Write message** > **SMS**.
3. Write the message.
4. Press  or tap **Options** and then select **Done** for the following options:
 - **Save and send**: to add a recipient and send the message with saving it.
 - **Send only**: to enter a phone number or select a recipient from the contact list, and send the message.
 - **Save to drafts**: to save the message only.
 - **Send to many**: to add several recipients at a time and send the message.

- **Send by groups:** to add all members of a group as recipients and send the message.

Writing and Sending a Multimedia Message

1. In standby mode, press  or , or tap .
2. Select **Messages** > **Write message** > **MMS**.
3. Select **To**, **Cc**, or **Bcc**.
Add phone numbers or email addresses to be sent, carbon copied, or blind carbon copied to.
4. Select **Subject**.
Edit the subject of the message.
5. Select **Edit content**.
Edit the content of the message. You can add pictures, audio and video clips, and attachments to the multimedia message. You can also insert a new slide, preview the message, and set the slide duration.
6. Press  or tap **Options** and then select **Done** for the following options:
 - **Send only:** to send the multimedia message.
 - **Save and send:** to send and save the multimedia message.
 - **Save to drafts:** to save the message only.
 - **Save as template:** to store as a template.
 - **Send options:** to set validity period, deliver report, read report, priority.
 - **Exit:** to quit editing interface.



- Contact your service provider for the availability of the Multimedia Messaging Service (MMS) and the method for subscribing to this service.
- Open multimedia messages with caution. Objects in multimedia messages may contain viruses that can damage your phone, such as malicious software.

7 Contacts

Creating a New Contact

1. In standby mode, press  or , or tap .
2. Select **Contacts** > **Add new contact**.
3. Select **To SIM** or **To phone** for saving the contact.
4. Edit the contact.
5. After editing the contact, press  or tap **OK** to save the contact.

Searching for a Contact

1. In standby mode, press  or , or tap .
2. Select **Contacts** > **Search contact**.
3. Enter the contact name.
4. Press  or tap **OK** to search for the contact.



You can also select Menu > Contacts > Contacts list. Then enter the first letter of the contact name to find the desired contact.

8 Multimedia

Audio Player

1. In standby mode, press  or , or tap .
2. Select **Multimedia** > **Audio player**.




- | | | | |
|---|------------------------------|----|---------------------------|
| 1 | Adjust the volume. | 6 | Enter the playing list. |
| 2 | Enter playing list. | 7 | Switch on or off shuffle. |
| 3 | Switch to the previous music | 8 | Exit audio player. |
| 4 | Stop playing the music. | 9 | Switch to the next music. |
| 5 | Change the play mode. | 10 | Play or pause the music. |

3. Press  to enter playing list. Press  to select a music file.
4. Press  or tap  to play the music.
When the music is being played, you can do as follows:
 - Press  to adjust the volume.
 - Press  to change the playing music. Press and hold 3s to adjust the playing schedule.
 - Tap  or  to change the playing music.
 - Press  or tap  to pause the music.
 - Press  or tap  to stop playing the music.
 - Tap  to change the play mode.
 - Tap  to switch on or off shuffle.

Video Player

1. In standby mode, press  or , or tap .
2. Select **Multimedia** > **Video player**.

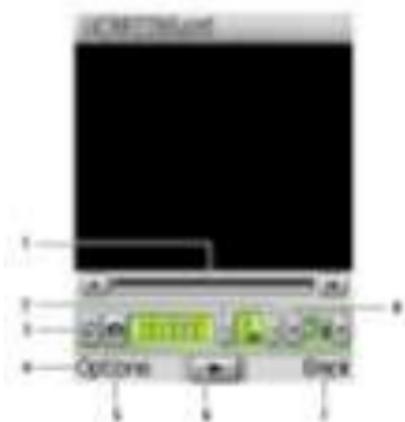

- | | | | |
|---|------------------------------|---|--------------------------|
| 1 | Speed up or rewind. | 5 | Snapshotting screenshot. |
| 2 | Change playback speed. | 6 | Play or stop the video. |
| 3 | Enter full-screen paly mode. | 7 | Exit video player. |
| 4 | Enter menu options. | 8 | Adjust the volume. |

3. Press  to select a video file.

4. Press  (**Play**) to view the video, press  or tap  to play the video.

When the video is being played, you can do as follows:

- Press  or tap   to adjust the volume.
- Press  to change the playing speed (only for AVI format).
- Press  or tap   to fast forward or rewind the video.
- Press  to pause/continue the video.

- Press  (Stop) to stop playing the video.
- Tap  to snapshotting screenshot.
- Tap  to enter full-screen play mode.

Camera

1. In standby mode, press  or , or tap .
2. Select **Multimedia** > **Camera** to launch the camera.



- | | | | |
|---|---------------------|----|--------------------------|
| 1 | Set image size. | 7 | Set white balance. |
| 2 | Enter menu options. | 8 | Set delay timer. |
| 3 | Exit camera. | 9 | Set cont. shot. |
| 4 | Adjust EV. | 10 | Set scene mode. |
| 5 | Shoot a picture. | 11 | Set the picture quality. |
| 6 | Set effect. | | |

In camera mode, you can do as follows:

- Press  to view photos, or perform relevant settings.

- Press  to adjust brightness.
- Press the number keys (1, 2, 4, 5, 6, 7, 8) to perform the corresponding settings.
- Press  or tap  to shoot a photo.

FM Radio

The headset cable functions as an antenna as well. To ensure good reception of radio programs, do not disconnect the headset from the phone or severely bend the headset cable.

1. Connect a compatible headset to the phone.
2. In standby mode, press  or , or tap .
3. Select **Multimedia** > **FM radio**.



- | | | | |
|---|-----------------------|---|----------------------------|
| 1 | Adjust the volume. | 6 | Start or stop recording. |
| 2 | Enter channel list. | 7 | Back to the previous. |
| 3 | Enter menu options. | 8 | Open or close the station. |
| 4 | Perform the settings. | 9 | Start or stop recording. |

5 Auto search channel.

4. On the **FM radio** screen, you can do as follows:

- Press  to record the program; press  (**Stop**) to stop recording.

During the recording, press  or  to pause or continue.

- Press  (Back) to play the radio program in the background.
- Press  or tap   to adjust the volume.
- Tap  **List** to enter channel list.
- Tap  to perform other settings.
- Tap   to auto search channel.
- Tap  to open or close the station.
- Tap  to start or stop recording.
- Press  to change the channel.
- Press  (Options) to set the speaker, view and set the channel list, tune, or select other options.

Video Recorder

1. In standby mode, press  or , or tap .
2. Select **Multimedia** > **Video recorder**.



- 1 Set relevant parameters.
- 2 Start or stop recording a video.
- 3 Adjust the brightness.
- 4 Zoom.
- 5 Exit the camera screen.

3. Press  or tap  to set relevant parameters.
4. Press  or tap  to start recording a video.
During the recording, press  or tap  to pause/continue.
5. Press  or tap  to stop recording.
6. Press  to adjust the brightness.
7. Press  to zoom control.

9 WAP

You can access WAP sites and use WAP-based services on your phone. To access the WAP sites through your phone, you need to subscribe the corresponding service from the service provider and set the relevant parameters on your phone first.

For details about the service and the charges, contact your service provider.

Network Settings

To access the WAP sites through your phone, you need to set the data account and WAP parameters on your phone first.

Setting the Connection Profile

1. In standby mode, press  or , or tap .
2. Select **Settings** > **Connection settings** > **Data account**.
3. Select the network type, press  (**OK**) or tap **OK**.
4. Select your service provider, press  (**Edit**) or tap **Eidt**.
5. Set the account information, and press  (**OK**) or tap **OK** to save the settings.

Setting the WAP

1. In standby mode, press  or , or tap .

2. Select **WAP > Settings > Edit account**.
3. Select your service provider, press  (**OK**) or tap **OK**.
4. Activate the account.

Connecting to the Network

1. In standby mode, press  or , or tap .
2. Select **WAP > Input address**.
3. Enter a URL address.
4. Press  (**Options**) and select **Done** to access the address.

10 Bluetooth

Bluetooth connections can be set up between devices within a maximum distance of 10 meters, and there should be no solid obstacles between the devices..

1. In standby mode, press  or , or tap .
2. Select **Settings > Connection settings > Bluetooth**.
3. Select **Power on/off**, press  (**On**) or tap **On** to activate bluetooth.
4. Select Settings to perform relevant settings.
5. After that, you can use Bluetooth to translate or receive files, or search Bluetooth headset to listen to the music.

11 USB

After connecting to the PC with USB data cable, you phone can be used as a USB mass storage device.

1. Connect your phone to the PC by using the USB cable.
2. Select **USB config** > **Mass storage**.
3. The phone is recognized as a USB mass storage device.
4. Read the files saved in the phone memory and on microSD card directly.

 Save the files to the corresponding folders that are automatically created on the phone or the microSD card. Because contents in only the default folder can be read, do not create a folder by yourself.

12 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when it causes danger or interference with electronic devices.

Medical Device

- Power off your device and follow the rules and regulations set forth by the hospitals and health care facilities.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.
- Some wireless devices may affect the performance of the hearing aids. For any such problems, consult your service provider.

Potentially Explosive Atmospheres

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or fire, resulting in bodily injuries or even deaths. Do not switch on the device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. Also, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmosphere that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or

particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. Also, if using the device while driving a vehicle, please comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Switch off your device before boarding an aircraft. Using wireless devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp or dirty places or places with magnetic fields. Otherwise, the circuit may not function properly.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a thunder and stormy day, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by battery.

Preventing Hearing Damage

Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Safety of Children

Please comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may prove dangerous, as it may present a choking hazard. Make sure that small children are kept away from the device and accessories.

Accessories

Use only the accessories delivered by manufacturer. Using accessories of other manufacturers or vendors with this device model might invalidate any approval or warranty applicable to the device, might result in the non-operation of the device, and might be dangerous.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and talk time are shorter than normal, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause fire or the charger may not function properly.
- Do not connect two poles of the battery with conductors such as metal materials, keys or jewelries. Otherwise, the battery may be short-circuiting and may cause injuries and burns on your body.

- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, make sure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If the battery is damaged, or the color changes or gets abnormally heated while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the lead is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to electric shock, short-circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

Clearing and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery and charger from water or vapor. Do not touch the device and charger with a wet hand. Otherwise, it may lead to short-circuit or malfunction of the device and electric shock to the user.
- Do not place your device, battery, or charger in places where it can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire,

or explosion. When the temperature is lower than 0°C, performance of the battery is affected.

- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, or charger in a very hot or cold place. Otherwise, they may not function properly and may lead to a fire or an explosion.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may get damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

RF Exposure Information (SAR)

This mobile phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.373 W/kg and when worn on the body, as described in this user guide, is 1.43 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: QISG5760.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

FCC Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by manufacturer name: Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

FCC Regulations

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.