



T-Mobile Prism[®] II

User Manual

Contents

1	Read Before Proceeding	1
1.1	Safety Precautions	1
1.2	Personal Information and Data Security	2
1.3	Legal notice	3
2	Getting Started	4
2.1	Key Functions at Your Fingertips	4
2.2	Important Information About the Battery	5
2.3	Power Saving Tips	5
2.4	Power On or Off Your Mobile Phone	6
2.5	Using the Touchscreen	7
2.6	Locking and Unlocking the Screen	7
2.7	Home Screen	8
2.8	Applications and Widgets	12
2.9	Using a microSD Card	12
3	Calling	13
3.1	Making a Call	13
3.2	Answering or Rejecting a Call	14
3.3	Other Operations During a Call	15
3.4	TTY Operation	16
3.5	Setting Hearing Aid Compatibility	16
4	People	16
4.1	Opening the People Application	16
4.2	Importing Contacts from a SIM Card	17
4.3	Adding a Contact	17
4.4	Adding a Contact to Your Favorites	17
4.5	Searching for a Contact	17
4.6	Editing a Contact	17
4.7	Communicating with Your Contacts	18
4.8	Deleting a Contact	18
4.9	Backing Up and Synchronizing Contacts	18
4.10	Managing Groups	19

4.11	Joining and Separating Contacts.....	19
4.12	Sending Contacts	20
5	Text Input	21
5.1	Displaying the Keyboard.....	21
5.2	Choosing an Input Method	21
5.3	Using the Android Keyboard.....	21
5.4	Using the Swype Keyboard	22
5.5	Editing Text.....	22
5.6	Using the Landscape Keyboard	23
5.7	Customizing Your Keyboard Settings.....	23
6	Messaging.....	23
6.1	Opening Messaging.....	23
6.2	Creating and Sending a Text Message	23
6.3	Creating and Sending a Multimedia Message.....	24
6.4	Opening and Viewing a Multimedia Message	24
6.5	Replying to a Message	25
6.6	Searching for a Message.....	25
6.7	Customizing Message Settings	25
7	Getting Connected	25
7.1	Mobile Networks	25
7.2	Wi-Fi	26
7.3	Sharing Your Phone's Data Connection	26
7.4	Controlling Data Usage	27
7.5	Browser	27
7.6	Bluetooth	29
8	Email	30
8.1	Adding an Email Account	30
8.2	Switching Between Email Accounts	30
8.3	Viewing an Email Message	30
8.4	Saving an Email Attachment	31
8.5	Creating and Sending an Email Message	31
8.6	Replying to an Email Message	31
8.7	Deleting an Email Account	31

8.8 Changing Email Account Settings	31
9 Entertainment	32
9.1 Taking Photos and Recording Videos	32
9.2 Using the Gallery	33
9.3 Enjoying Music	34
9.4 Listening to the FM Radio.....	35
10 Google Services	36
10.1 Creating a Google Account	36
10.2 Gmail	37
10.3 Talk.....	38
10.4 Maps.....	39
10.5 YouTube	40
10.6 Play Store	40
11 Accounts and synchronization	41
11.1 Adding an Account	41
11.2 Deleting an Account	41
11.3 Turning on data synchronization	41
11.4 Changing an Account's Synchronization Settings	42
12 Using Other Applications.....	42
12.1 Calendar	42
12.2 File Manager.....	43
12.3 Clock.....	44
12.4 Calculator	45
12.5 Notes	45
13 Managing Your Mobile Phone	46
13.1 Setting the Date and Time	46
13.2 Setting the Display.....	46
13.3 Setting Ringers	46
13.4 Setting Phone Services	47
13.5 Configuring Text-to-Speech.....	47
13.6 Protecting Your Mobile Phone	48
13.7 Managing Applications	49

13.8 Resetting Your Mobile Phone.....	49
13.9 Online Update.....	50
14 FAQs	50
15 Warnings and precautions	52

1 Read Before Proceeding

1.1 Safety Precautions

Please read the safety precautions carefully to ensure the correct use of your mobile phone.



Do not crash, throw, or puncture your mobile phone. Avoid the falling, squeezing, and bending of your mobile phone.



Do not use your mobile phone in a moist environment, such as the bathroom. Prevent your mobile phone from being soaked or washed in liquid.



Do not switch on your mobile phone when it is prohibited to use phones or when the phone may cause interference or danger.



Do not use your mobile phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your mobile phone near medical apparatus.



Switch off your mobile phone in aircraft. The phone may cause interference to control equipment of the aircraft.



Switch off your mobile phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your mobile phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your mobile phone or its accessories in containers with a strong electromagnetic field.



Do not place magnetic storage media near your mobile phone. Radiation from the phone may erase the information stored on them.



Do not put your mobile phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep your mobile phone and its accessories away from children. Do not allow children to use your mobile phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless devices. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions of this manual while using the USB cable. Otherwise your mobile phone or PC may be damaged.

1.2 Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- Place your device in a safe area to prevent it from unauthorized use.
- Set your device screen to lock and create a password or unlock pattern to open it.
- Periodically back up personal information kept on your SIM card, memory card, or stored in your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- If you use services such as Wi-Fi tether or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- Install or upgrade device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Huawei or third-party application providers.

- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Your device may provide detection and diagnostic information to third-party application providers. Third party vendors use this information to improve their products and services.
- If you have concerns about the security of your personal information and data, please contact mobile@huawei.com.

1.3 Legal notice


Copyright © Huawei Technologies Co., Ltd. 2013. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei").

The product described in this manual may include copyrighted software of Huawei and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and permissions



HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android™ is a trademark of Google Inc.

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers. Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Huawei reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

Third-Party software statement

Huawei does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei will not provide any warranty of any kind for third party software and applications. Neither will Huawei provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Huawei does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product is based on the open-source Android™ platform. Huawei has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei does not provide any warranty and representation in connect with any such compatability and expressly excludes all liability in connection with such matters.

DISCLAIMER

ALL CONTENTS OF THIS MANUAL ARE PROVIDED “AS IS”. EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.


Import and export regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Privacy policy

Please refer to our privacy policy on our websites for the information about how we protect your personal information.

2 Getting Started

 All the pictures in this guide are for your reference only. Your phone's actual display features may be different to those described here, depending on its software version.

2.1 Key Functions at Your Fingertips

Power Key

 
- Press and hold to power on your mobile phone.
- When your mobile phone is powered on, press and hold this button to display the options menu. You can then choose to power off the phone or perform shortcut operations.
- Press to lock the screen when your mobile phone is active.

Menu

Touch to open the menu on an active screen.



- Touch to return to the Home screen.
- Touch and hold to display recently used applications.



- Touch to return to the previous screen or exit the application you are running.
 - Touch to hide the keyboard.
-

2.2 Important Information About the Battery

- If the battery has not been used for a long time, you may not be able to power on your mobile phone immediately after you begin charging the battery. Allow the battery to charge for a few minutes with the phone powered off before attempting to power the phone on.
- As it ages, the battery's performance will degrade, in particular it will not hold charge as it did when it was new. When the battery life becomes noticeably shorter than usual after being charged properly, replace the battery with a new one of the same type.
- Using data services increases the power consumption of the phone and will therefore reduce the length of time that the phone can be used between battery charges.
- The time required to fully charge the battery depends on the ambient temperature and the age of the battery.
- When the battery power is low, the phone will alert you and display a message. When the battery power is almost exhausted, your phone will power off automatically.

2.3 Power Saving Tips

The longevity of battery power depends on the network to which you connect, and how you use your mobile phone.

Try the following to conserve battery power:

- When you do not need 3G services, set your phone to connect to a 2G network.
- When your mobile phone is not in use, turn off the screen backlight.
- Reduce the time it takes for your screen backlight to turn off when your phone is idle.
- Lower the screen brightness.
- Turn off Bluetooth when you are not using it. Only make your phone visible to other Bluetooth devices when you need to establish a Bluetooth connection.
- Turn off Wi-Fi when you are not using it.
- Turn off your phone's GPS receiver when you are not using it.
- Lower the volume.
- Close power-draining programs, when you do not need them.
- Turn off the data service when you are not using it.

2.4 Power On or Off Your Mobile Phone

2.4.1 Powering On Your Mobile Phone

Press and hold  . If you have protected your mobile phone with a personal identification number (PIN), enter it before using the mobile phone.


2.4.2 Setting Up Your Mobile Phone

The first time you power on your mobile phone, the phone displays a setup wizard to help you set up the phone.

The setup wizard helps you:

- Create or sign in to your account
- Make some initial decisions about how you want to use your mobile phone

2.4.3 Powering Off Your Mobile Phone

1. Press and hold  to display the options menu.
2. Touch **Power off**.
3. Touch **OK**.

2.4.4 Restarting Your Mobile Phone

1. Press and hold  to display the options menu.
2. Touch **Restart**.
3. Touch **OK**.

2.4.5 Using Airplane Mode

Some locations may require you to turn off your phone's wireless connections. Rather than powering off your phone, you can place it in **Airplane mode**.

1. Press and hold  .
2. Touch **Airplane mode** in the options menu.

2.5 Using the Touchscreen

2.5.1 Touchscreen Actions



Touch: Tap the screen with your finger to select an item, confirm a selection, or start an application.



Touch and hold: Touch an item with your finger and do not release it until the mobile phone responds. For example, to open the options menu for the active screen, touch and hold the screen until the menu appears.



Flick: Move your finger either vertically or horizontally across the screen.



Drag: Touch and hold the desired item with your finger. To move an item, drag the item to any part of the screen. You can drag an icon to move or delete it.


2.5.2 Rotating Your Mobile Phone Screen

The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.


On the Home screen, touch  > **Settings** > **All** > **Display** > **Auto-rotate screen** to disable this function.

 
2.6 Locking and Unlocking the Screen


2.6.1 Locking the Screen

- When your phone is on, press  to lock the screen. When the screen is locked, you can still receive messages and calls.
- If your phone is idle for a while, the screen will lock automatically.

 
2.6.2 Unlocking the Screen


1. Press  to wake up the screen.
2. Drag the unlocking icon to the small open lock, the screen is unlocked.

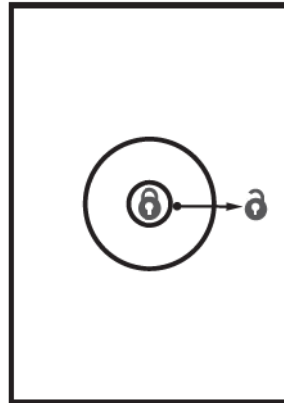





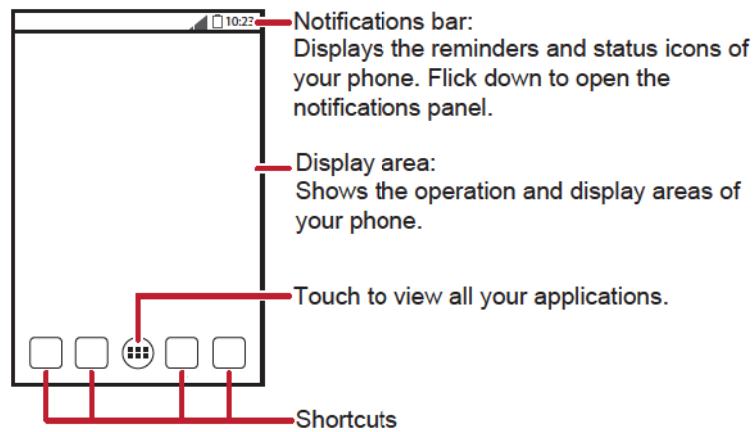








 



 














 If you have set up a screen unlock pattern, you will be prompted to draw the pattern on the screen to unlock it.













2.7 Home Screen



 Touch and hold a shortcut until the mobile phone vibrates, you can then drag it to your desired location or move it to the trash. You can also drag an icon from another area of the screen to the shortcut position.

2.7.1 Notification and Status Icons



	Signal strength		No signal
	Connected to HSDPA mobile network		HSDPA in use
	Connected to GPRS mobile network		GPRS in use
	Connected to EDGE mobile network		EDGE in use
	Connected to 3G mobile network		3G in use
	Roaming		Airplane mode
	Bluetooth on		Receiving location data from GPS
	Vibration mode		Ringer silenced
	Call muted		Charging battery
	Battery full		Battery extremely low
	Call in progress		Missed call
	Alarm enabled		New mail from Gmail
	New text message		Problem with text or multimedia message delivery
	New chat message		New email
	New voicemail		Connected to a computer
	Open Wi-Fi network available		Connected to a Wi-Fi network

	Select input method		Upcoming event
	Uploading		Downloading
	Phone storage space is getting low		Sign-in or synchronization problem
	Preparing the mircoSD card		More undisplayed notifications
	Synchronizing data		Connected to a VPN
	Portable Wi-Fi hotspot on		USB tethering on

2.7.2 Notification Panel

Your mobile phone will notify you when you receive a new message or there is an upcoming event. The notification panel also informs you of alarms and settings. Open the notification panel to see your network operator or to view a message, reminder, or event notification.

 
Opening the Notification Panel

1. When a new notification icon appears on the notification bar, place your finger on the notification bar and flick down to open the notification panel.
2. On the panel, you can:
 - Touch a notification to open the corresponding application.
 - Flick left or right on a notification to delete it.
 - Touch  to clear all notifications.
 - Touch  to display the settings screen.

Closing the Notification Panel

Touch and hold the bottom of the panel. Then flick up to close it.


2.7.3 Viewing Other Parts of the Home Screen

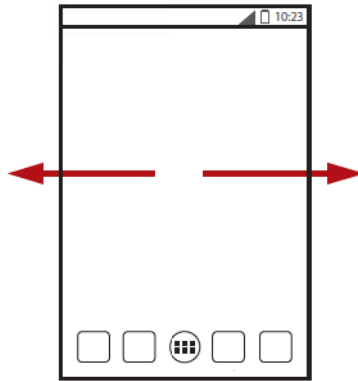

Flick your finger left or right across the Home screen.

2.7.4 Customizing the Home Screen

Adding a New Home Screen Item

1. On the Home screen, touch  to display the application list.
2. Press and hold an application icon, and then drag the icon to a blank area on the Home screen.

Moving a Home Screen Item

1. Touch and hold the item on the Home screen that you want to move until your mobile phone vibrates.
2. Without lifting your finger, drag the item to the desired position on the screen, and then release it.


Removing an Icon from the Home Screen

1. Touch and hold an item on the Home screen that you want to remove until your mobile phone vibrates.
2. Without lifting your finger, drag the item to the trash can. Wait until the item and the trash can turn red.
3. Release the item.

Managing Folders on the Home Screen


- To create a folder: Drag an application icon onto another application icon to create a new folder that contains both icons.
- To rename a folder: On the Home screen, touch a folder, and then touch the folder name field beneath it.
- To delete a folder: On the Home screen, touch and hold a folder, and then drag it to the trash can.
- To move a folder to the shortcut bar: On the Home screen, touch and hold a folder, and then drag it to the shortcut bar.

2.7.5 Service Shortcuts


1. Open the notification bar.
2. Touch  ,  or  to turn the corresponding services on or off.

 You can touch  to display the switch shortcut list.

2.7.6 Changing the Wallpaper

1. On the Home screen, touch  > **Wallpaper**.
2. Touch the following menu items to select a picture and set it as the wallpaper:
 - **Gallery**
 - **Live Wallpapers**
 - **Wallpapers**



2.8 Applications and Widgets

The Application screen holds icons for all of the applications on your phone. You can touch  on the Home screen to open the application screen.

2.8.1 Accessing Widgets

On the application screen, touch the **WIDGETS** tab to switch to the widget screen. From the widget screen, you can touch and hold a widget, and then drag it to the Home screen.

2.8.2 Viewing Recently Used Applications

To display the list of recently used applications, press and hold  . To open an application, touch the corresponding thumbnail. To close the application, flick left or right across the screen. To clear the list, touch  .

2.9 Using a microSD Card

2.9.1 Using the microSD Card as a USB Mass Storage

To transfer all your favorite music and pictures from your PC to your mobile phone's microSD card, set the microSD card as a USB mass storage.


1. Connect your mobile phone to your PC with the USB cable provided. Your PC will detect the microSD card as a removable storage device.
2. Open the notification bar, and then touch **Connected as an installer**.

3. Touch **USB mass storage** in the dialog box that opens to confirm that you want to transfer files.

You can now transfer files from your PC to your mobile phone's microSD card.

- ⓘ When your microSD card acts as a USB mass storage, your mobile phone will not use this memory space. Ensure that you follow the correct procedures to disconnect the USB mass storage device (your mobile phone) from the PC when you have finished transferring files.

2.9.2 Removing the microSD Card

1. On the Home screen, touch  > **Settings** > **All**.
2. Scroll down the screen, and then touch **Storage** > **Unmount SD card**.
3. Carefully remove the microSD card.

3 Calling

To make a phone call, you can dial a number using the keypad or touch a number saved in your contact list, on a webpage, or in other places. When you are in a call, you can answer other incoming calls or redirect them to your voicemail. You can also set up conference calls with several participants.



3.1 Making a Call


To make a call, you can use the **Phone** application, or select a number from **People**.

When you are in a call, you can touch  to use other functions. To return to the call screen, flick the notification bar down and touch **Current call**.



- ⓘ Be careful not to block the microphone at the bottom of your phone if you want your voice heard by the other parties in a call.

3.1.1 Making a Call with the Phone Application

1. On the Home screen, touch  > **Phone**.
2. Enter the phone number.
3. Touch  to initiate the call.

During a call, touch  to enter other numbers on the dialer.


3.1.2 Making a Call from People

1. On the Home screen, touch  > **Phone**.
2. Touch  to display the contacts saved on your mobile phone. Select a contact to place a call.

3.1.3 Using Voice Dialing

Calls can be placed using voice dialing. When you open the voice dialing application, your phone's speaker will be enabled.

ⓘ Background noise will affect the accuracy of voice dialing.

 
1. On the Home screen, touch  > **Voice Dialer**.
2. Follow the onscreen instructions, then say your command close to the microphone. Your phone will identify the command and make a call.

3.2 Answering or Rejecting a Call

3.2.1 Answering an Incoming Call

When you receive a phone call, the incoming call screen opens. If you have previously saved the caller's number in **People**, the caller's name and number are displayed. If the caller's number is not saved in **People**, the caller's number is displayed.

Drag  to the right to answer the call.

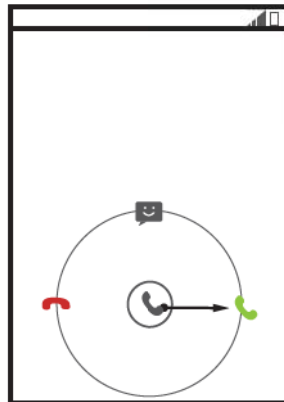



3.2.2 Ending a Call

During a call, touch  to hang up.

3.2.3 Rejecting an Incoming Call

 Drag  to the left to reject the call.

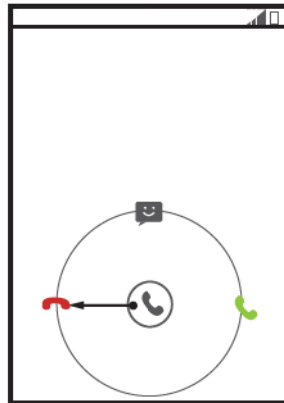


 You can also drag  to the message icon to reject the call and send a message to the caller.

3.3 Other Operations During a Call

3.3.1 Making a Conference Call

If you receive a new call while you are already in a call, you can add the second call to the call you are in. This feature is known as conference calling. You can also set up a conference call with multiple callers.


 Contact your network operator to ask if conference calls are supported and, if yes, how many parties can participate.

1. To initiate a conference call, dial the number of the first participant. After you have connected to the first participant, keep the connection open, touch




2. Enter the phone number of the next person you want to invite for the conversation and touch , or select someone from your call log or **People**. The first participant is automatically placed on hold while you do this.

3. Once you have connected to the second person, touch  >  to begin the conference call.

4. To end the conference call and disconnect from everyone, touch .

3.3.2 Switching Between Calls

If you receive a new call while you are already in a call, you can switch between the two calls.

1. While you are in the first call and the second call comes in, answer the incoming call, and then touch .

2. The current call is placed on hold and you are connected to the first call.


3.4 TTY Operation

3.4.1 Using the TTY Device

The Teletypewriter (TTY) is a typewriting device. By connecting the phone to the TTY device, you can use the TTY functions to send/receive messages. When you use the TTY function, do as follows:

1. Connect the TTY device to the headset jack of the phone and set the phone to the TTY mode.
2. Make or answer calls as normal.
3. When the call is put through, use the TTY device to send or receive the letters.
4. Press the **End** to end the call.

3.4.2 Setting the TTY Mode

1. Touch  > **Settings** > **Call** > **TTY mode**.
2. Select one TTY mode.
 - **TTY Off**: The standard voice speaking mode and the listening mode.
 - **TTY Full**: Transmit and receive the TTY characters.
 - **TTY HCO**: Transmit TTY characters but receive by listening to the earpiece.
 - **TTY VCO**: Receive TTY characters but transmit by speaking into the microphone.


3.5 Setting Hearing Aid Compatibility


Touch  > **Settings** > **Call** > **Hearing aids** to set your phone to be compatible with a hearing aid.

4 People


The **People** application enables you to save and manage information such as phone numbers and addresses of your contacts. After you save contact information on your mobile phone, you have easy access to the people with whom you want to communicate.

4.1 Opening the People Application



On the Home screen, touch  > **People** to open the **People** application.

- If you have not yet added any contacts to your mobile phone, touch  to create a contact.
- Any contacts that are already saved on your mobile phone are displayed alphabetically in a list that you can scroll through.

4.2 Importing Contacts from a SIM Card

1. In the contacts list, touch  > **Manage contacts**.
2. Touch **Copy from SIM card**.
3. Wait for the SIM card contents to be loaded. Touch one contact to import that contact individually to your mobile phone, or touch **SELECT ALL** to import all contacts to your mobile phone.
4. Touch **COPY**.
5. If you have more than one account on your phone, touch the account into which you want to import the contacts.


4.3 Adding a Contact

1. In the contact list, touch .
 2. From the screen displayed, create a contact in your mobile phone, SIM card or your account. Add a new account if you do not have one.
 3. Enter the contact's name, and then add detailed information such as phone numbers and address.
 4. Touch **DONE** to save the contact information.
-  To save a contact from your call log, touch and hold the desired phone number to display the options menu, and then touch **Add to contacts**.

4.4 Adding a Contact to Your Favorites



Select a contact and touch the star on the right of the contact's name. If the  icon is highlighted, the contact is in your favorites list.

4.5 Searching for a Contact

1. In the contact list, touch .
2. Enter the name of the contact you wish to search for. As you type, contacts with matching names appear below the search box.

4.6 Editing a Contact

You can make changes to the information you have stored for a contact at any time.


1. In the contacts list, touch the contact whose details you want to edit, and then touch .
2. Touch the category of contact information you wish to change: name, phone number, email address, or any other information you recorded earlier.
3. Make the desired changes to the contact information, and then touch **DONE**. To cancel all of your changes, touch  > **OK**.

4.7 Communicating with Your Contacts


You can quickly call or send a text (SMS) or multimedia (MMS) message to a contact's default phone number. You can also open details to view a list of all the ways you can communicate with that contact. This section describes how to communicate with a contact when viewed in your contacts list.

4.7.1 Using Quick Contact for Android


1. Touch the contact's picture or picture frame (if you have not assigned a picture to the contact) to open Quick Contact for Android.
2. Touch the icon for the way you want to communicate with the contact.

 The icons available depend on the information you have entered for the contact, the applications installed on your phone, and the accounts you have.

4.7.2 Communicating with a Contact

1. In the contacts list, touch the contact that you want to communicate with.
2. On the contact's details screen, you can communicate with the contact in one of the following ways:
 - Touch the phone number to place a call.
 - Touch the email address to send an email.
 - Touch  to send a text message.

4.8 Deleting a Contact


1. In the contact list, touch the contact that you want to delete, and then touch  > **Delete**.
2. Touch **OK** to confirm that you want to delete the contact.


4.9 Backing Up and Synchronizing Contacts

You can back up contacts from your phone to a microSD card, or synchronize phone contacts with a server using your Google account.

4.9.1 Using a microSD Card to Back Up Contacts


Backing Up Contacts

1. In the contact list, touch  > **Manage contacts**.
2. From the displayed menu, touch **Export to storage**.

 After touching **Export to storage**, a message is displayed to show the storage location of the .vcf file to which your contacts will be exported.

3. Touch **OK** to export your mobile phone, SIM card or your account contact's information to the installed microSD card. You can copy the .vcf files backed up on the microSD card to your computer.

Restoring Contacts




1. In the contact list, touch  > **Manage contacts**.
 2. Touch **Import from storage** in the displayed menu.
- If there is more than one .vcf files saved on the microSD card, you can choose to restore one, multiple, or all the of them.

4.9.2 Using a Google Account to Synchronize Contacts

You can synchronize contacts using your Google account. For details, see [Changing an Account's Synchronization Settings](#).

4.10 Managing Groups


4.10.1 Creating a Group

1. On the Home screen, touch  > **People**, and then touch .
2. Touch  in the group list.
3. Enter the name you want to assign to the group.
4. Touch **DONE** to save the group.

 You can add only contacts saved in the phone memory to a group.


4.10.2 Editing a Group

You can always make changes to the information you have saved for a group.

1. In the groups list, touch the group that you want to edit, and then touch  > **Edit**.
2. Make the desired changes to the group information, and then touch **DONE**. To cancel all changes you made to the group information, touch  > **OK**.

4.10.3 Adding a Contact to Your Groups

Select a group, touch  to select the desired contact, and then touch **ADD MEMBERS**.

 You can only add contacts saved in your phone memory to a group, you cannot add contacts saved in your SIM card.


4.11 Joining and Separating Contacts

You may have duplicate contacts if you import contacts by:


- Adding an account, such as a Gmail account.

- Using the social networking services such as Facebook .
- Using other methods, such as exchanging emails.

To avoid duplication, join two or more contacts together to form a single contact.

 Availability of Facebook may vary depending on your country or carrier. Please use them according to local laws and regulations.

4.11.1 Joining Contacts


1. On the Home screen, touch  > **People**.
2. Touch a duplicated contact.
3. Touch **Manage joined contacts**, and then touch **Add contact**.
4. Select the contact to be joined to combine two duplicate contacts.

Two contacts will be joined together and displayed as one contact. Touch the contact to view the joined information. You can see that the contact is joined together by two contacts. You can also combine more than two contacts.

 Contacts stored in the SIM card cannot be joined.

4.11.2 Separating Contacts


If contact information from different sources was joined together in error, you can separate the contacts.

1. On the Home screen, touch  > **People**.
2. Touch the joint contact to be separated.
3. Touch **Manage joined contacts**.
4. Select the contact to be separated from the joint contact.

The joint contact is then separated into two contacts displayed separately in **People**.

4.12 Sending Contacts

You can send contact information as a .vcf file via Bluetooth or Email.

1. Select a contact from the contacts list.
2. Touch  > **Share**.
3. Select your preferred method to send the contacts you have selected, for example Bluetooth or Email.

5 Text Input


5.1 Displaying the Keyboard

To enter text, use the onscreen keyboard. The keyboard is displayed automatically when you run certain applications. If not, touch a text field to open the keyboard.

 
Touch ↵ to hide the keyboard.


5.2 Choosing an Input Method




1. When the keyboard is displayed, the keyboard icon is shown on the notification bar. Flick the notification bar downwards to open the notification panel.
2. Touch **Choose input method**.
3. Select the desired input method.

You can also change the default input method. To do so, touch  > **Settings** > **Language & input** > **Default** on the Home screen, and then select an input method.


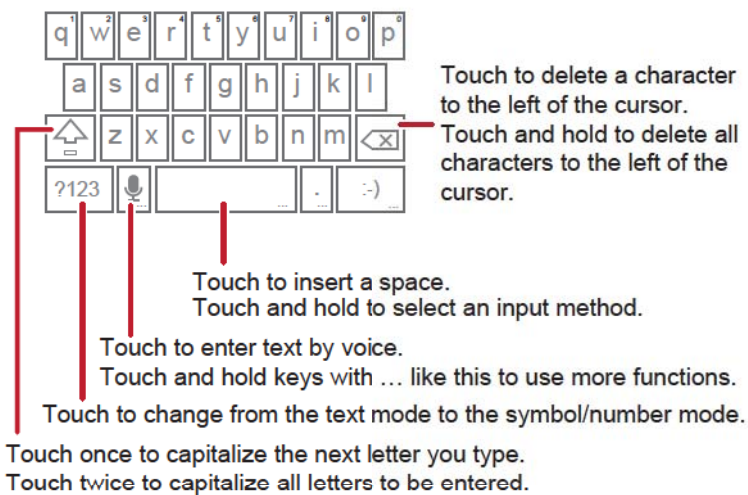
5.3 Using the Android Keyboard



 The keyboard layout may vary slightly depending on the field where you are entering text. The previous figure is provided for your reference only.

 On the Home screen, touch  > **Settings** > **Language & input**, touch  next to **Android keyboard**, then touch **Voice input key** to turn on or turn off voice input.

  5.4 Using the Swype Keyboard

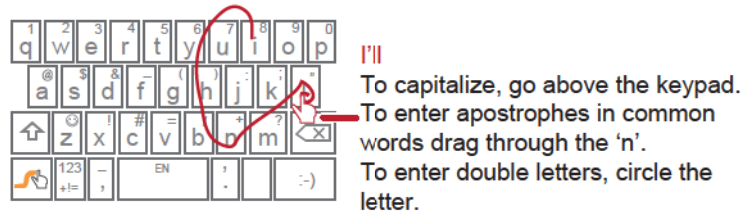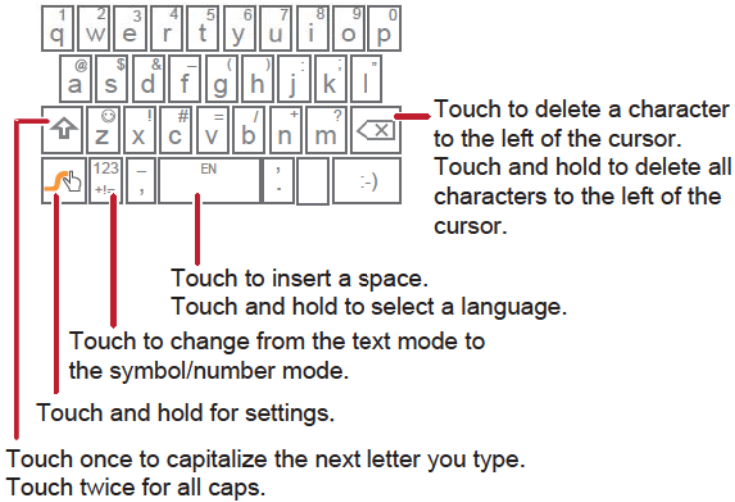










ⓘ The keyboard layout may vary slightly depending on the field where you are entering text. The previous figure is provided for your reference only.

5.5 Editing Text

To edit text quickly, touch and hold the text you have entered, and choose the content you want to edit. You can then edit the text quickly using icons in the upper right corner as follows:



-  : Select all content.

-  : Cut the selected content. Touch and hold the text. Drag the grab points to select the text you want to cut. Then touch this button to cut the selected text. After the text is cut, touch a blank area in the text field to display  . Move  to select where you want to paste the text. Touch  > **PASTE** to paste the previously cut text.
-  : Copy the selected text. Touch and hold the text. Drag the grab points to select text you want to copy. Touch this button to copy the text. After the text is copied, touch a blank area in the text field to display  . Move  to where you want to paste the text. Touch  > **PASTE** to paste the previously copied text.
-  : Move the cursor to an input position. Touch this icon to replace the selected content with what you just cut or copied.

5.6 Using the Landscape Keyboard

If you find the keyboard inconvenient or difficult to use, turn your mobile phone sideways. The screen will display the keyboard in landscape orientation, providing you with a wider keyboard layout.


5.7 Customizing Your Keyboard Settings

1. On the Home screen, touch  > **Settings** > **Language & input**.
2. In **Keyboard & input methods**, touch  next to an input method to customize the input method.




6 Messaging

The **Messaging** application allows you to exchange text messages (SMS) and multimedia messages (MMS) with anyone using an SMS-or-MMS-capable phone.

6.1 Opening Messaging

On the Home screen, touch  > **Messaging** to open the message application.

6.2 Creating and Sending a Text Message

1. Touch  > **Messaging**, then .
2. Enter a phone number or a contact's name in the **To** field, or touch  to select a contact from **People**.
 As you enter the phone number or the contact's name, the phone displays possible matches from your contacts. Select a contact from the list of possible matches or continue entering.
 After you select a contact or finish entering a number, you can enter another recipient.
3. Touch the composition text box to start composing your message.

4. When you are ready to send the message, touch **Send**.

Sent and received messages will be displayed in a message thread and grouped together in a conversation.



6.3 Creating and Sending a Multimedia Message

You can use multimedia messages to make everyday communications very special. You can record a message and send it as an audio file, for example, sing "Happy Birthday" and send it to a friend, or send a slideshow of photographs of a special event. The possibilities are enormous.



1. Touch  > **Messaging**, then .

2. Enter a phone number in the **To** field, or touch  to select a contact from **People**.


3. Touch the composition text box to start composing your message.

 If you want to enter a smiley, touch , then **Insert smiley**.

4. Perform the following steps to convert a text message into a multimedia message:

- Touch  > **Add subject** to add the message subject. Your mobile phone is now in multimedia message mode.
- Touch  to attach a picture, an audio file, or a video clip to the message.

5. When you are ready to send the message, touch  ^{Send}_{MMS}.

 You can select a media file (music, video, or picture) and send it as an attachment in a multimedia message. In **File Manager**, touch and hold a media file, and then touch **Share** > **Messaging**.

6.3.1 Adding a Slideshow

If you want to attach more than one file to your message, use the **Slideshow** option.

1. On the message composing screen, touch  to display the options panel.

2. Touch **Slideshow**, and then select a slide to edit.

3. Touch **Add slide** to add more slides.

4. Touch **Done** to return to the multimedia message screen when you finish editing the message.

5. To modify your multimedia message, touch **Edit** on the multimedia message screen. When you are ready to send the message, touch **Send**.

6.4 Opening and Viewing a Multimedia Message

1. In the message list, touch the message thread you wish to view.

2. Touch the multimedia message to view the message.


6.5 Replying to a Message

1. In the message list, touch a text or multimedia message thread to open it.
2. Touch the text box to compose your message. Once finished, touch **Send**.

6.6 Searching for a Message

To find a message quickly: On the messages list screen, touch  and enter the message content to search for.

6.7 Customizing Message Settings


In the message list, touch , and then touch **Settings** to customize the message settings.

7 Getting Connected

7.1 Mobile Networks

Your mobile phone will be automatically configured to use your network operator's 2G/3G service (if available) when you turn on the phone for the first time. Note that the SIM card must be inserted


7.1.1 Checking the Network Connection

1. Touch  > **Settings**.
2. Under **WIRELESS & NETWORKS**, touch **Mobile networks**.
3. Touch **Network operators** or **Access Point Names** to check the network connection.

 Your phone will automatically read the access point settings from the SIM card (if any). Therefore, do not change the access point parameters; otherwise, you might not be able to access network resources.

7.1.2 Turning On the Data Service

1. Touch  > **Settings**.
2. Under **WIRELESS & NETWORKS**, touch **Mobile networks**.
3. Select the **Data enabled** check box to turn on the data connection.

 If you do not need to access a wireless data network, you can clear the **Data enabled** check box to save data traffic costs.


7.2 Wi-Fi



Wi-Fi gives you wireless access to broadband Internet. To use Wi-Fi on your mobile phone, you must have an access to wireless access points (hotspots). Obstacles that block the Wi-Fi signal will reduce its strength.

7.2.1 Turning On Wi-Fi

1. Touch  > **Settings**.
2. Under **WIRELESS & NETWORKS**, touch the button next to **Wi-Fi**.

7.2.2 Connecting to a Wireless Network

1. After turning on Wi-Fi, touch  > **Settings**.
2. Under **WIRELESS & NETWORKS**, touch **Wi-Fi** to display the **Wi-Fi** screen. You will see a list of detected Wi-Fi networks.
3. Touch a Wi-Fi network to connect to it.
 - If you select an open network, your mobile phone will automatically connect to it.
 - If you select a network that is secured with Wired Equivalent Privacy (WEP) and it is the first time that you have connected to it, enter the password as prompted, and then touch **Connect**. If you connect to a secured wireless network that you have already used, you will not be prompted to enter the password again unless you have reset your mobile phone to its default settings.


 On the **Wi-Fi** settings screen, touch  to add a new Wi-Fi network.


7.3 Sharing Your Phone's Data Connection

You can share your mobile phone's data connection with a single computer via a USB cable: USB tethering. You can share your mobile phone's data connection with a number of devices at the same time, by turning your phone into a portable Wi-Fi hotspot.

7.3.1 Sharing Your Phone's Data Connection via USB

To use USB tethering in different operating systems, you may need to prepare your computer to establish a network connection via USB.

 You cannot share your phone's data connection and access its microSD card via USB at the same time.

1. Touch  > **Settings**.
2. Under **WIRELESS & NETWORKS**, touch **More...** > **Tethering & Mobile Hotspot**.
3. Select the **USB tethering** check box to share your data connection.

7.3.2 Sharing Your Phone's Data Connection as a Portable Wi-Fi Hotspot

1. Touch  > **Settings**.
2. Under **WIRELESS & NETWORKS**, touch **More...** > **Tethering & Mobile Hotspot**.