



LIMITED WARRANTY

Who is Providing This Warranty?

• Orbyx Electronics, LLC ("Orbyx"), as the distributor of this Nextech product (your "Product").

What Does This Warranty Cover?

• This warranty covers defects in materials or workmanship in your Product under normal use and conditions.

What is the Period of Coverage?

• This warranty covers your Product for 12 months from the original purchase date.

Who Is Covered?

• This warranty covers the original consumer purchaser. Coverage terminates if you sell or otherwise transfer your Product.

What Will We Do To Correct Problems?

• We will repair your Product or replace your Product with a new or reconditioned equivalent product, at our option.

How Do You Get Service?

• Call Orbyx TOLL FREE at 1-866-363-3059 for instructions for obtaining warranty service from Orbyx's authorized service providers.

• Or, return your Product directly to the retail store from which you purchased the Product.

• When you obtain service for your Product, you must provide a purchase receipt (or other proof of the original purchase date) and a description of the defect(s).

What Does This Warranty Not Cover?

• This warranty DOES NOT COVER:

• damage due to misuse, abuse, alteration, unauthorized repair, or accident (such as improper electrical current);

• damage due to "acts of God" (such as lightning) or other contingencies beyond our control;

• cosmetic damage;

• externally generated static, signal reception or antenna problems not caused by your Product; or batteries.

• This warranty also DOES NOT COVER, and in no case will we be liable for, any incidental damages (such as transportation costs to and from an authorized service provider, or loss of time) or consequential damages (such as costs of repairing or replacing other property which is damaged, including tapes, discs, speakers not included with your Product or other accessories, or external electrical systems) resulting from the use of your Product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

• Defacing the serial number, or using your Product for commercial or institutional purposes, voids this warranty.

Are There Other Warranties?

• There are no express warranties other than those expressed herein. Neither the sales personnel nor any other person is authorized to make any other warranties or to extend the duration of any warranties.

• ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY (AN UNWRITTEN WARRANTY THAT A PRODUCT IS FIT FOR ORDINARY USE), ARE LIMITED TO 90 DAYS. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

How Does State Law Apply?

• This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



LIMITED WARRANTY

ORBYX ELECTRONICS WARRANTY

ORBYX Electronics warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. Within this period, simply take the product and your proof of purchase to any ORBYX Electronics store or dealer and the product will be repaired without charge for parts and labour. ORBYX Electronics reserves the right to charge for transportation. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through ORBYX Electronics' company owned stores and dealers and to a product that is presented for repair in a country where ORBYX Electronics offers the product for sale. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which ORBYX Electronics operates. This warranty is subject to all statutory rights you may have in the country of purchase.

21



LIMITED WARRANTY

ORBYX ELECTRONICS WARRANTY

ORBYX Electronics warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. Within this period, simply take the product and your proof of purchase to any ORBYX Electronics store or dealer and the product will be repaired without charge for parts and labour. ORBYX Electronics reserves the right to charge for transportation. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through ORBYX Electronics' company owned stores and dealers and to a product that is presented for repair in a country where ORBYX Electronics offers the product for sale. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which ORBYX Electronics operates. This warranty is subject to all statutory rights you may have in the country of purchase.



LIMITED WARRANTY



Cautionary Notes

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Contact your local electronic store for help.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Distributed exclusively in the U.S. by
Orbyx Electronics, LLC
501 South Cheryl Lane,
Walnut, CA 91789

Manufactured in China

For parts, service, and general inquiries please call 1-866-363-3059
or visit us on the web at www.orbyxelectronics.com

Imported in Canada for/Importé
au Canada pour
Orbyx Electronics,
Concord, Canada, L4K 4M3



Limited Warranty/Garantie Limitée
U.S.A & Canada

© 2004 ORBYX Electronics. All Rights Reserved.



Table of Contents

Introduction.....	2
Component List.....	3-4
Appearance.....	5
Important.....	6
Reformat the MP3.....	7-8
Setup and Use.....	9-11
Download music to MP3.....	12
Using DJ Headphone.....	13
Using DJ Headphone to other devices.....	14
Using Neck Strap Earphones.....	15
Start up LCD Screen.....	16
Operation.....	17-19
Cautionary Notes.....	20
Warranty.....	21

This User's Guide is published by Nexxtech without any warranty. Improvements and changes to this User's Guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Nexxtech at any time and without notice.

Introduction

1419197 MP3 HEADPHONES

This MP3 headphone is an audio product which integrates digital music with the usage of DJ style headphones. It can stand alone as an over-the-head DJ headphone or be used as a portable mp3 player for outdoor activities. "Plug" together it becomes a "cordless" audio player with quality sound headphones. It can also be used as a recording device for meeting notes or interview recording.

Operation

Setting Change Mode


Options: Press mode switch to start menu selection. Then push jog switch down to select menu options.

1. Music	There are no options to select in this setting.
2. Voice REC	In standby mode, push jog switch to record voice. Push jog once and then push Mode to Record. To record push jog again and push again to stop. To delete the file, choose 2. Delete Rec File, push and hold jog switch for 3 seconds. Choose 3. Return, to operate other features.
3. Language	Push jog switch in to select 4.1 English, 4.2 Traditional Chinese, 4.3 Simplified Chinese, 4.4 Return.
4. Memory	Push jog switch in to view available memory.
5. Back Light	Push jog switch in to select 5.1 Off, 5.2 5 seconds, 5.3 10 seconds, 5.4 15 seconds, 5.5 20 seconds, 5.6 Return
6. Contrast	Push jog switch in to see contrast setting. Push jog switch up to decrease contrast, down to increase contrast.
7. Return	Push jog switch in to return to display mode.


Operation

Setting MP3 mode items:
Press mode switch to start menu selection. Then push jog switch down to select menu options.


1. A-B (While song is playing)

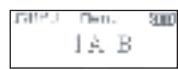


1. Press Mode switch to A-B Mode (While song is playing)

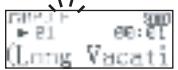

2. Push jog switch in, A will flash

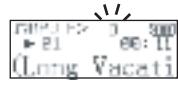

3. Press again to save start point, B will flash

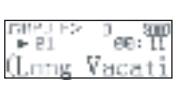

4. Select song for B by pressing mode switch down and press jog again. A & B are set and display returns to original A-B display.

2. Repeat

Push jog switch in to select Repeat and/or push in again to access 2.1 Repeat All. Push jog switch down to select 2.2 Repeat One, 2.3 Normal, 2.4 Random or 2.5 Return.

3. EQ

Push jog switch in to select: EQ then push jog switch down to select 3.1 Normal, 3.2 Jazz, 3.3 Classic, 3.4 Rock, 3.5 Pop, or 3.6 Return.

4. Preview

Push jog switch in to select. Plays all songs in order for 10 seconds then stops. To reset to your preference go back to "Repeat" setting in the MP mode.

5. Return

Returns screen to MP3 display.

Component List



1. MP3 Player module





2. Battery box/module holder



3. Adjustable DJ headphones

Component List

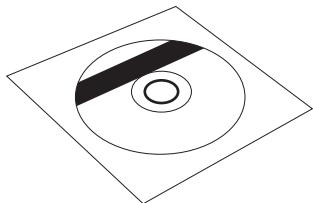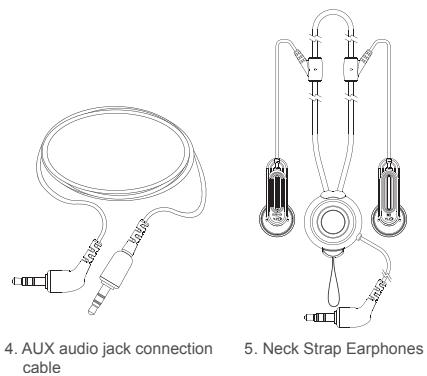

4

Operation

MP3 Mode: Powers up in Standby Mode

Action	Standby Mode:	Playing Mode
Jog Switch:		
Press 1 time: Play/Pause	Play or pause current music	Play or pause current music
Move switch up	Stop song	Go to next song
Move switch up & Hold	Rewind song	
Move switch down	Stop song	Go to previous song
Move switch down & hold		Fast forward song
Press & hold 3 seconds: Power off	Switch off player	Switch off player

Mode Button:		
Press once to enter Menu	Press Jog switch down to select menu item	Press Jog switch down to select menu item
	1. A-B	1. A-B
	2. Repeat	2. Repeat
	3. EQ	3. EQ
	4. Preview	4. Preview
	5. Return	5. Return
Press & hold 3 seconds to change mode:	Press Jog switch down to select menu item	Press Jog switch down to select menu item
	1. Music	1. Music
	2. Voice REC	2. Voice REC
	3. Language (default English)	3. Language (default English)
	4. Memory	4. Memory
	5. Back Light	5. Back Light
	6. Contrast	6. Contrast
	7. Return	7. Return


Hold Button		
Slide button Left	Lock settings	
Slide button Right	Unlock settings	
NOTE: Must unlock to power on unit.		

Volume Buttons: Adjustable in any mode		
Press left button	Lower volume	
Press right button	Raise volume	




17

Startup LCD Screen

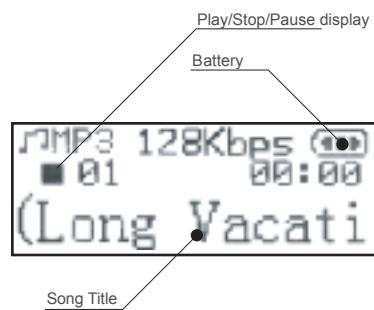

Appearance


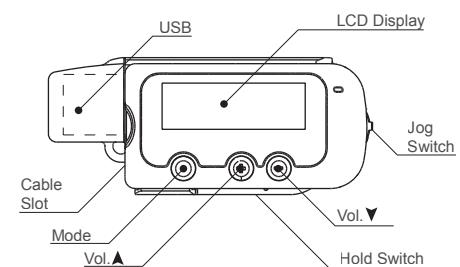


Important

1. Do not remove the MP3 player from the USB port while files are downloading as this may damage the file system.
2. Wait for the "Safely remove hardware" message to appear in the Windows system tray before removing the MP3 player.
3. If the file system on the MP3 player becomes corrupted please try to reformat the MP3 player as in P.7-P.8.
4. Do not expose the MP3 module to excessive moisture or heat.
5. Do not drop the player.
6. Remove batteries when not using module for extended time.
7. Setting the hold switch "on" will protect your selected settings. Set the hold switch "off" to change settings.
8. The MP3 console will turn off automatically when it is idle for 5 minutes.



Using Neck Strap Earphones

Using Neck Strap Earphones: Insert one "AA" battery (not included) into the battery box and slide the MP3 module into place. Attach the earphone necklet type cable.

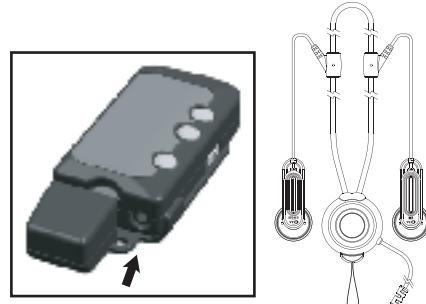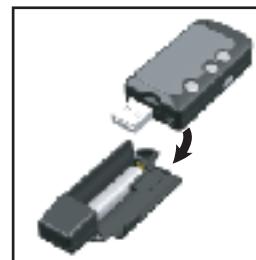


Using DJ Headphone to Other Device

Using DJ Headphone with other audio devices: Insert cable into the 3/16 inch (2.5mm) line-in plug on left ear phone and the 1/8 inch (3.5mm) end into your audio device. Remove the MP3 console from the left ear pad and the batteries from the right ear pad. Removing the batteries will lessen the weight of the earphones.

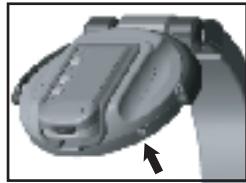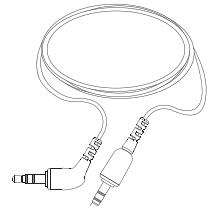

Reformat the MP3

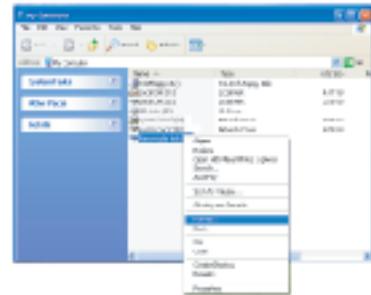


Right Click "Removable Disk.Then Choose "Format"



A Format Removable Disk window opens; select "Quick Format". Then click "Start".

Reformat the MP3

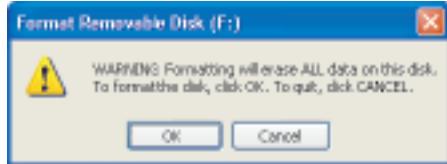

A warning window opens, select "OK".



The MP3 console will then be reformatted. Wait for the "Safe to remove mass storage device from the system" message to appear in the system tray before removing the device.

8

Using DJ Headphone

Using DJ Headphone: Insert two "AAA"batteries (not included) into the slot on the right ear pad. Slide the MP3 module into the slot on the left ear pad.




13

Download Music to MP3

Download your selected music following the steps below:

- Plug in the MP3 console to the computer.
- Click My Computer and locate the removable disk or device, double click to open the device window.
- Browse the hard drive to find and click to open your Song folder.
- Drag songs from the Song folder to the removable disk folder as illustrated:

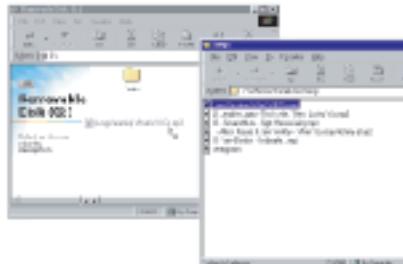

- Wait for the System Tray display telling you it is safe to remove hardware before removing the MP3 console.


Setup and Use

Note: The player is preset to work with Windows®2000, ME and XP. If you are using a PC running Windows®98 please use the CD provided and follow the instructions on the screen. The player appears in My Computer or Explorer as a removable disk or device.

Installation of the driver for Windows 98:


- Connect the MP3 console USB plug into the computer□ USB port.
- Insert the CD into the CD drive.
- Follow the instructions on the screen making the selections shown on Step 1 through 6 below.

Step 1.

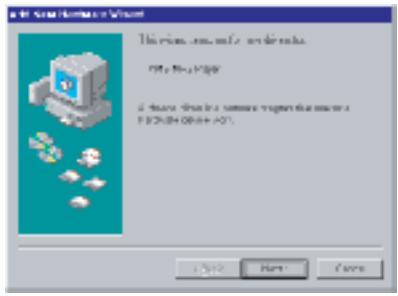


Setup and Use


Step 2.

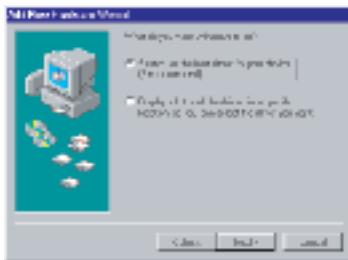

Step 3.

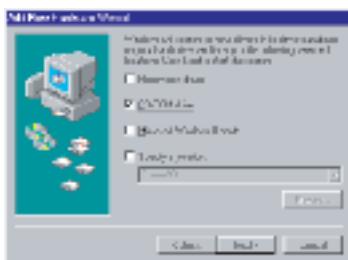

Step 4.

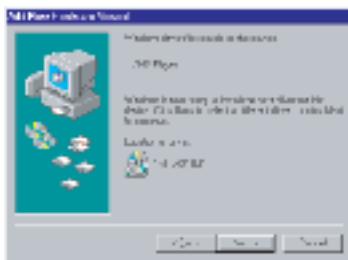


Setup and Use

Step 5.



Step 6.

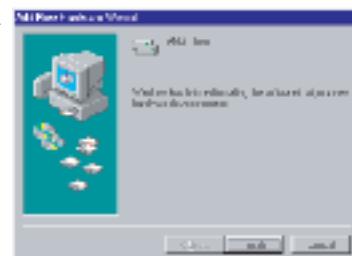

Wait for the "Safe to remove hardware" message to appear in the system tray.